

MARIE JEANNE



STEP-BY-STEP INSTRUCTIONS
INTRUCCIONES PASO A PASO
NOTICE DE MONTAGE PAS-À-PAS
SCHRITT FÜR SCHRITT ANWEISUNGEN
STAP VOOR STAP INSTRUCTIES
ISTRUZIONI PASSO PER PASSO
ПОШАГОВАЯ ИНСТРУКЦИЯ





HOBBY KNIFE N°1
Cuchilla · Cutter
ref. 27019

+ INFO



TWEEZERS
Pinzas · Pincers
ref. 27020

+ INFO



SET OF 4 MINI PLIERS (90mm)
Minisargentos · Mini Serre Joints
ref. 27201

+ INFO



MINI DIAMOND FILES SET (100mm)
Mini-limas diamante · Mini-limes diamant

ref. 27015-3

+ INFO

NEW!



FILES
Limas · Limes
ref. 27015-1

+ INFO



SANDING BLOCK
Taco lijador · Ponceur en boi
ref. 27014

+ INFO



HAND DRILL + HSS DRILL BITS

Taladro manual + brocas HSS · Outil à percer à main + forets HSS

ref. 27018-1

+ INFO




MICRO SAW SET

Micro herramientas · Micro outils

ref. 27302

+ INFO


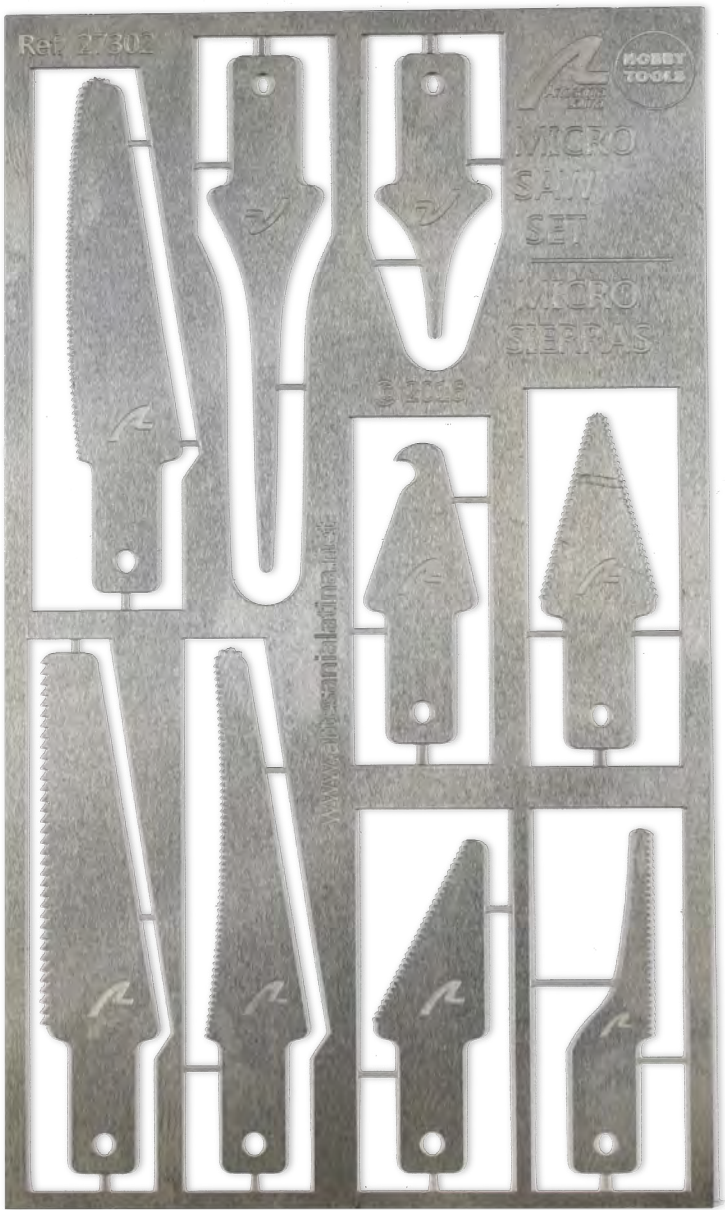


ELECTRIC PLANK BENDER

Plegalstones eléctrico · Fer à cintrer électrique

ref. 27074-1

+ INFO

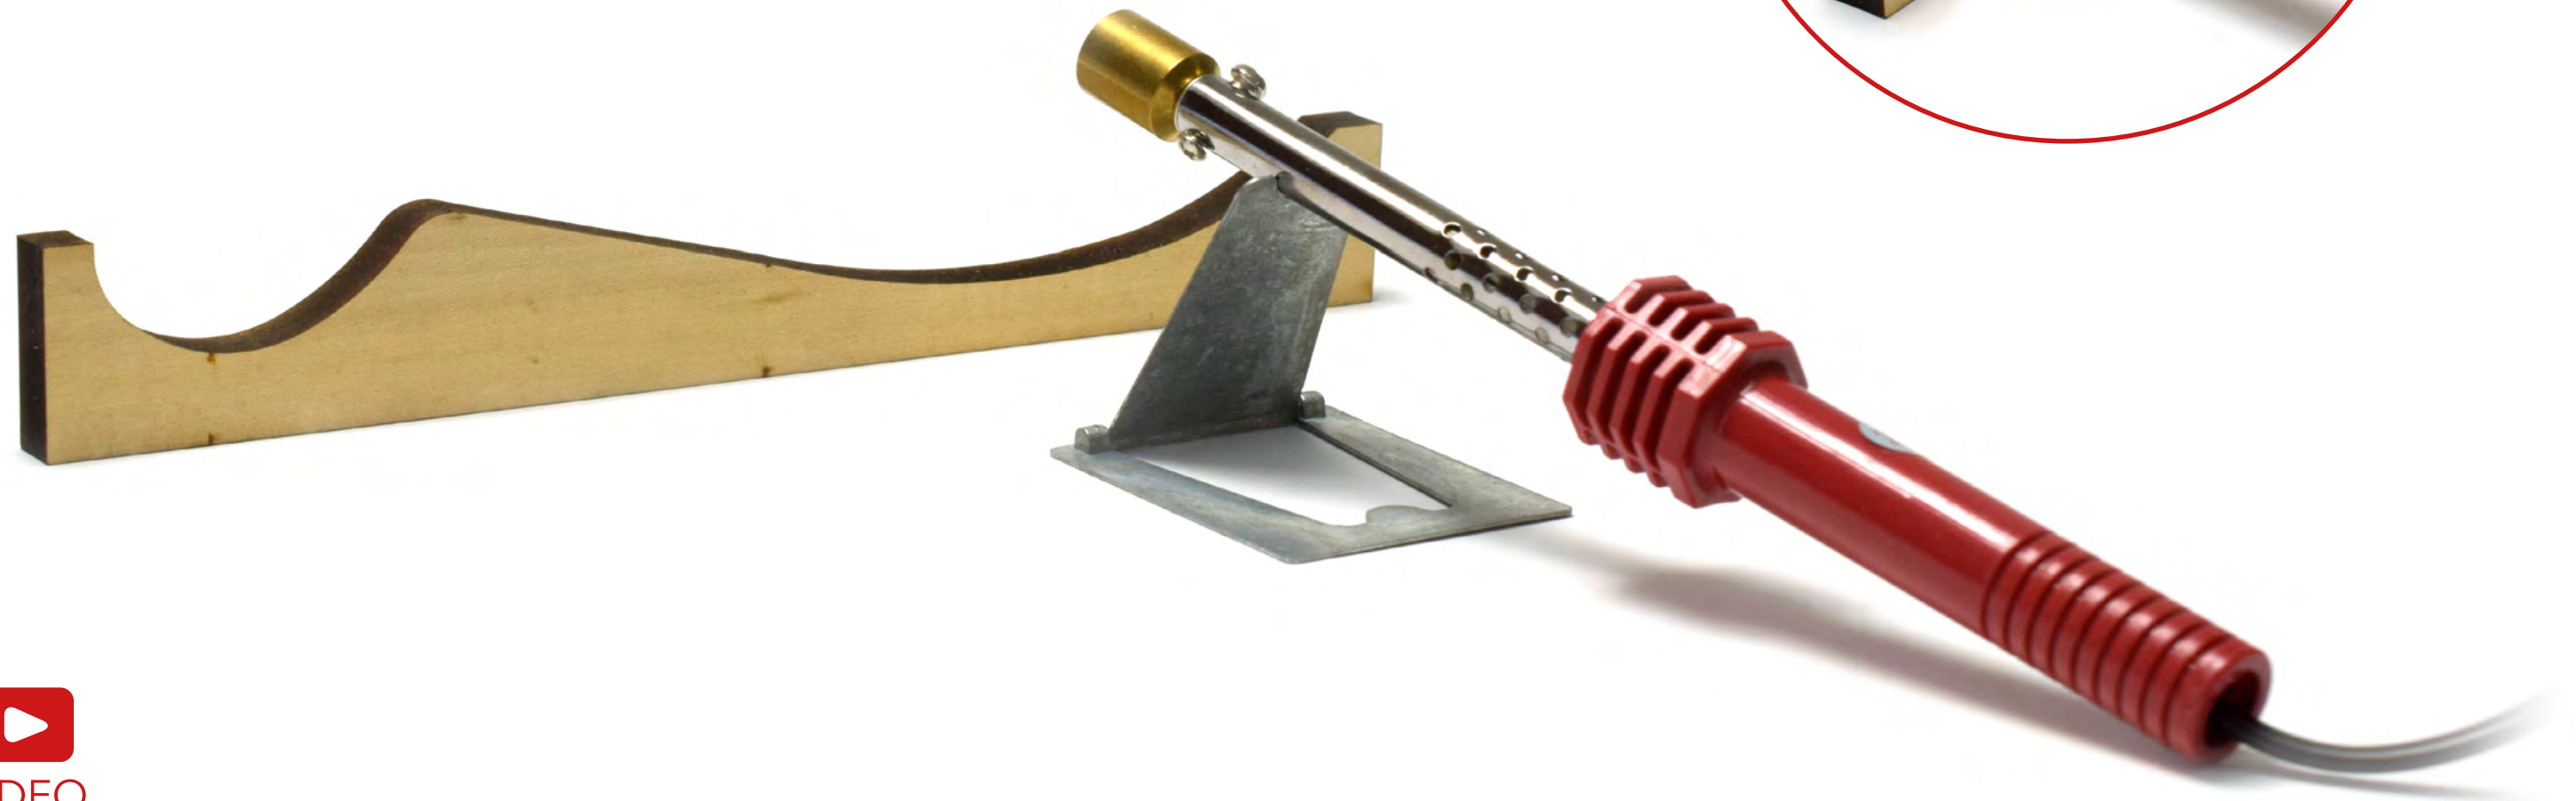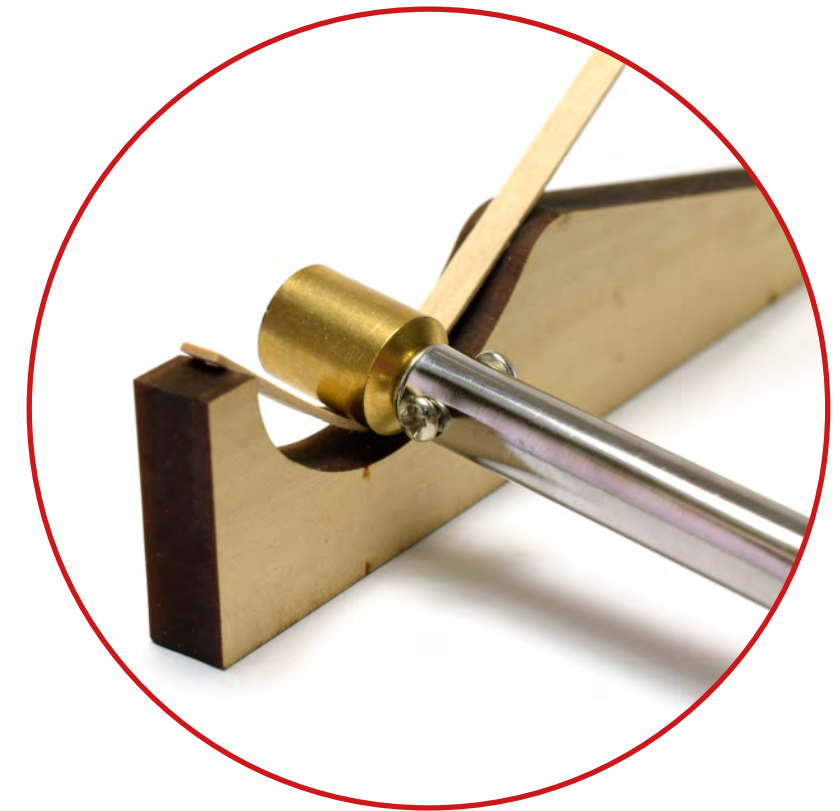


VIDEO

MICRO DRAWING SET
Micro herramienta · Micro outil

ref. 27325

+ INFO

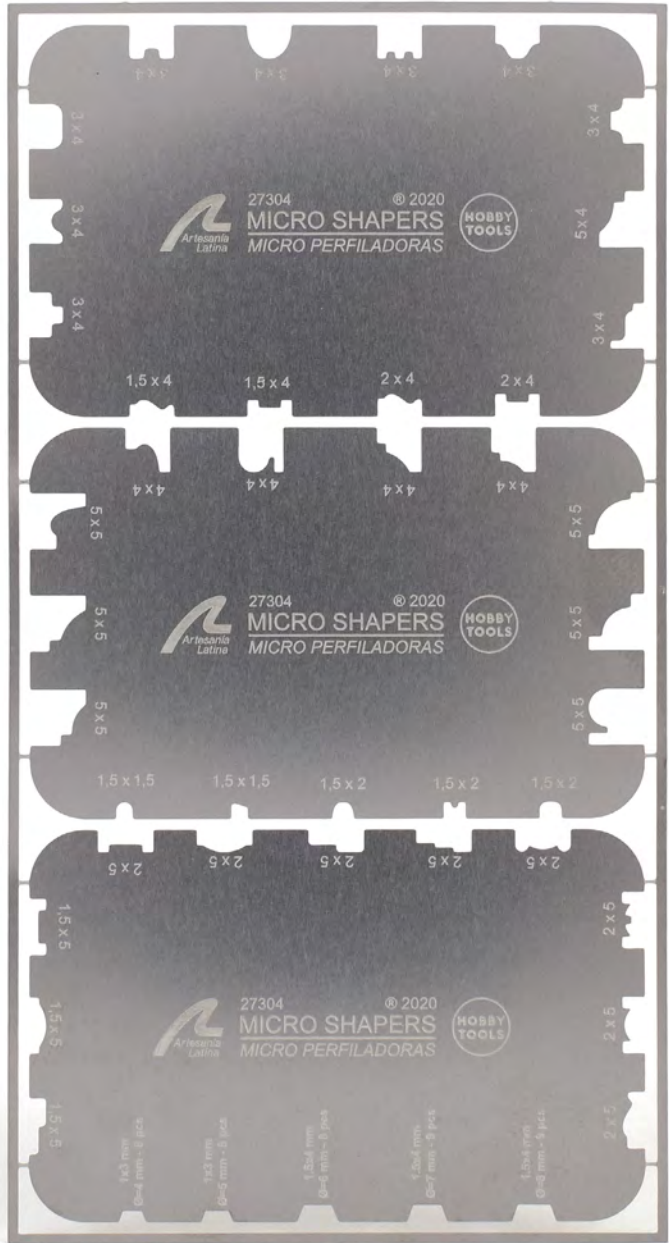




MICROSHAPERS
Micro perfiladoras ·
Micro Profileuses

ref. 27300 - 27301 - 27304

NEW!

+ INFO

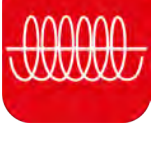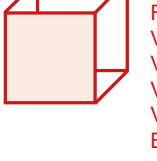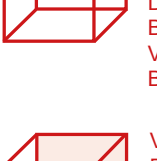

	ENCAJAR FIT TOGETHER ASSEMBLER PASSEN PASSEN METTERE INSIEME ПРИГОДНЫЙ		REPETIR REPEAT REPÉTER WIEDERHOLEN HERHALEN RIPETERE ПОВТОРЕНИЕ		REPETIR SIMÉTRICAMENTE REPEAT SYMMETRICALLY RÉPÉTER SYMÉTRIQUEMENT SYMMETRISCH WIEDERHOLEN HERHAAL SYMMETISCH RIPETERE SIMMETRICAMENTE ПОВТОРНЫЙ СИММЕТРИЧЕСКИЙ		ROTAR TURN TOURNER DREHEN DRAAIEN GIRARE ПРЕВРАТИТЬ		SUJETAR CON CINTA ADHESIVA HOLD WITH ADHESIVE TAPE FIXER A L'AIDE DE RUBAN ADHESIF MIT KLEBEBAND BEFESTIGEN MET PLAKBAND VASTZETTEN FISSARE CON NASTRO ADESIVO ИСПРАВИТЬ С ПОМОЩЬЮ КЛЕЙКОЙ ЛЕНТЫ
	CORTAR CUT COUPER SCHNITT SNIJDEN TAGLIARE ПОРЕЗ		TALADRAR DRILL PERCER BOHREN BOREN TRAPANARE ДРЕЛЬ		LIJAR SAND PONCERSAND ZAND SCARTAVETRARE ПЕСОК		DAR FORMA CÓNICA GIVE TAPER DONNER UNE FORME CONIQUE GIB TAPER GEEF HET EEN KEGELVORM DARE FORMA CONICA ЗАУЗИТЬ		DEENMASCARAR UNMASK DÉMASQUER ENTLARVEN ONTMASKEREN SMASCHERARE РАЗОБЛАЧАТЬ
	PEGAR GLUE COLLER KLEBEN LIJM INCOLLARE КЛЕЙ		NO PEGAR DO NOT GLUE EN PAS COLLER NICHT KLEBEN NIET LIJMEN NON INCOLLARE НЕ КЛЕЙ		DOBLAR BEND PLIER BIEGE VOUWEN PIEGARE СОГНУТЬ		DAR FORMA CÓNICAX2 GIVE TAPER X2 DONNER UNE FORME CONIQUE X2 GIB TAPER X2 GEEF HET EEN KEGELVORM X2 DARE FORMA CONICA X2 ЗАУЗИТЬ X2		ENMASCARAR MASK MASQUER MASKE MASKER MASCHERA MASKA
	ENMASILLAR APPLY PUTTY CALFEUTURER PUTTY ANLEGEN VULMIDDEL AANBRENGEN APPLICARE LO STUCCO ЗАЯВКА		MARCAR A LÁPIZ MARK WITH A PENCIL MARQUER AU CRAYON MARK MIT EINEM BLEISTIFT MARKEREN MET EEN POTLOOD SEGNARE CON UNA MATITA МАРК С КАРАНДАРОЙ		MEDIR MEASURE MESURE MESSEN MAATREGEL MISURARE ИЗМЕРЕНИЕ		INICIO DEL CABLE CABLE START DÉMARRAGE DU CÂBLE KABELSTART KABEL START AVVIAMENTO CON CAVO КАБЕЛЬНЫЙ СТАРТ		LIAR HILO ROLL YARN ROULEAU DE FIL GARN ROLLEN ROL GAREN ROTOLO DI FILATO РУЛОННАЯ ПРЯЖА
	ALINEAR ALIGN ALIGNER AUSRICHTEN UITLIJNEN ALLINEARE ВЫРОВНЯТЬ		COLOCAR EN PUNTO MEDIO PLACE IN THE CENTER PLACER AU MILIEU IN DER MITTE PLATZIEREN PLAATS IN HET MIDDEN POSIZIONARE AL CENTRO РАЗМЕСТИТЕ В ЦЕНТРЕ		TENSAR HILO LIGERAMENTE STRETCH THREAD SLIGHTLY TENDRE LEGEREMENT LE FIL STRETCH GEWINDE LEICHT DRAAD LICHT SPANNEN TENDERE IN FILO LEGGERMENTE СЛЕГКА РАСПРЯМИТЬ НИТЬ		FIN DEL CABLE CABLE END FIN DE CABLE KABELEND EINDE VAN DE KABEL FINE DEL CAVO КОНЕЦ КАБЕЛЯ		VISTA FRONTAL FRONT VIEW VUE DE FACE VORDERANSICHT VOORAANZICHT VISTA FRONTALE ВИД СПЕРЕДИ
	BARNIZAR VARNISH VERNIR LACK LAKKEN VERNICIARE ЛАК		TEÑIR DYE TEINDRE FÄRZEN VERVEN TINGERE КРАСИТЬ		ANUDAR KNOT FAIRE UN NOEUD KNOTEN MAAK EEN KNOOP FARE UN NODO МОРСКОЙ УЗЕЛ		VER VIDEO WATCH VIDEO VOIR VIDÉO SCHAU VIDEO BEKIJK VIDEO GUARDA UN VIDEO СМОТРЕТЬ ВИДЕО		VISTA SUPERIOR TOP VIEW VUE DE DESSUS DRAUFSICHT BOVENAANZICHT VISTA DALL'ALTO ВИД СВЕРХУ
	PINTAR PAINT PEINDRE FARBE SCHILDEREN DIPINGERE ПОКРАСИТЬ		IMPRIMAR APPLY PRIMER APPLIQUER L'APPRÊT PRIMER AUFTRAGEN BRENG PRIMER AAN APPLICARE IL PRIMER НАНЕСТИ ГРУНТОВКУ		CLAVAR NAIL CLOUER EINSCHLAGEN SPIJKER INCHIODARE ЗАБЕЙТЕ ГВОЗДЬ		SOLDAR WELD SOUDER SCHWEISSEN LASSEN SALDARE СВАРКА		VISTA TRASERA BACK VIEW VUE ARRIERE RÜCKANSICHT ACHTERAANZICHT VISTA POSTERIORE ВИД СЗАДИ
									VISTA INFERIOR BOTTOM VIEW VUE DE DESSOUS UNTERSICHT ONDERAANZICHT VISTA DAL BASSO ВИД СНИЗУ

COLOR REF.

- 1

BLANCO ROTO
OFF WHITE
27702
- 2

AZUL FRANCÉS
FRENCH BLUE
27723
- 3

NEGRO ROTO
OFF BLACK
27703
- 4

SOMBRA TOSTADA
BURNT UMBER
27743
- 5

AZUL REAL
ROYAL BLUE
27720
- 6

CACAO
COCOA BROWN
27741
- 7

NARANJA
ORANGE
27714
- 8

AMARILLO CAQUI
BUFF
27740
- 9

BERMELLÓN
VERMILLION
27713
- 10

VERDE VIVO
BRIGHT GREEN
27753
- 11

ORO
GOLD
27761
- 00

DILUYENTE AERÓGRAFO
AIRBRUSH THINNER
27700
- 01

IMPRIMACIÓN
PRIMER
27701
- 05





BARNIZ SATINADO TRANSPARENTE
SEMI-GLOSS CLEAR VARNISH
27605
- 90







TINTE SAPELLI
DYE FOR WOOD SAPELE
27690
- 95

LÍQUIDO PAVONAR LATÓN
LIQUID FOR BRASS BLUING
27695


NEW!



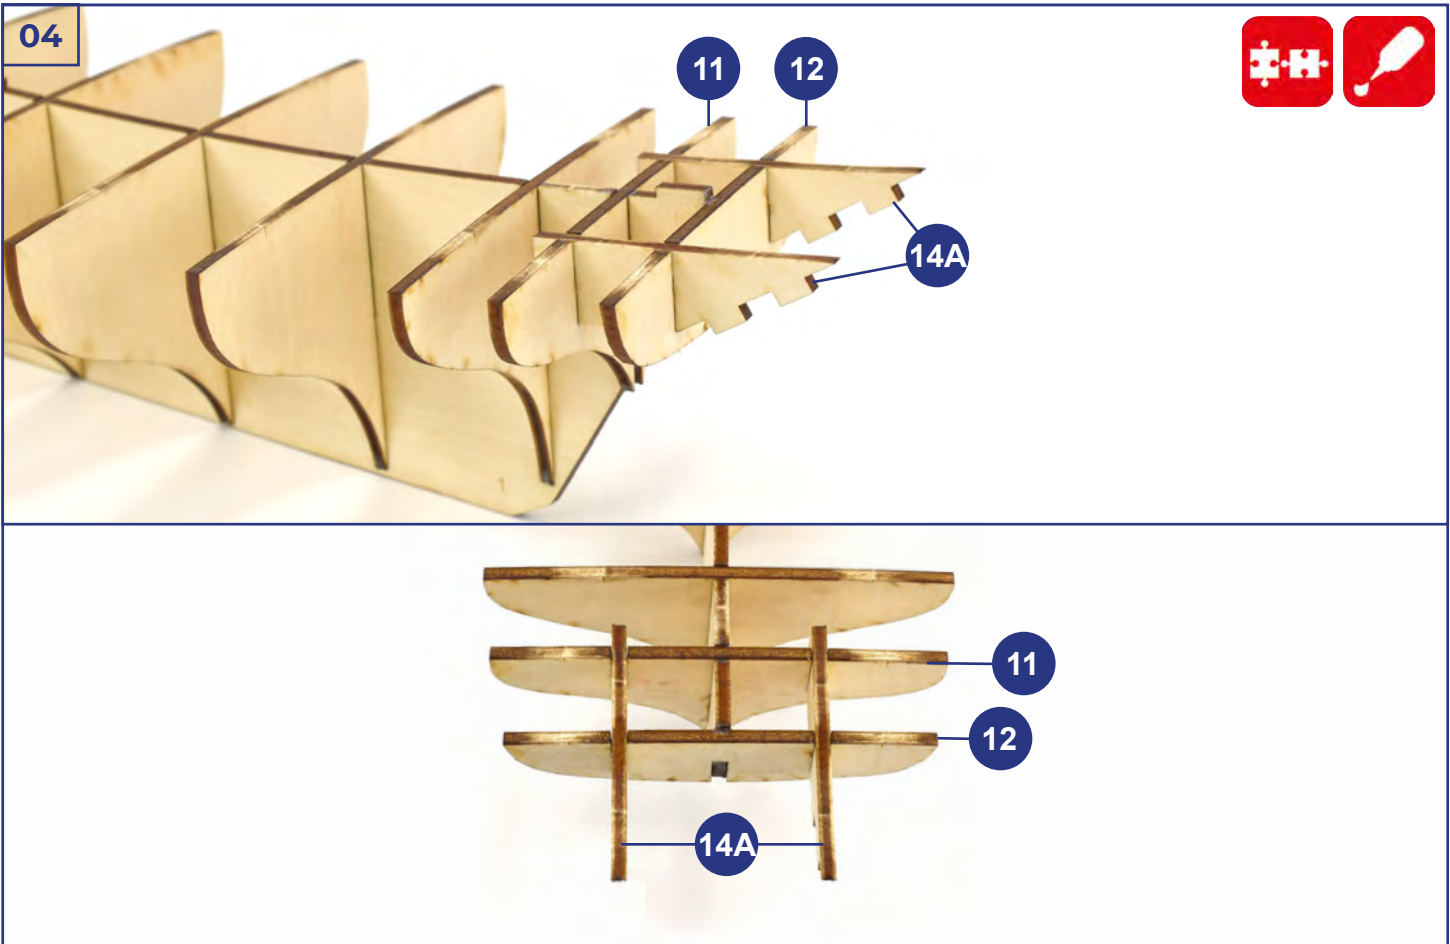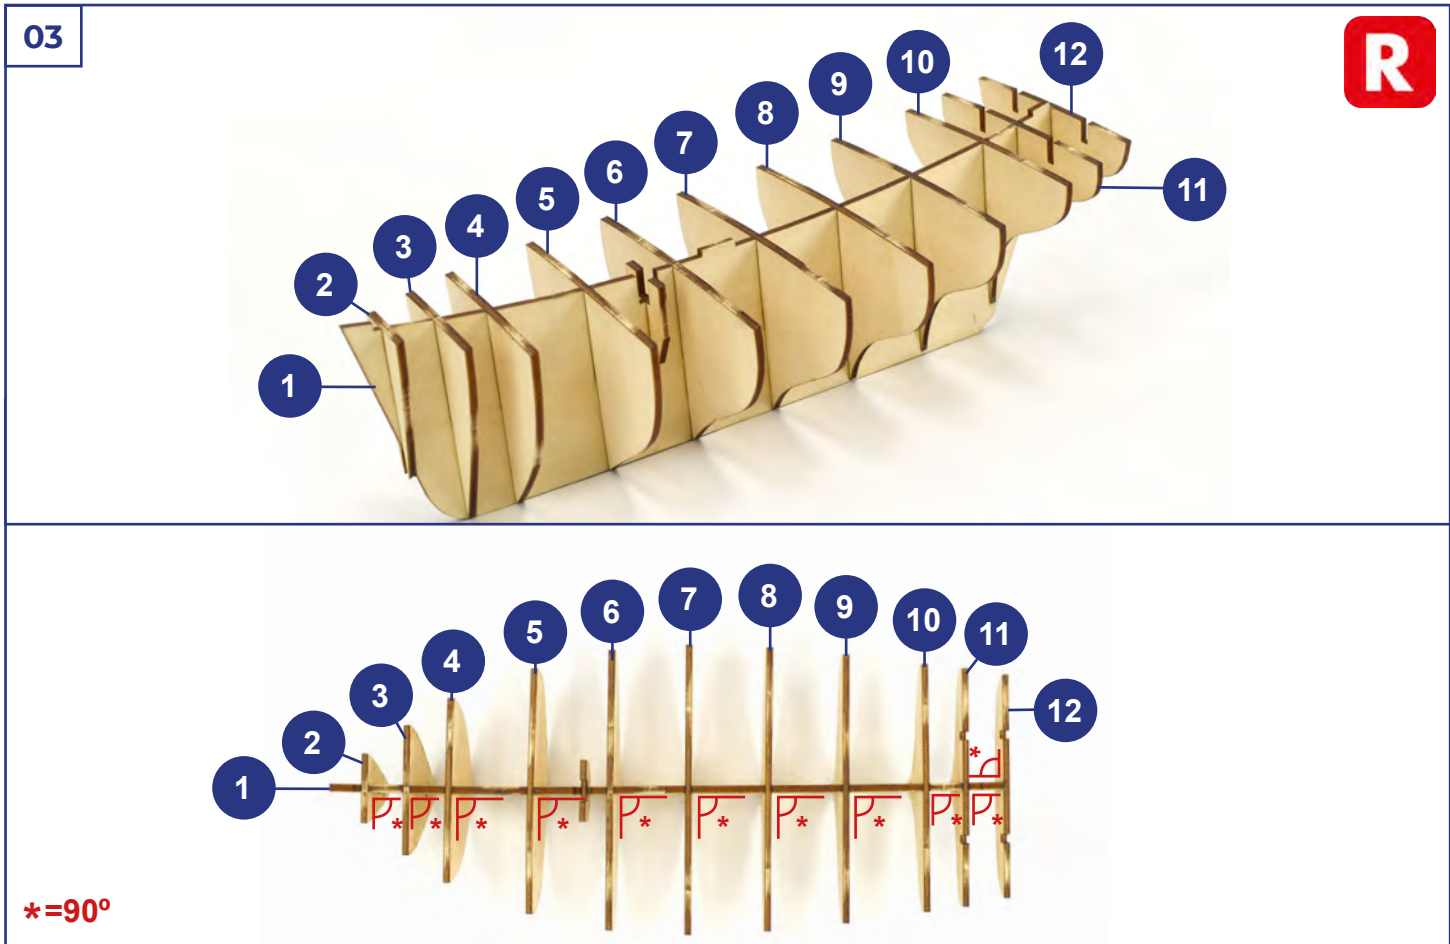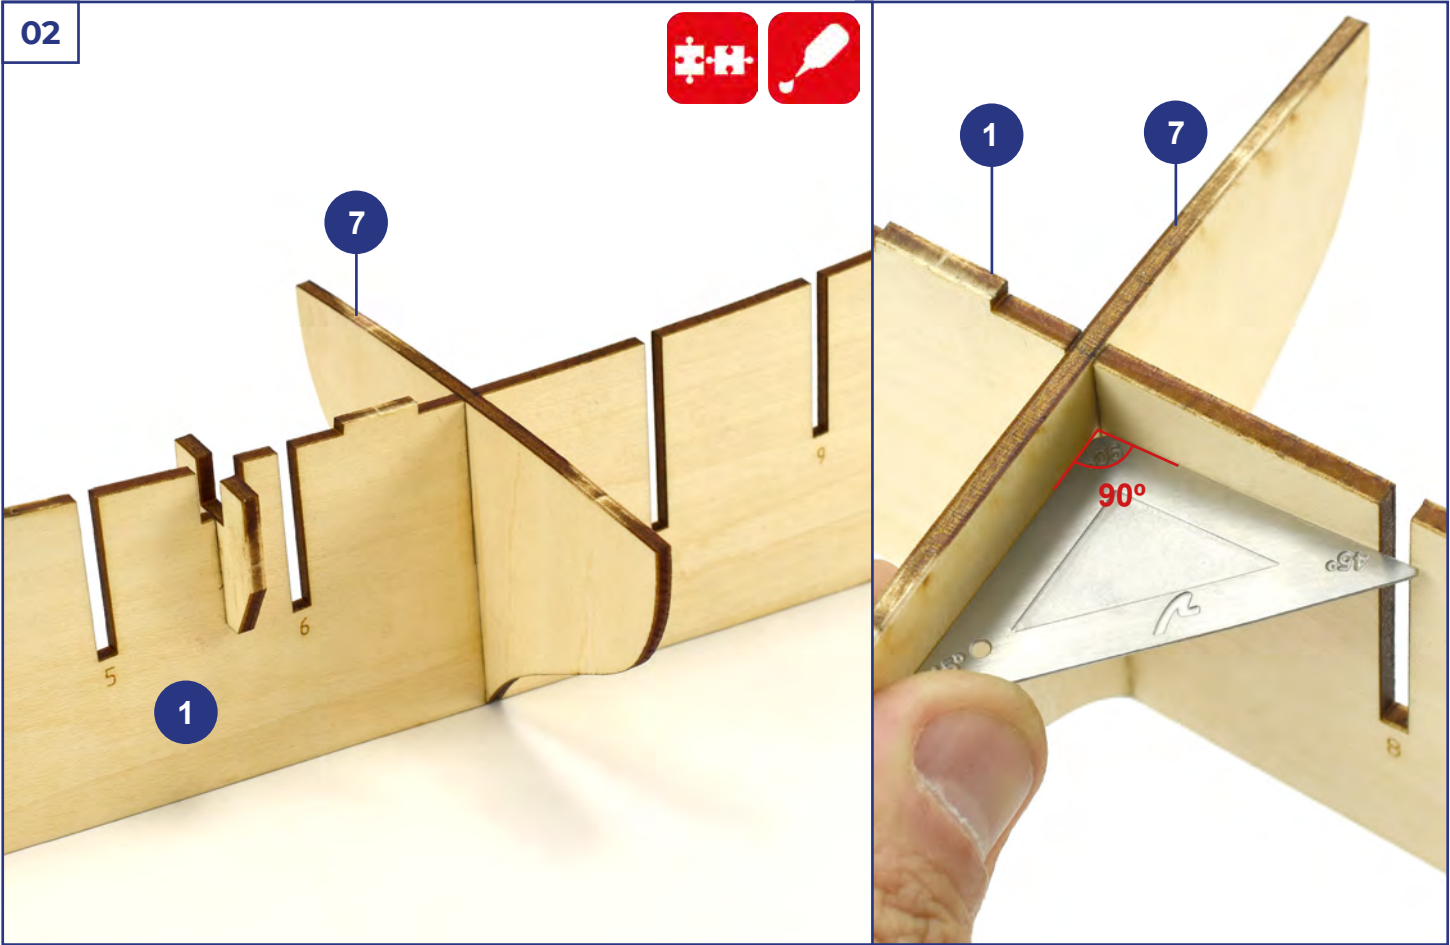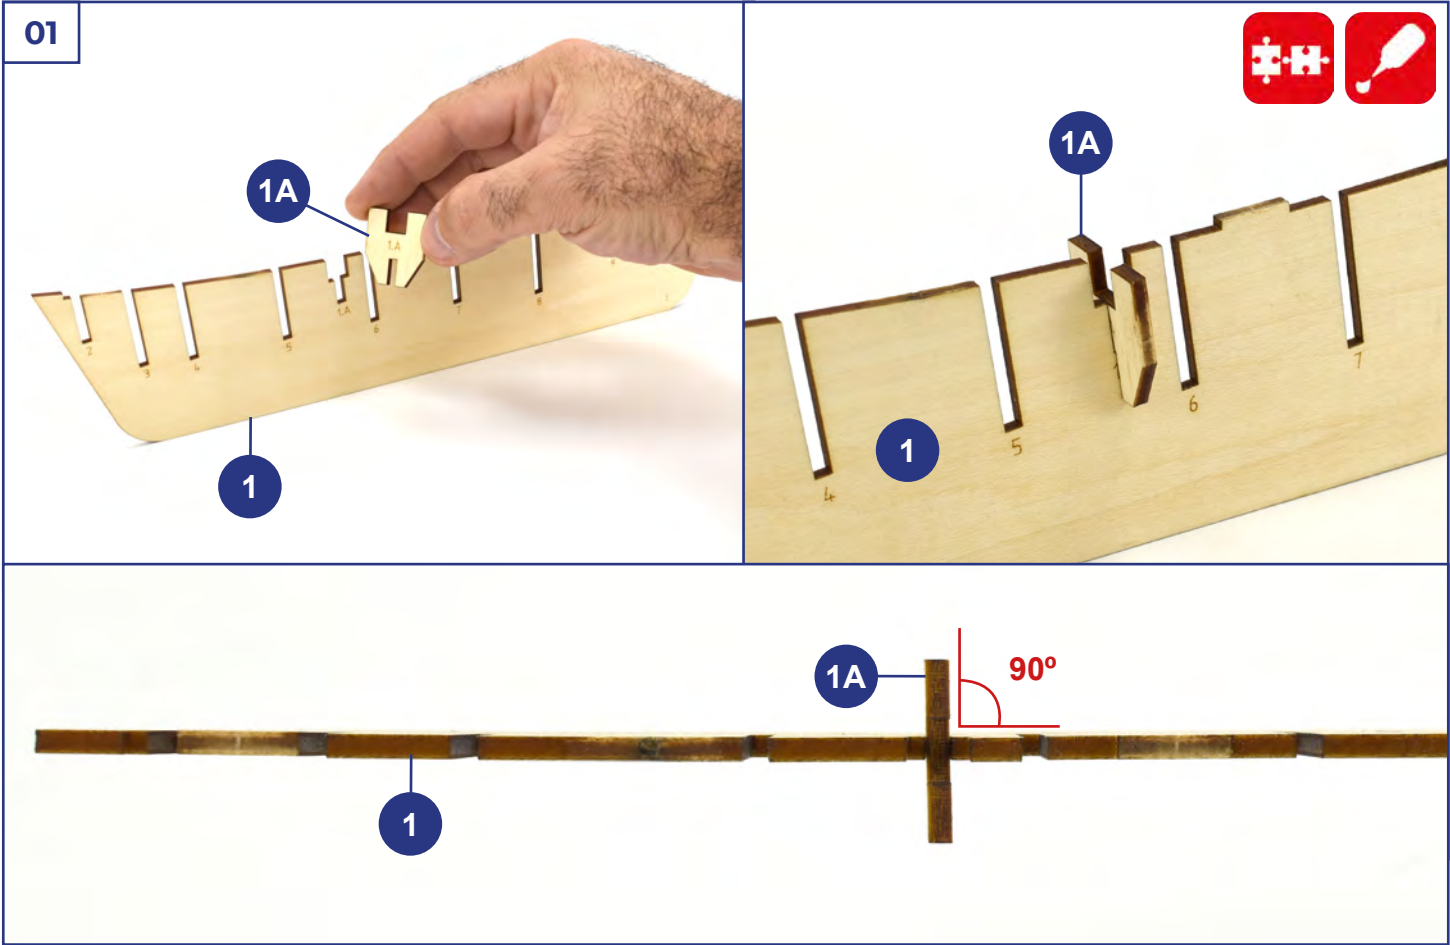

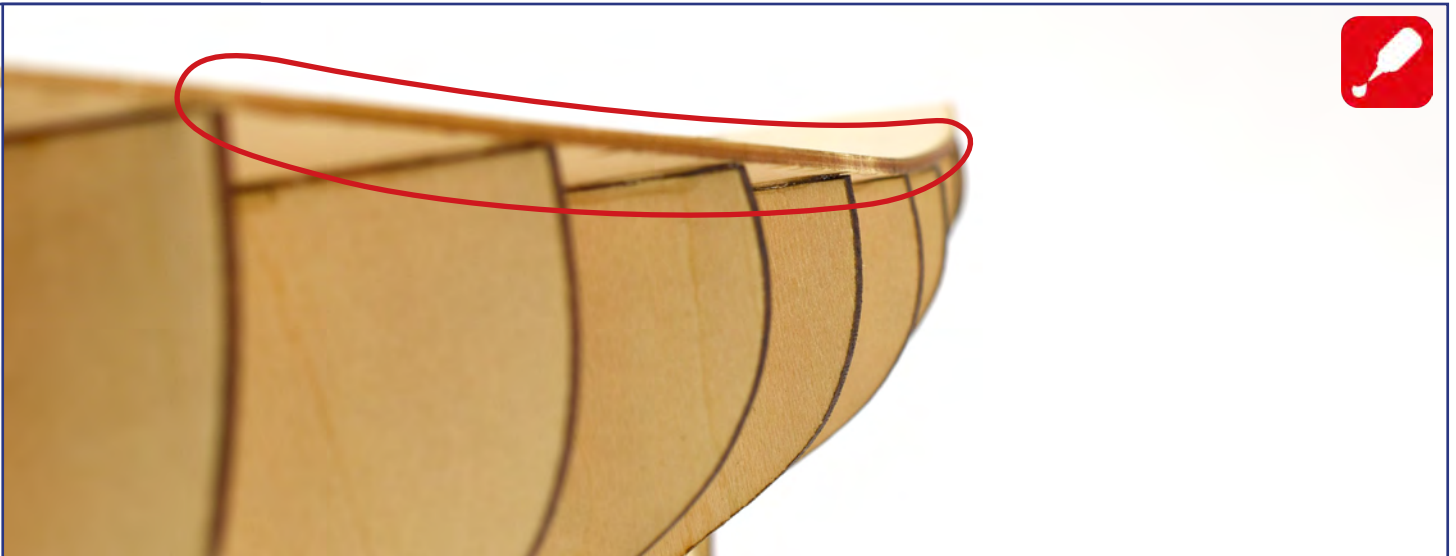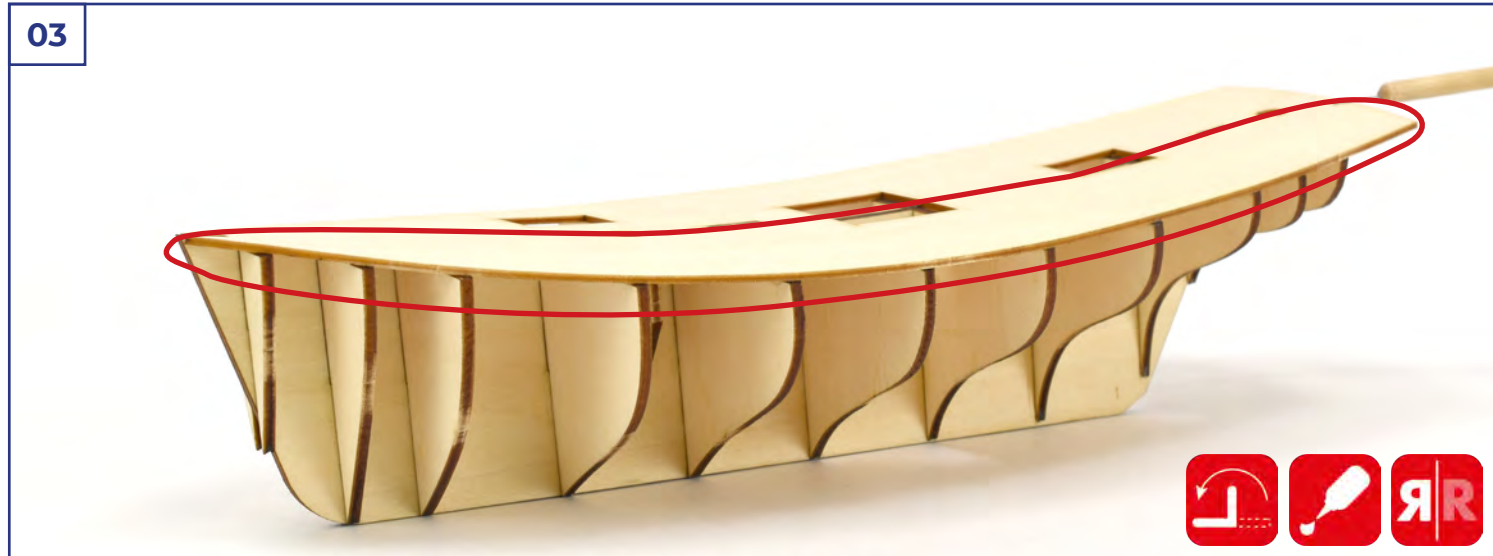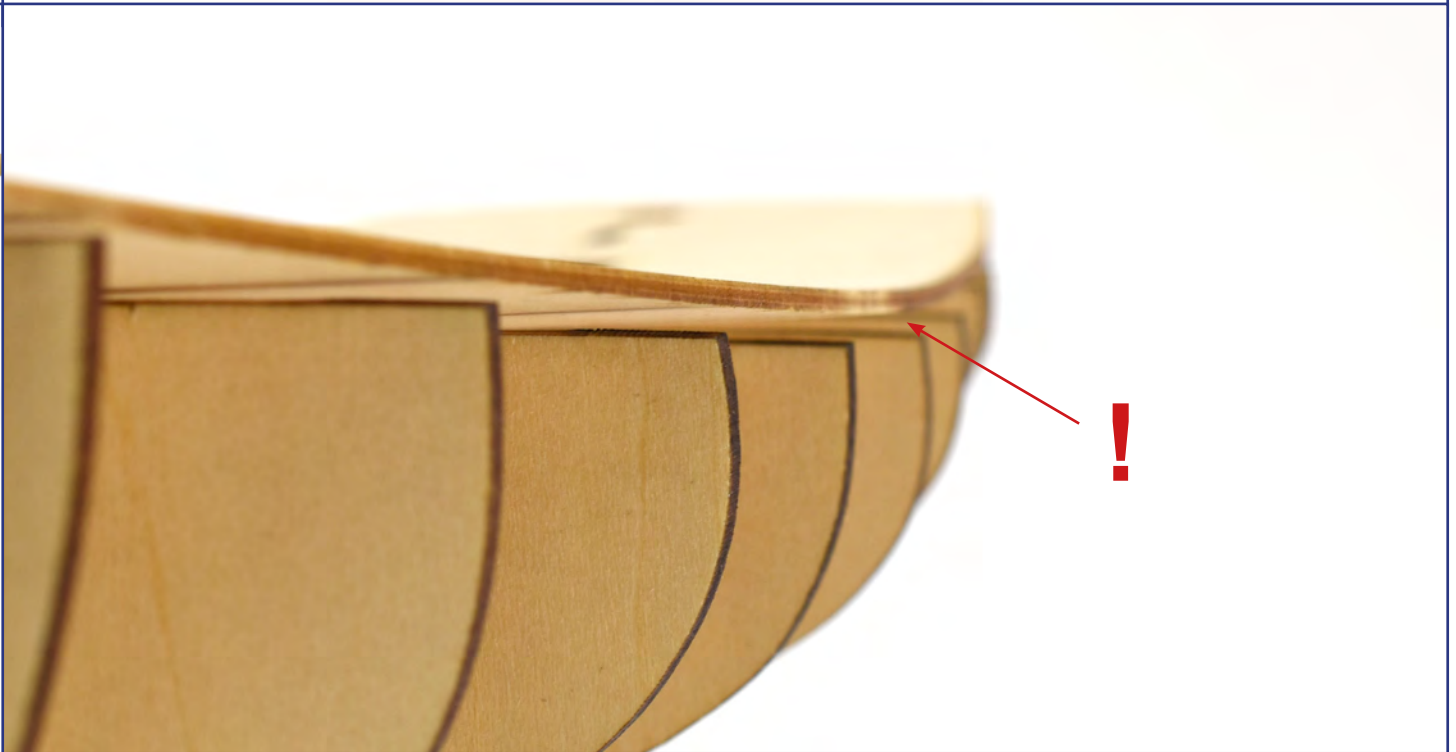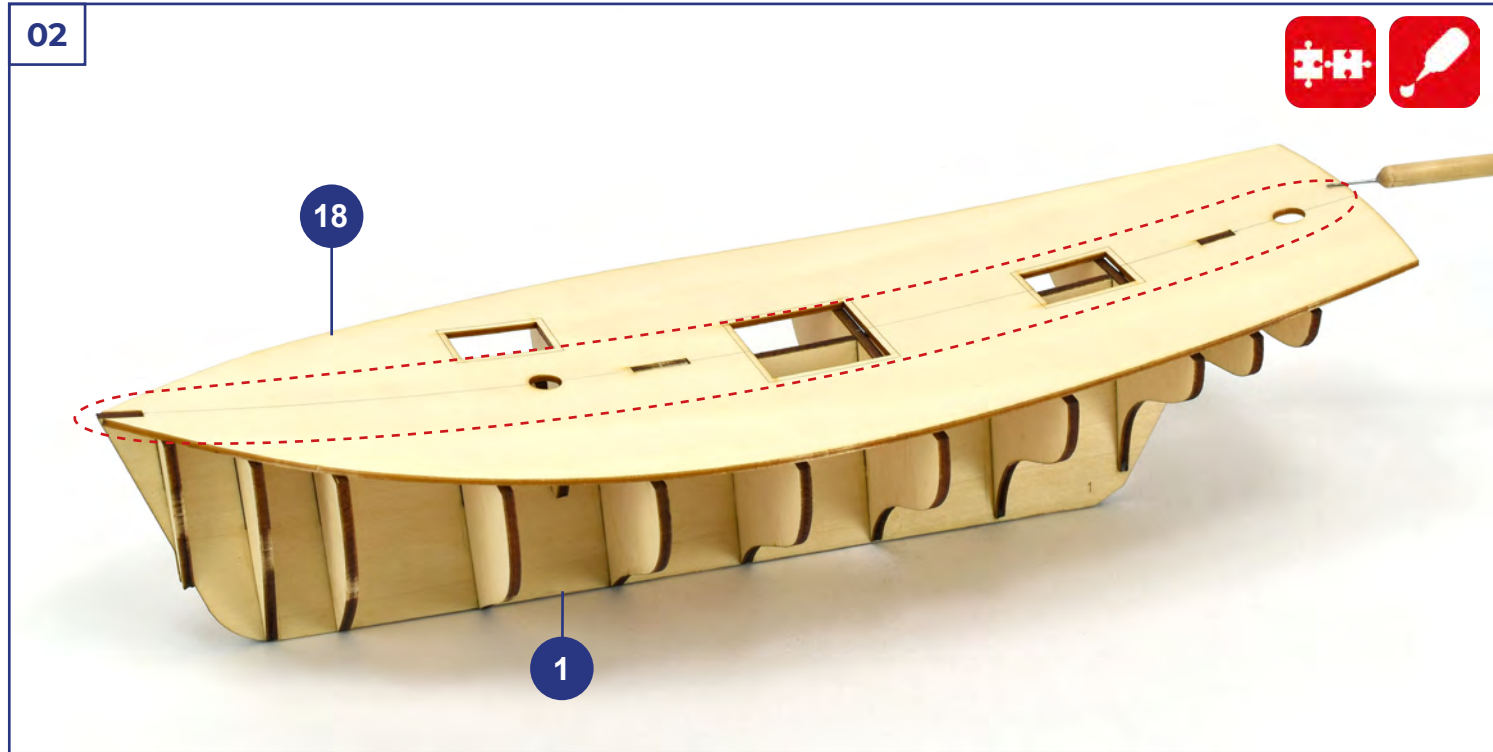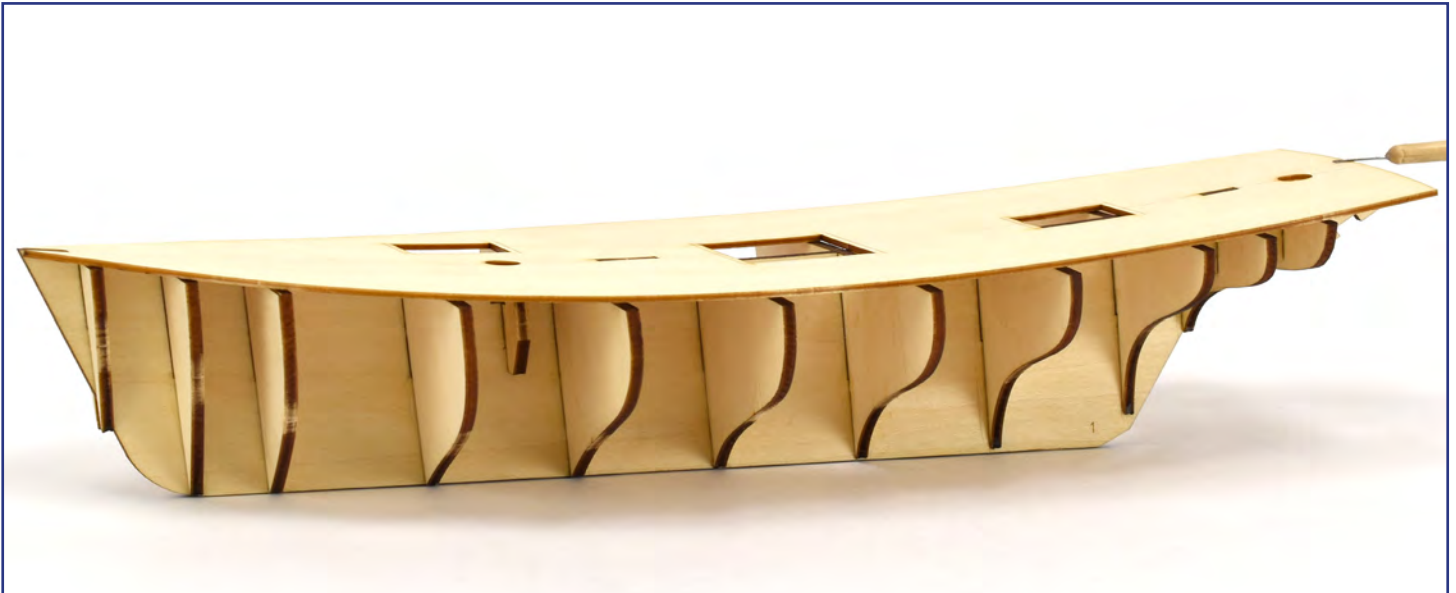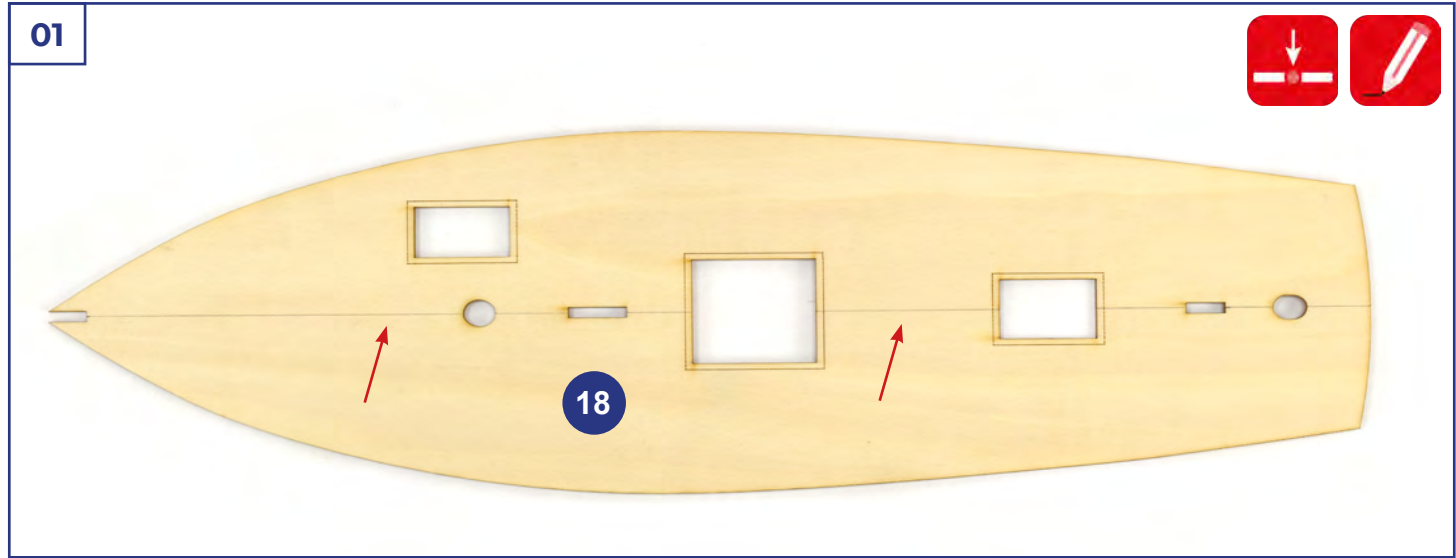


01

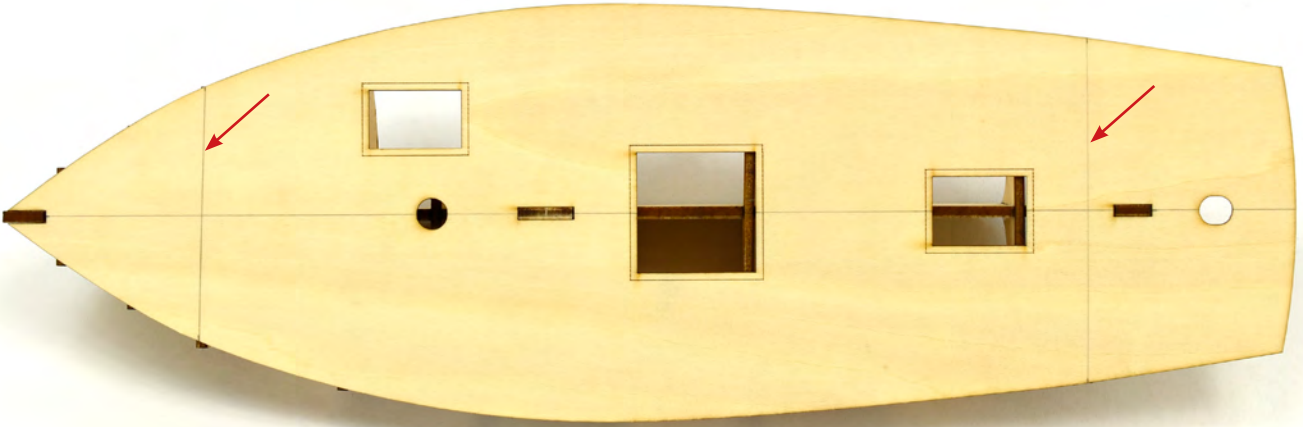




411

02

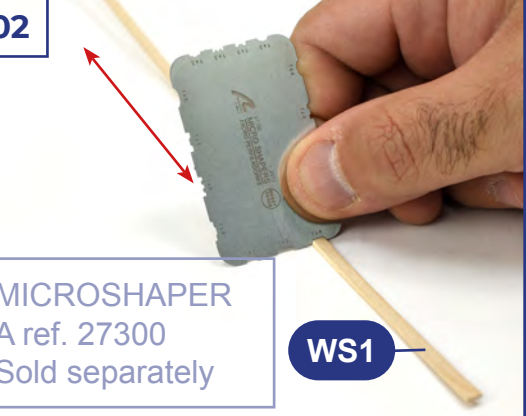

MICROSHAPER
A ref. 27300
Sold separately

WS1

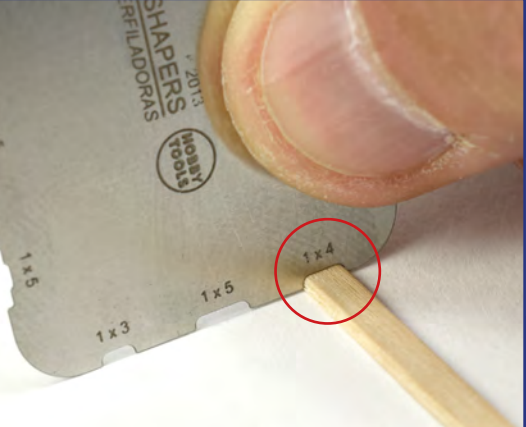


1x31x51x4



R

03

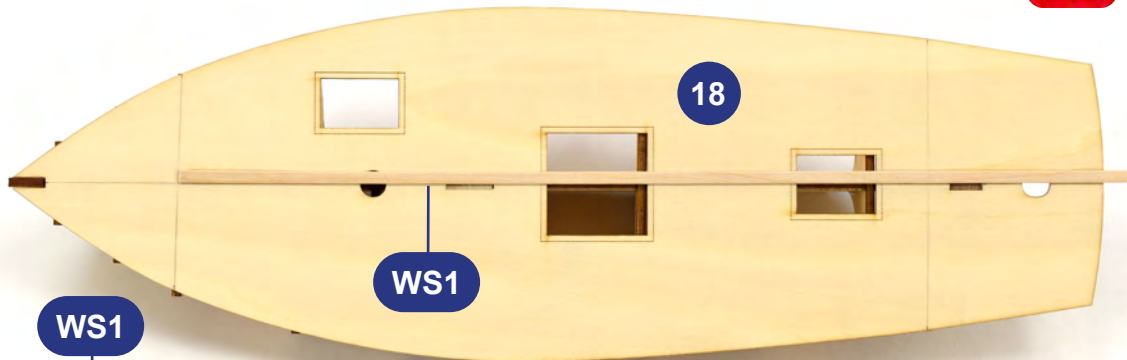


WS118






WS1

04




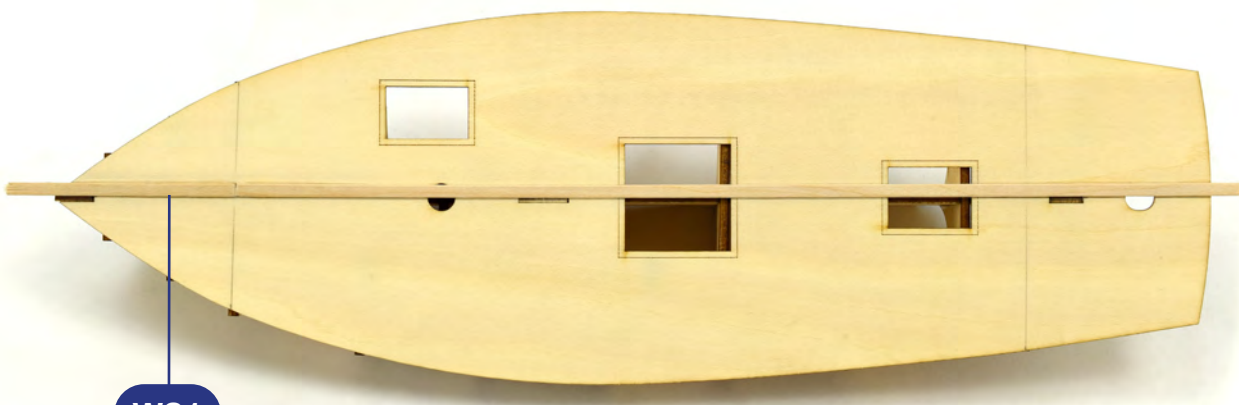


WS1



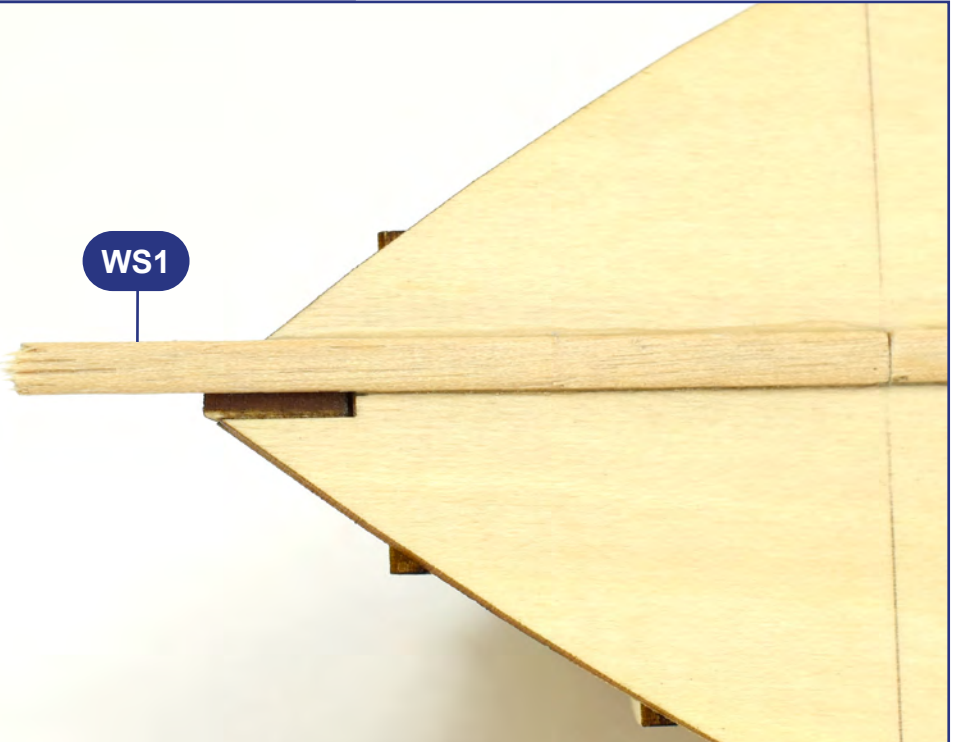

WS1

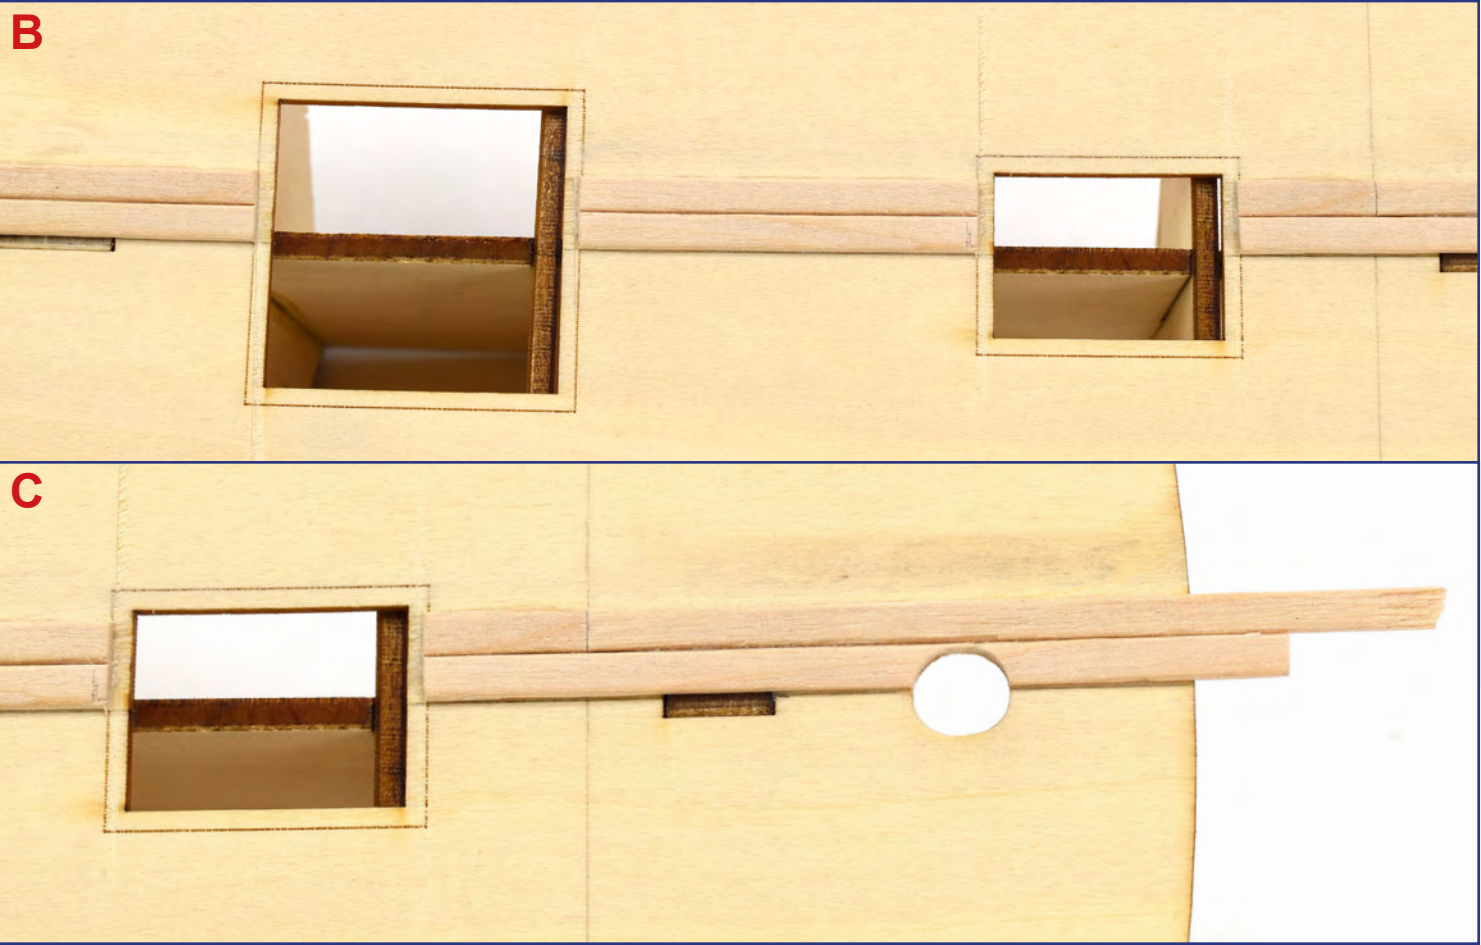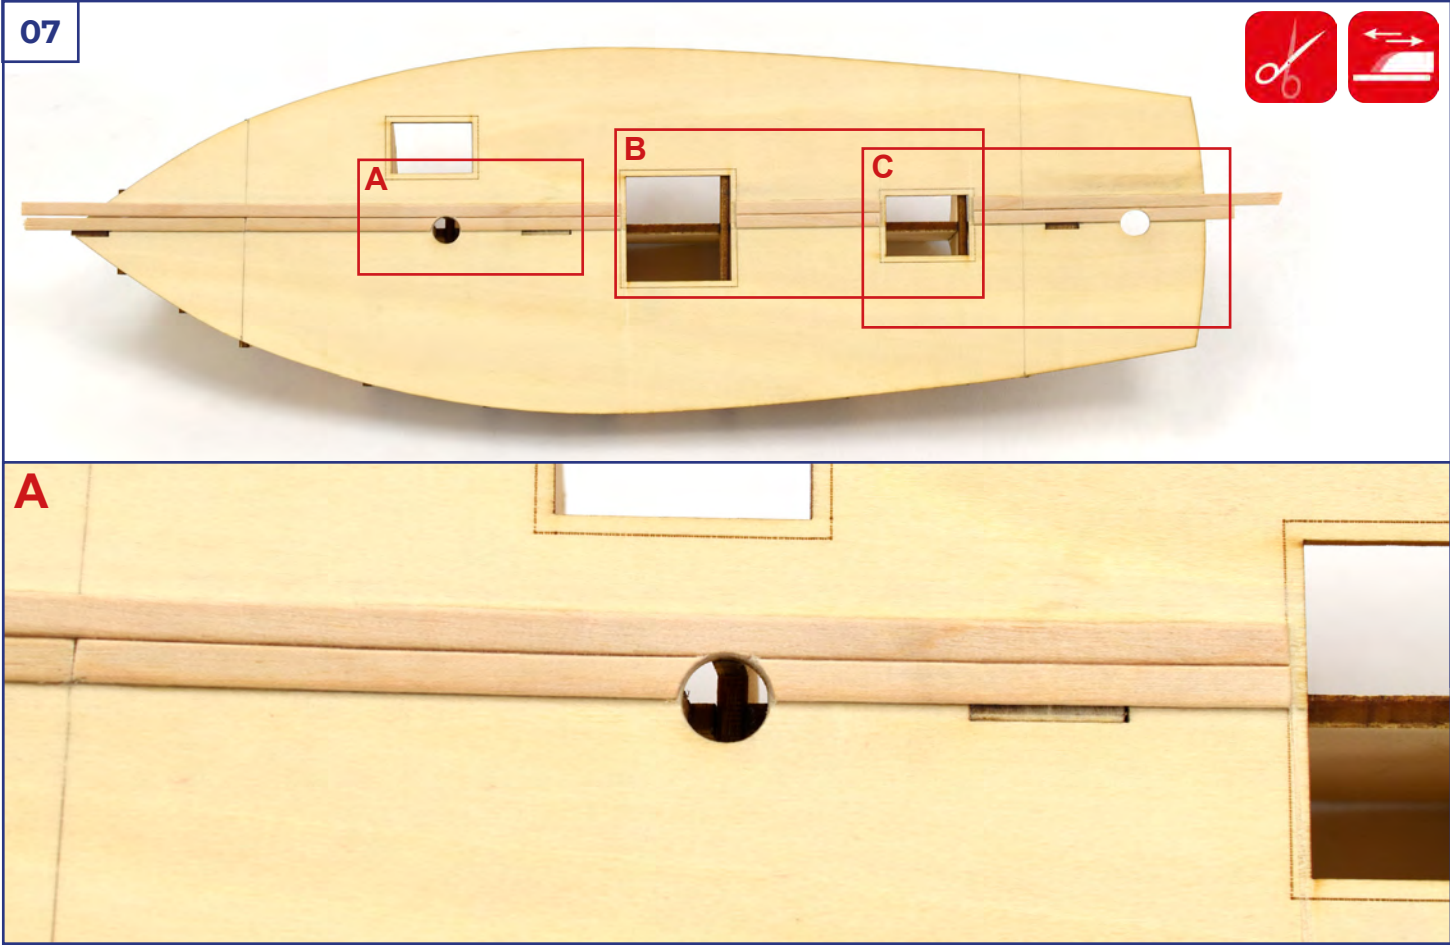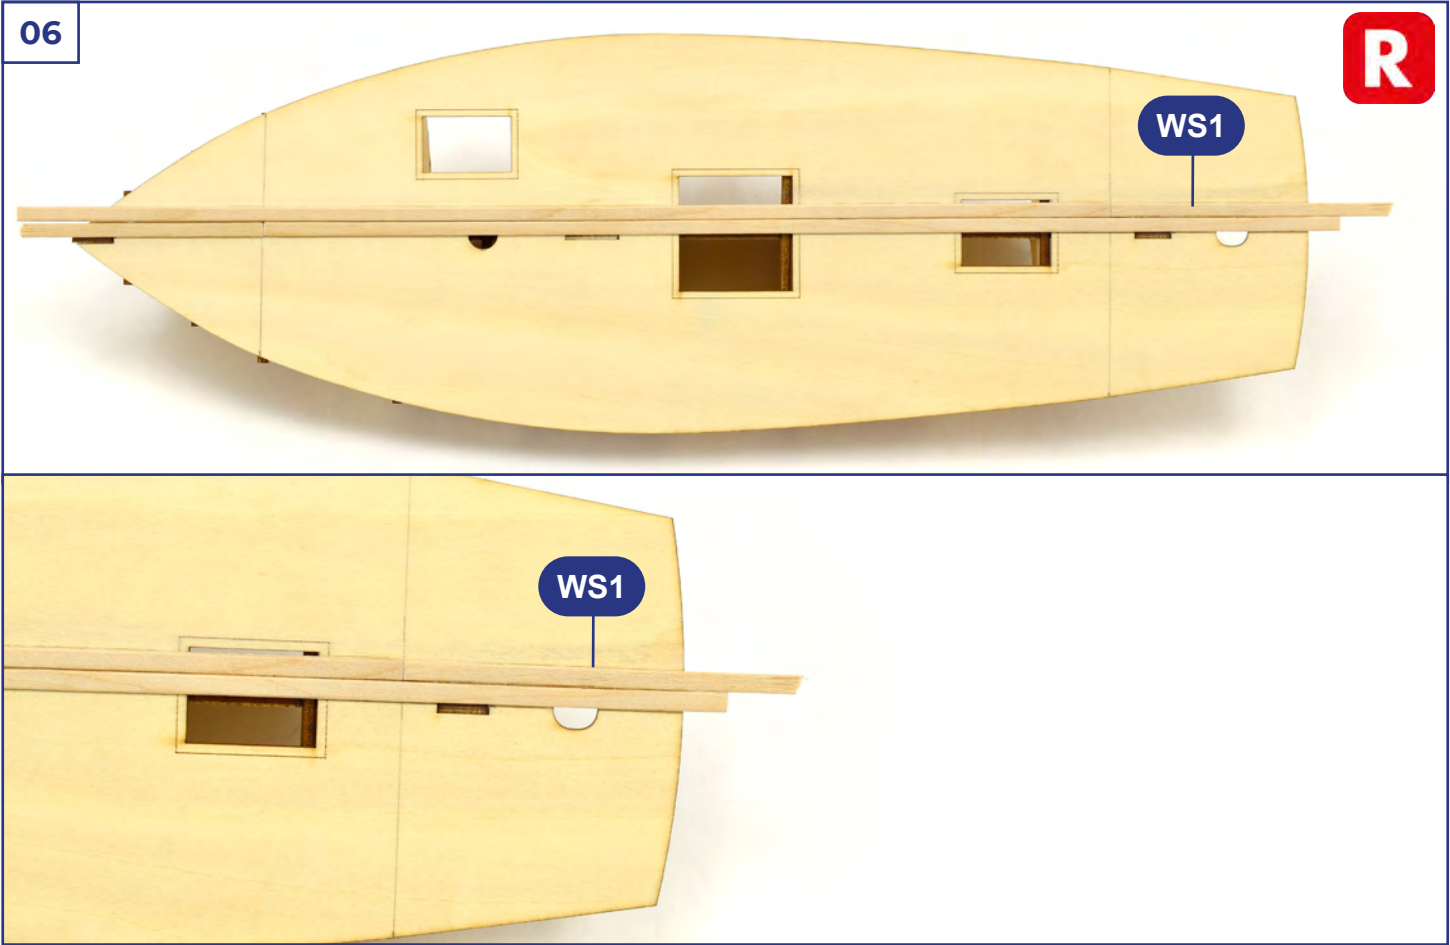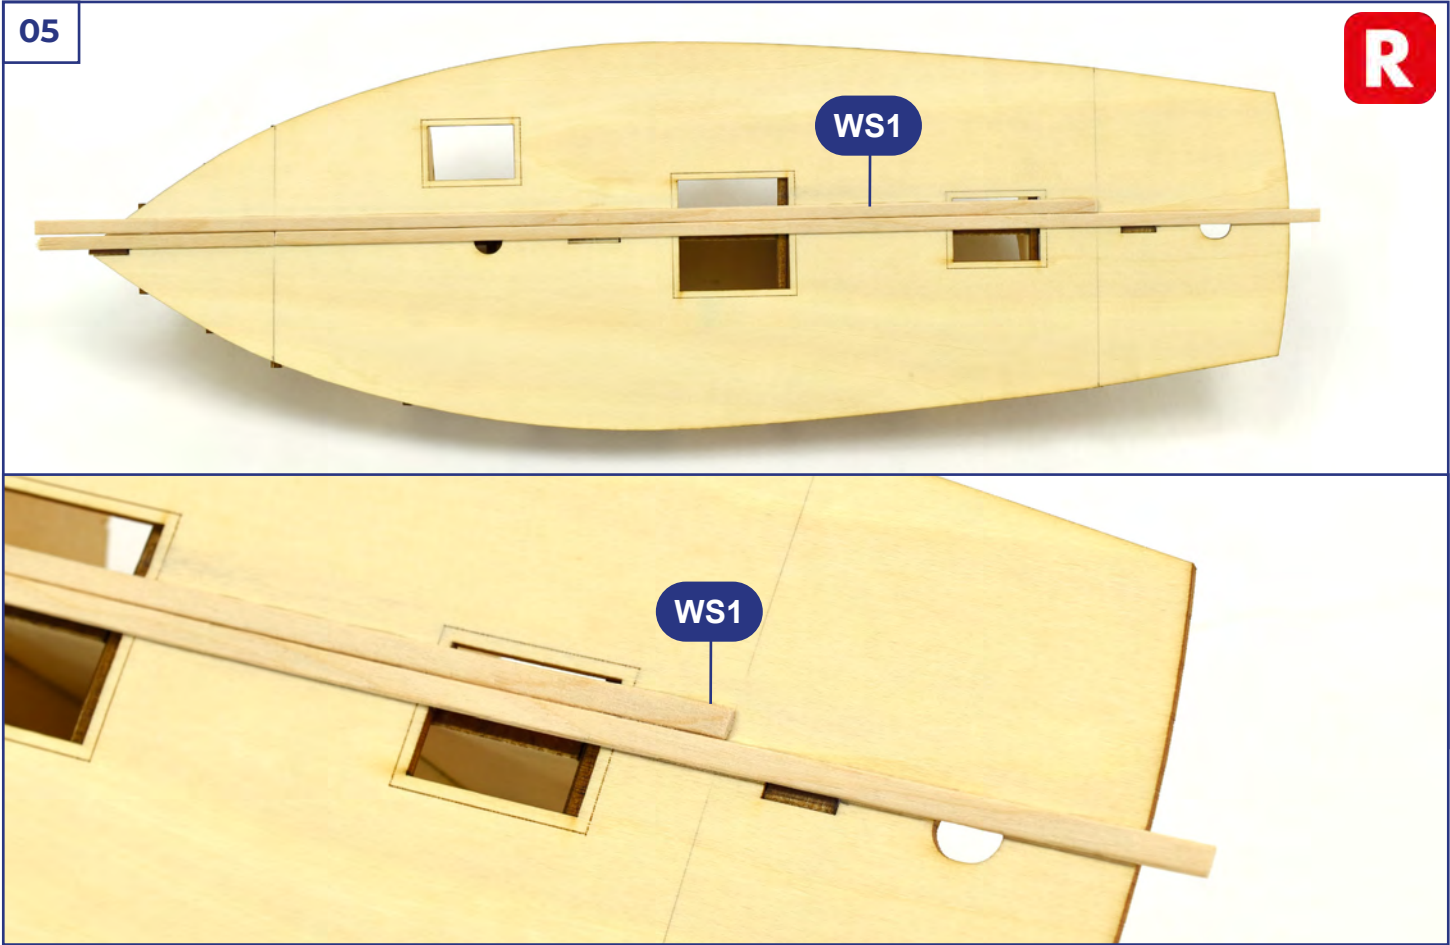










11








05


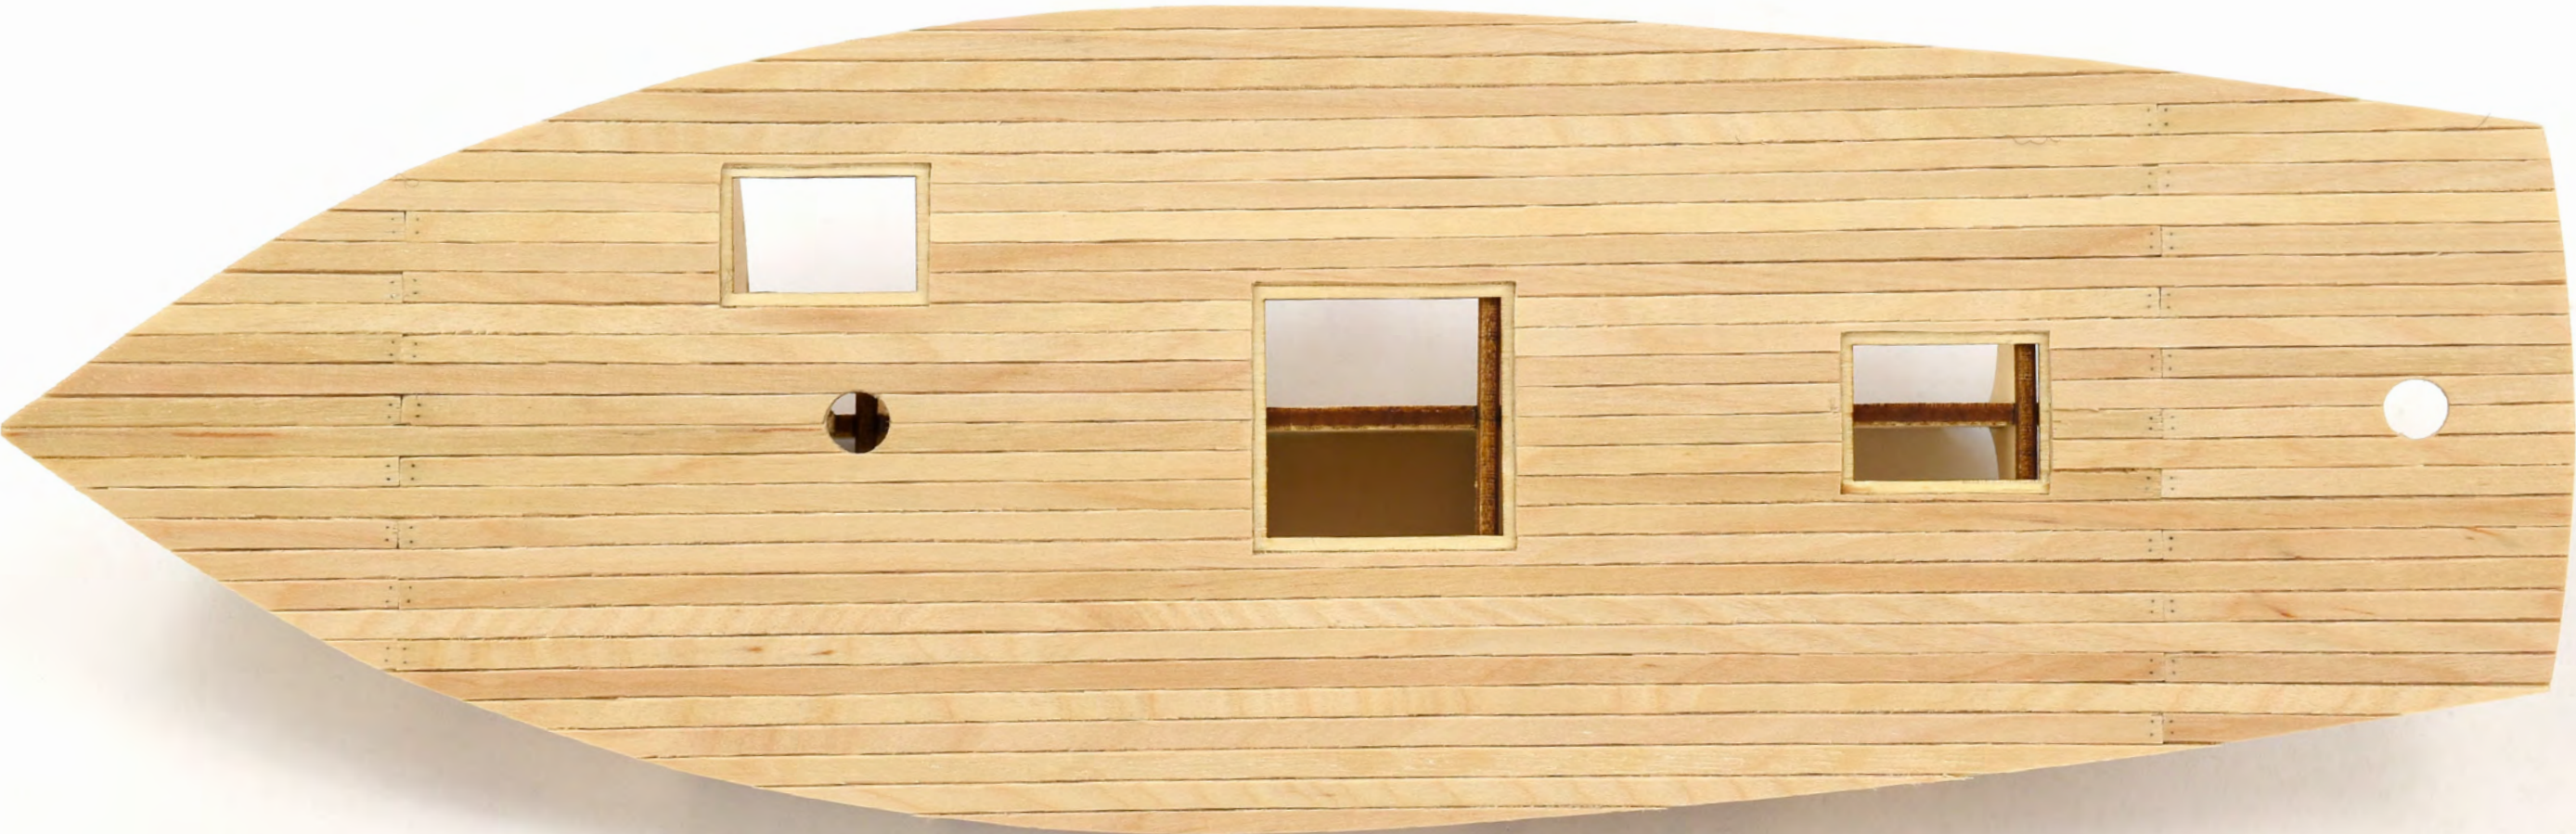



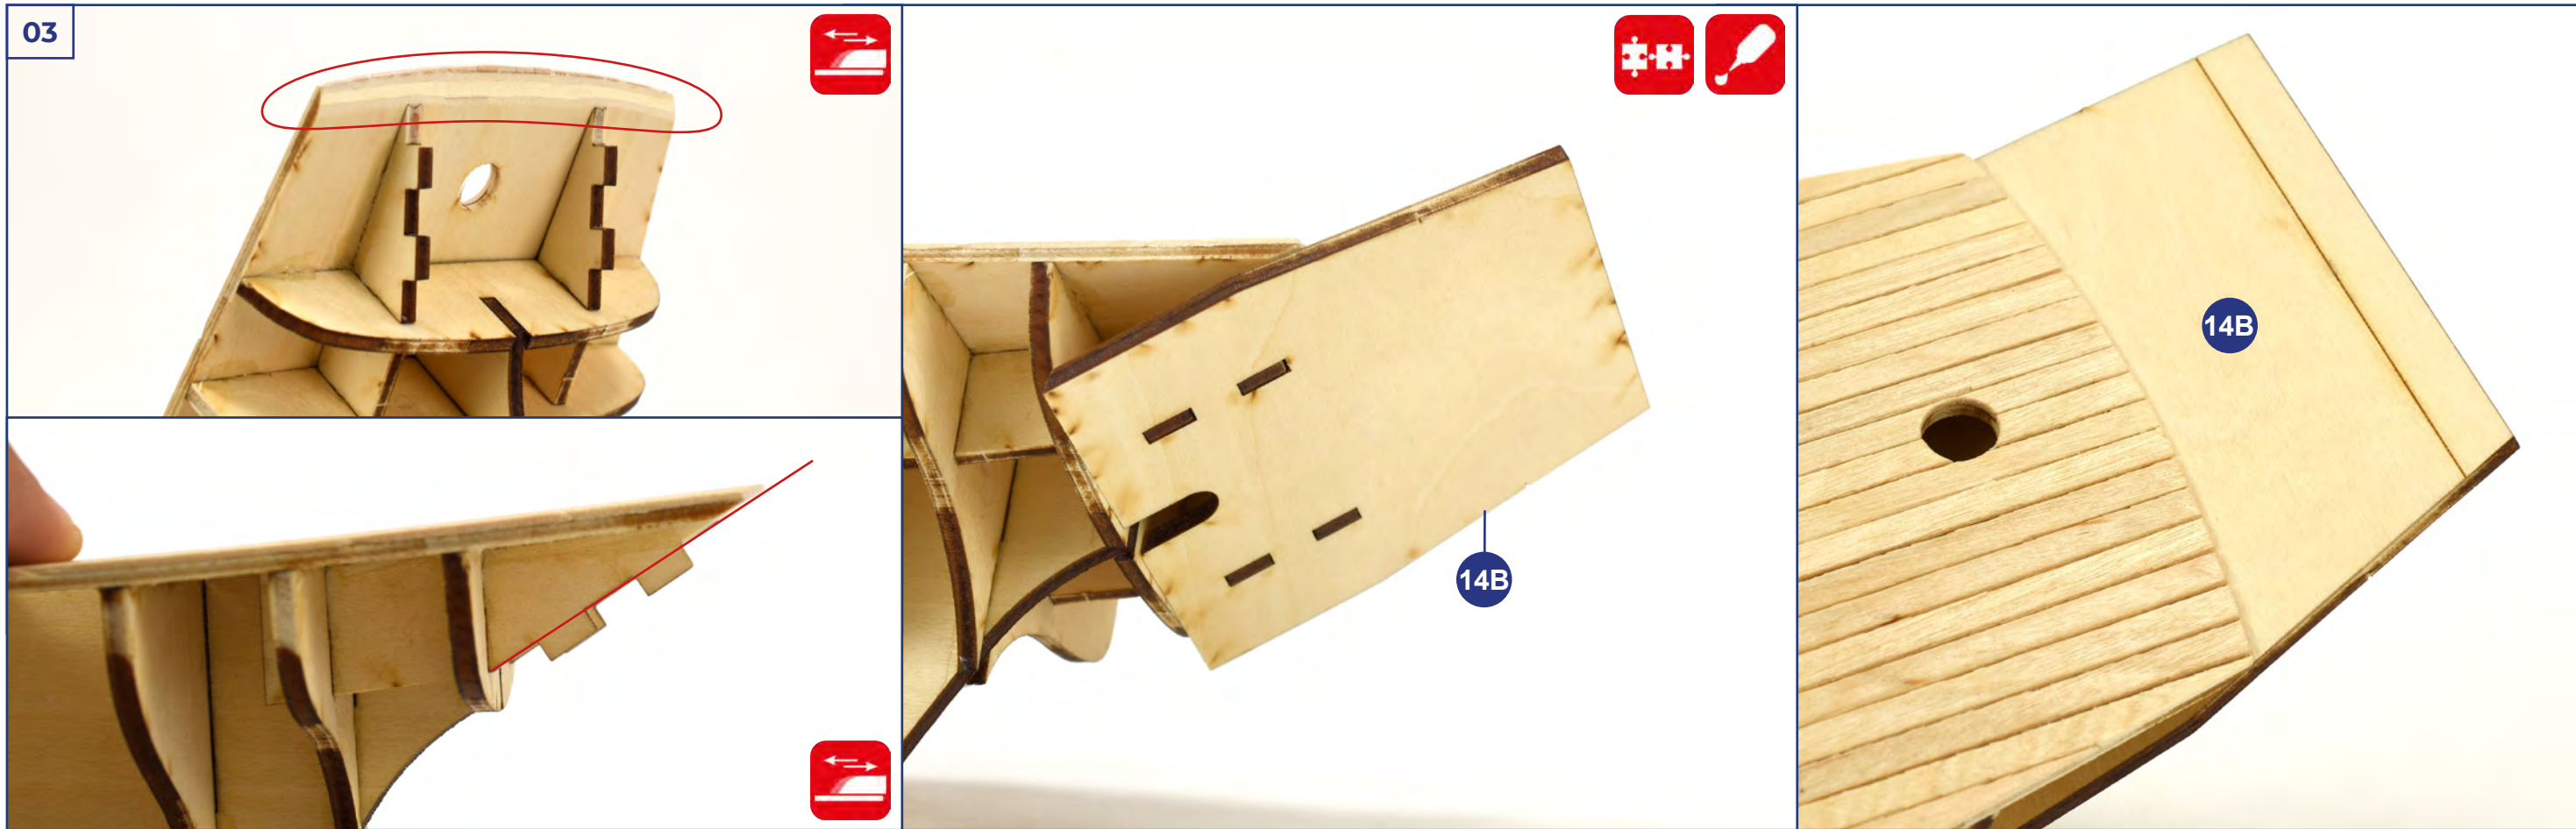
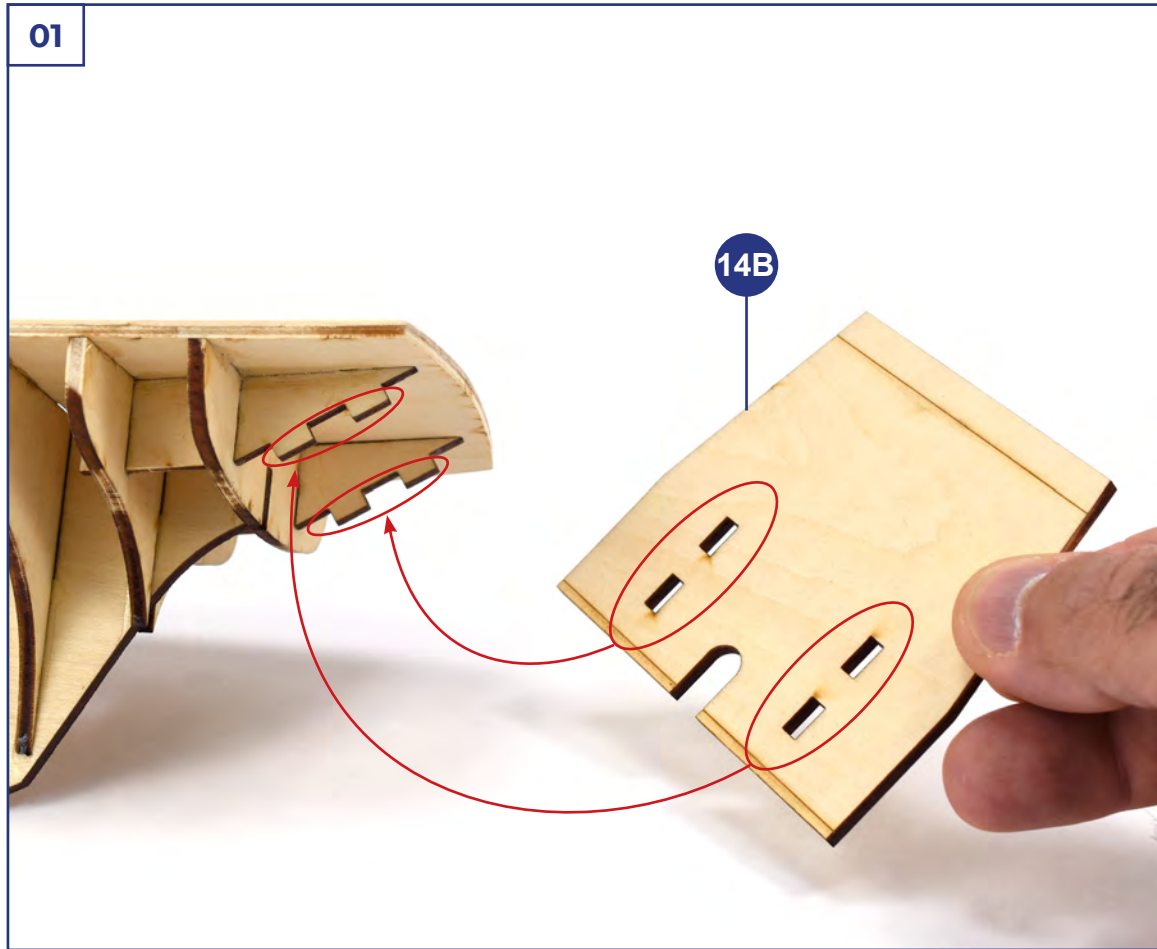


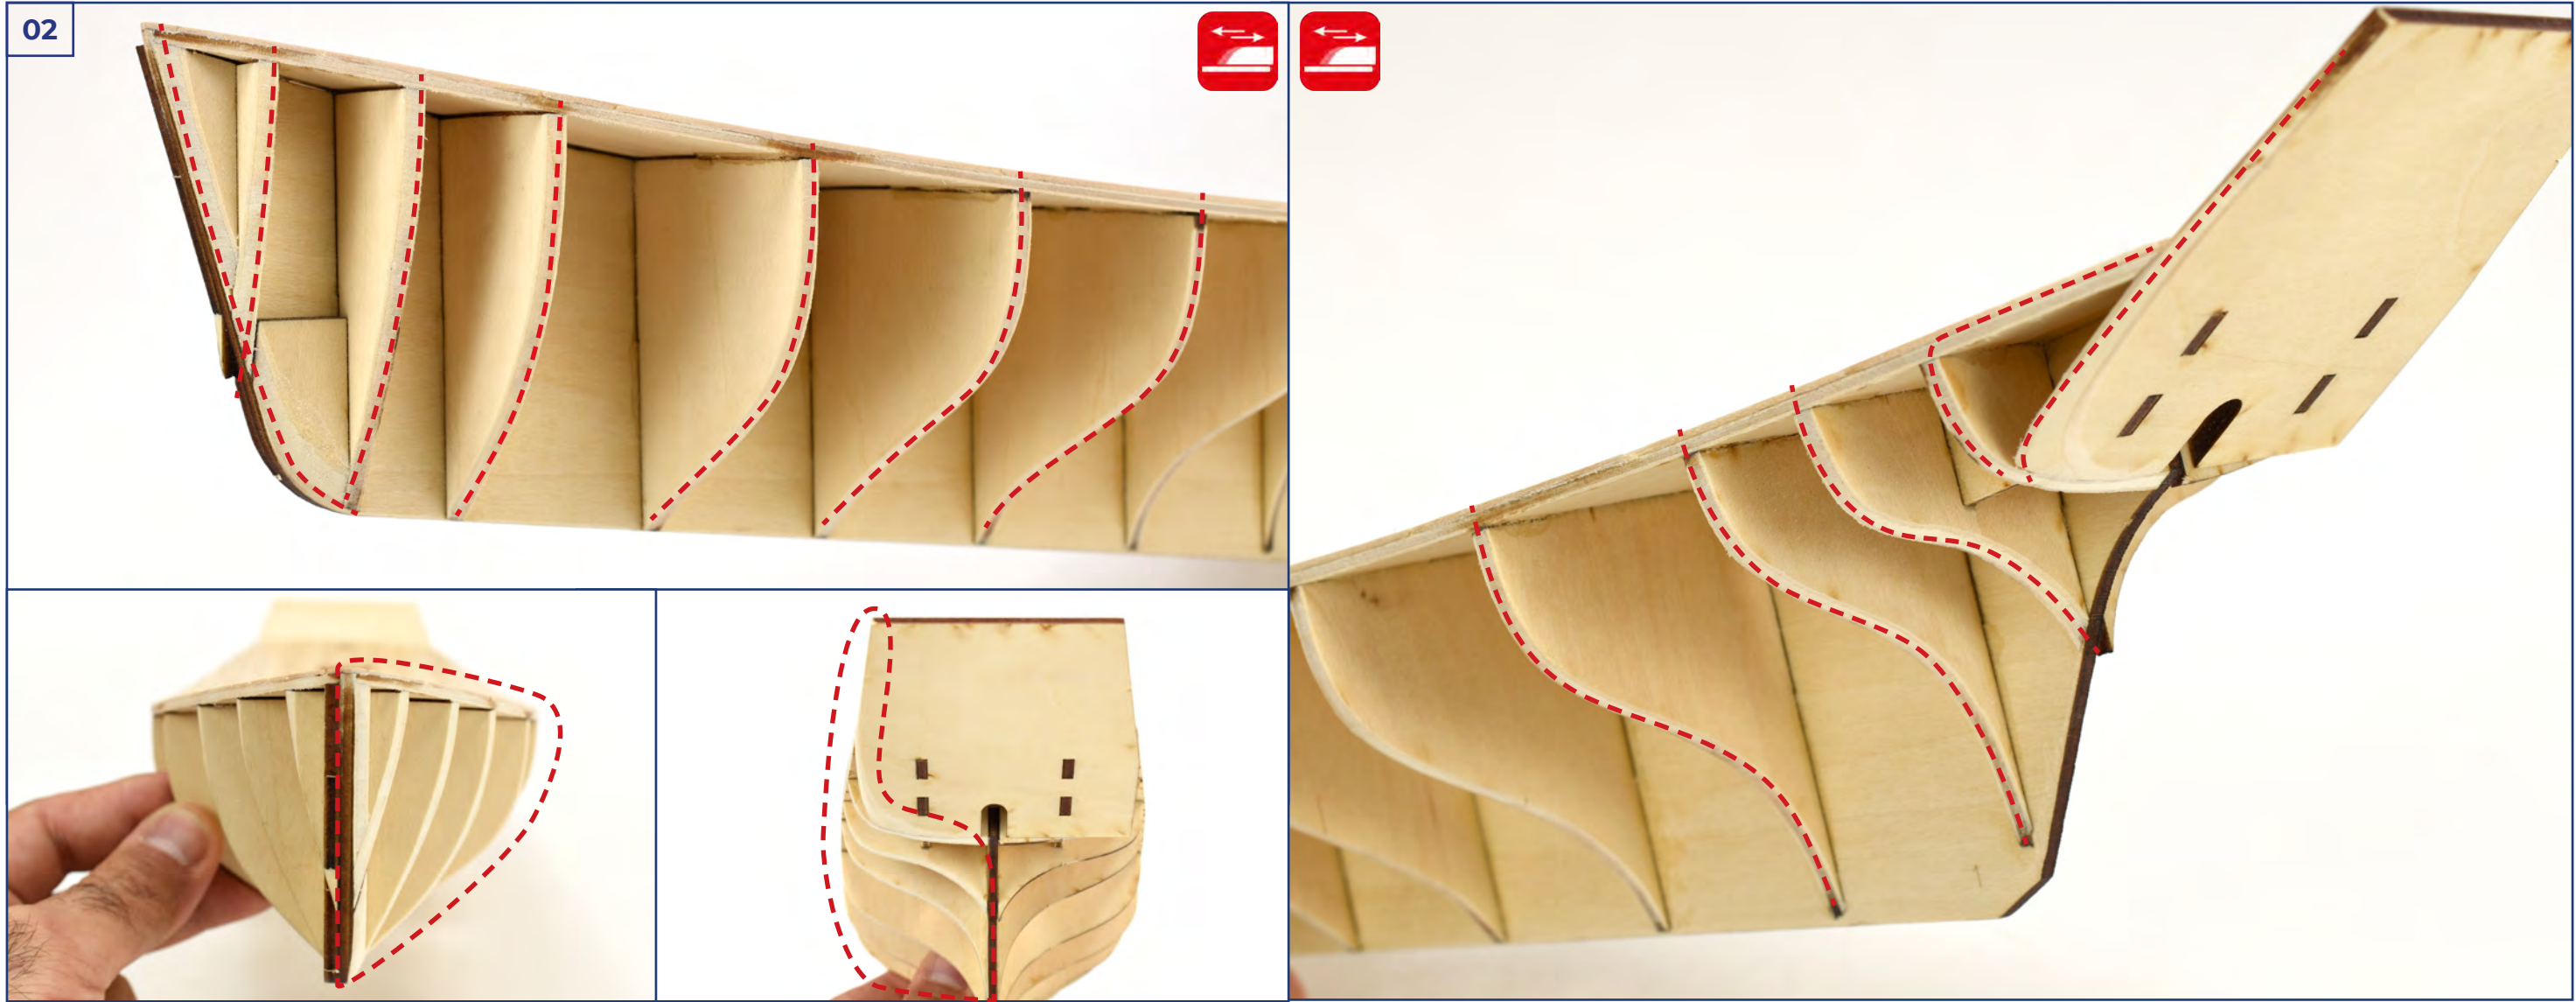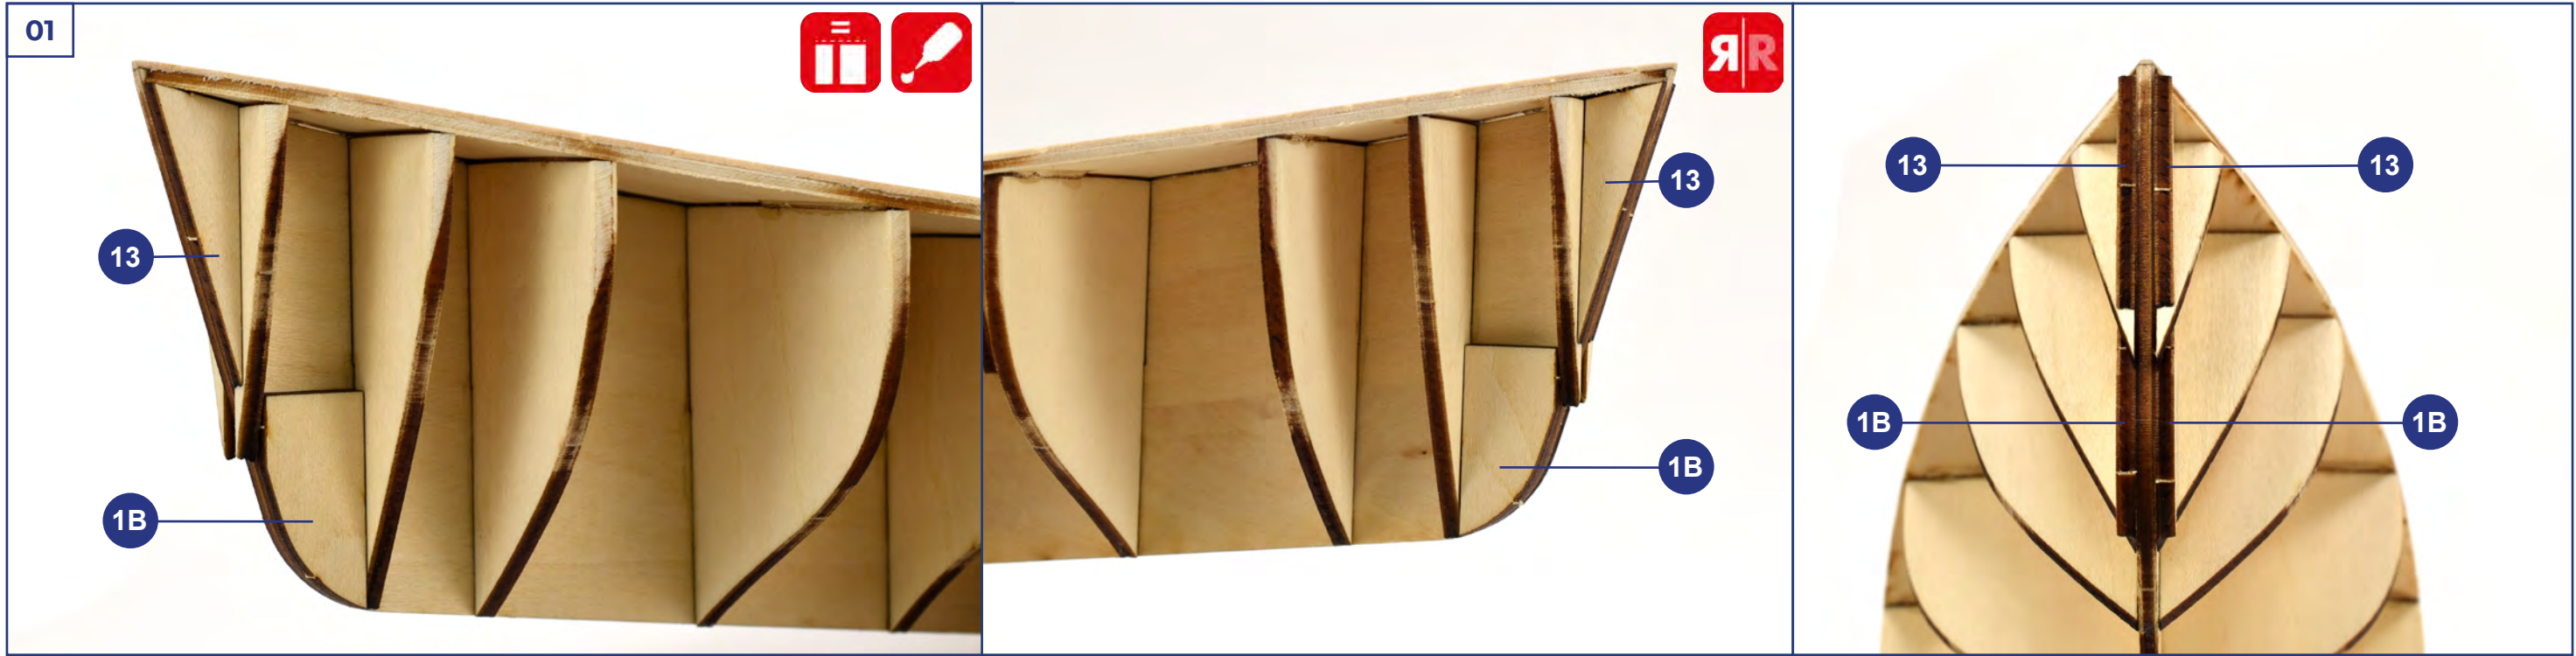


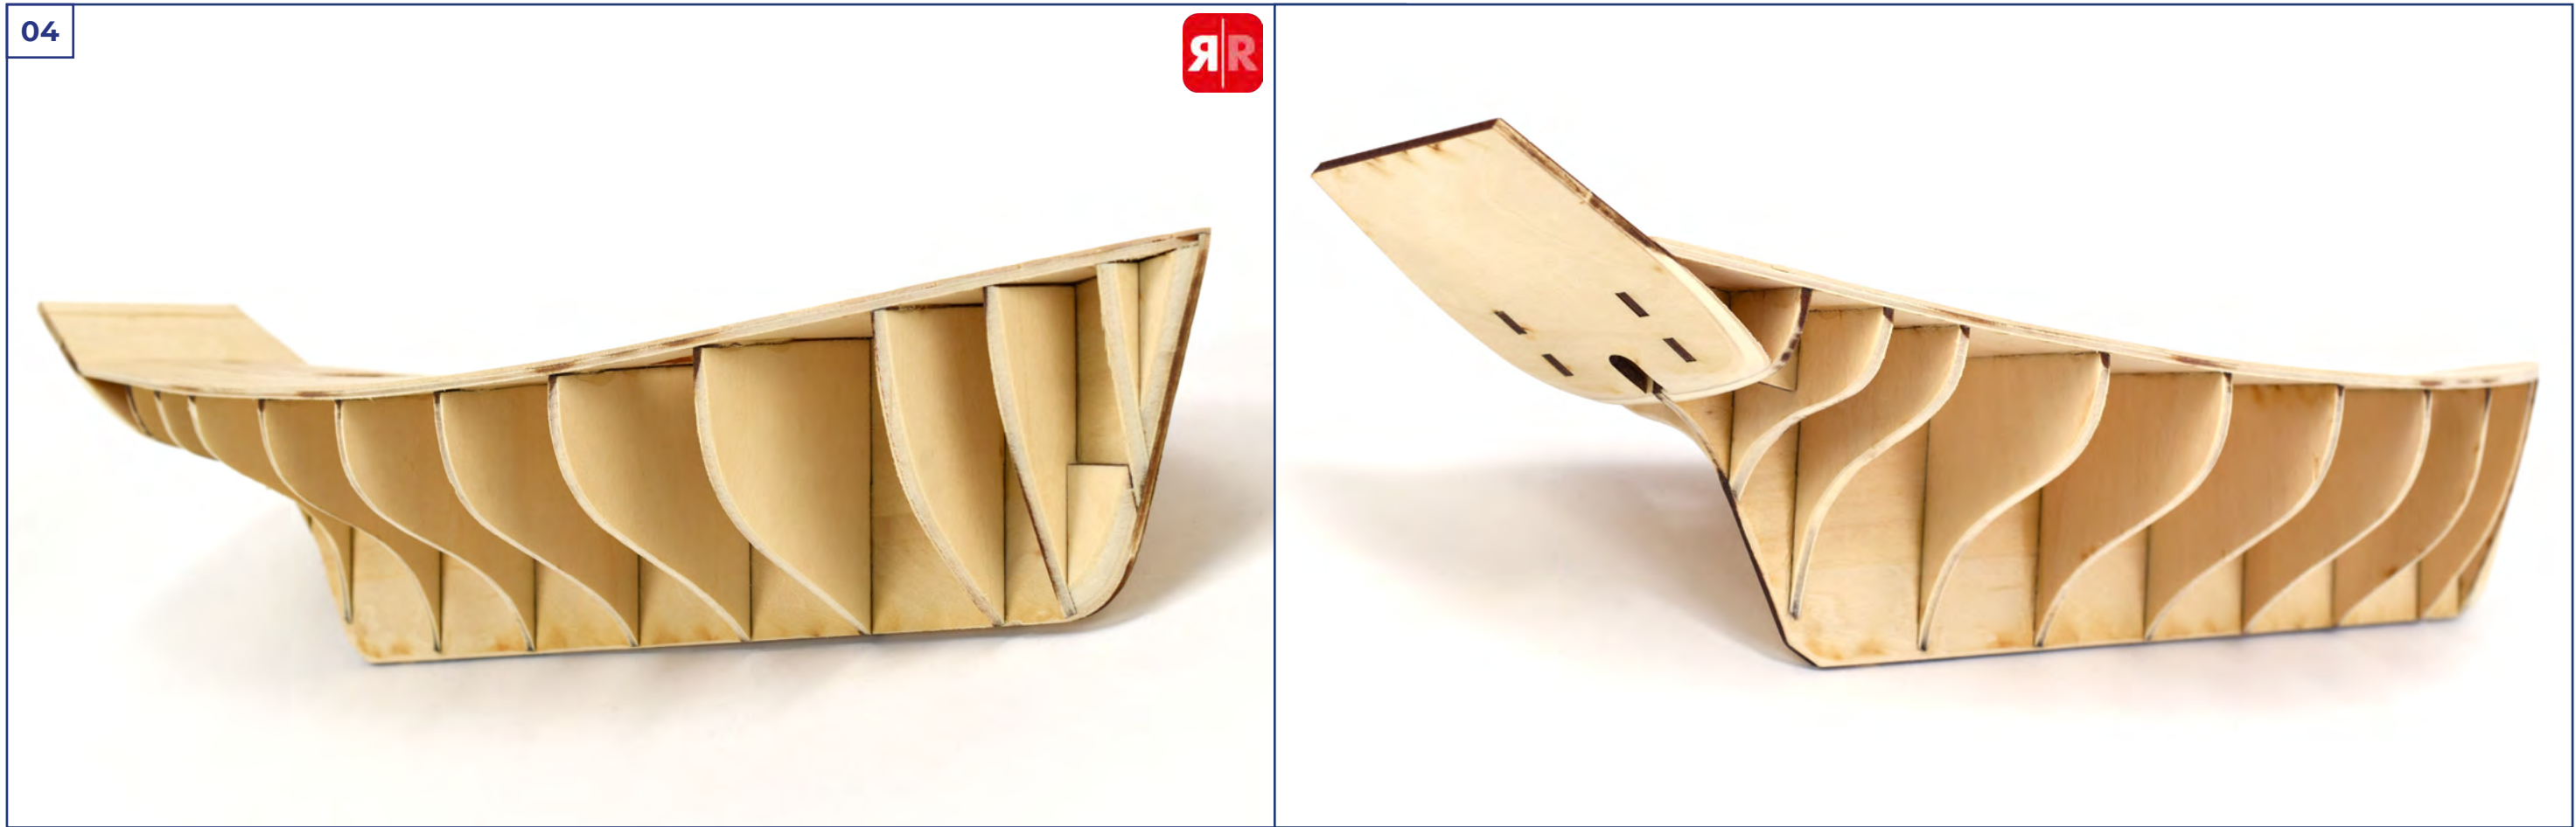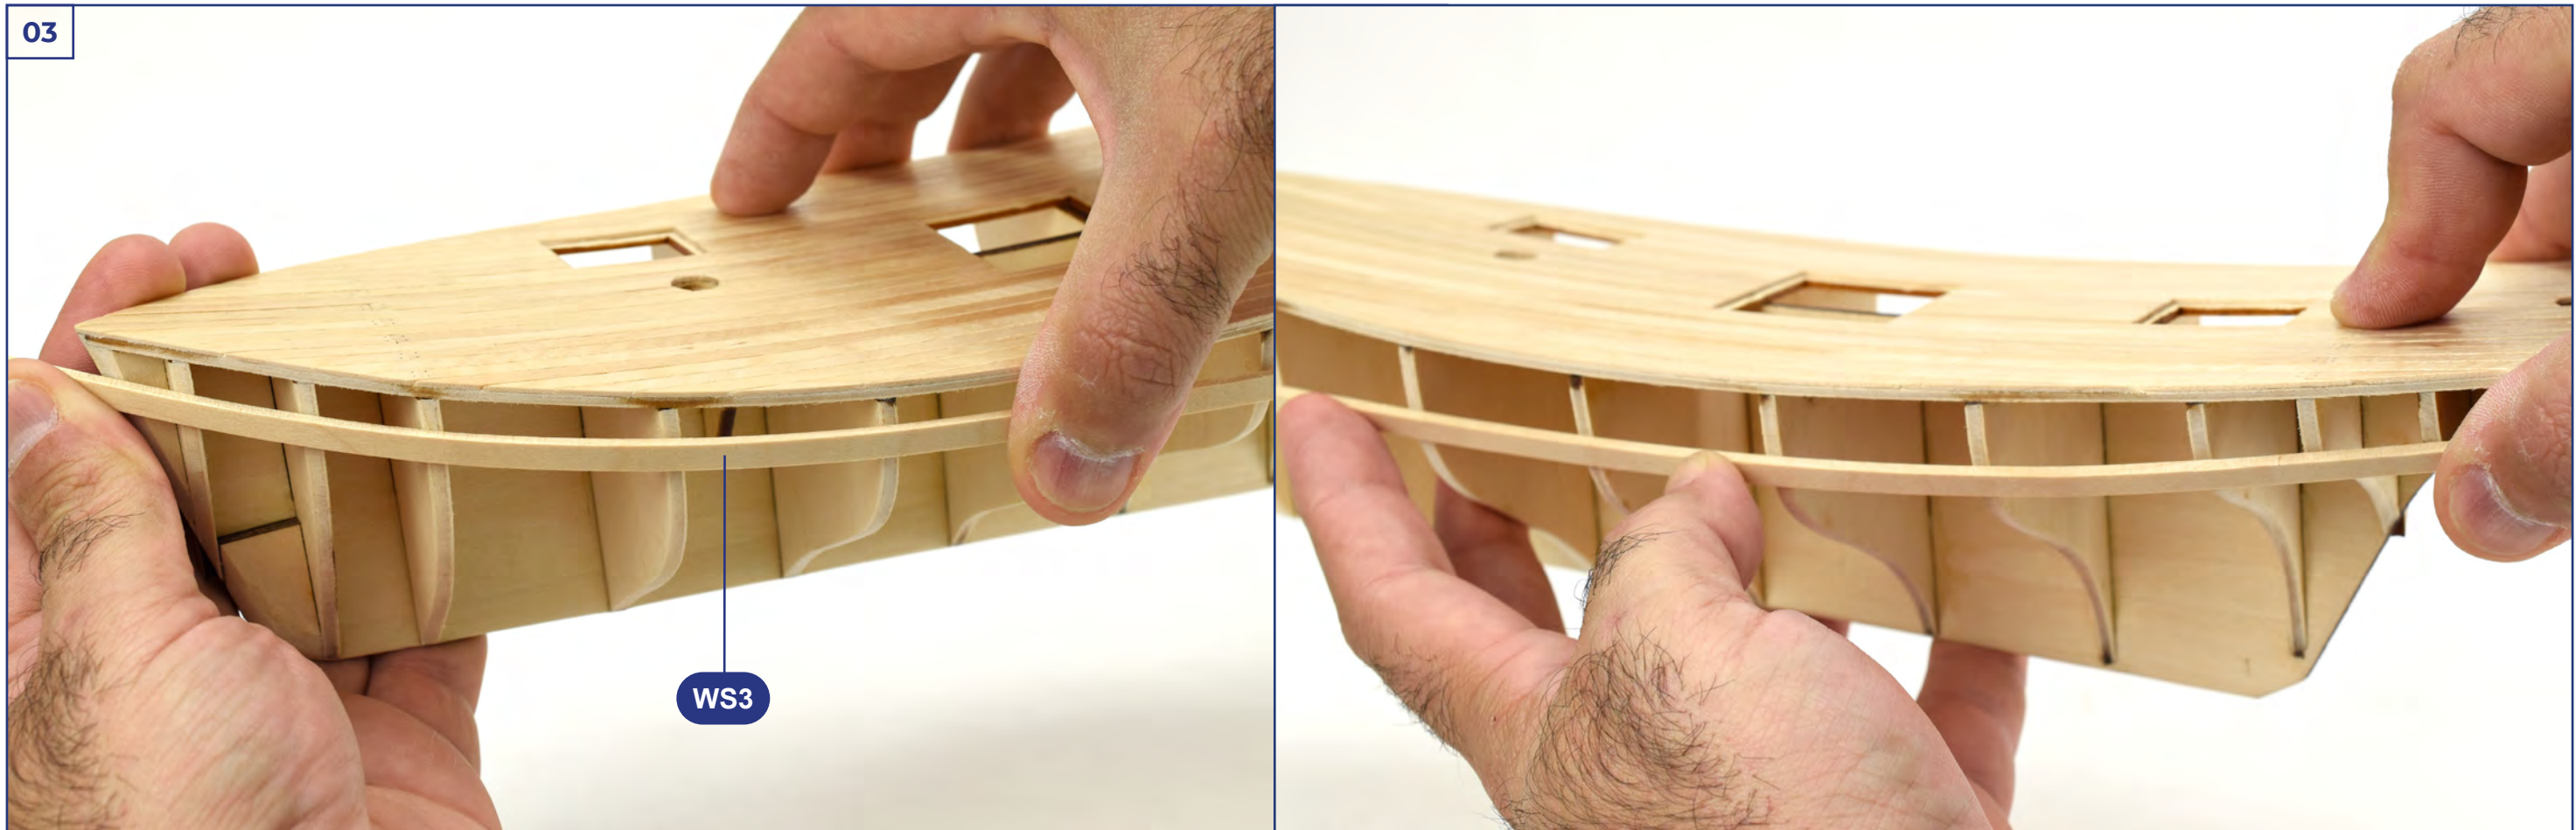

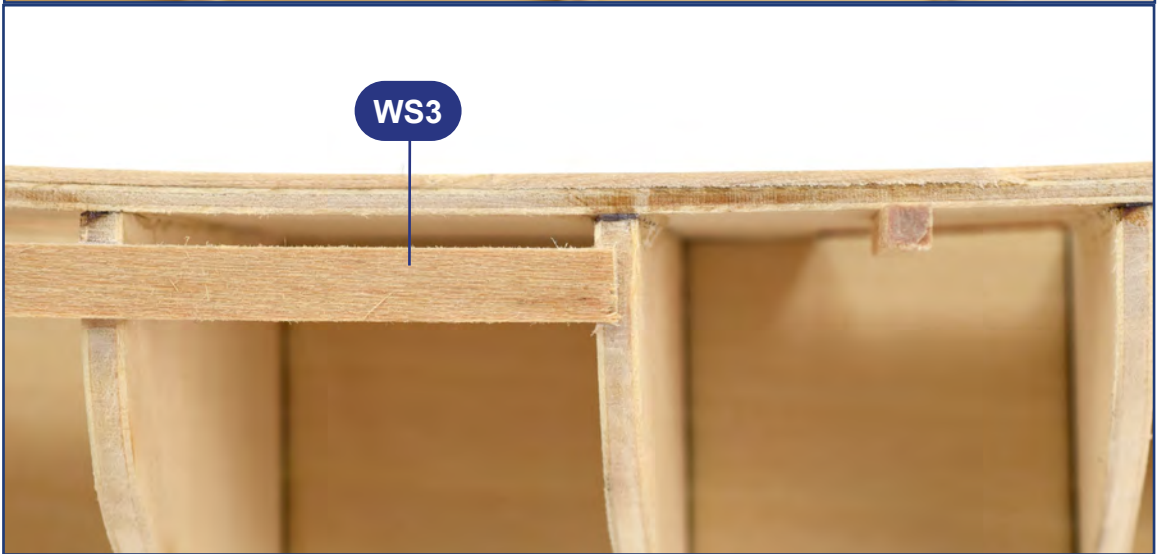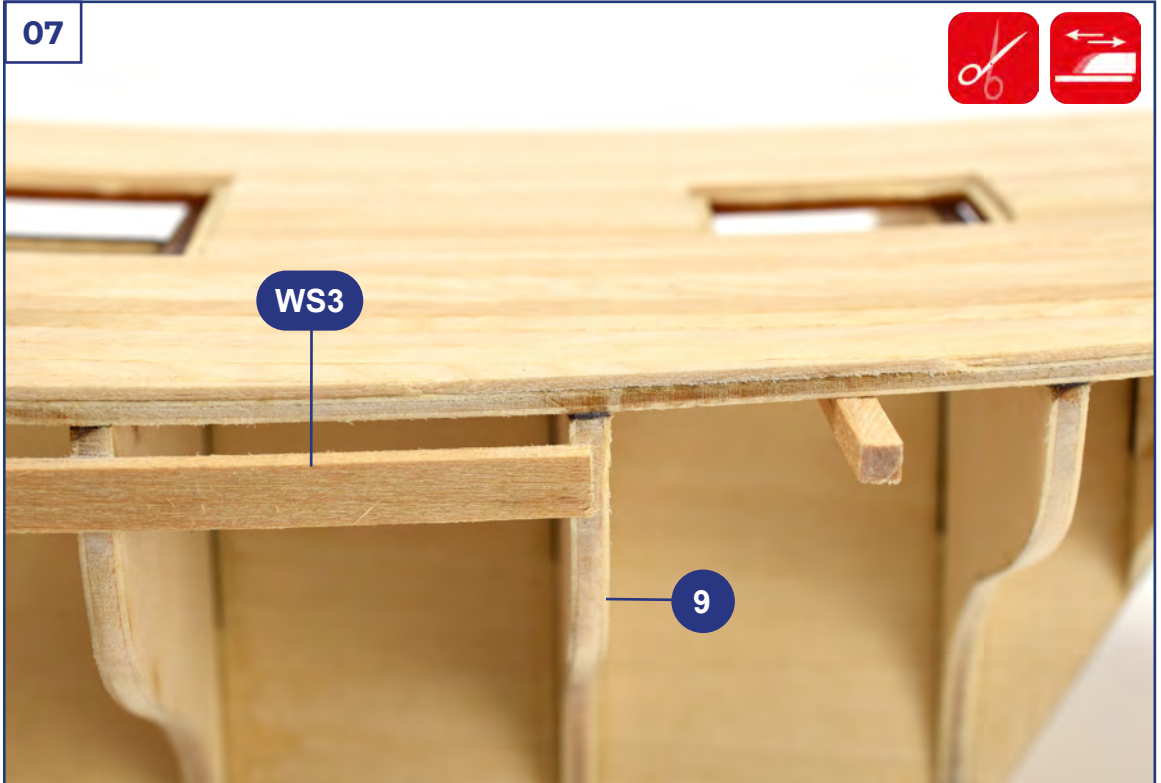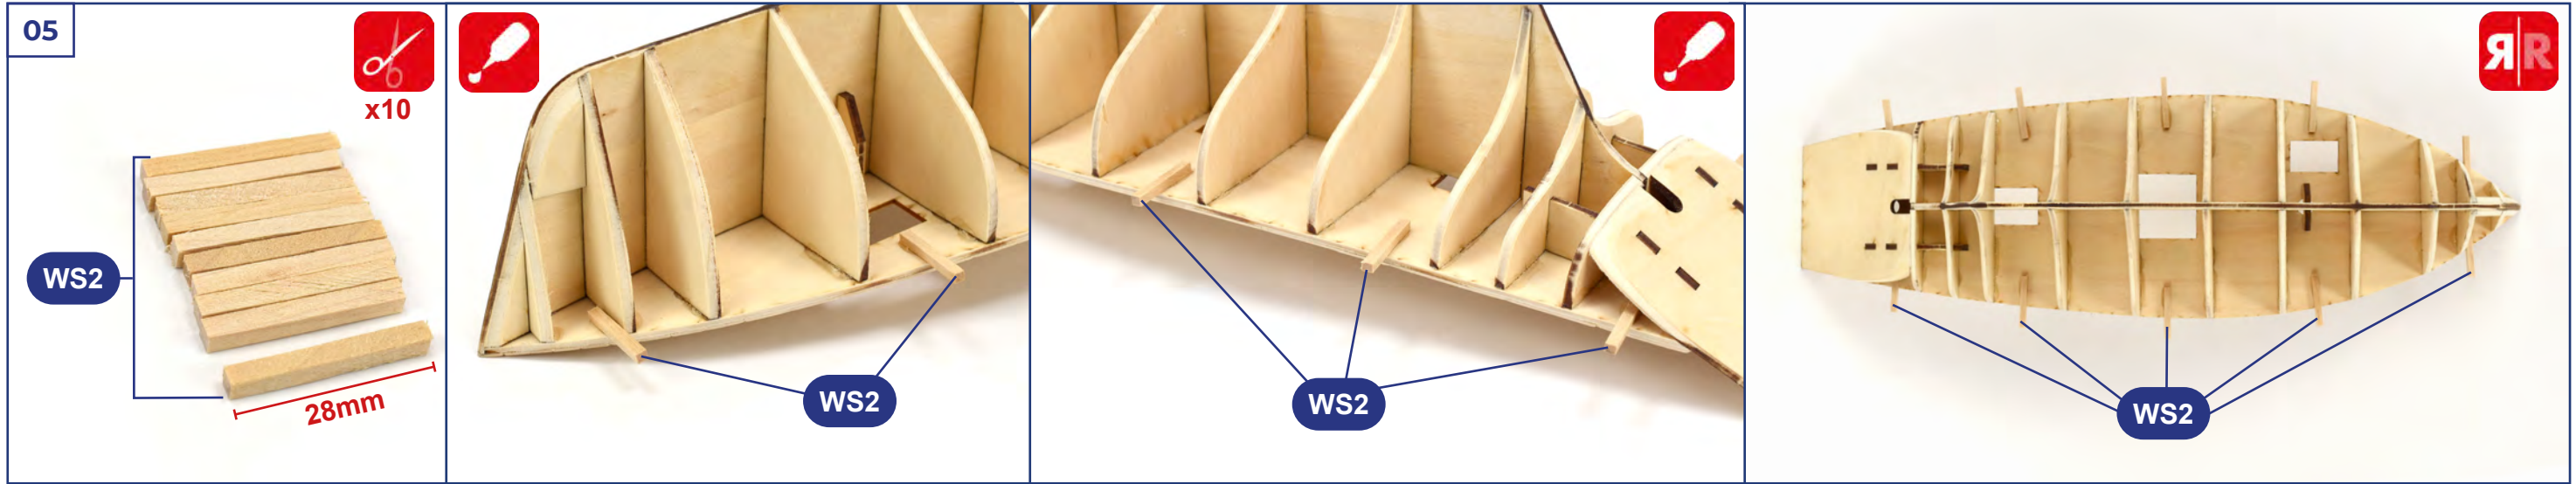

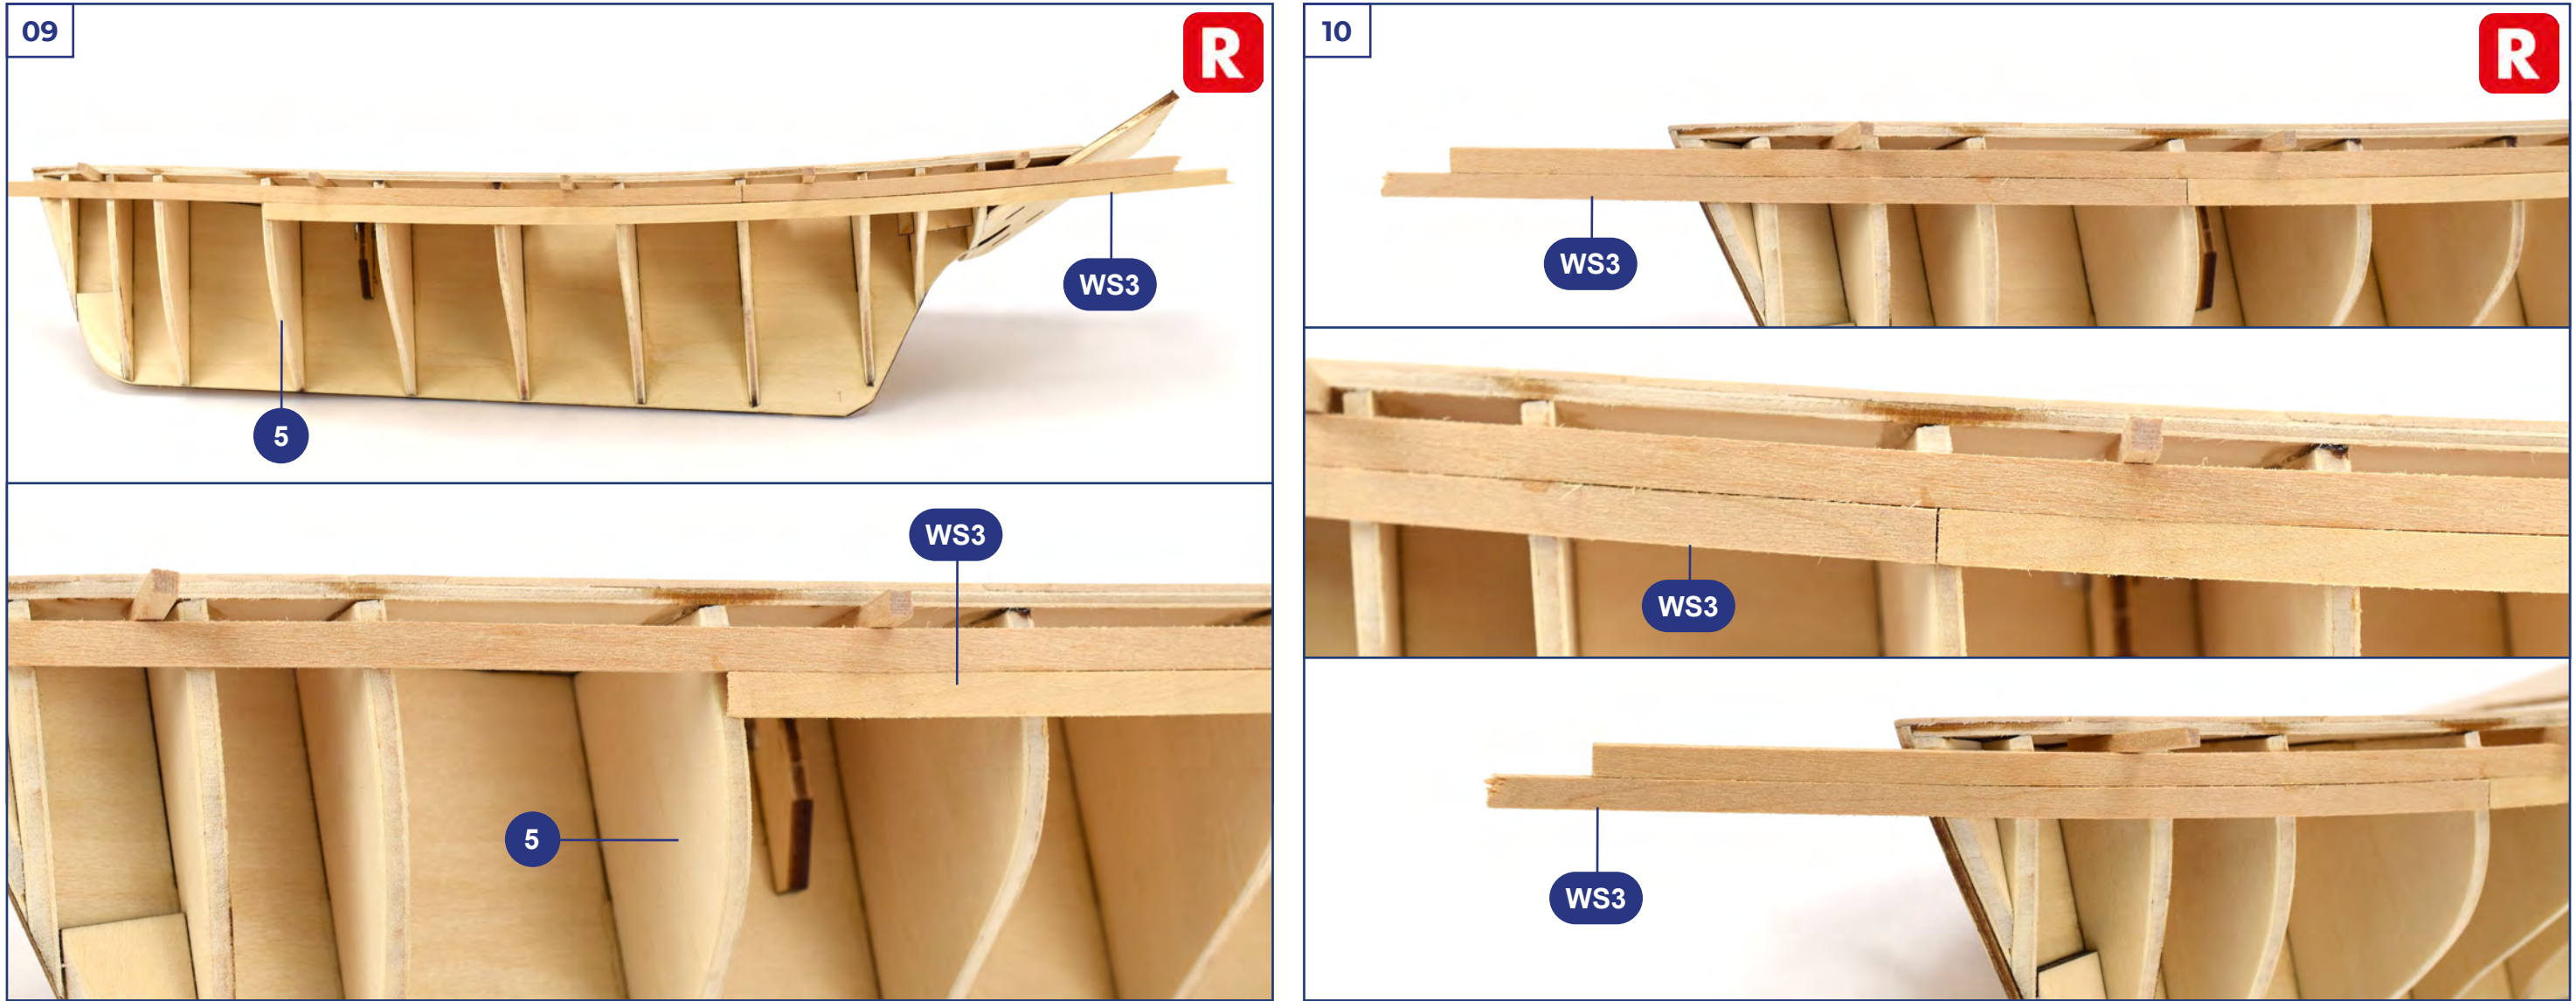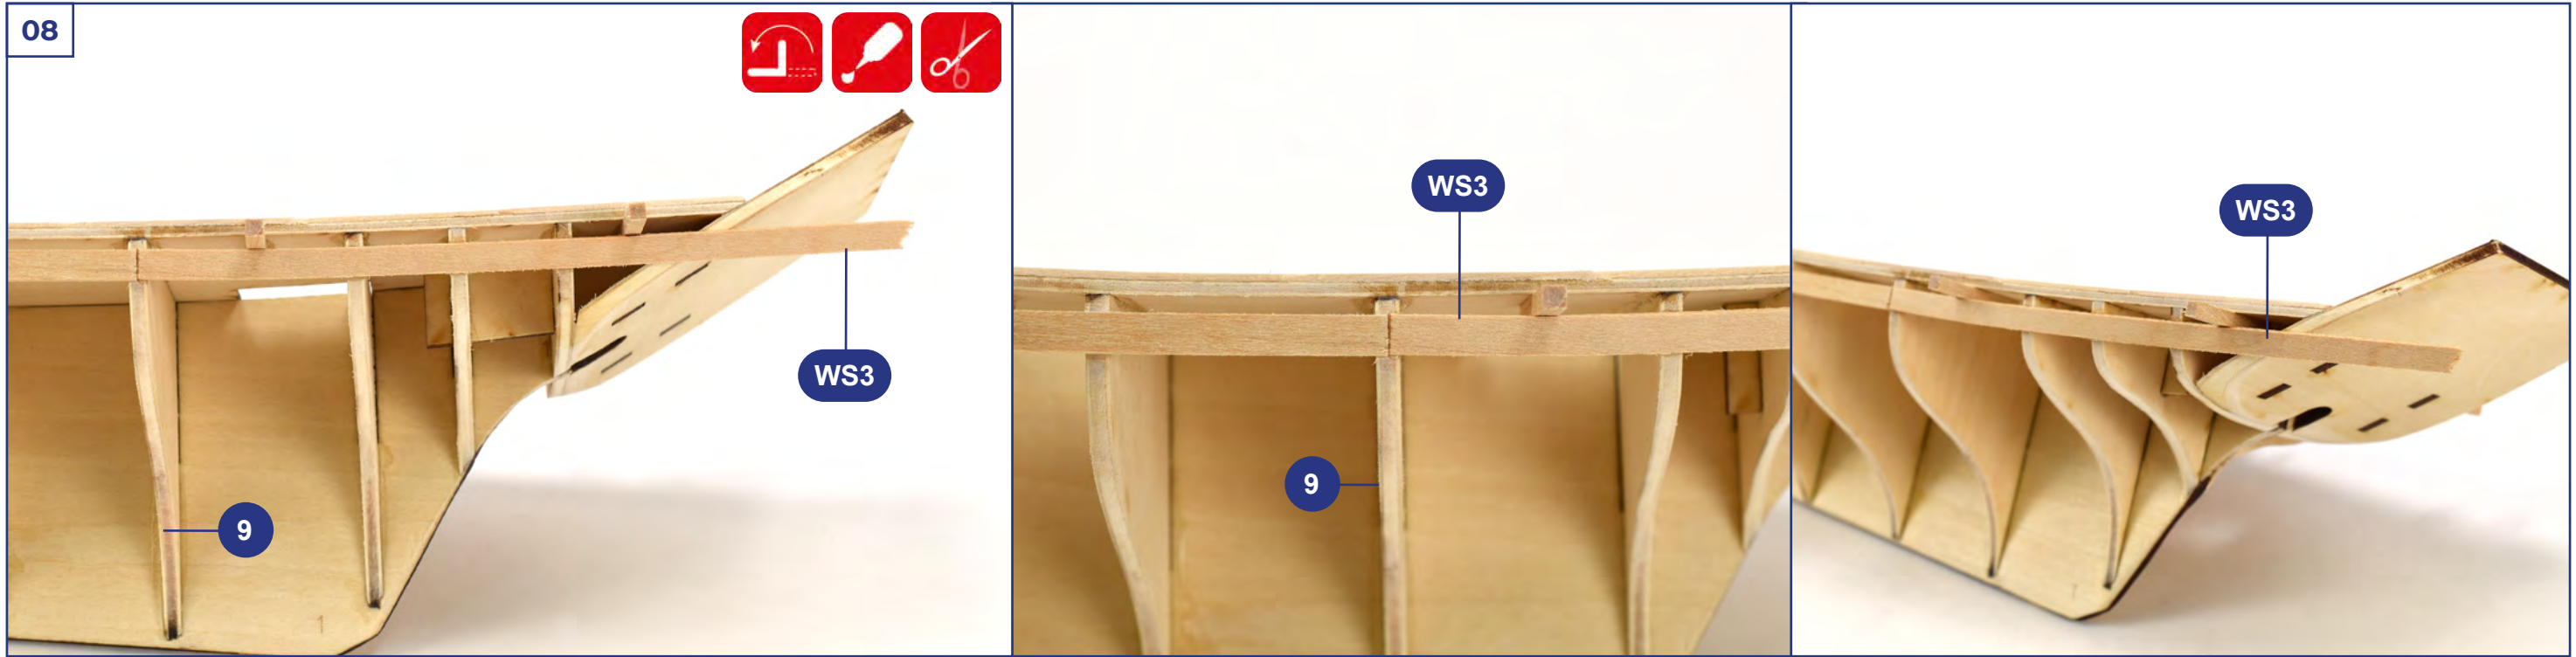

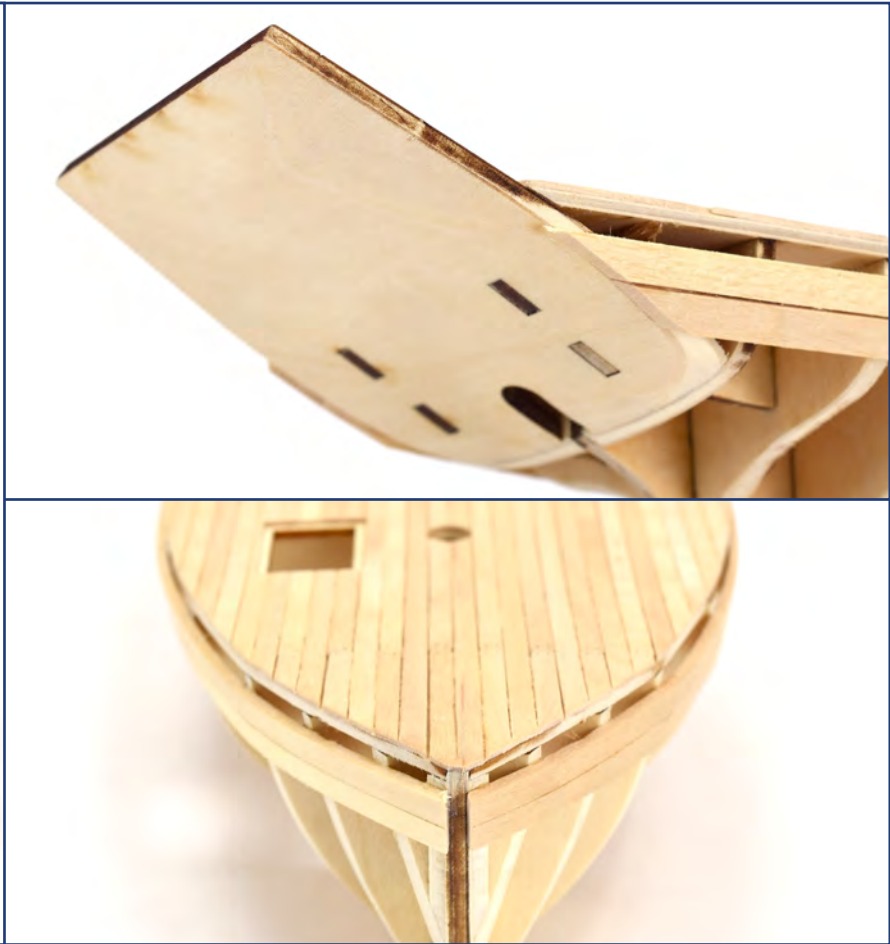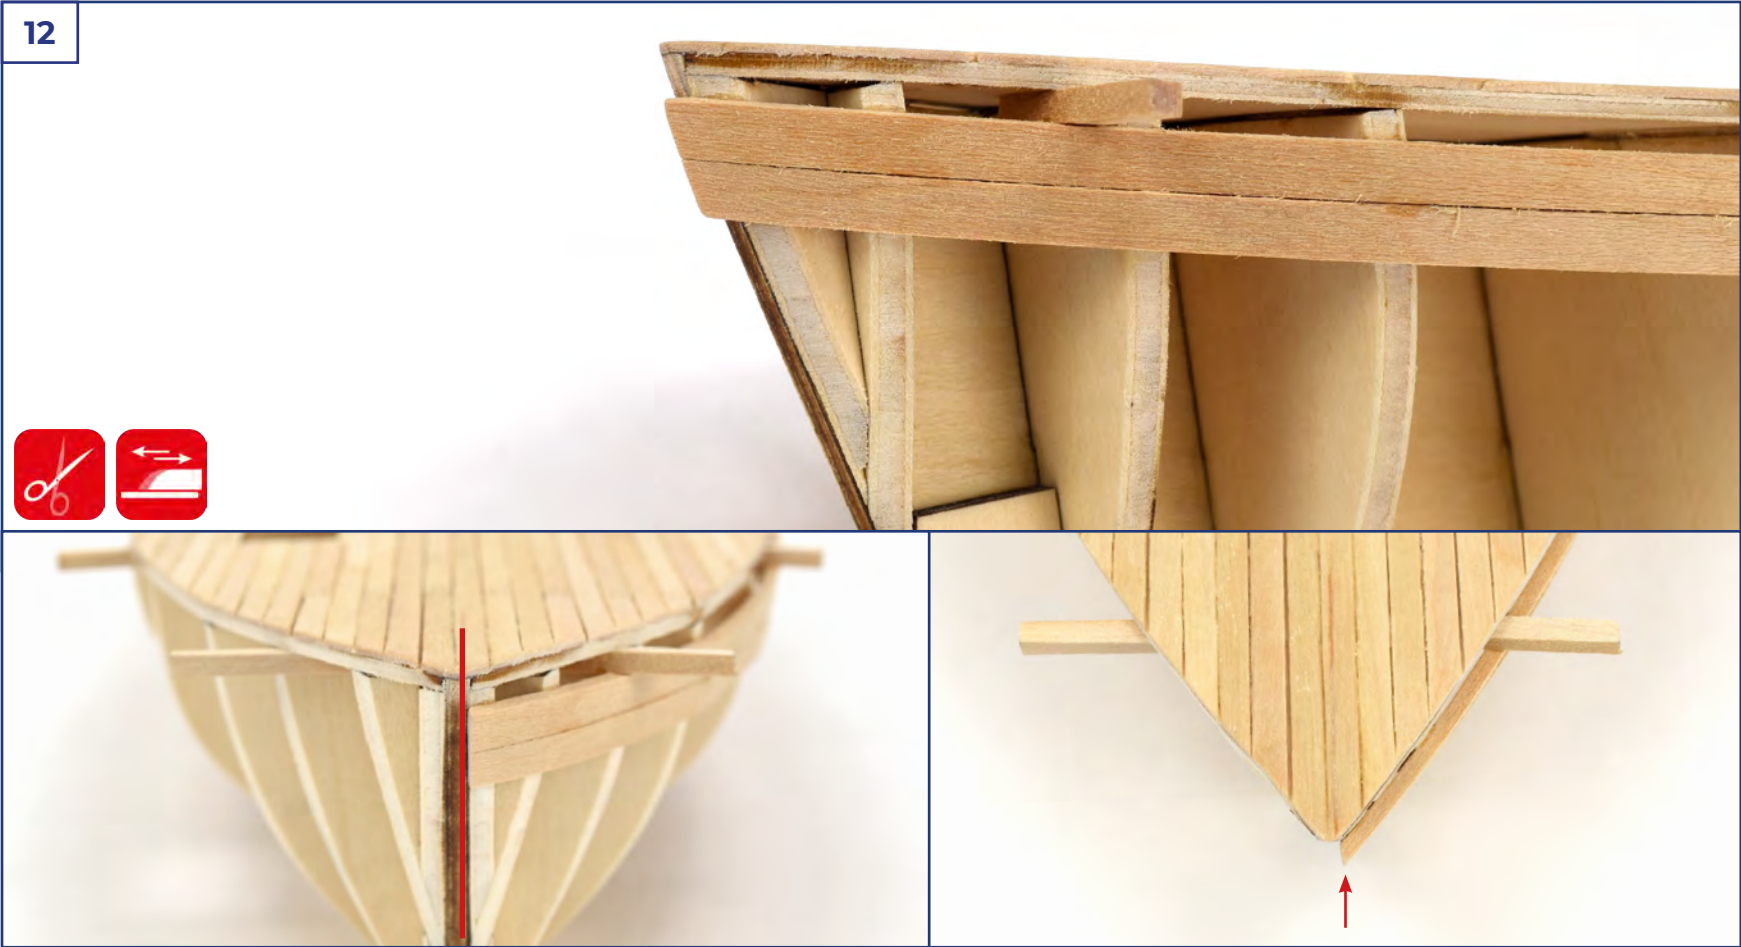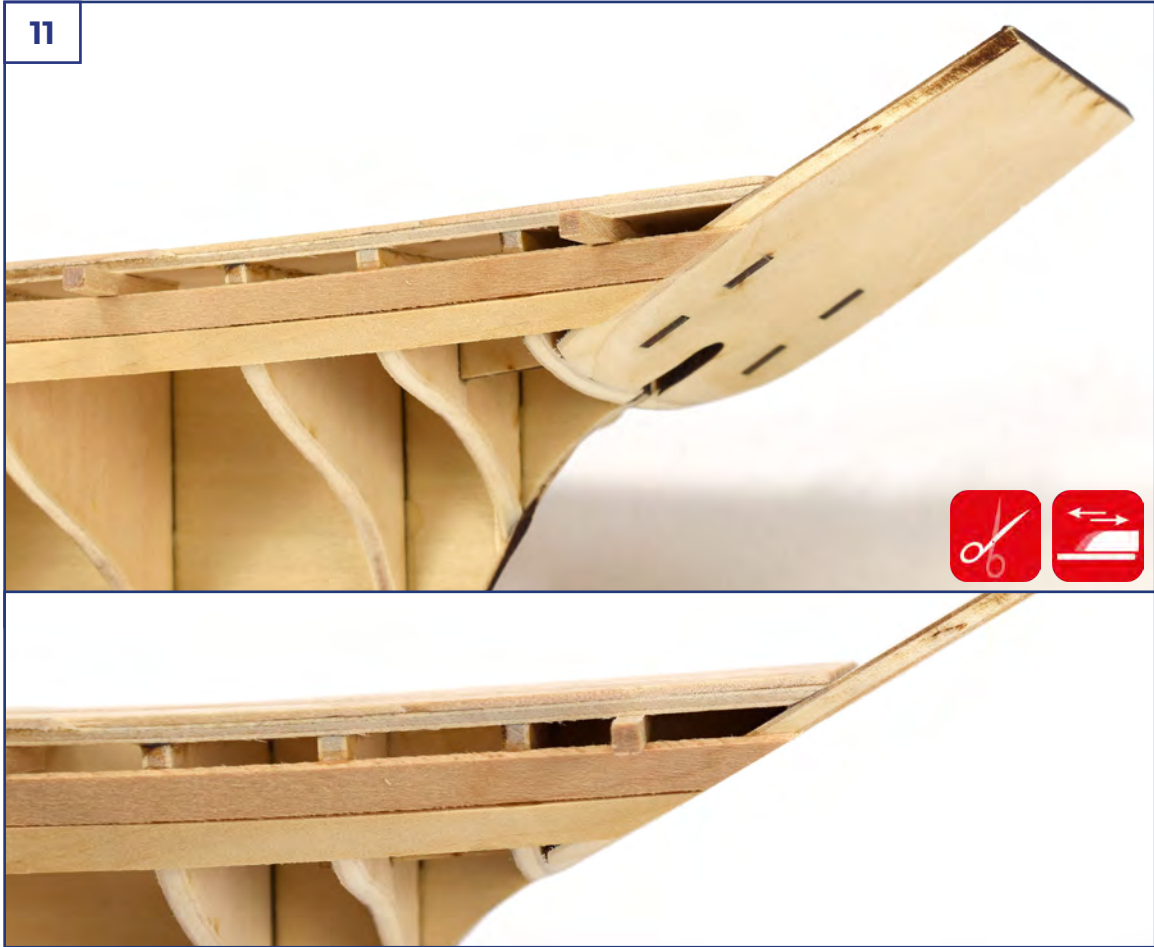

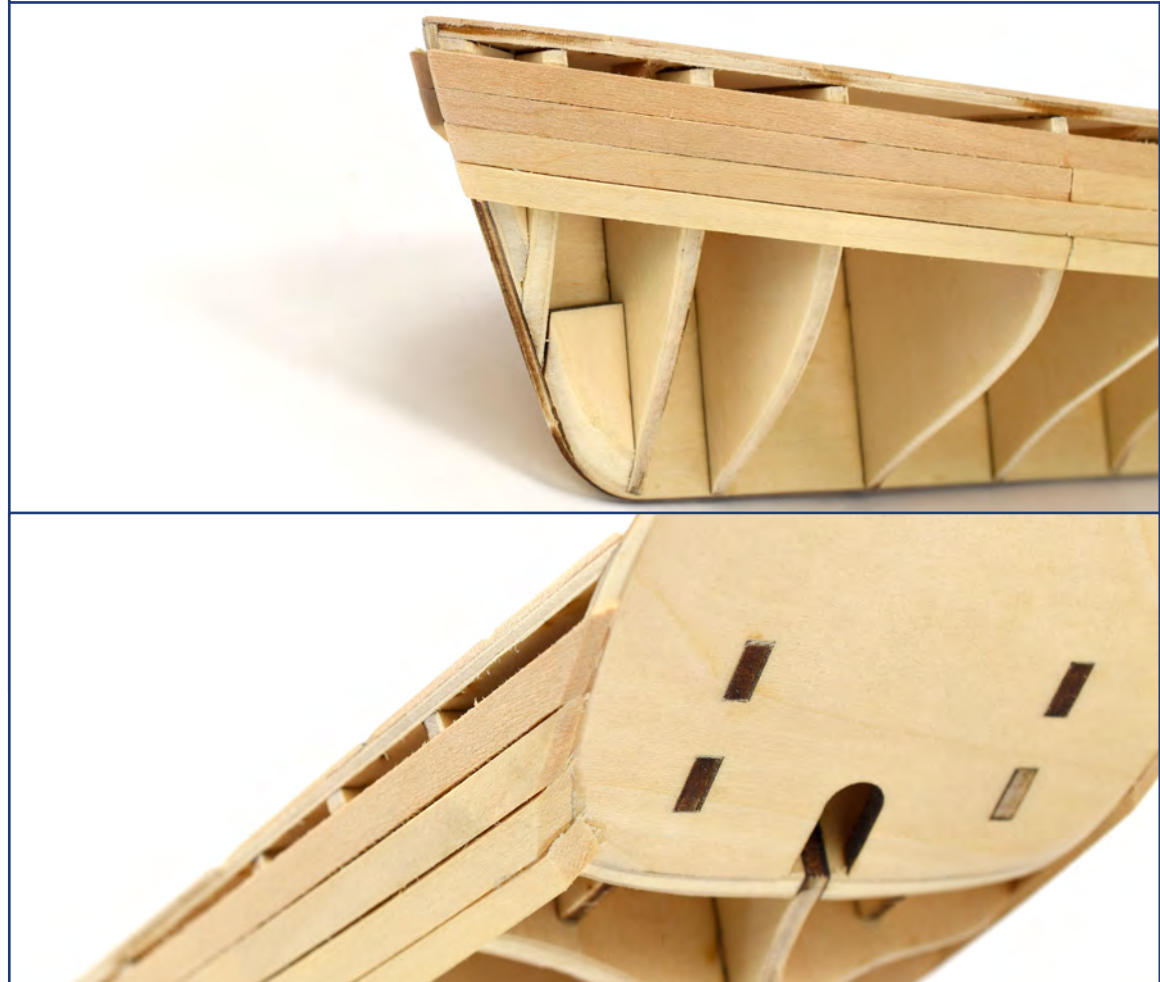

15



16




WS3




WS3






WS3

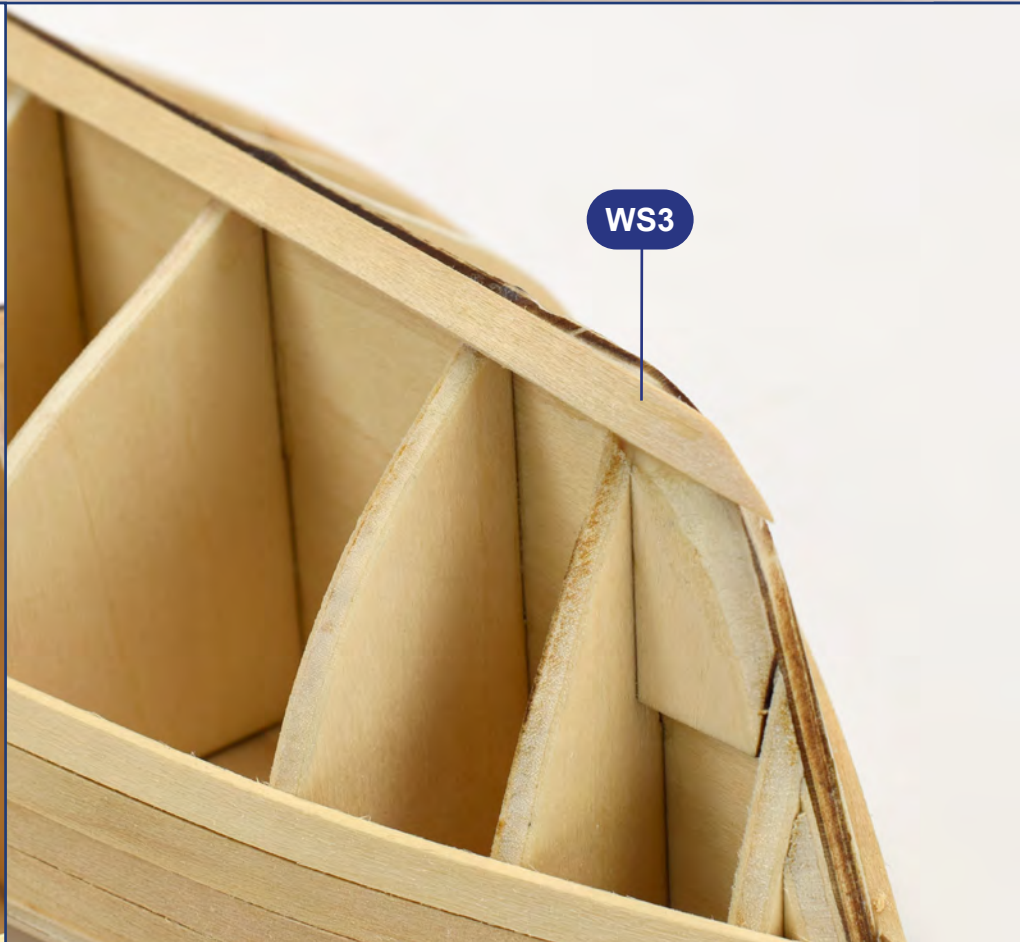




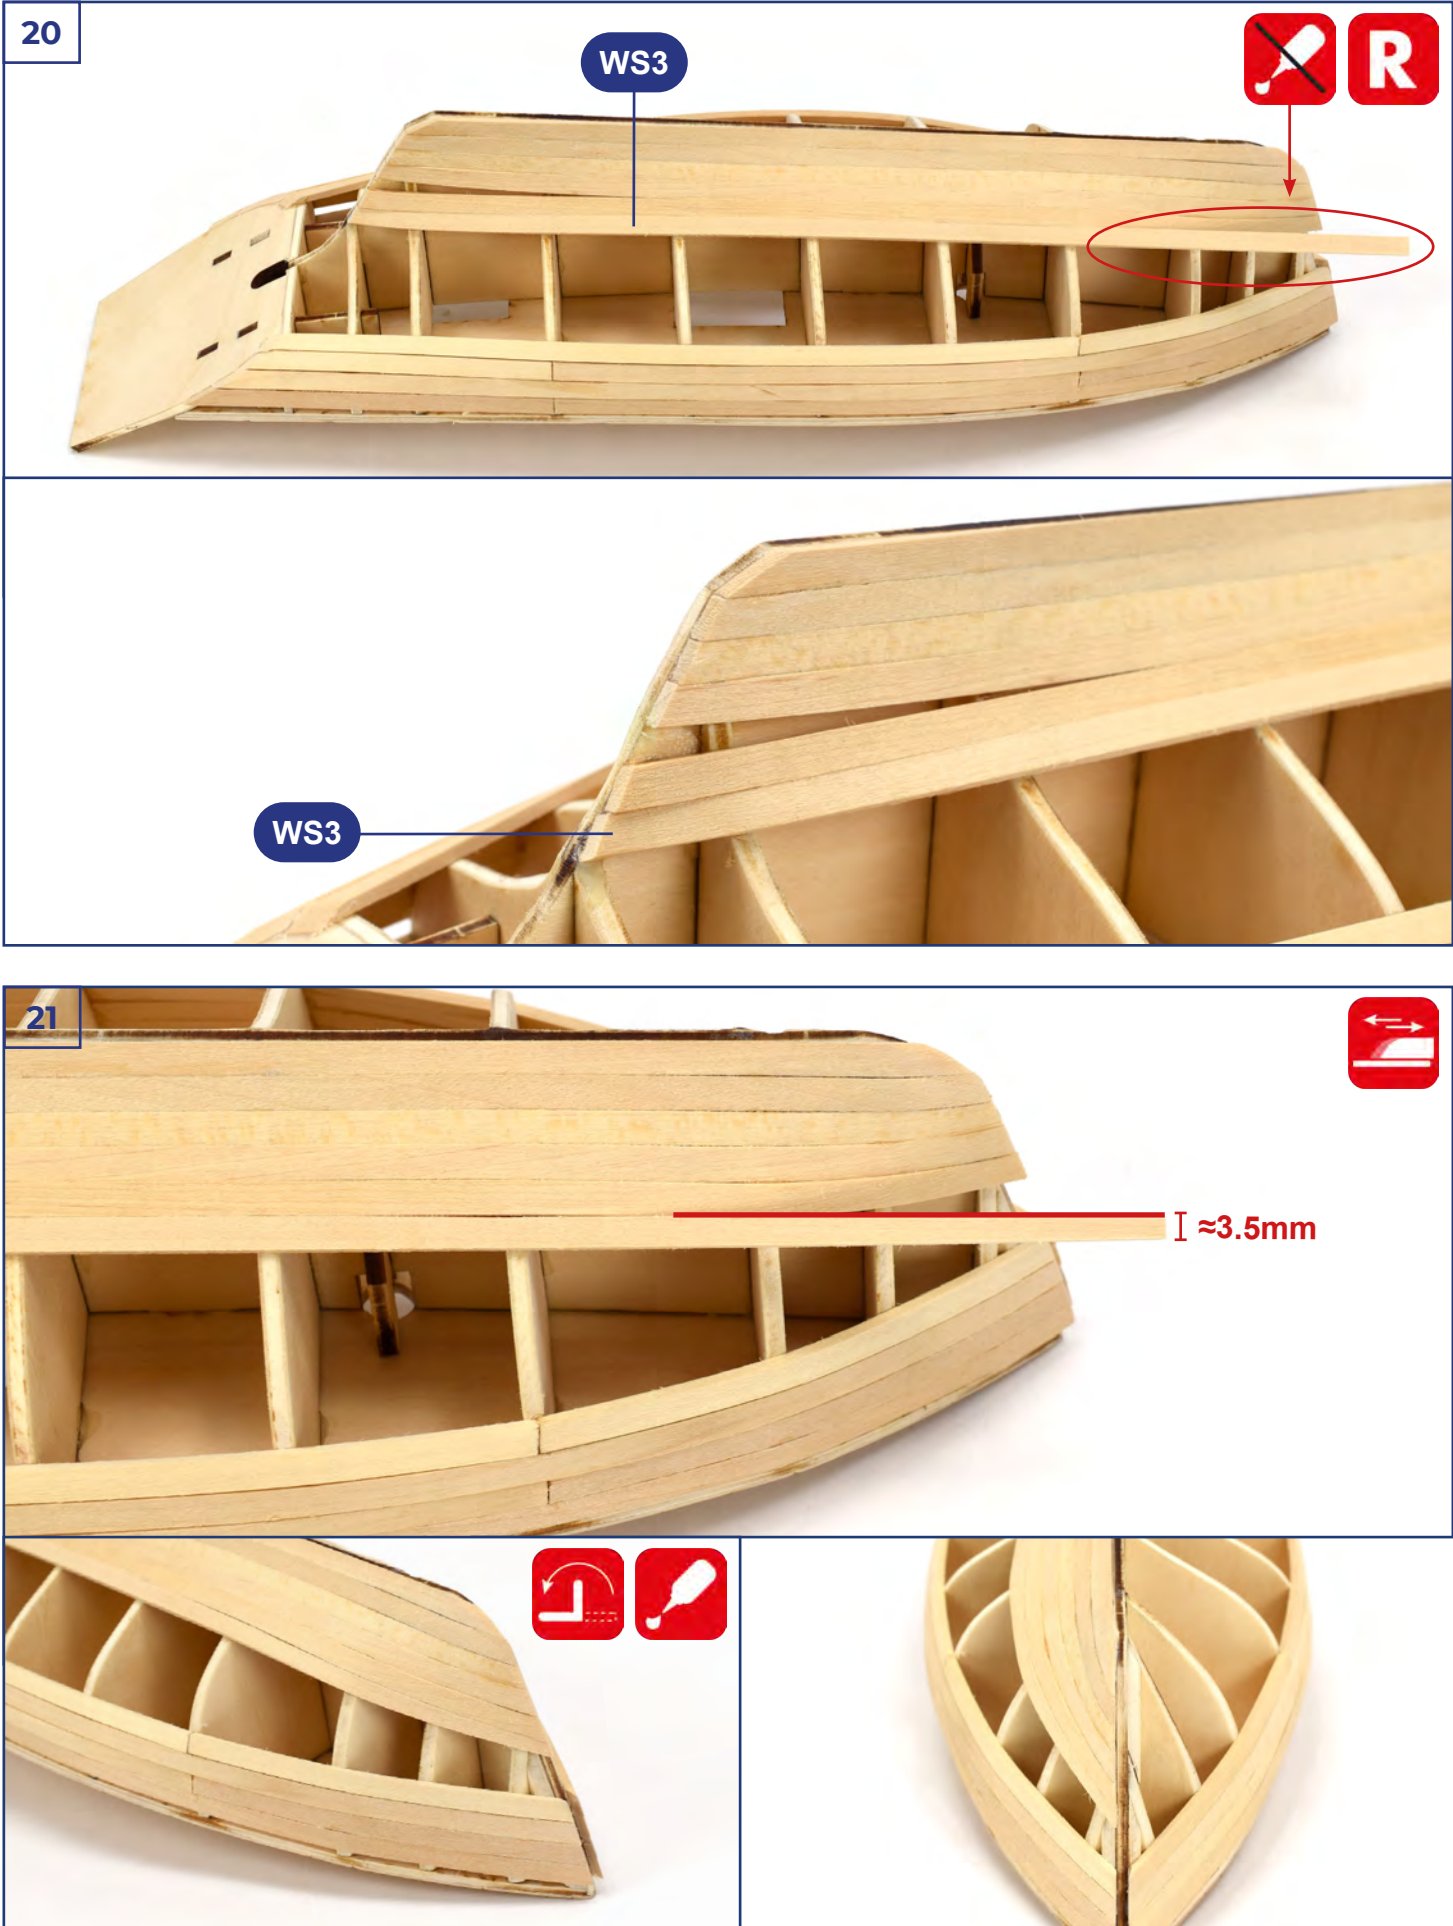


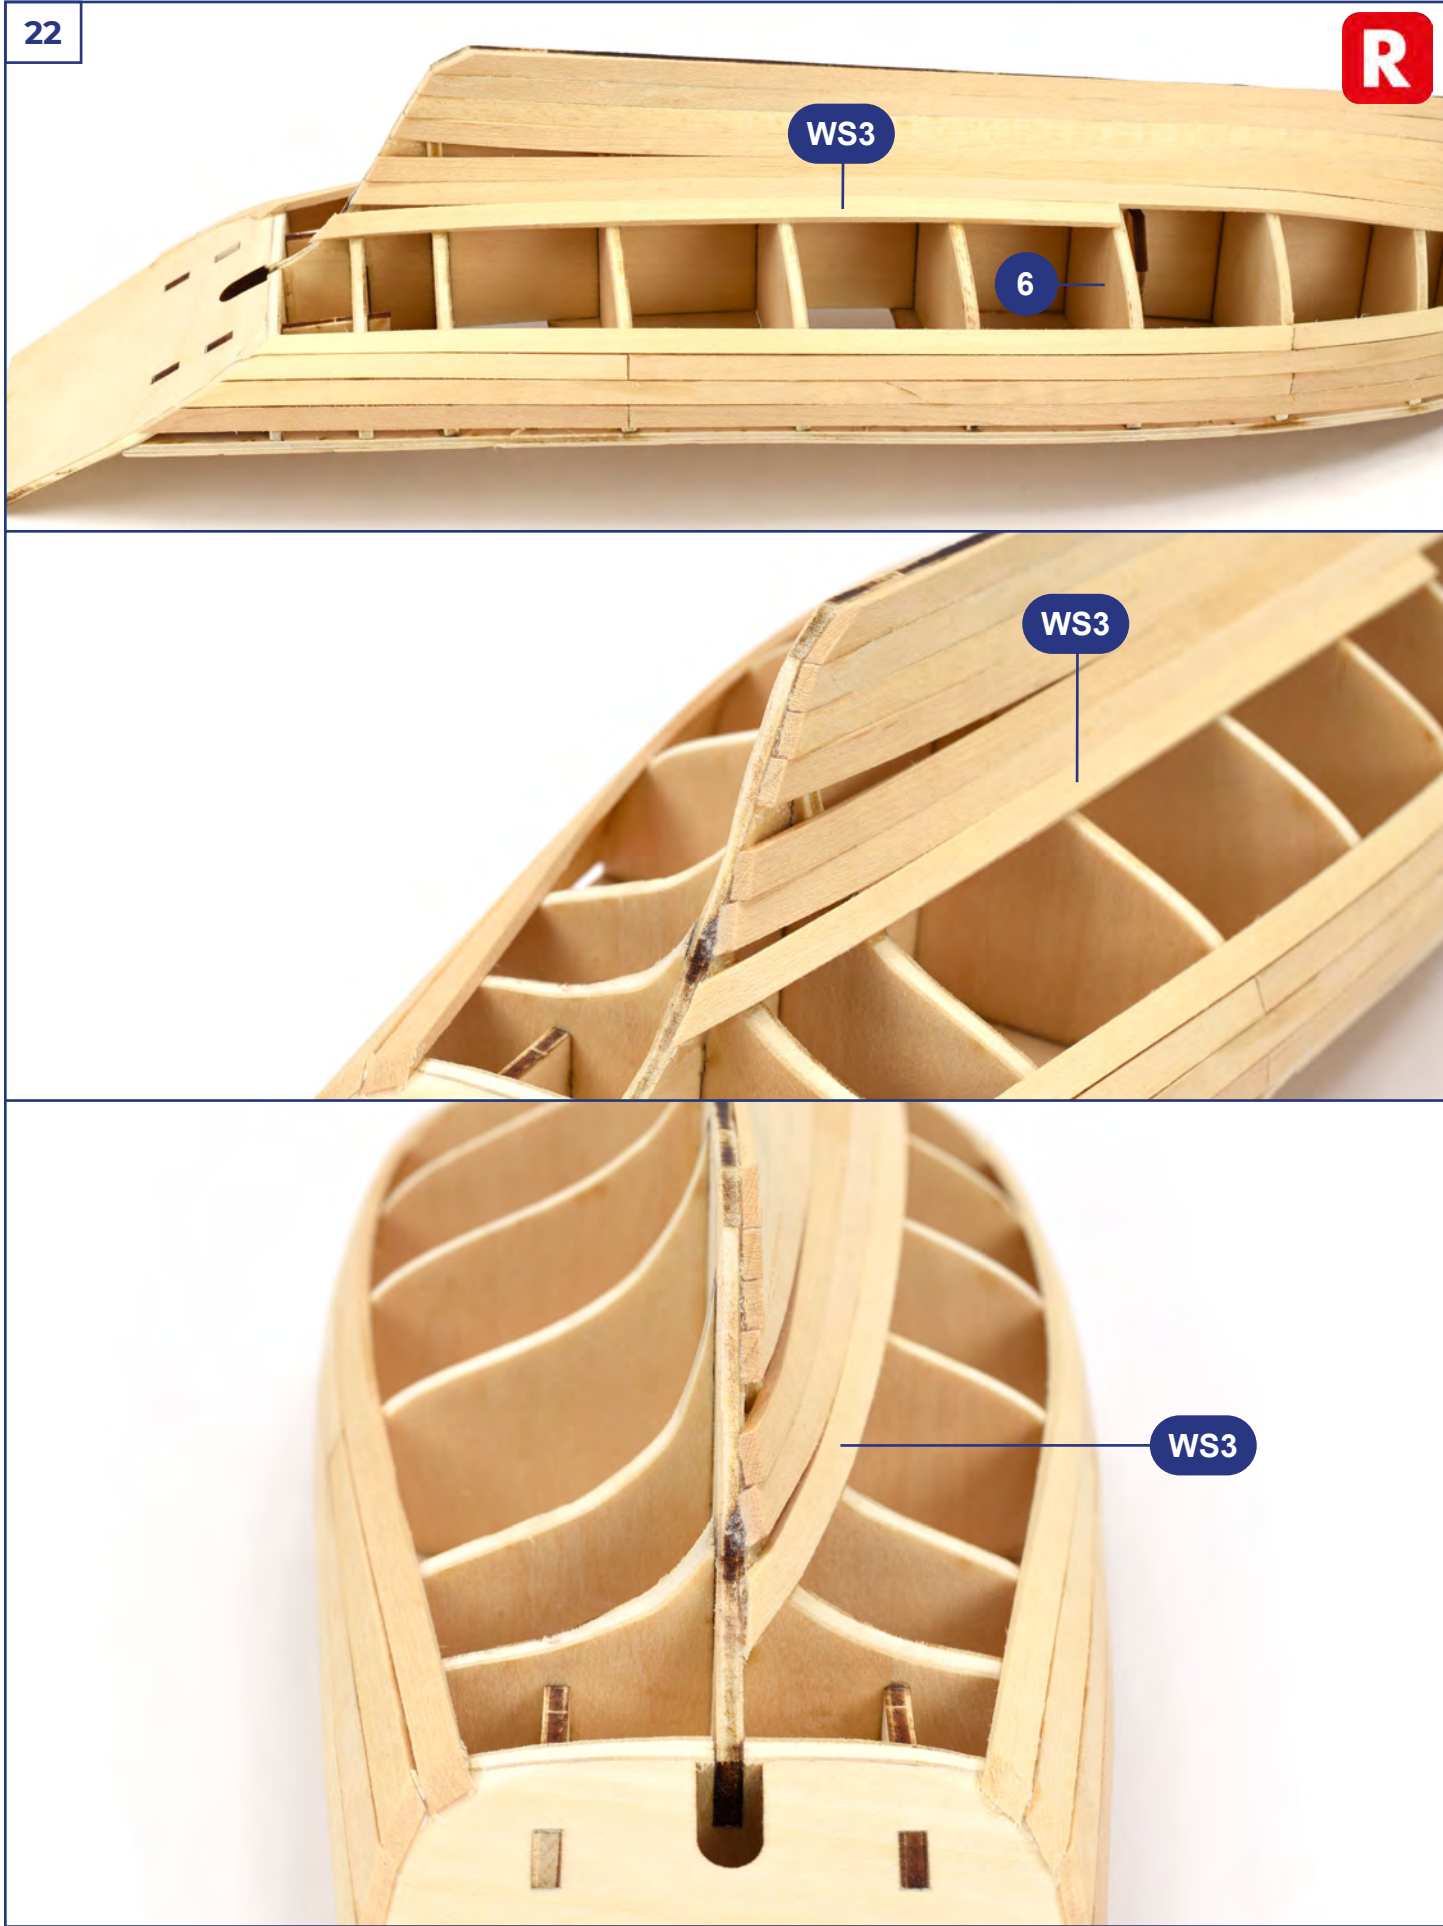

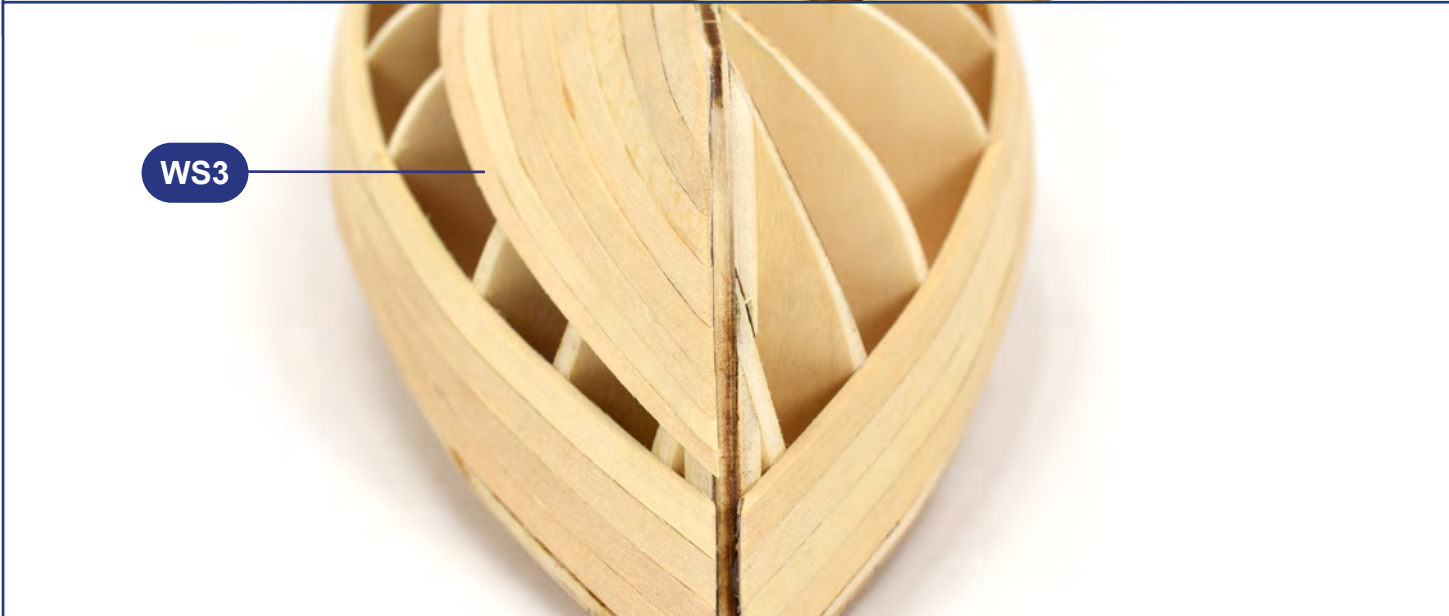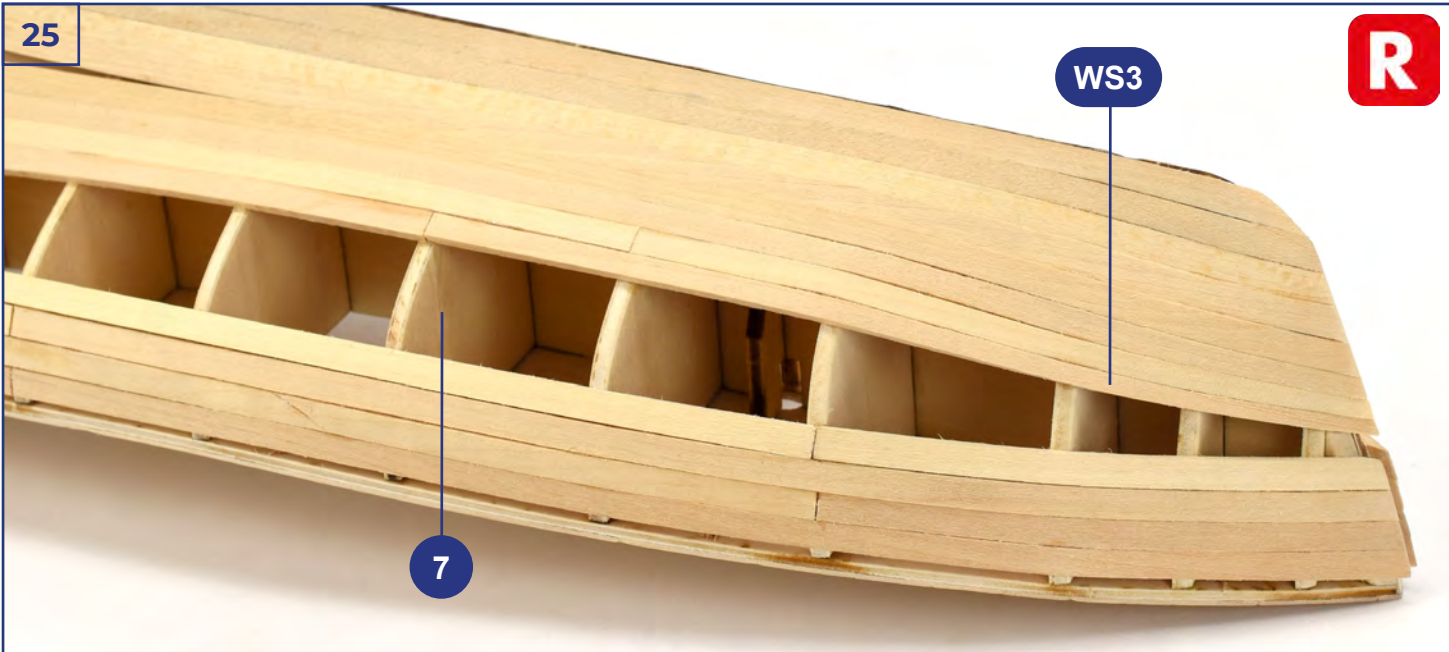

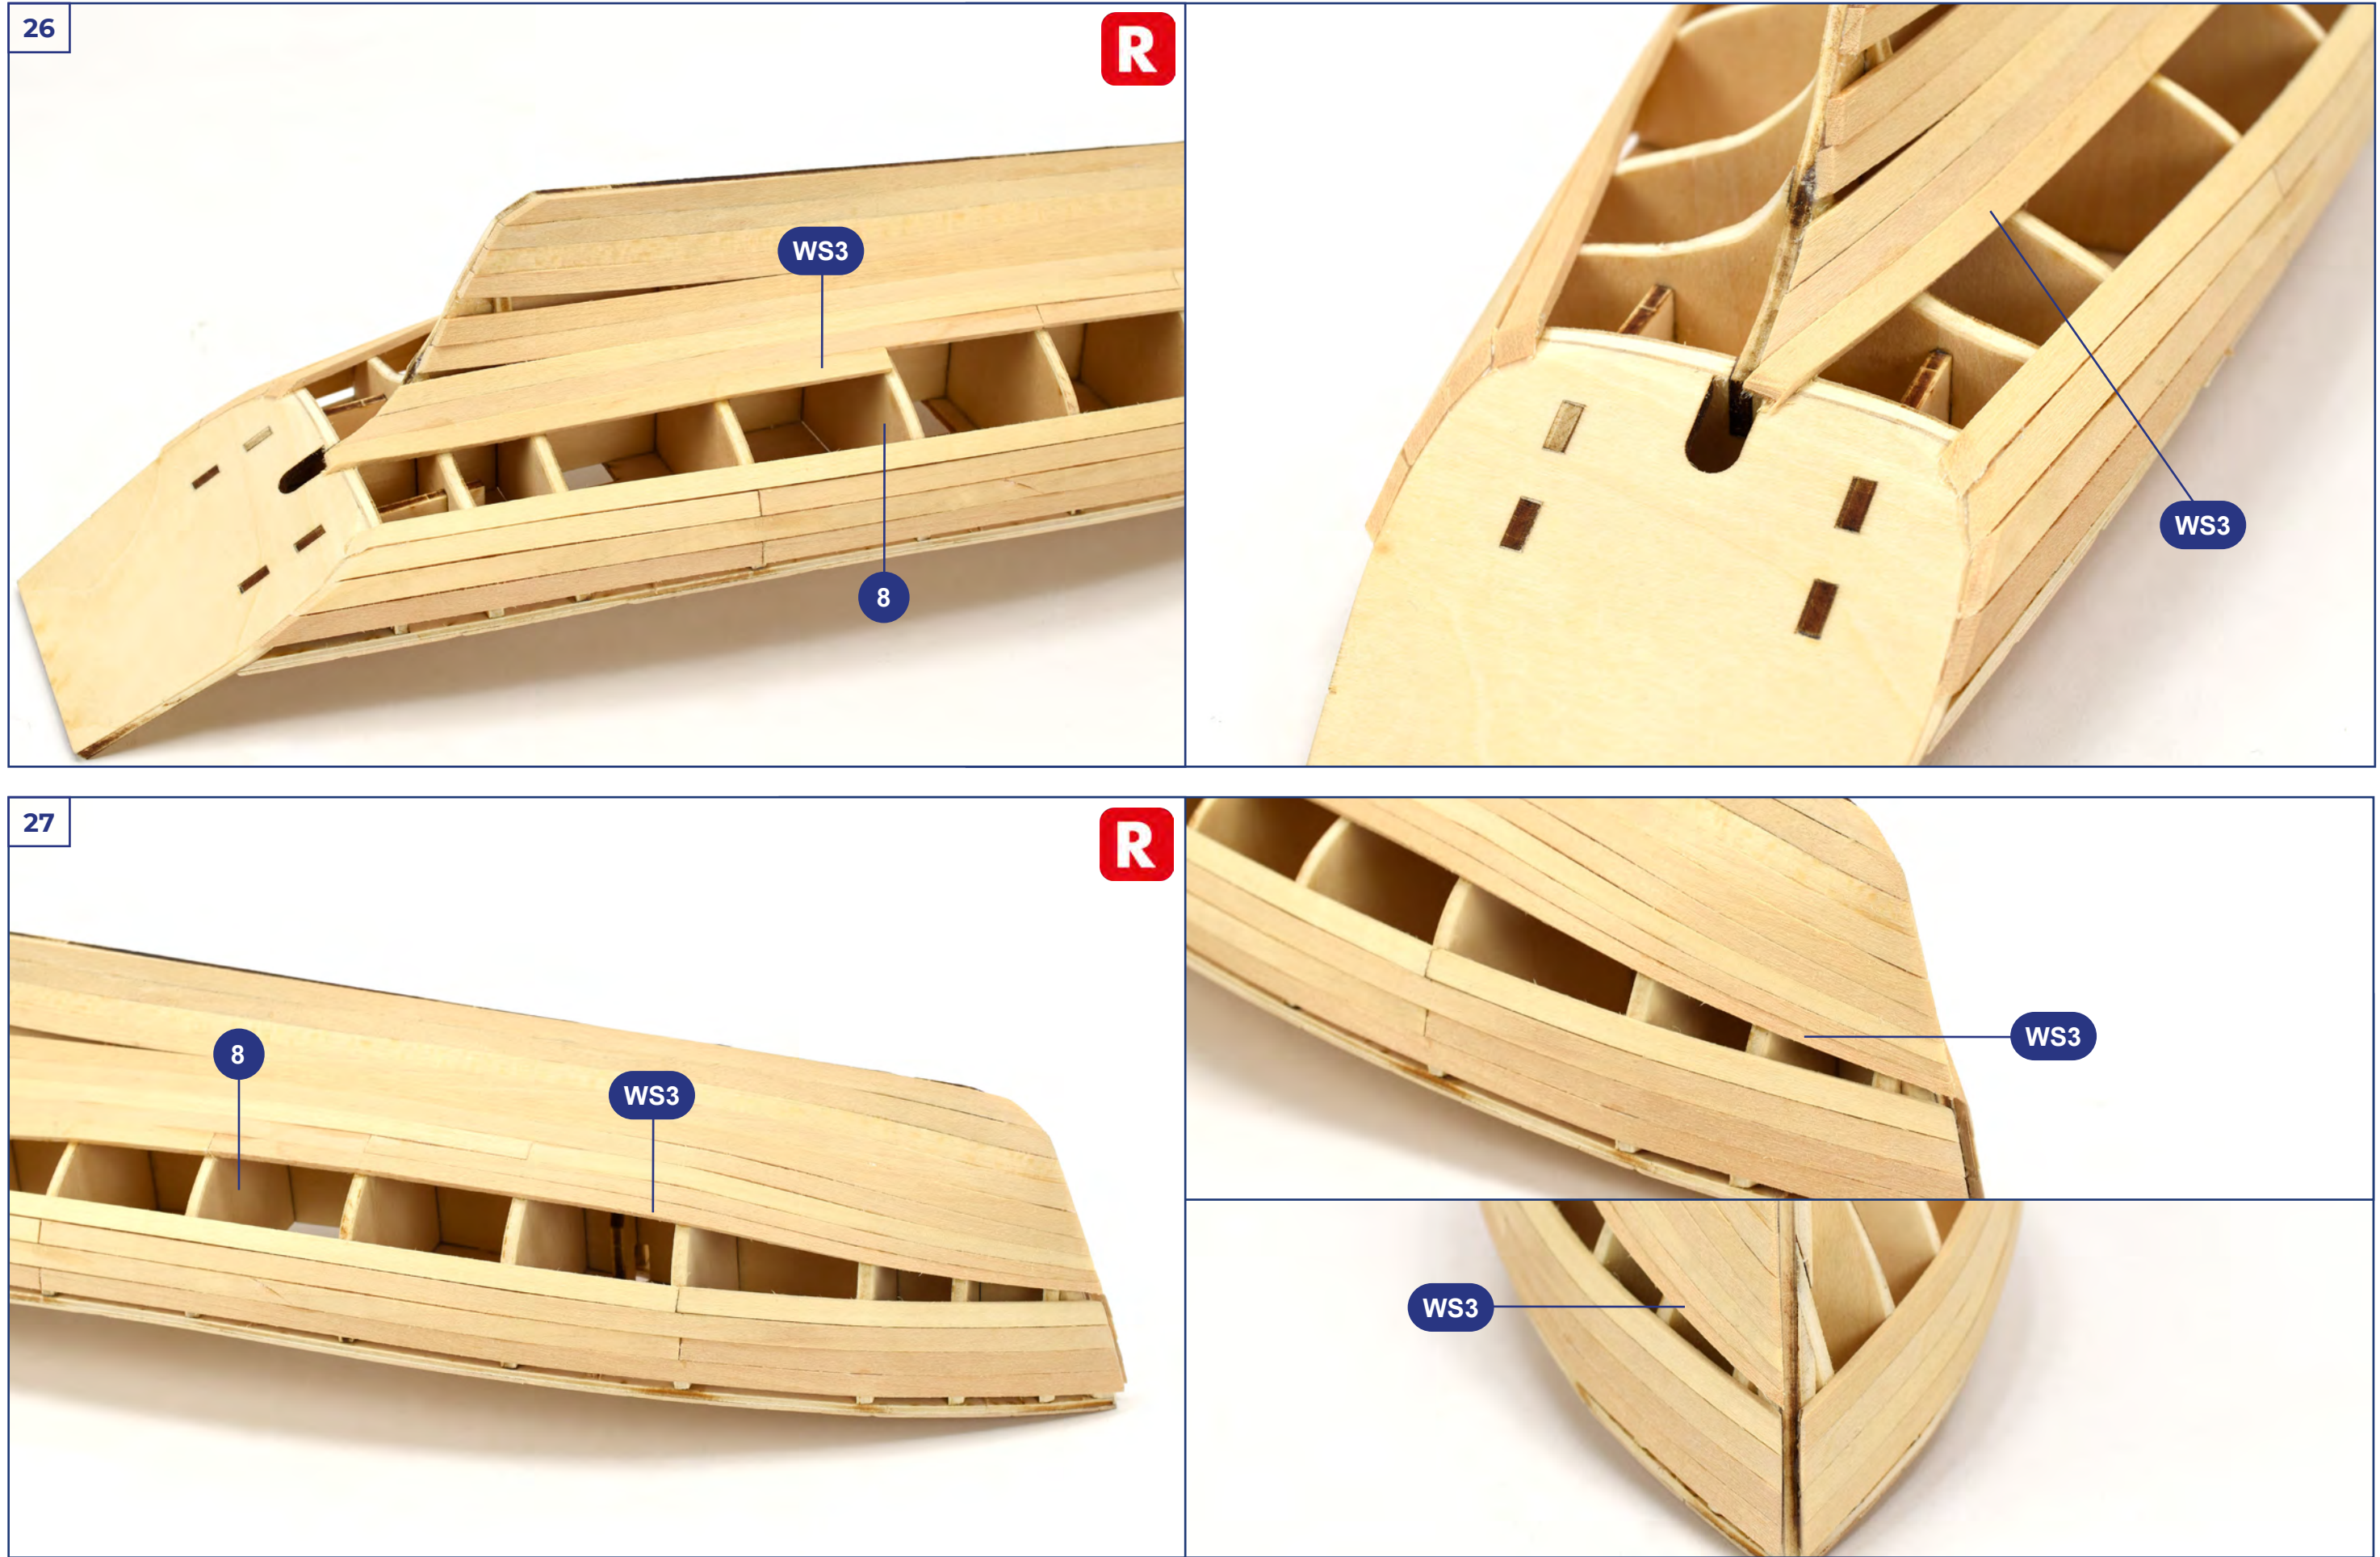






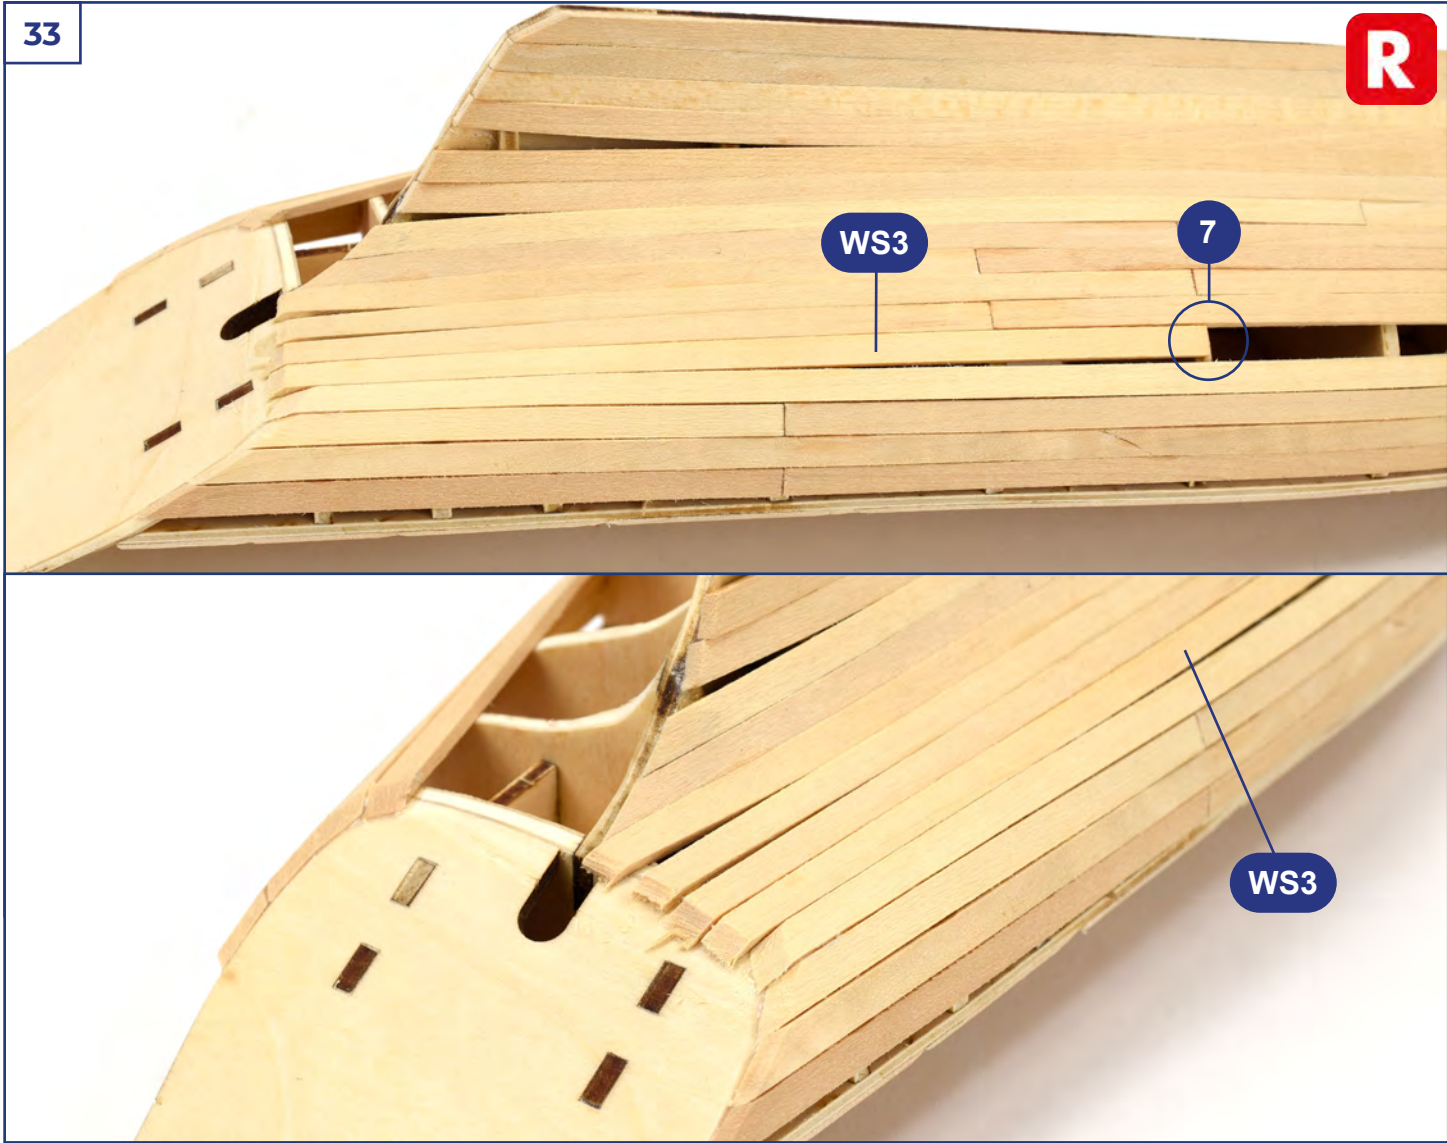





37



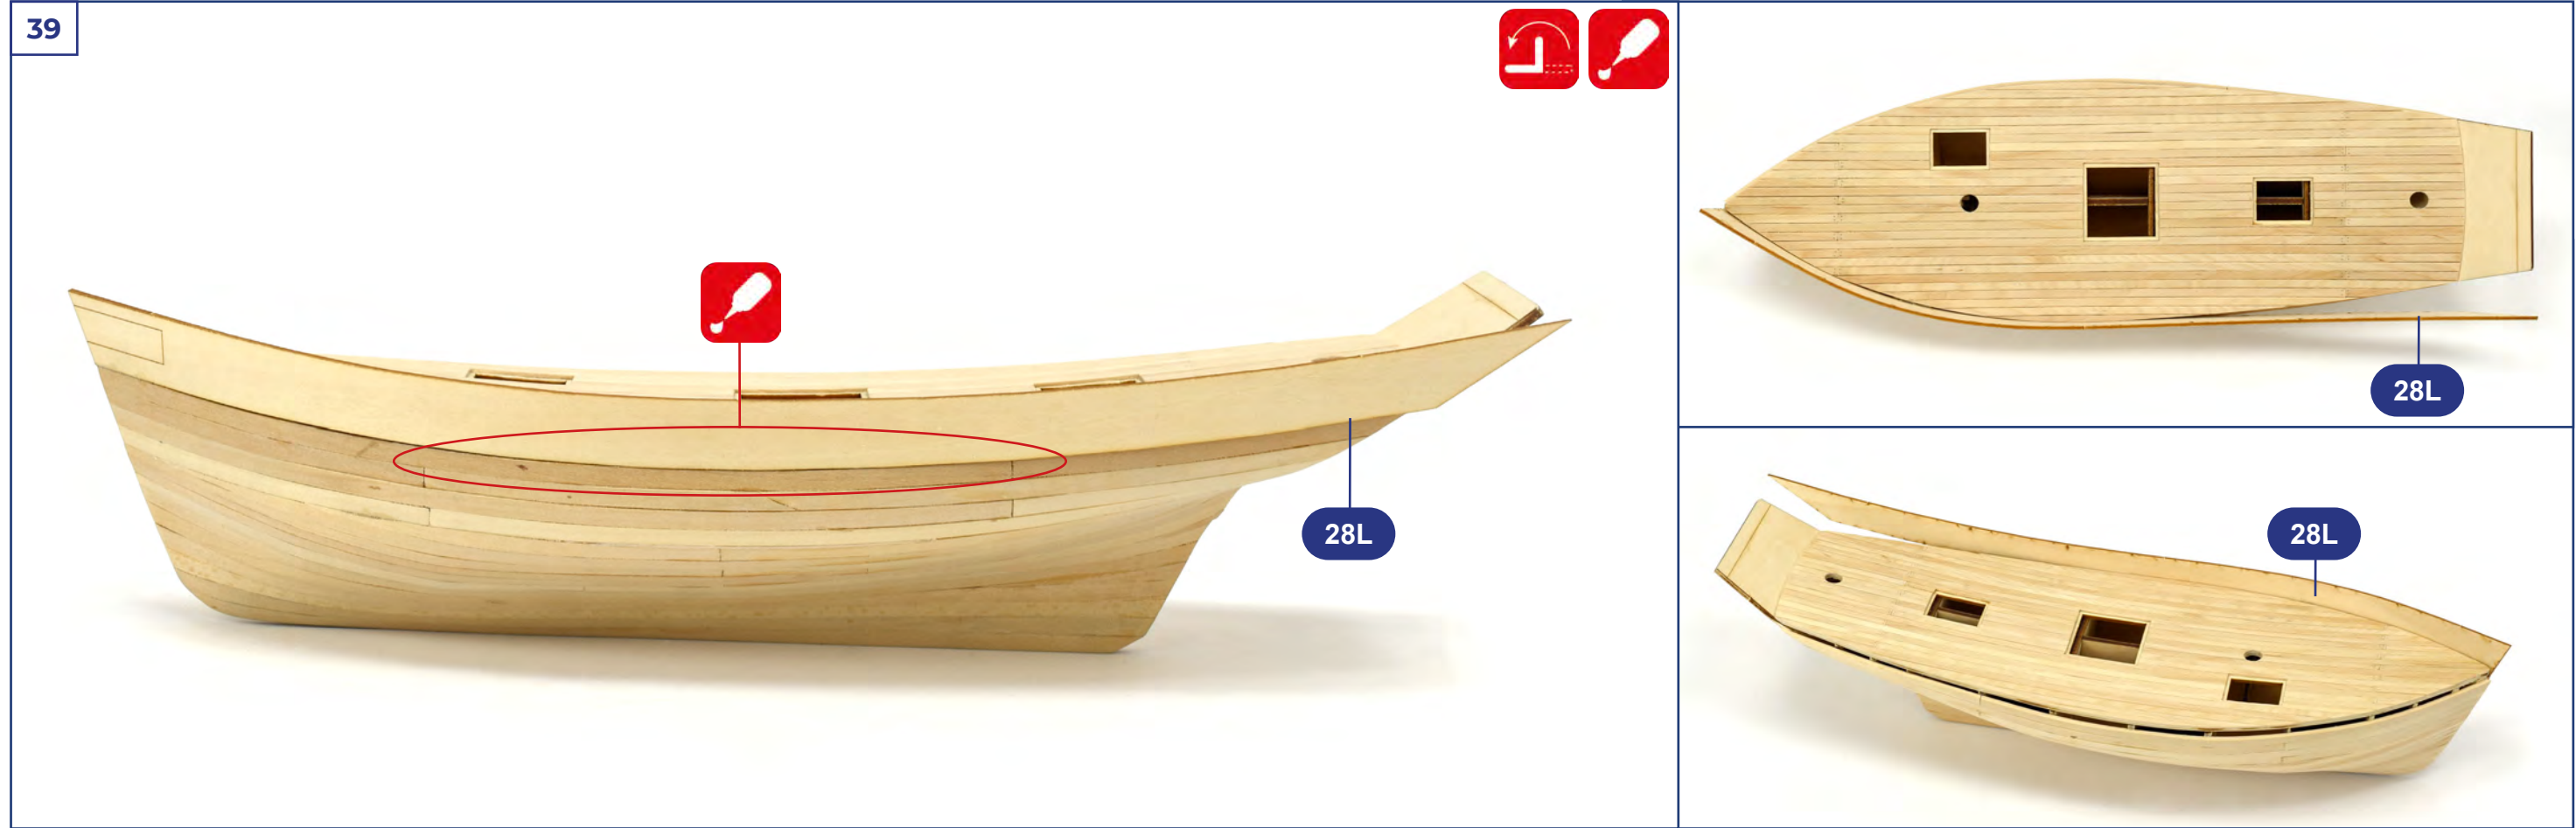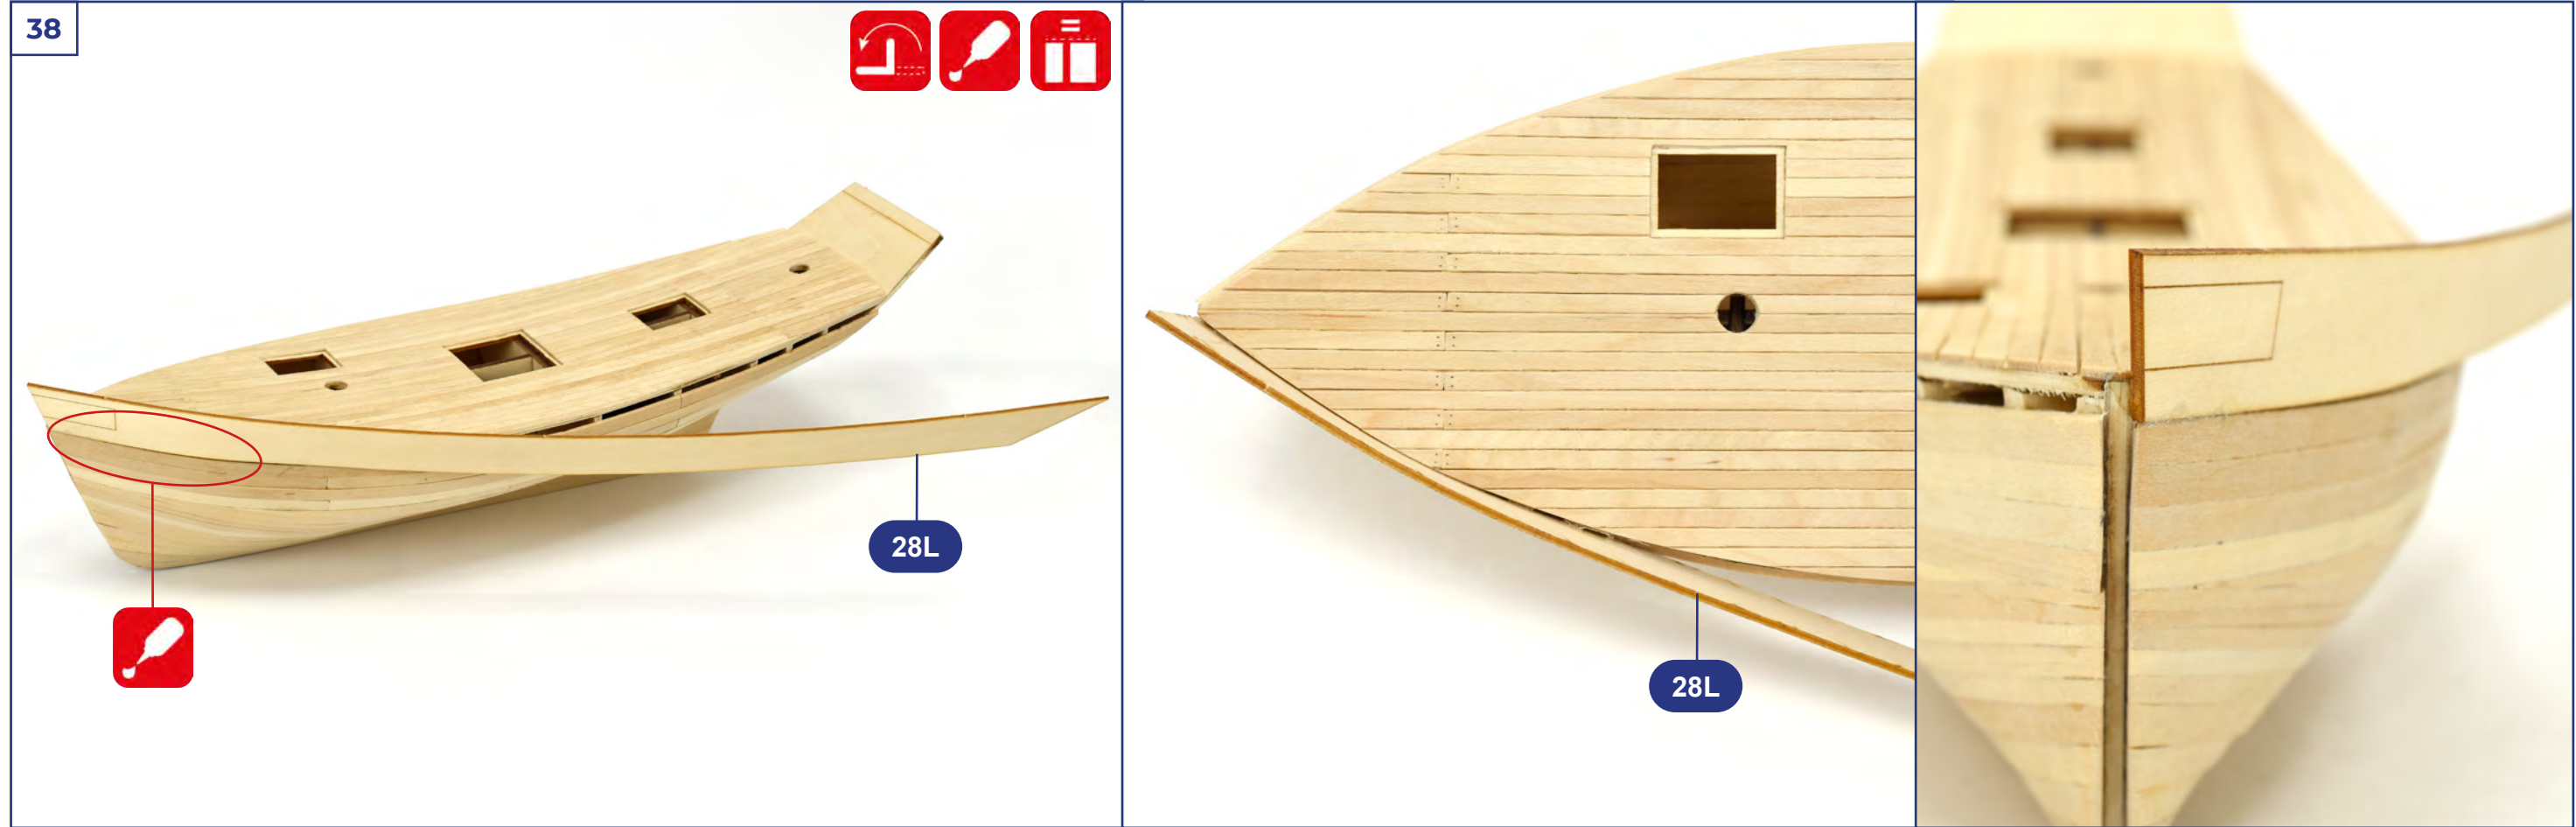

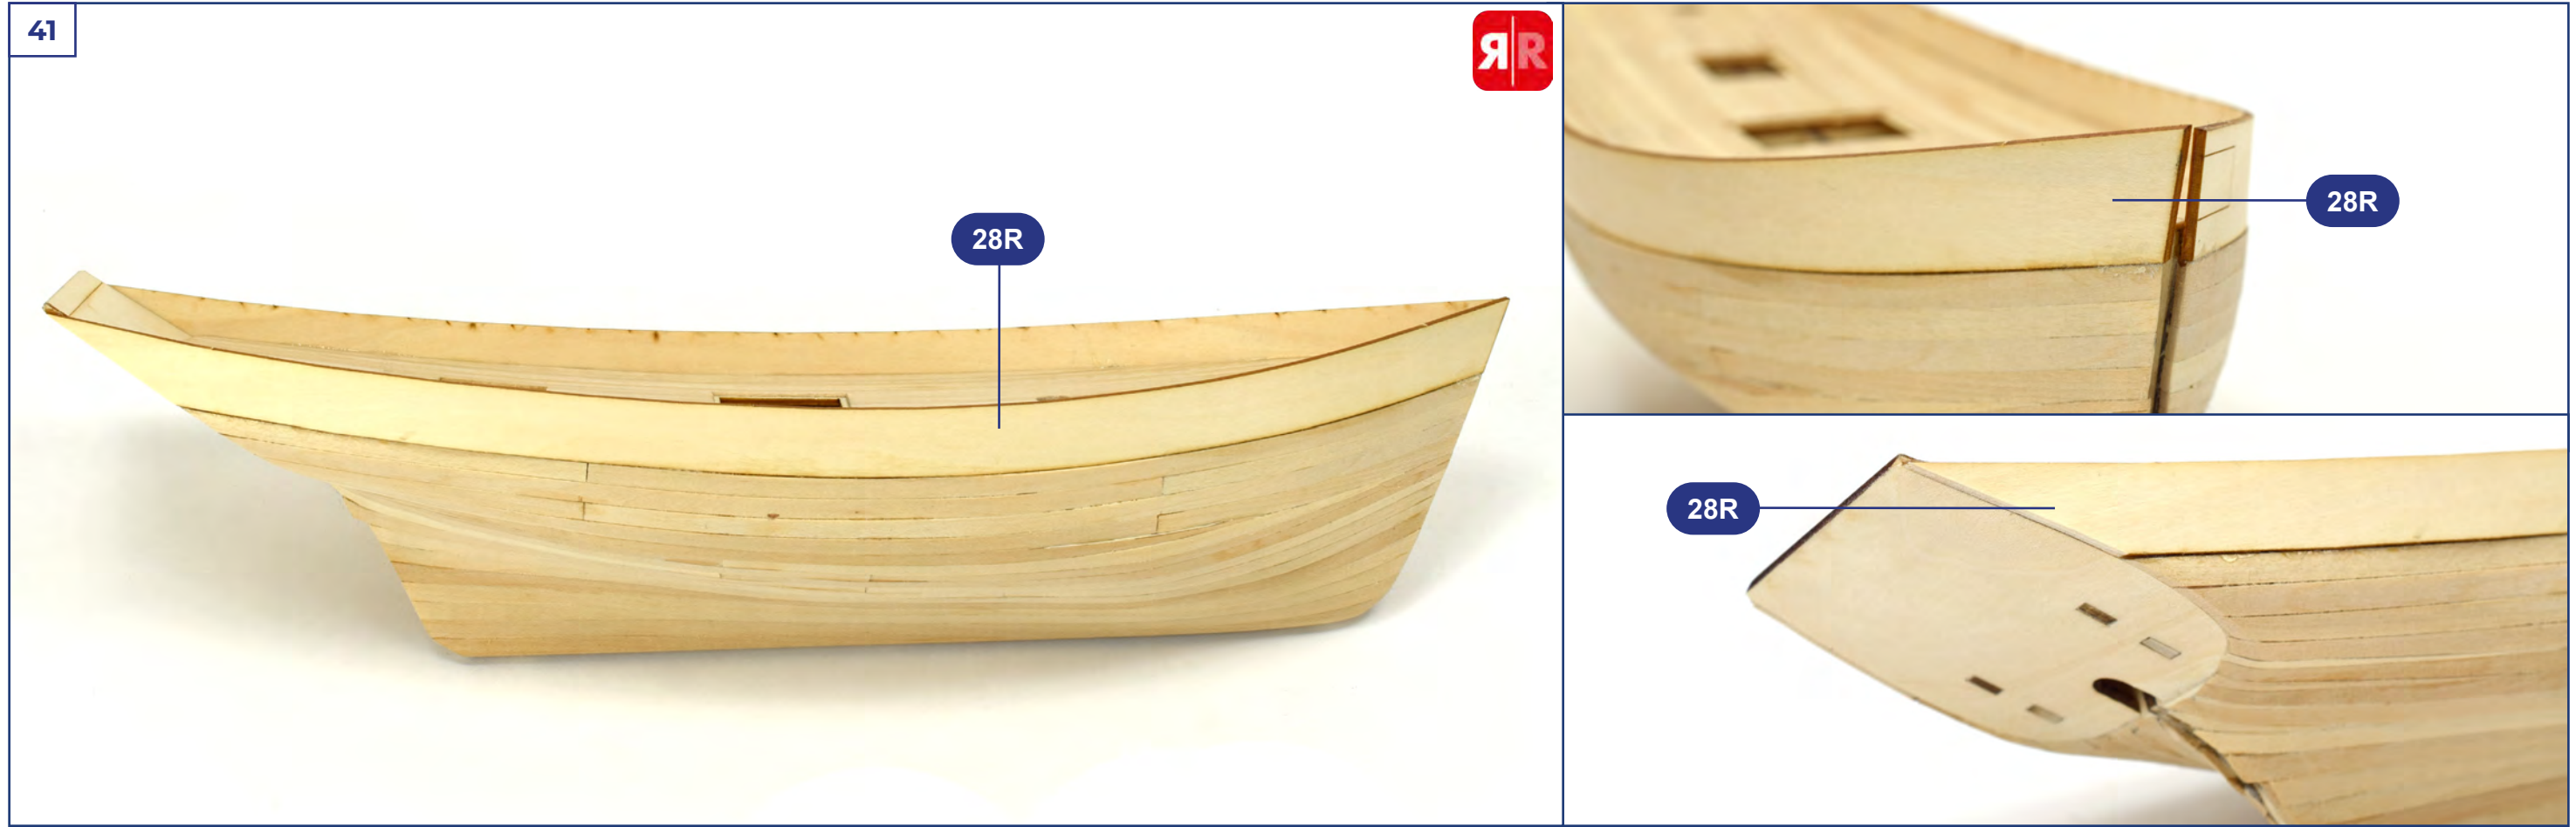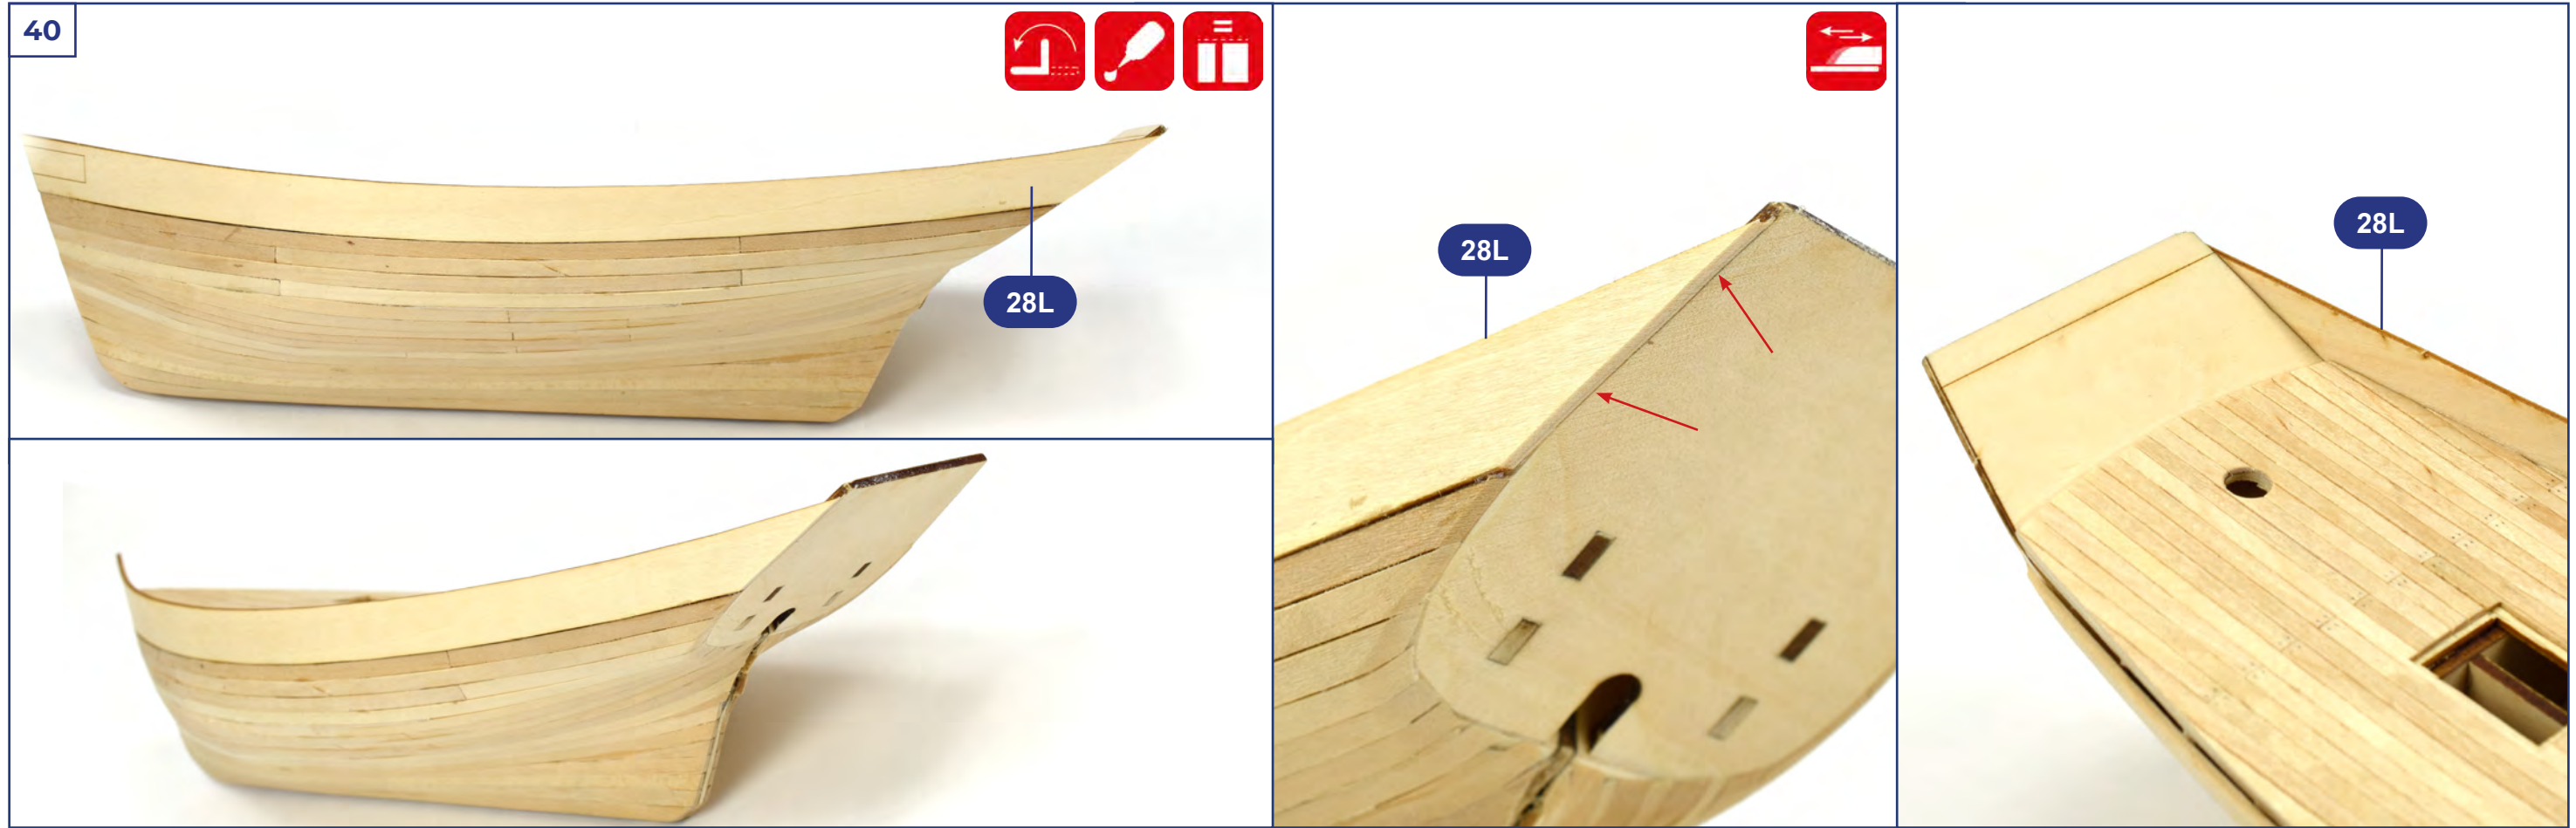

01

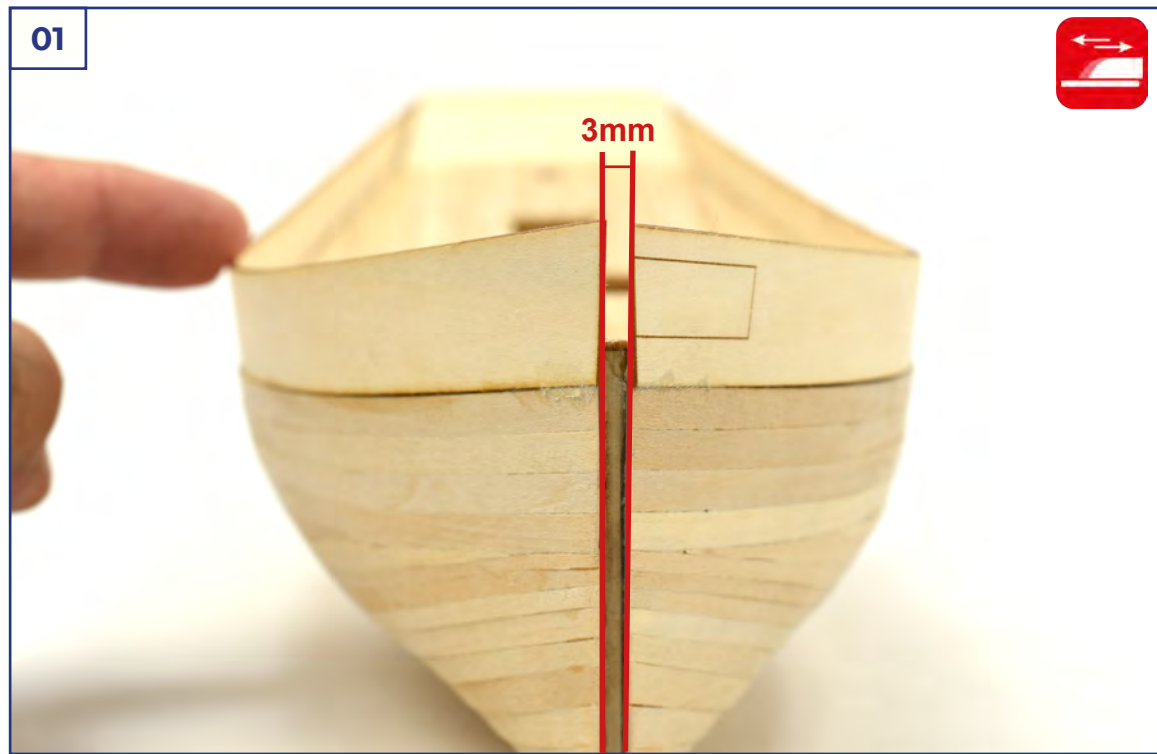



02






03







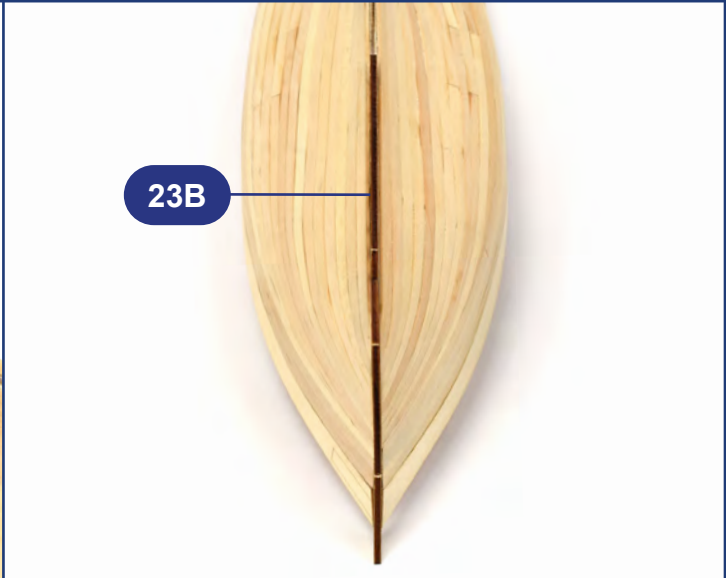


04







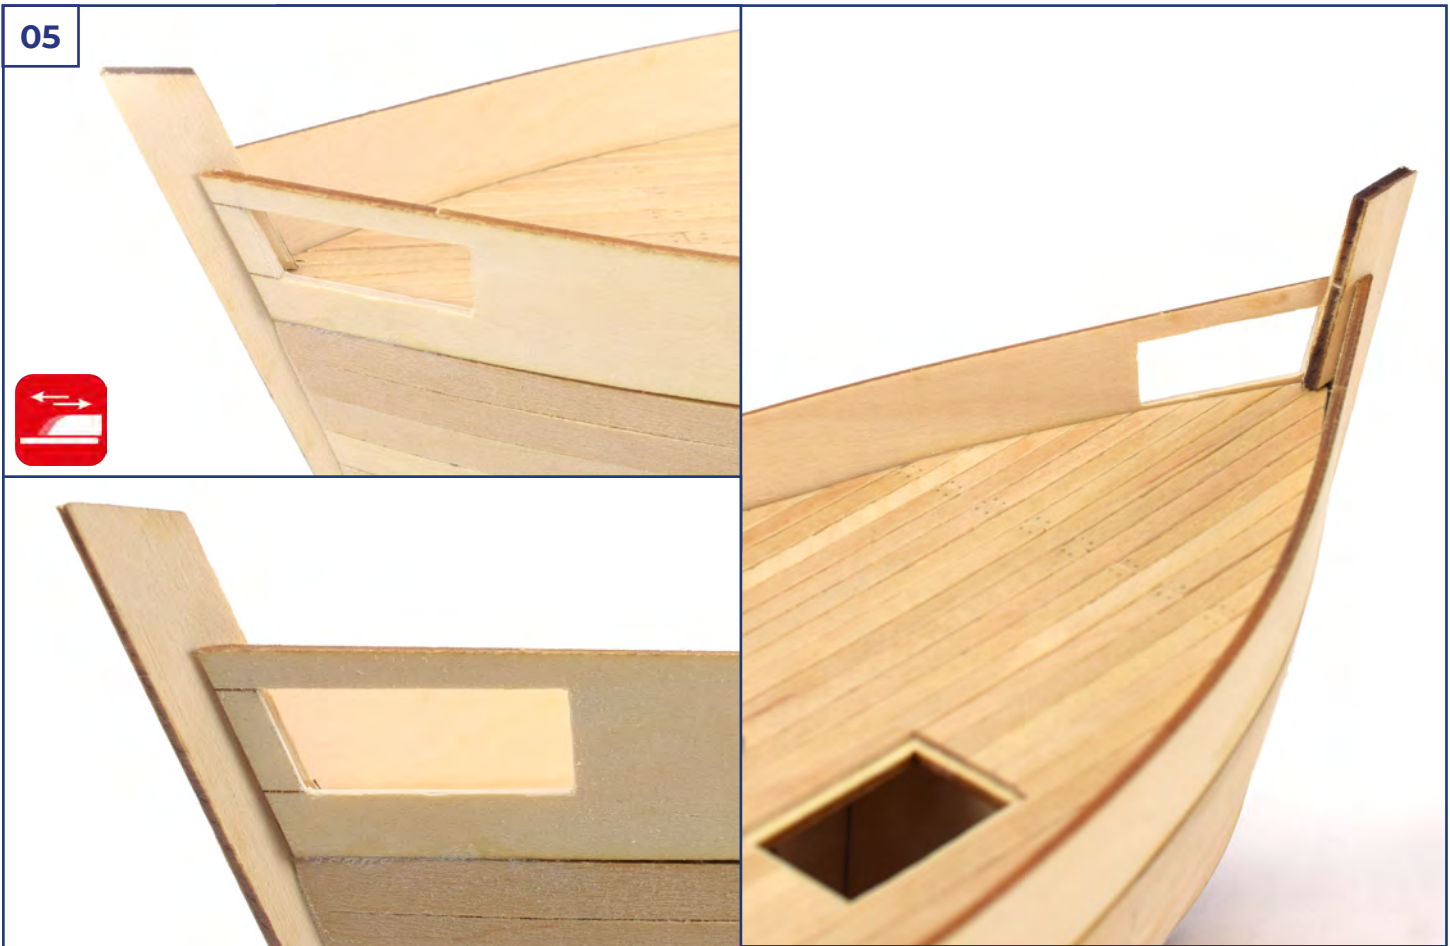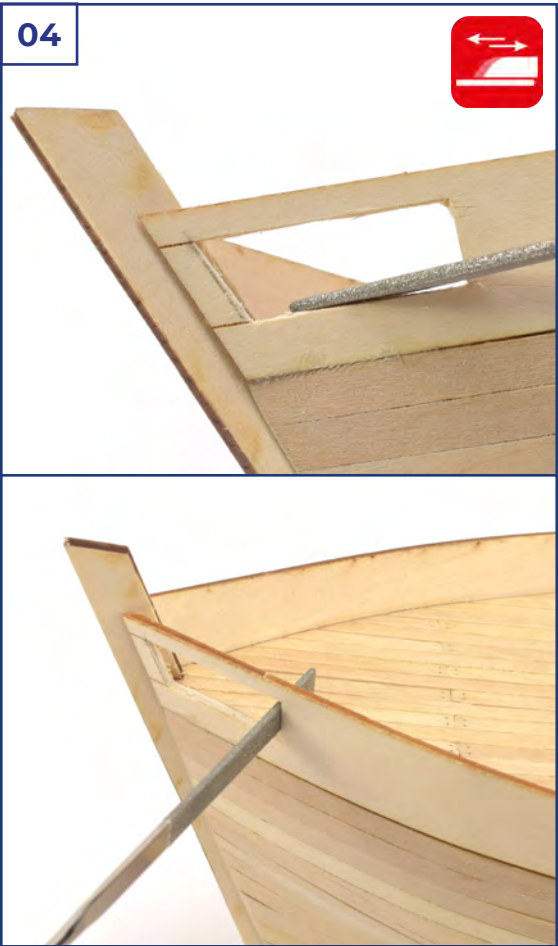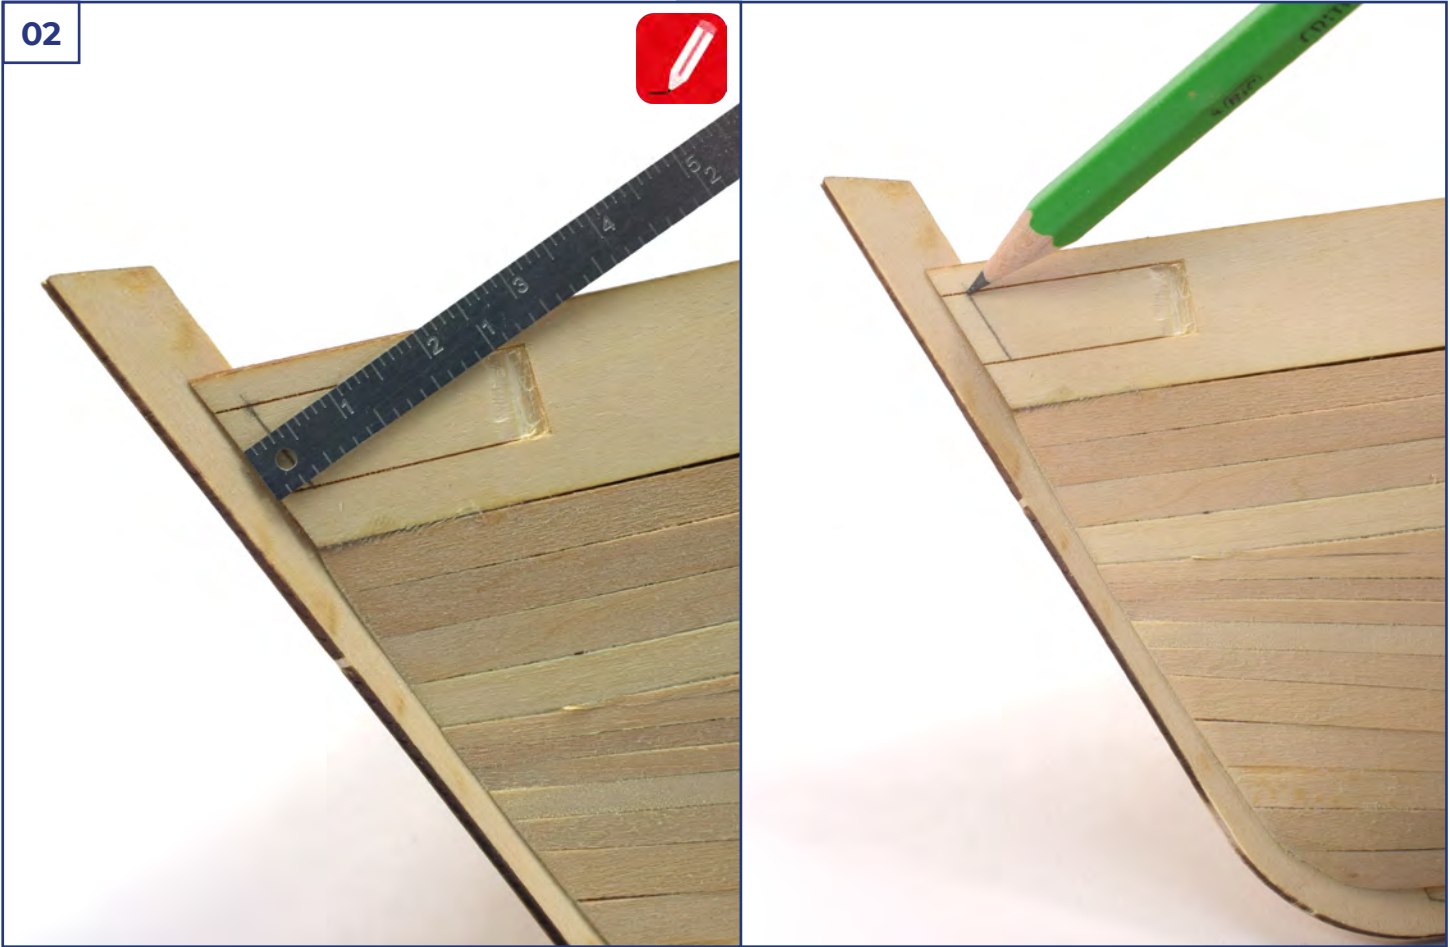

01



02




03





01)



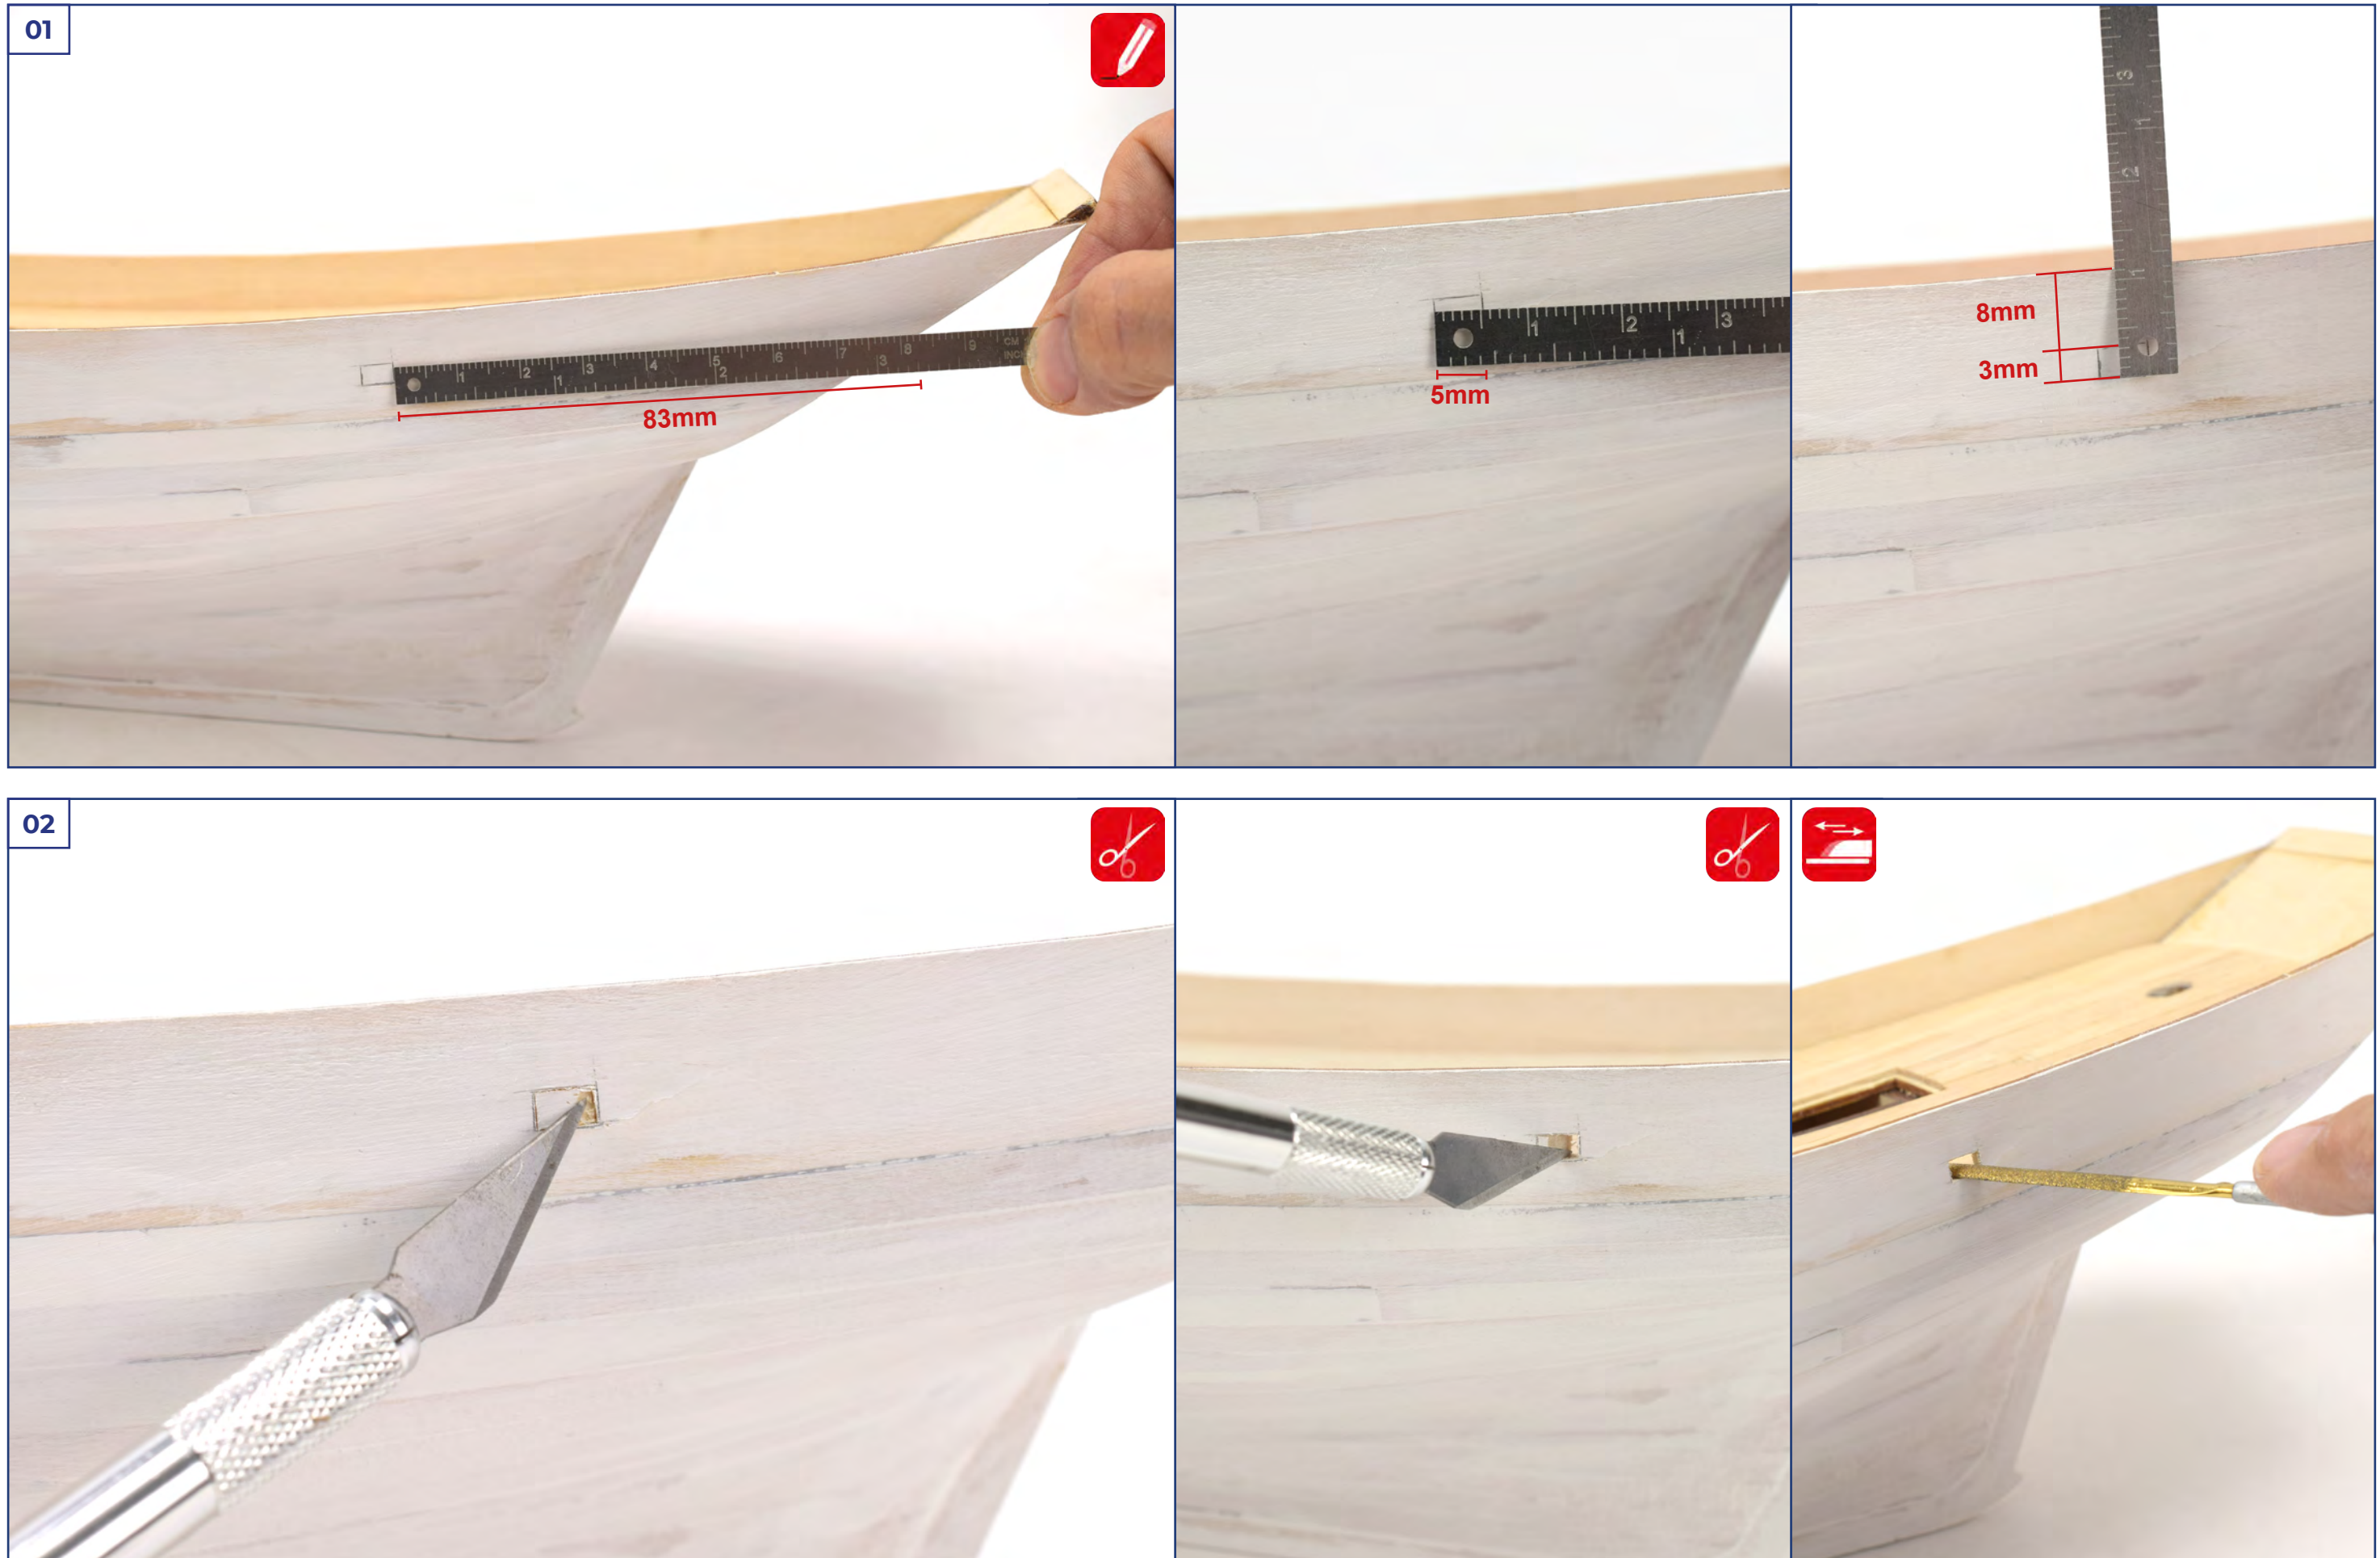




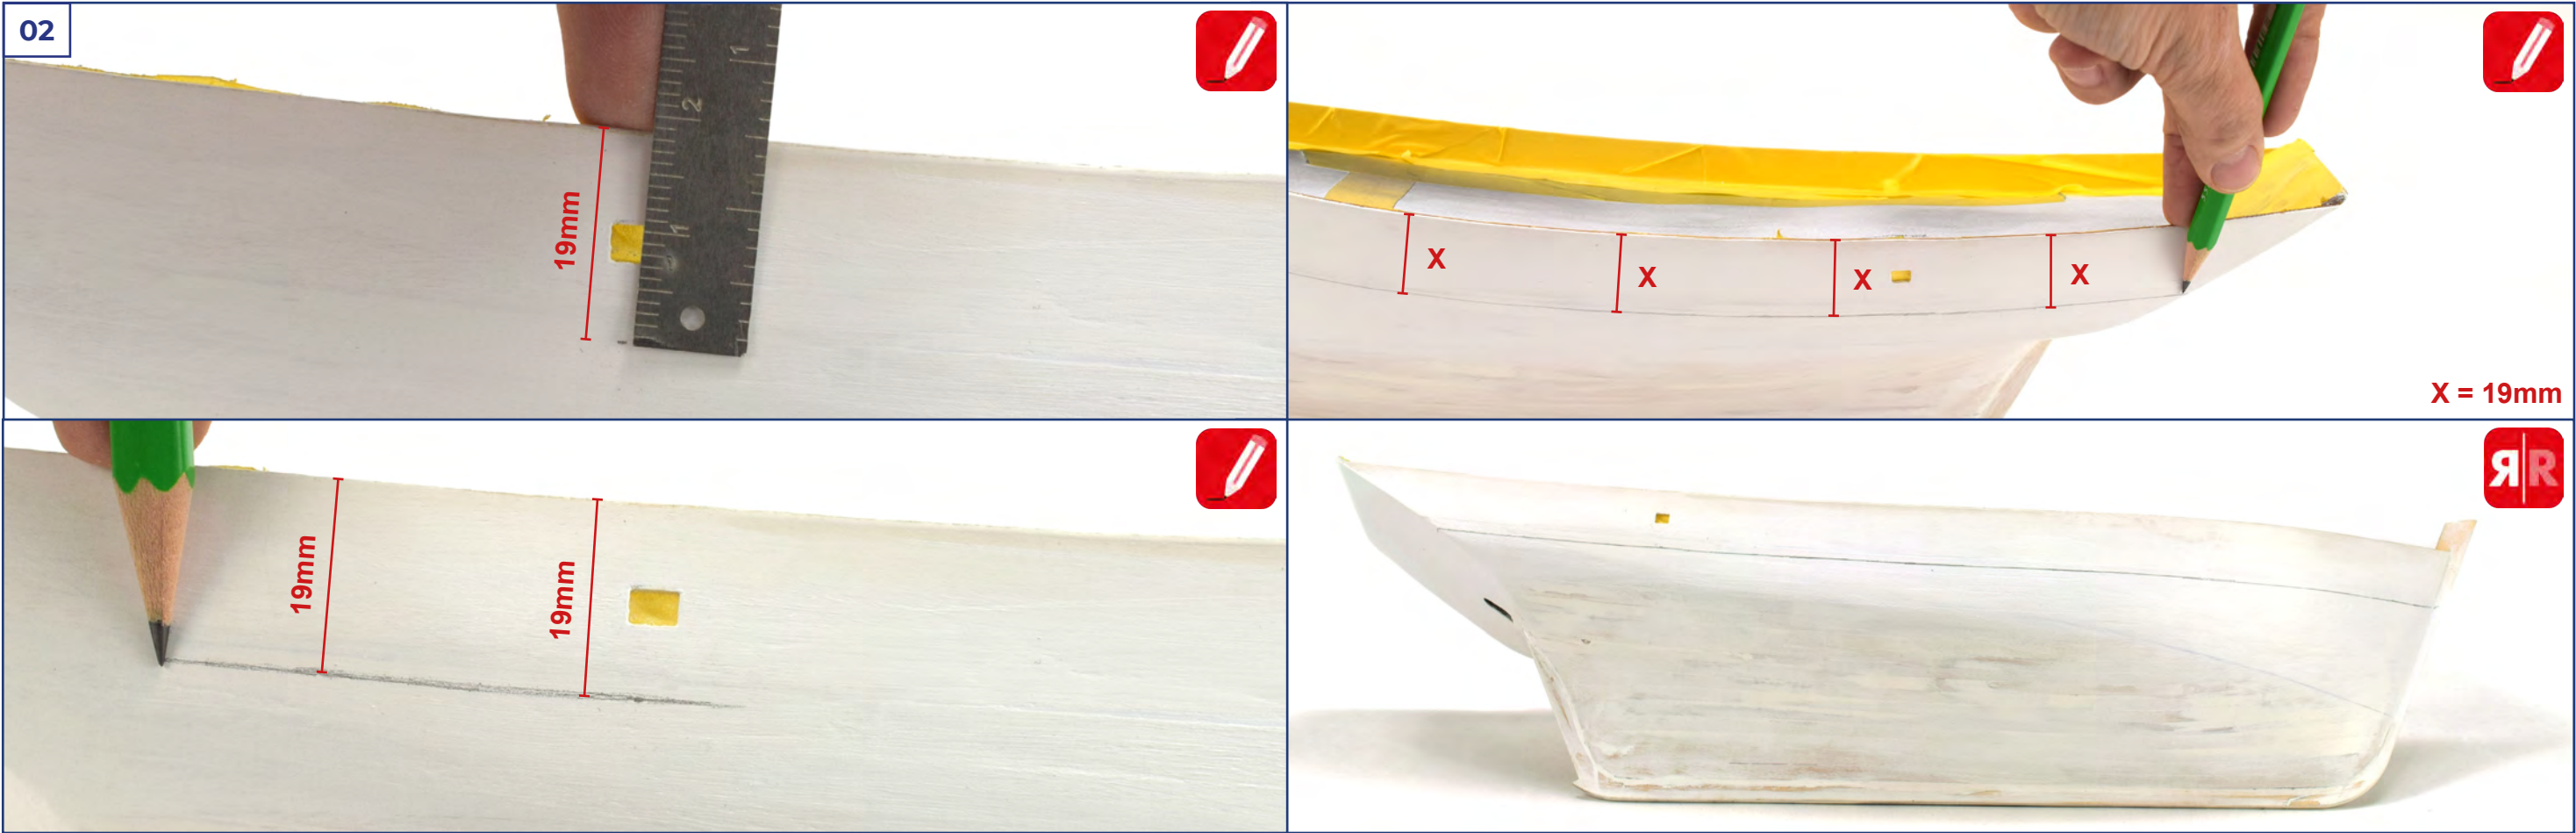

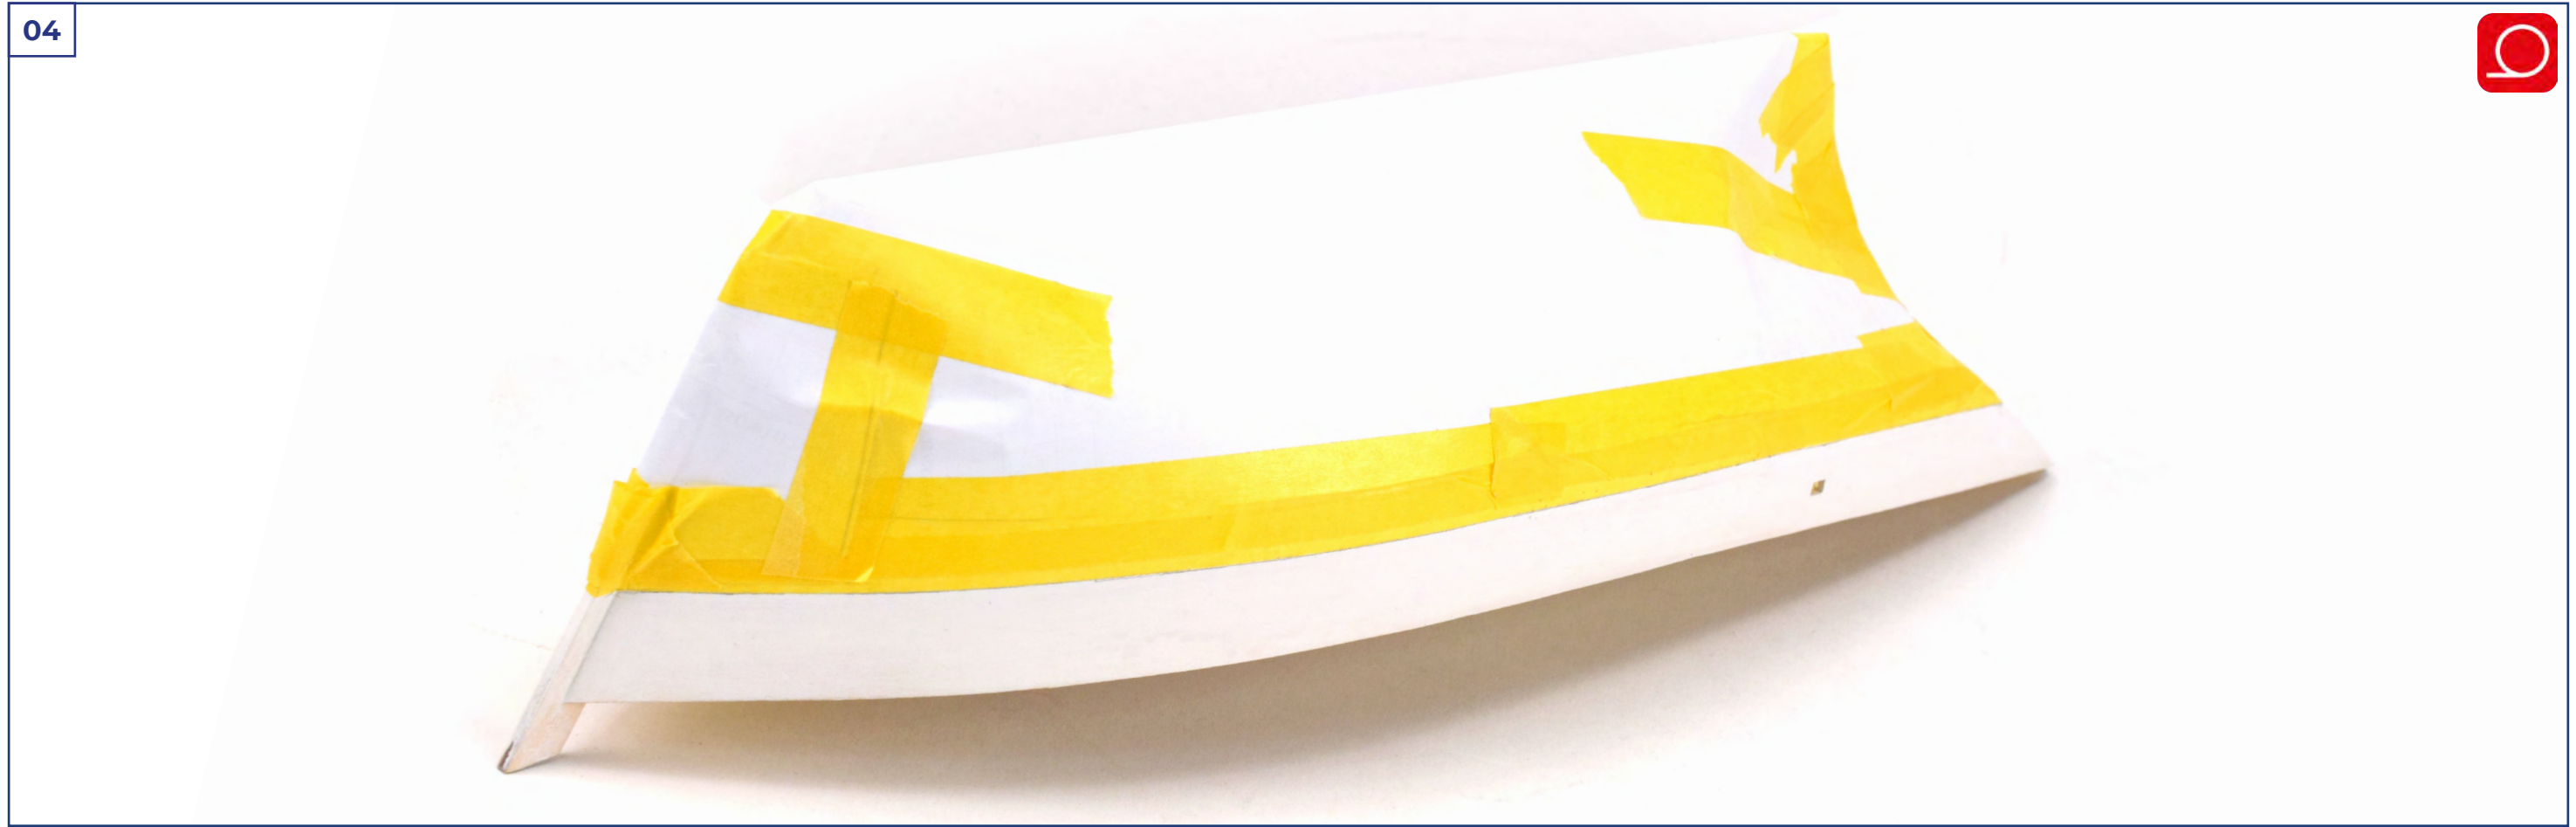


03

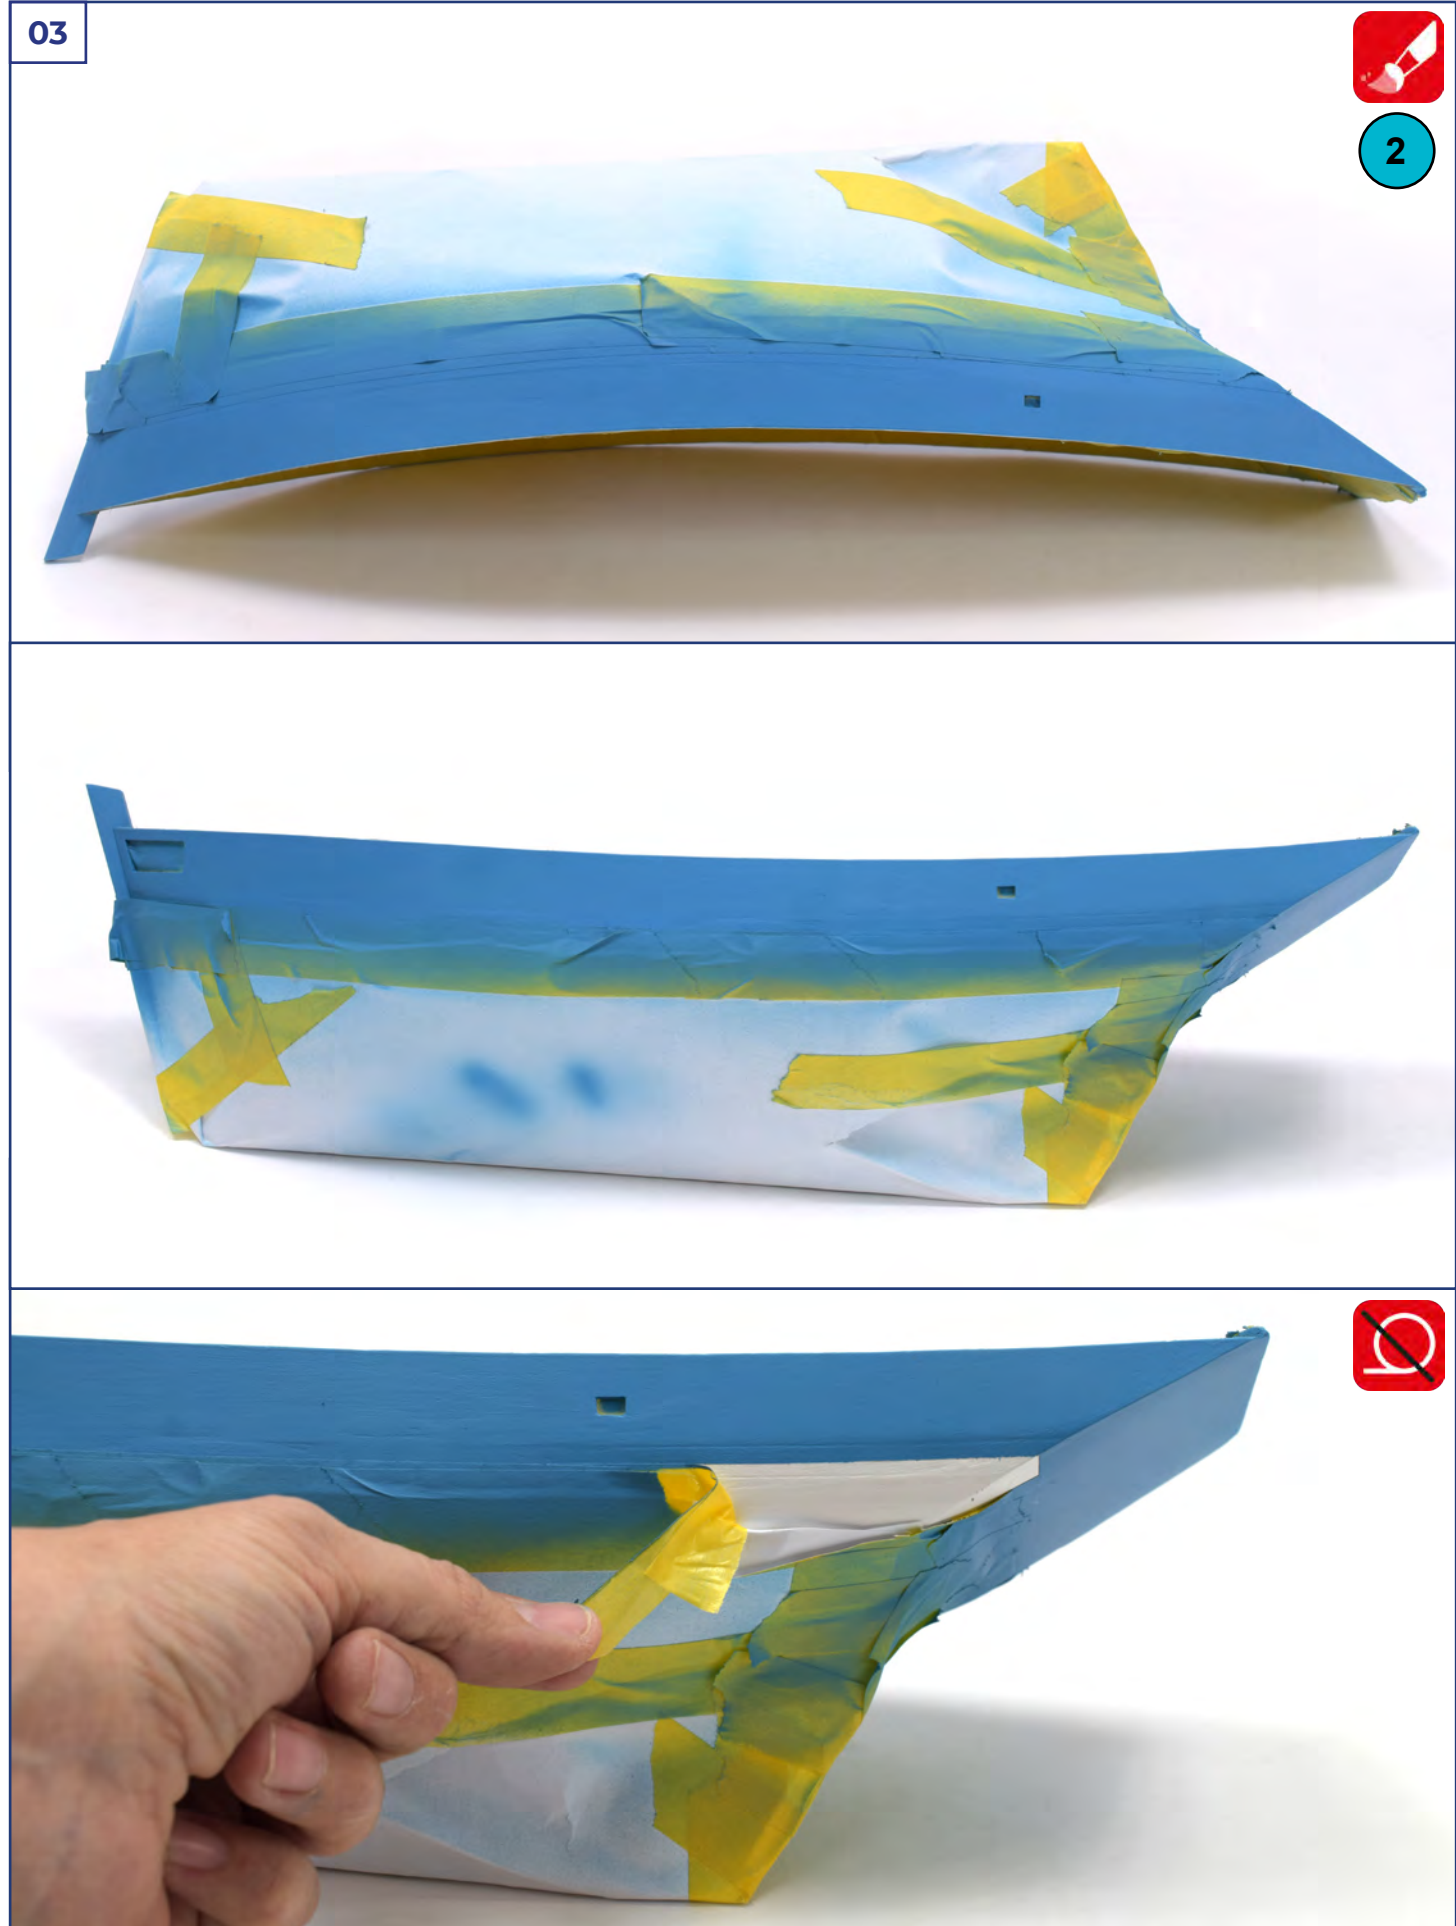





04

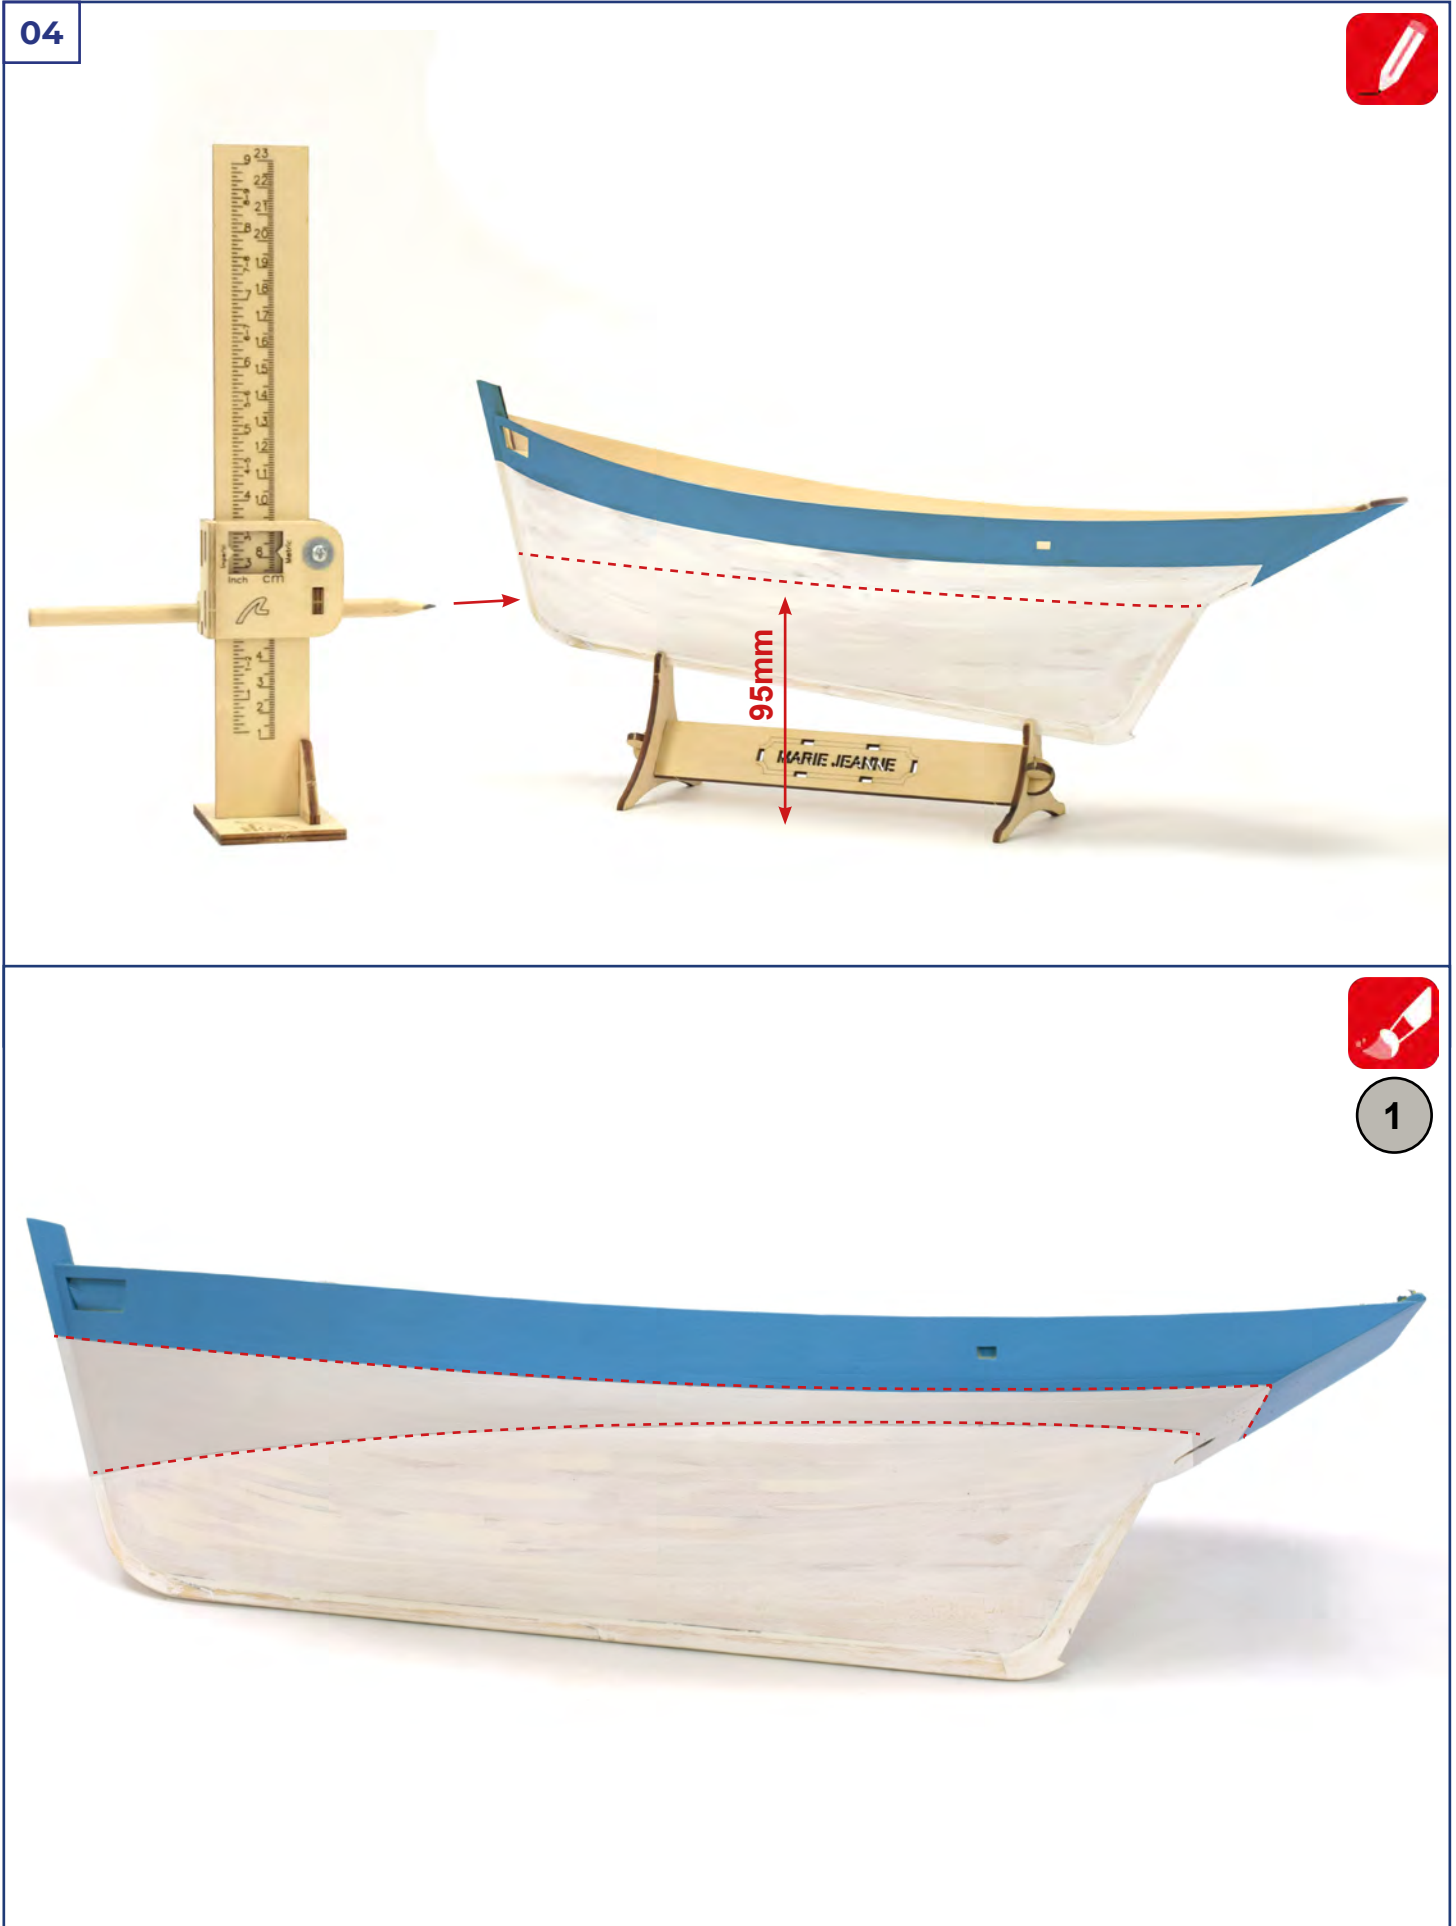





01




02





3



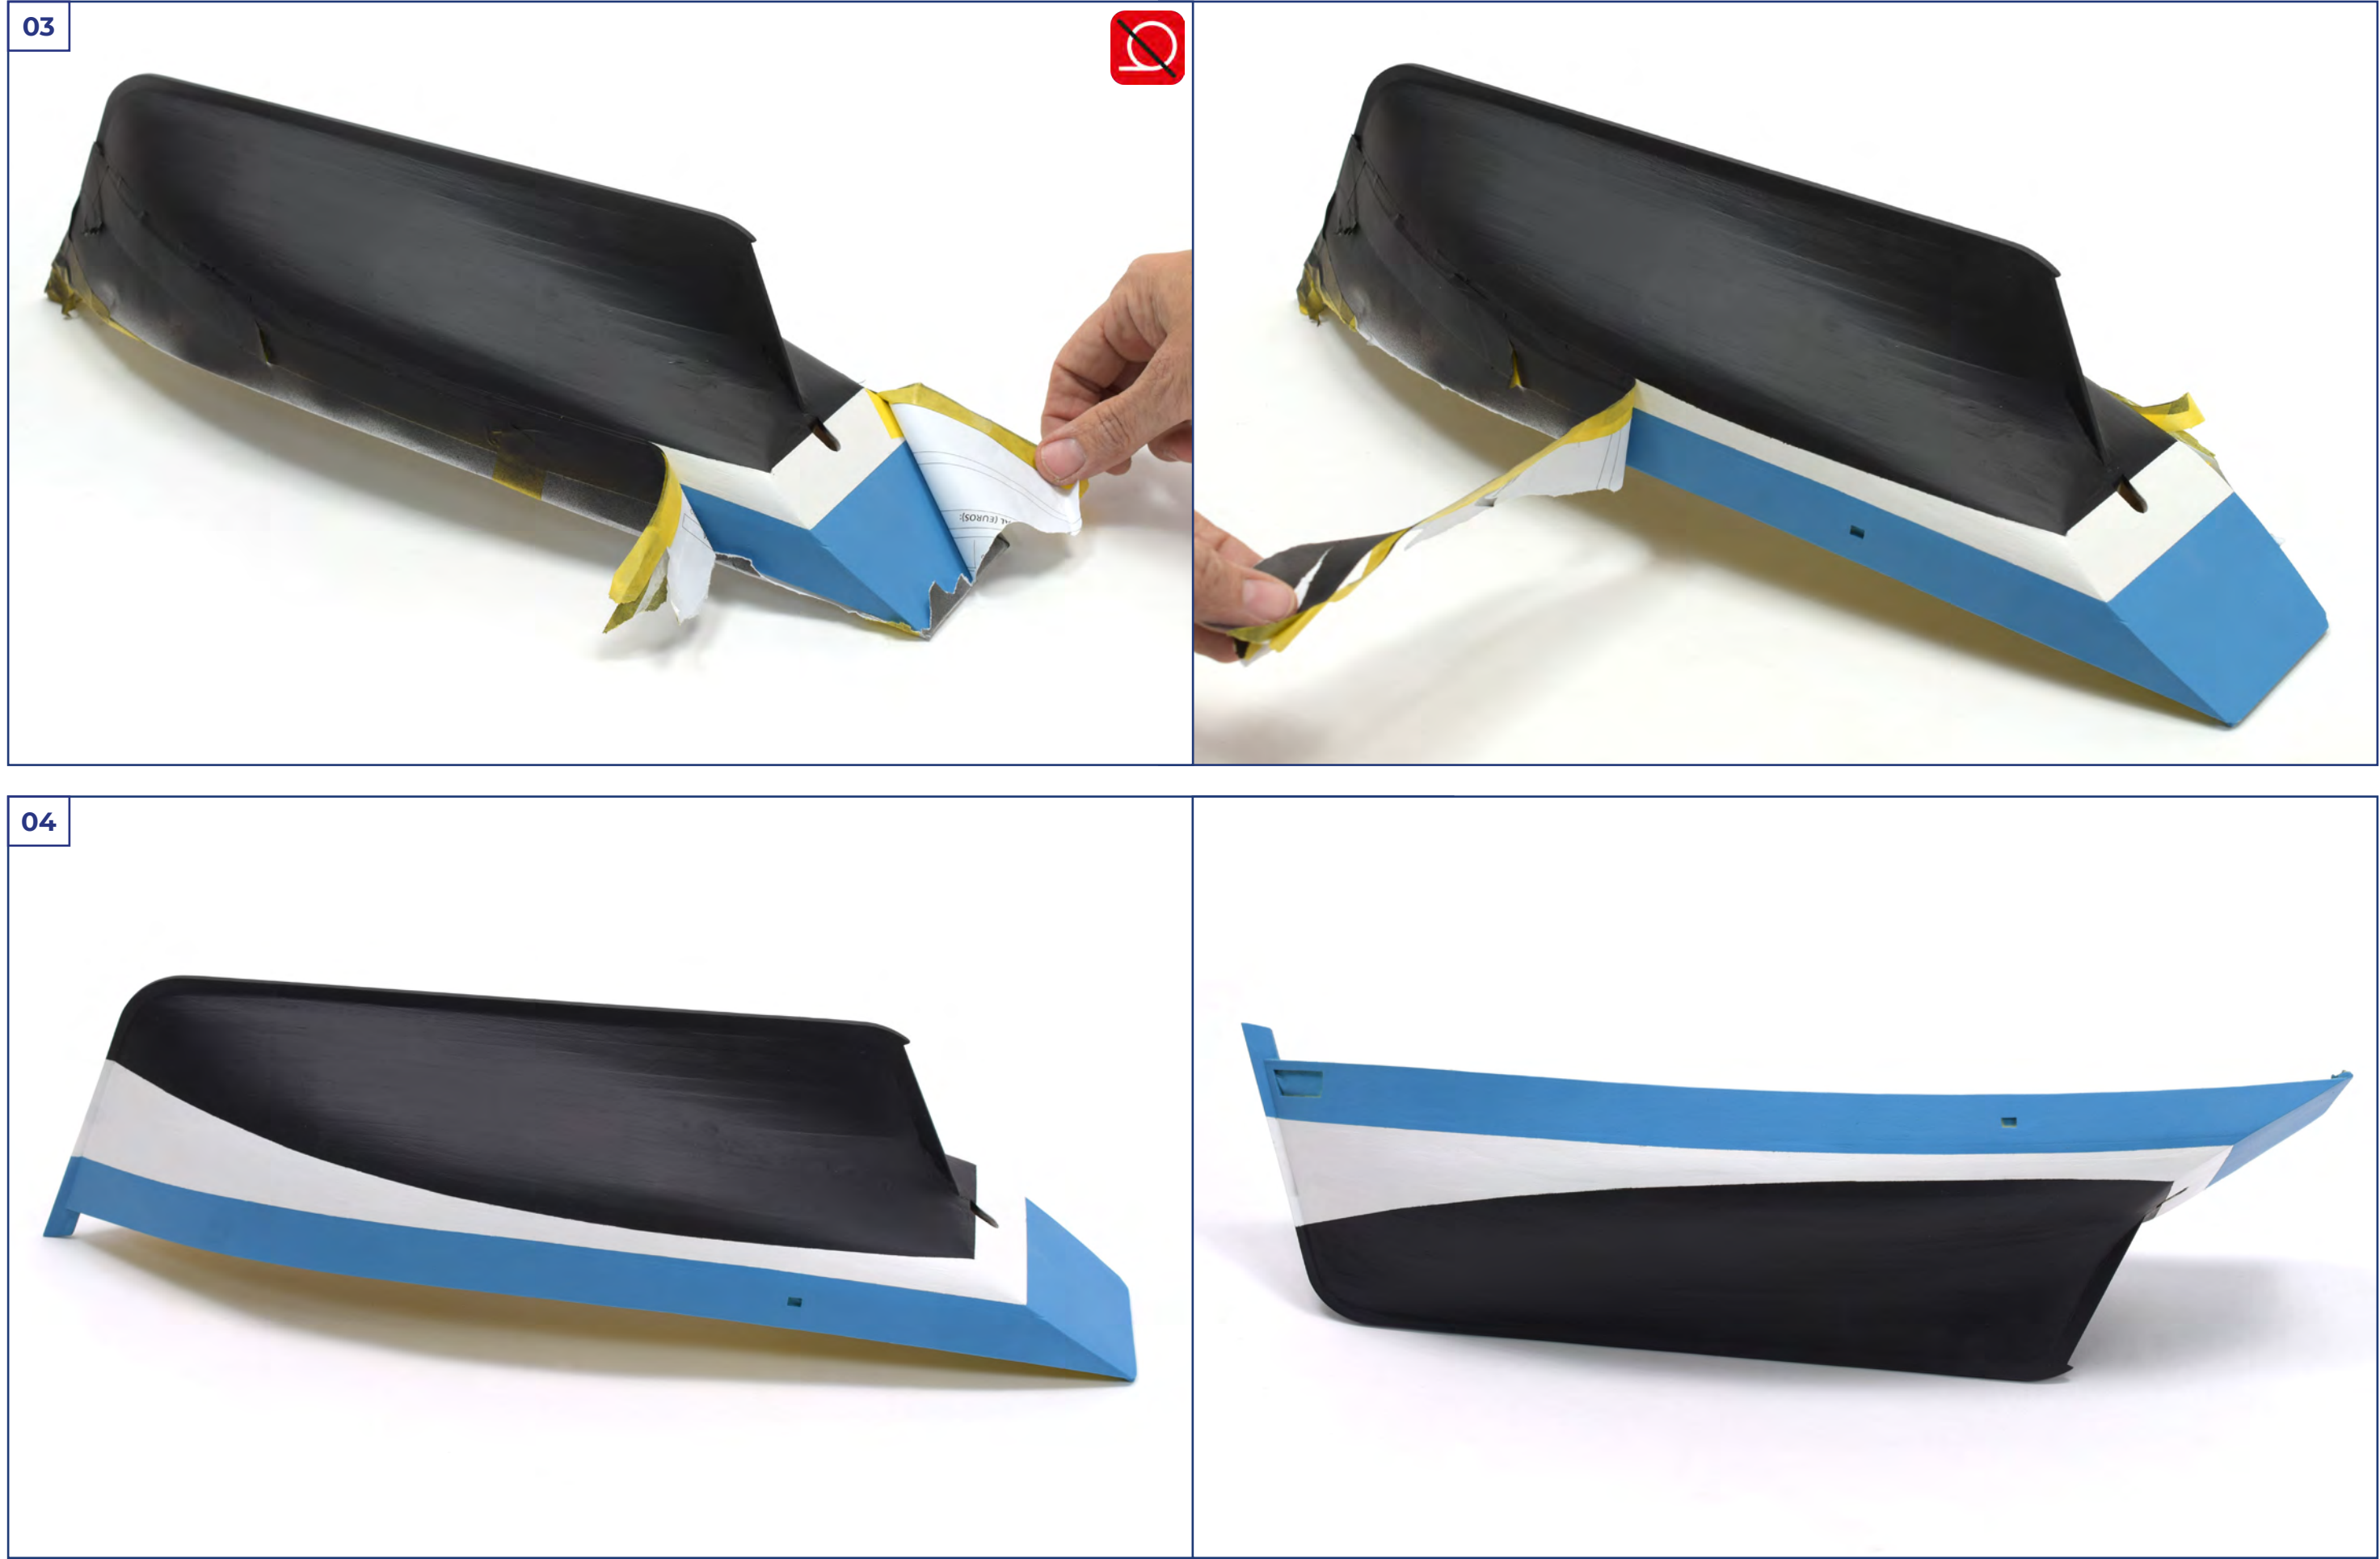


01

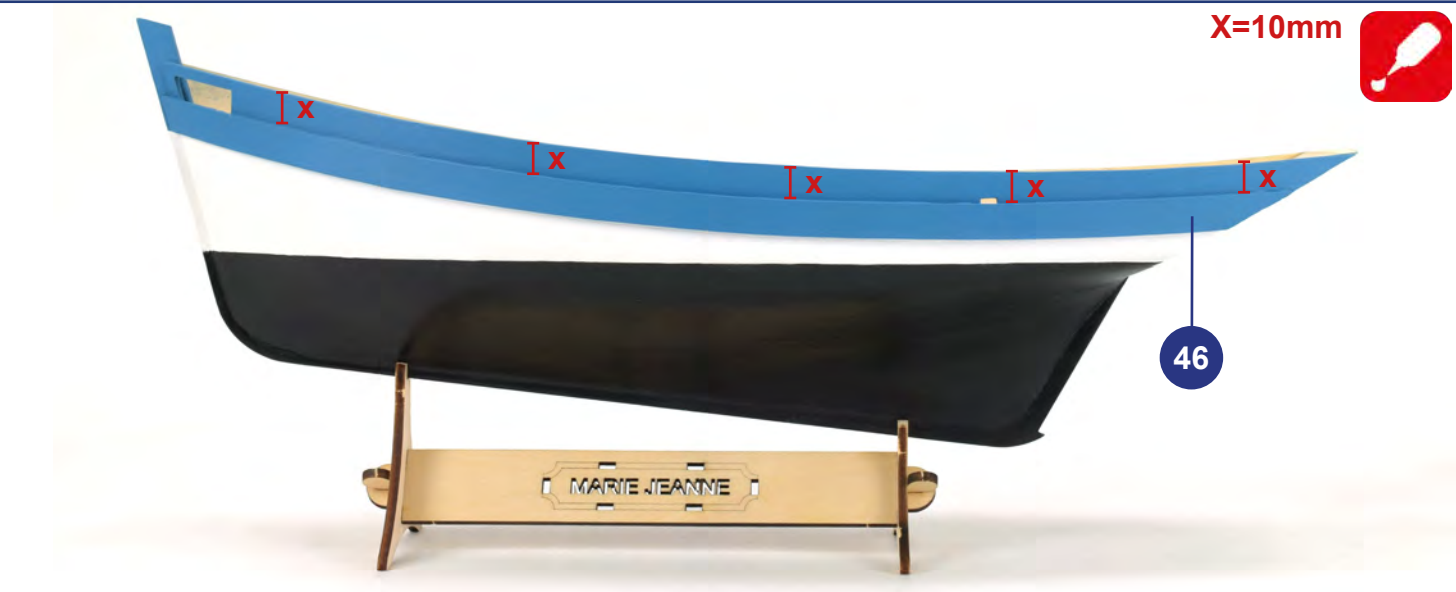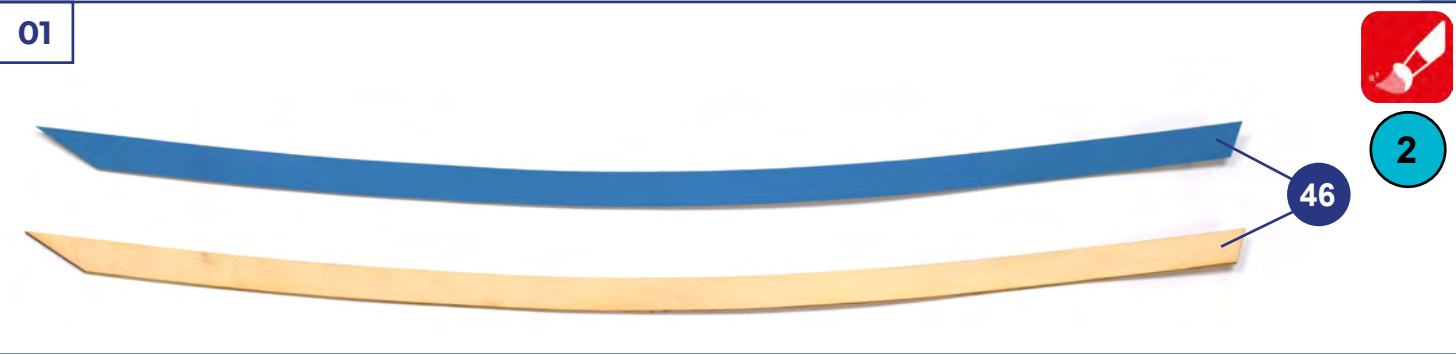


02




03

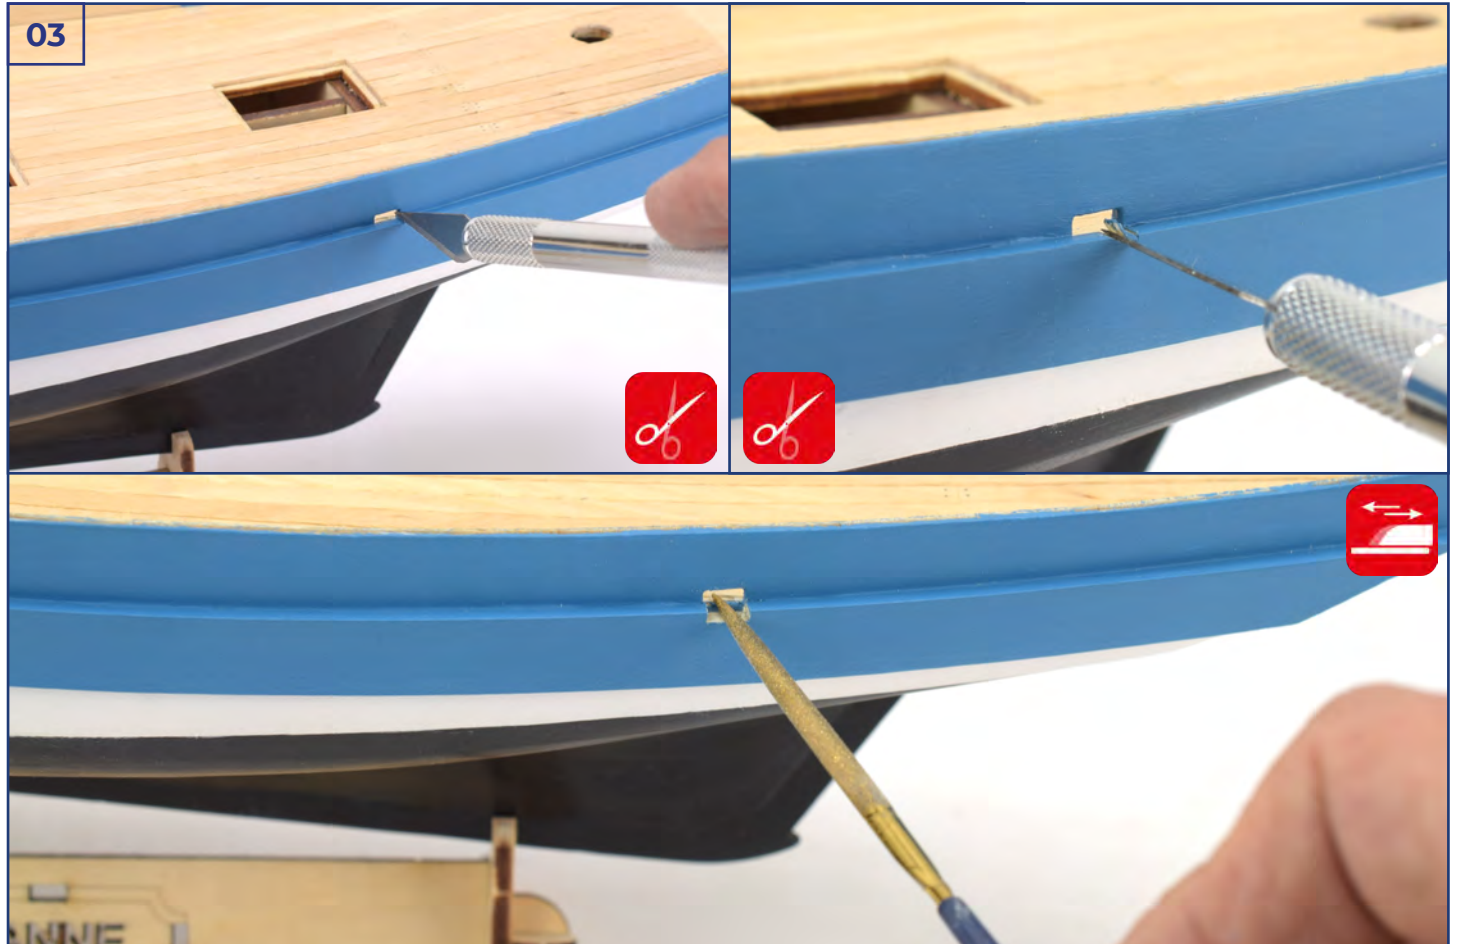

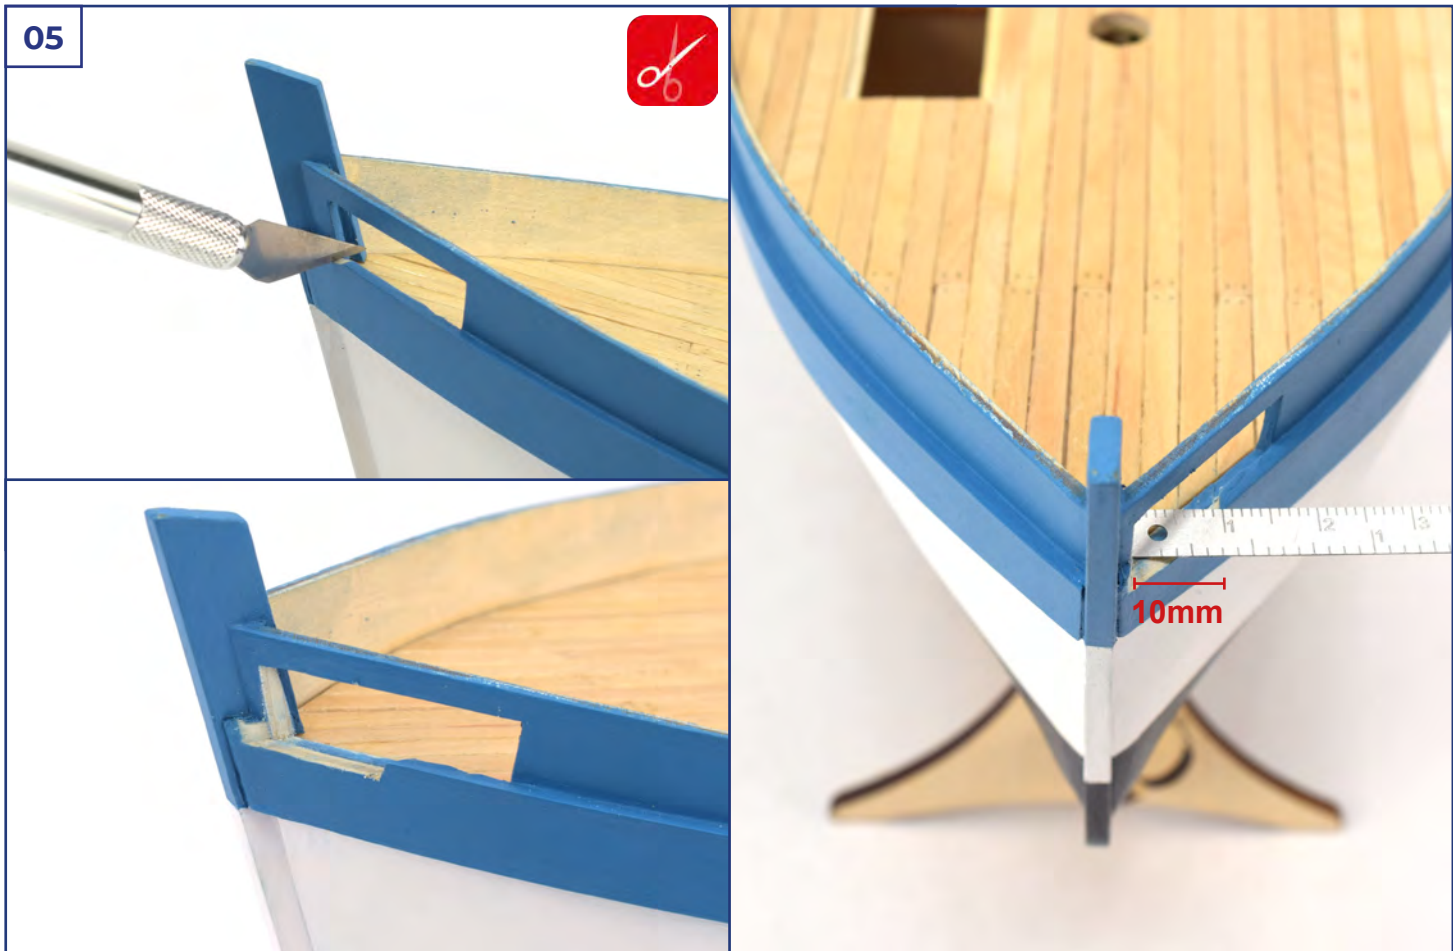


01

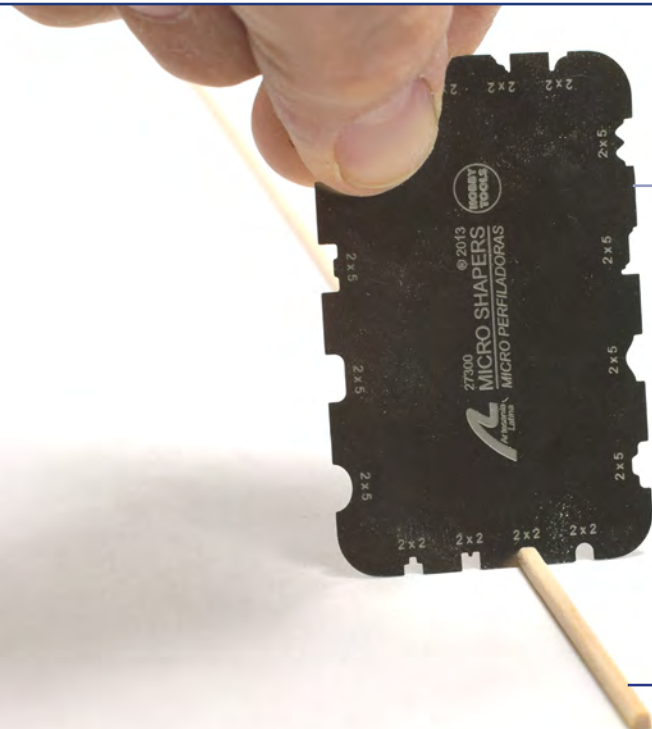

MICROSHAPER A
ref. 27300
Sold separately

WS4A

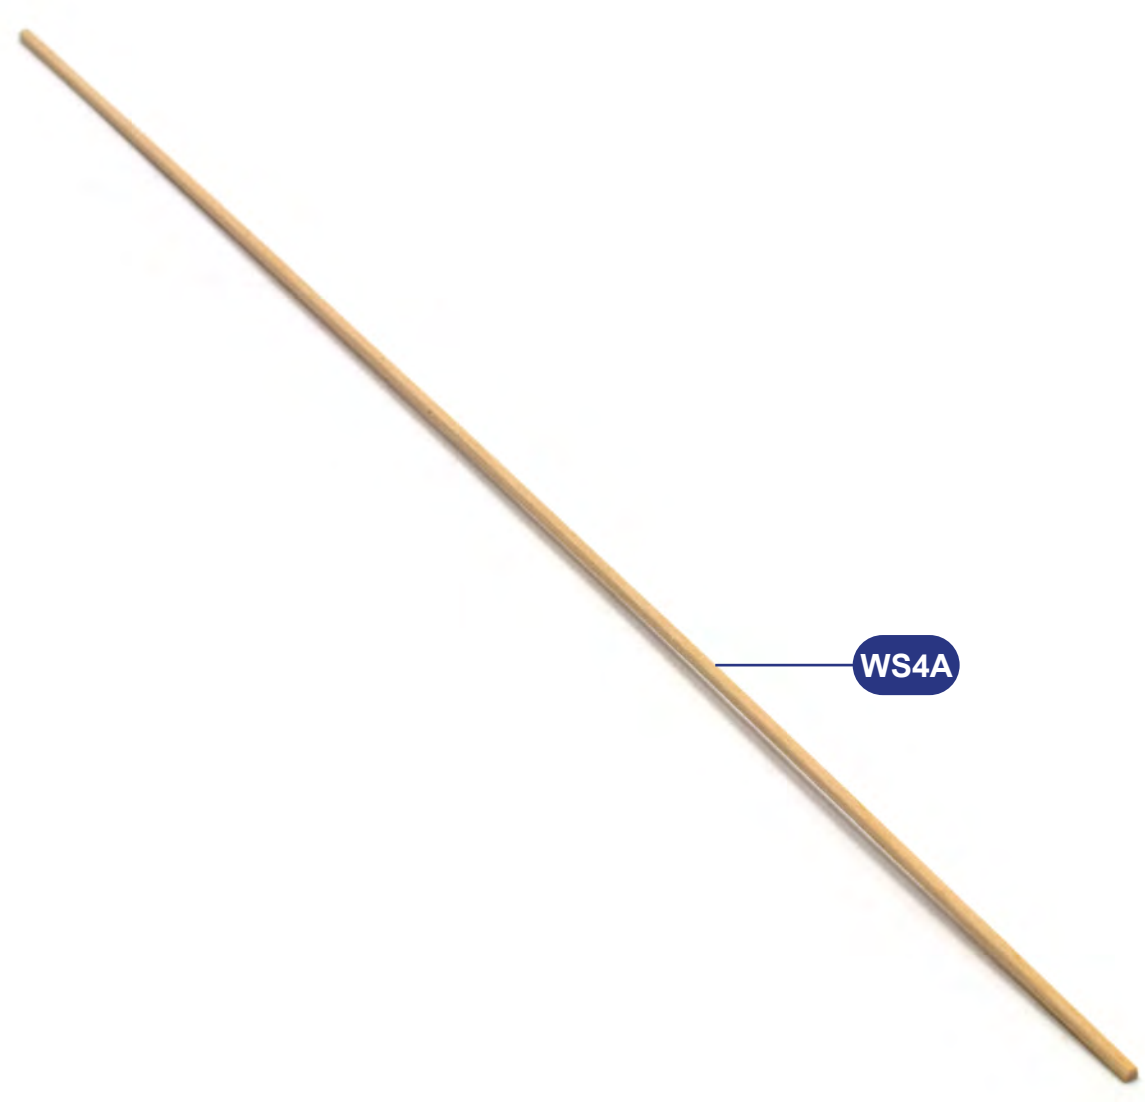

WS4A

02



WS4A

90



MARIE JEANNE



WS4A

≈45mm

MARIE JEANNE



01

WS5

40mm

90

≈3mm

≈5mm

≈8mm

≈4,5mm

aL

aR

02

WS5

b

11mm

90

x2

03


22mm


106mm





b




b


b

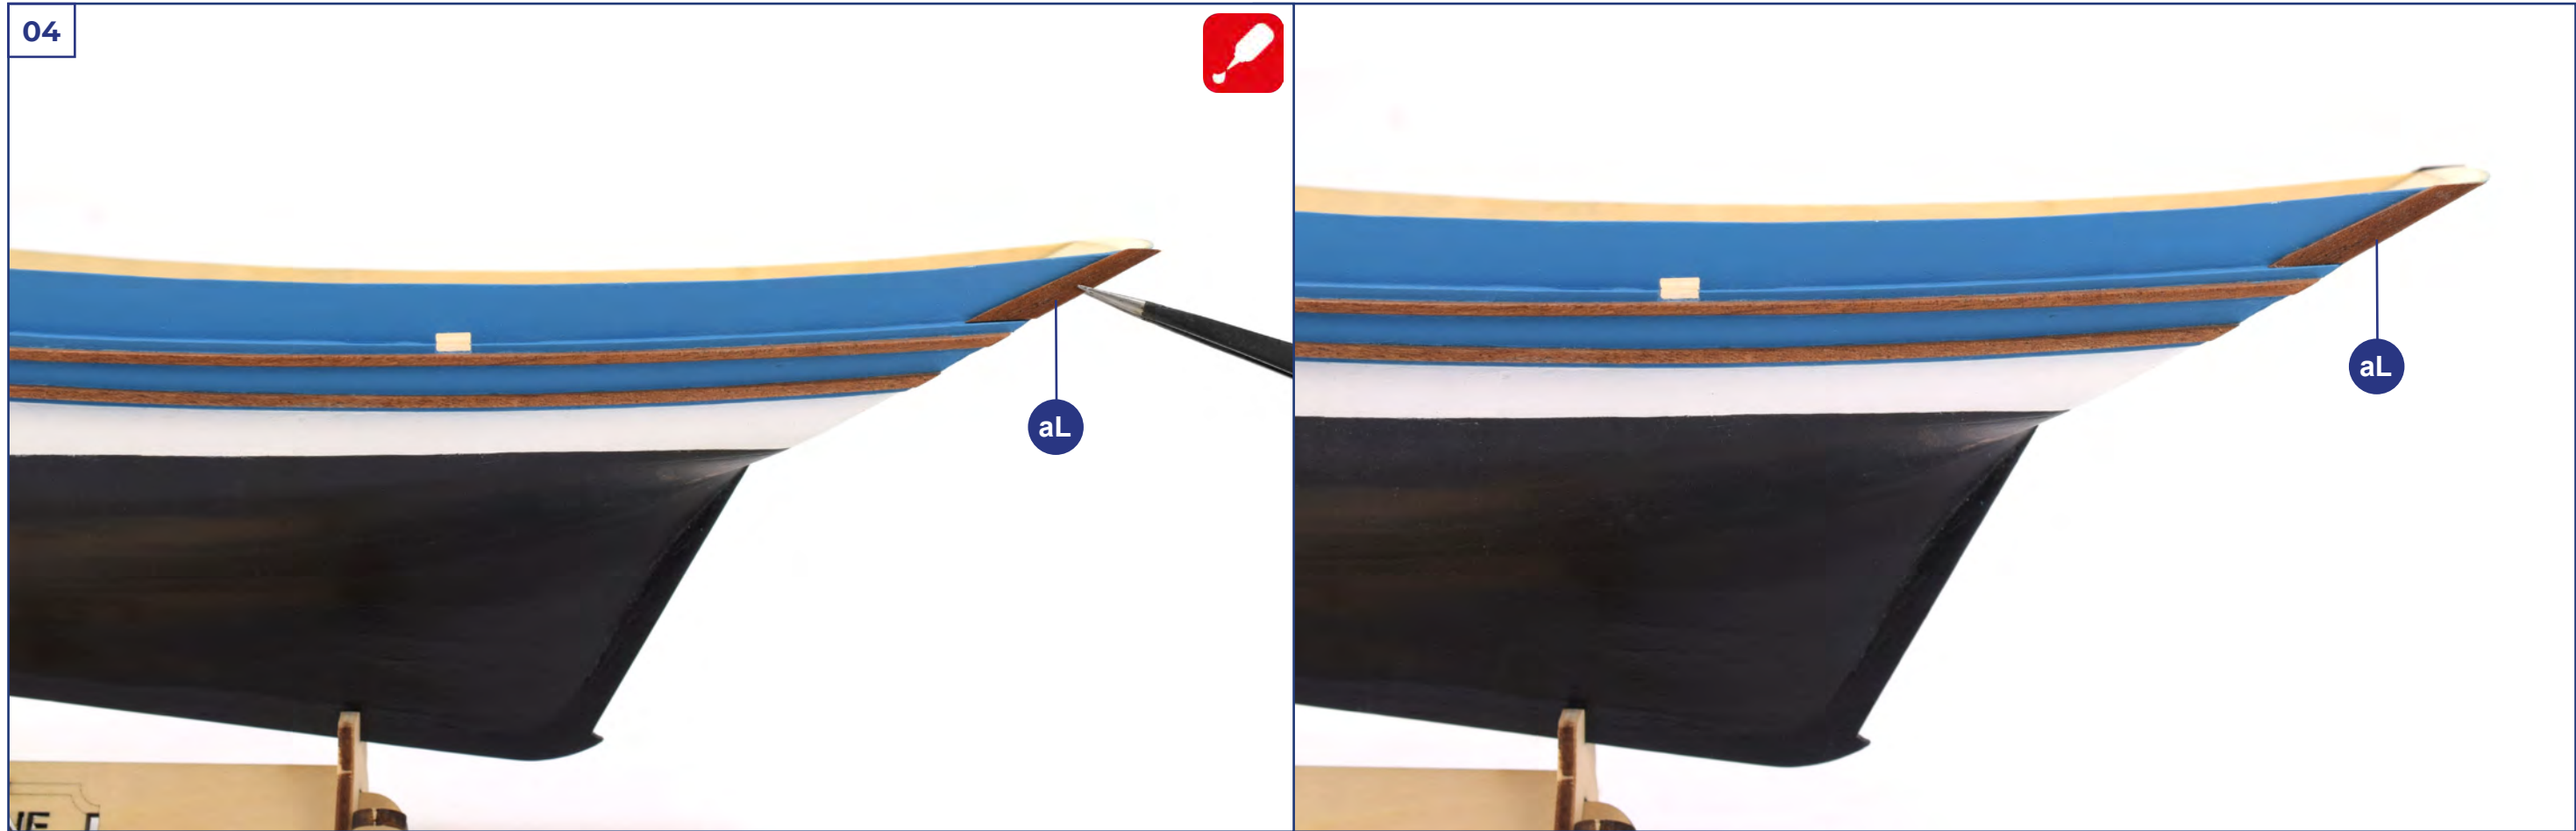


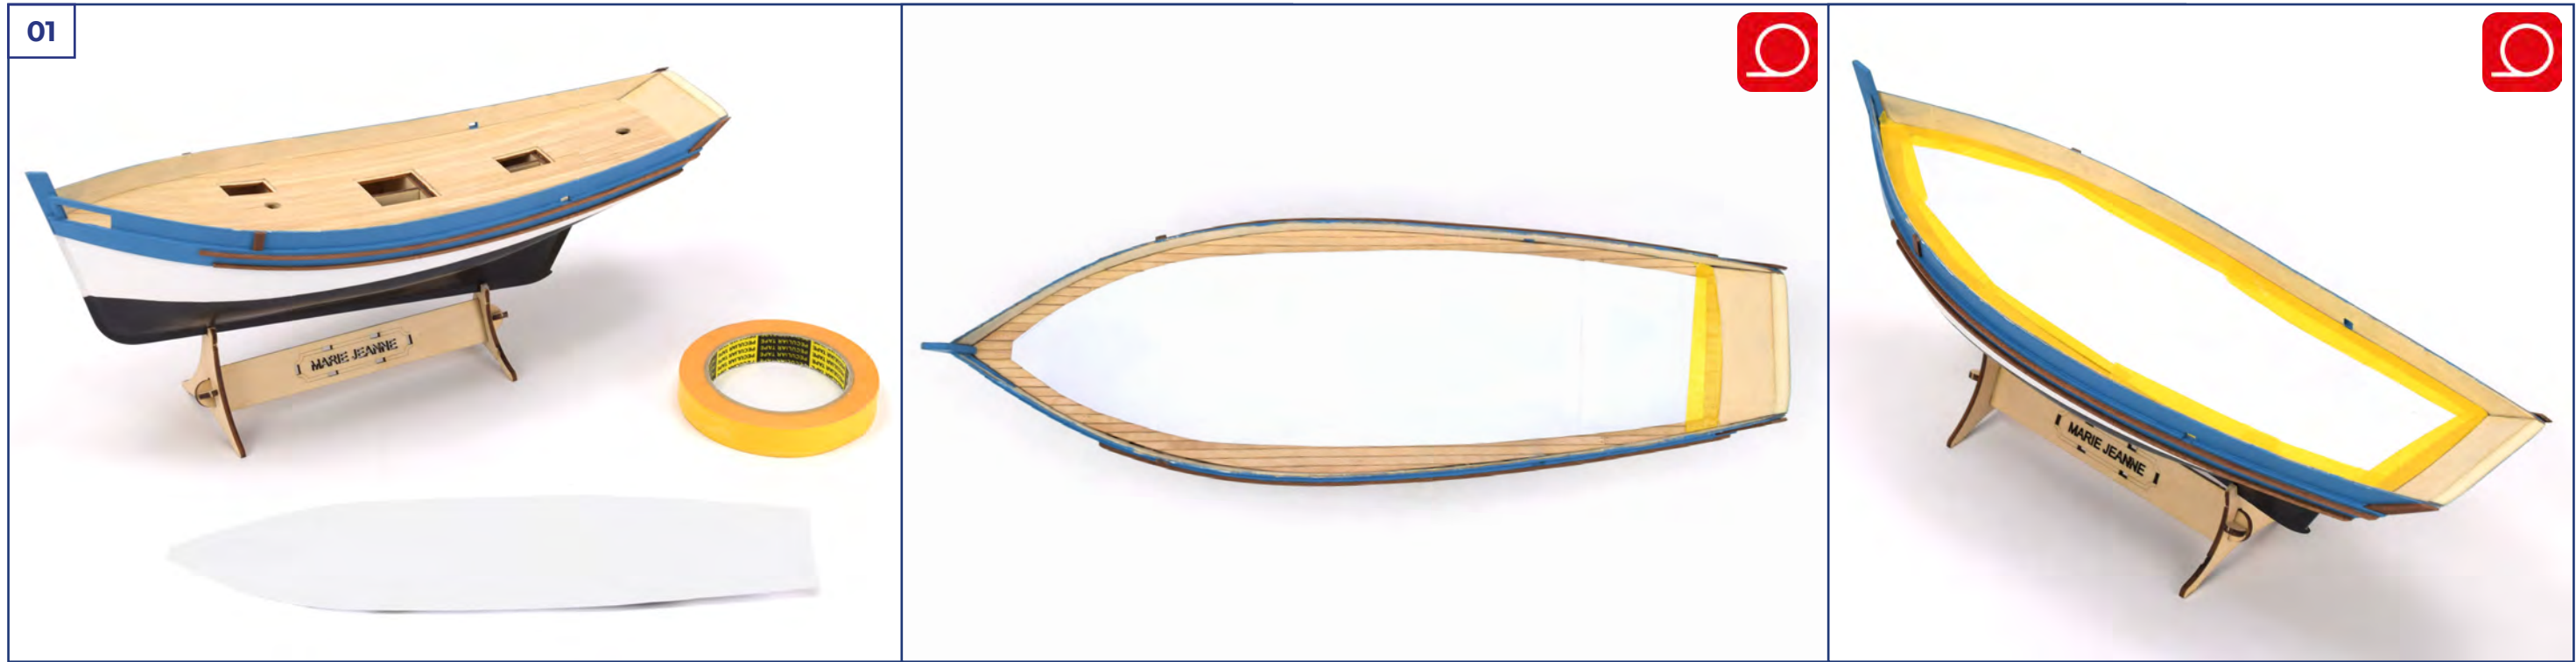


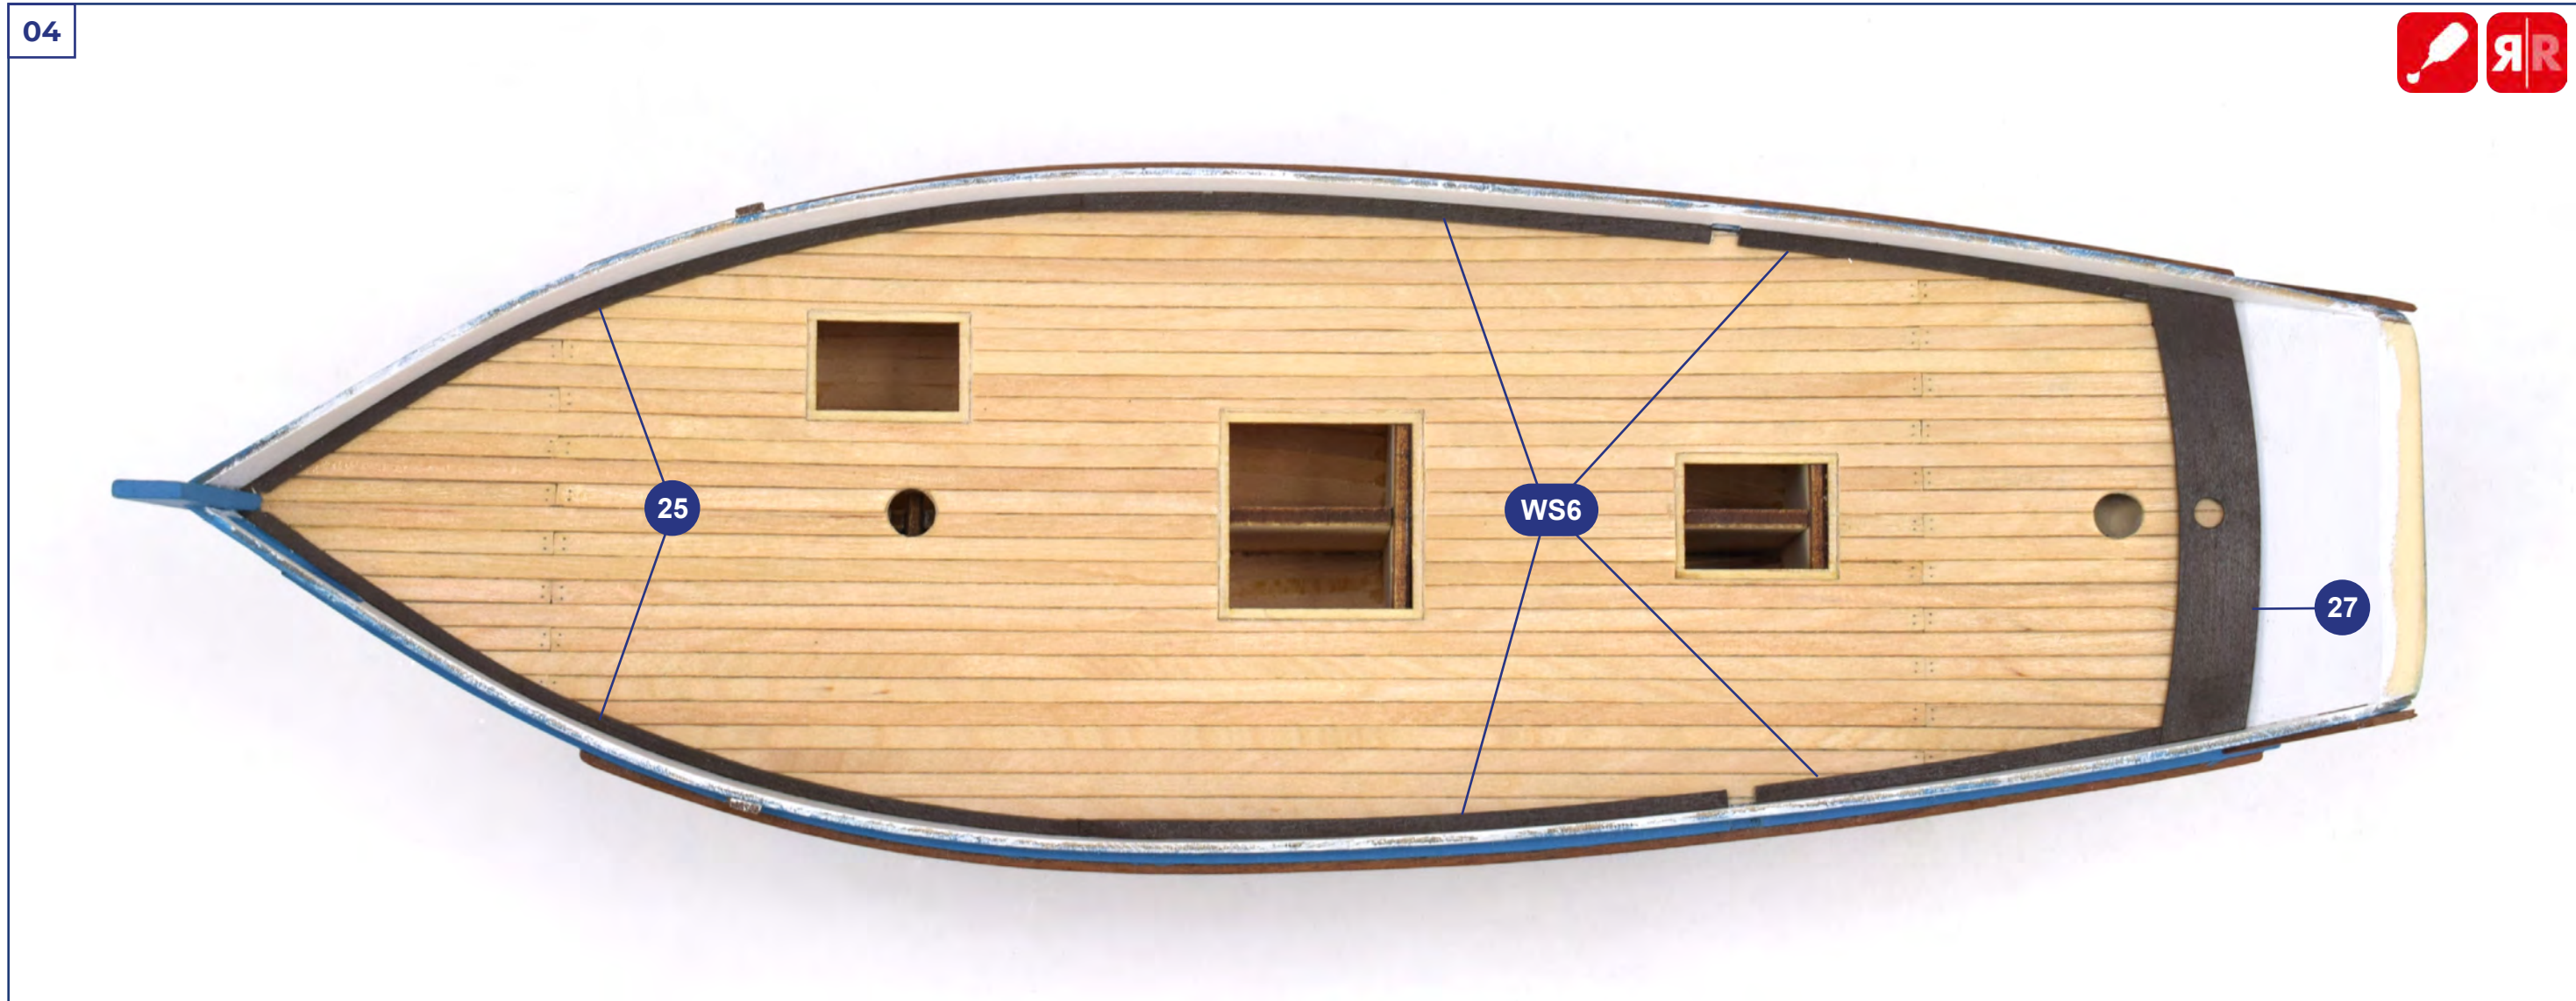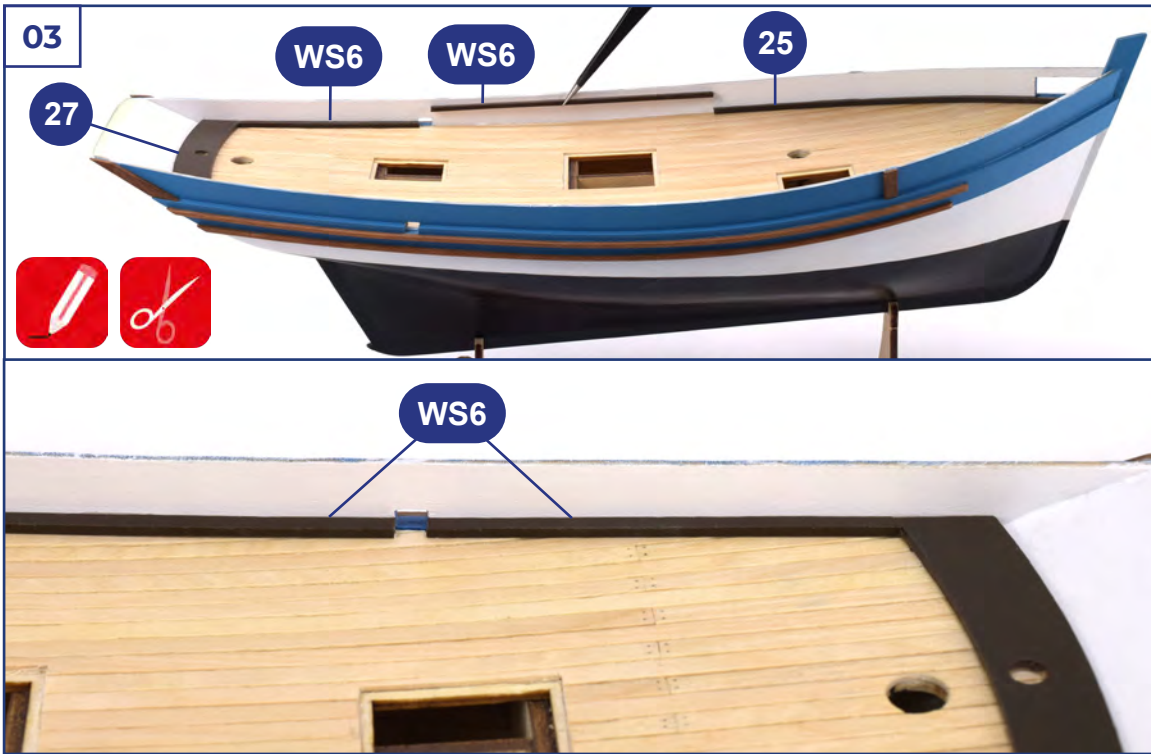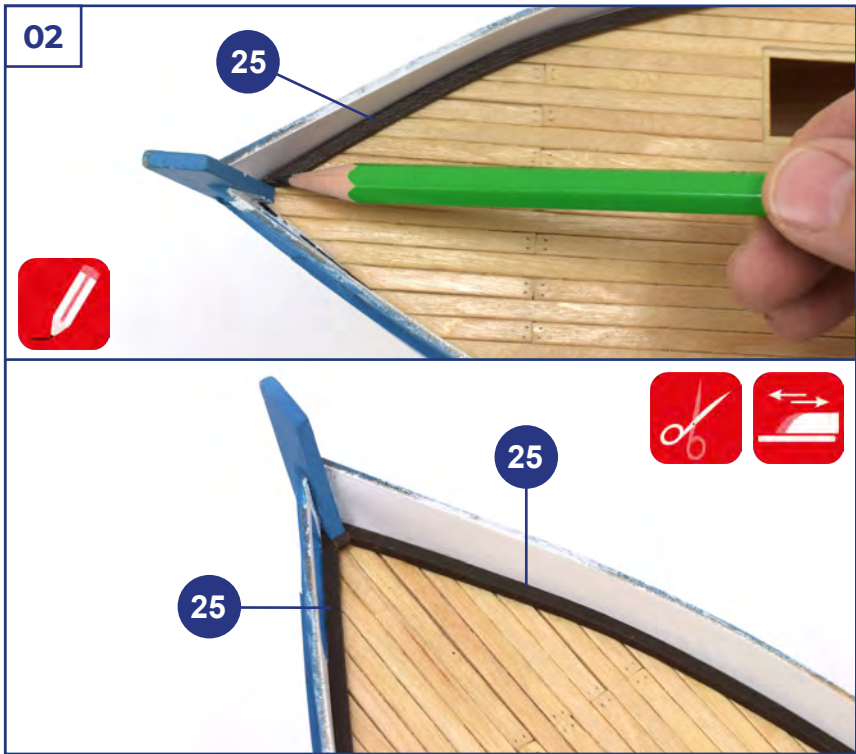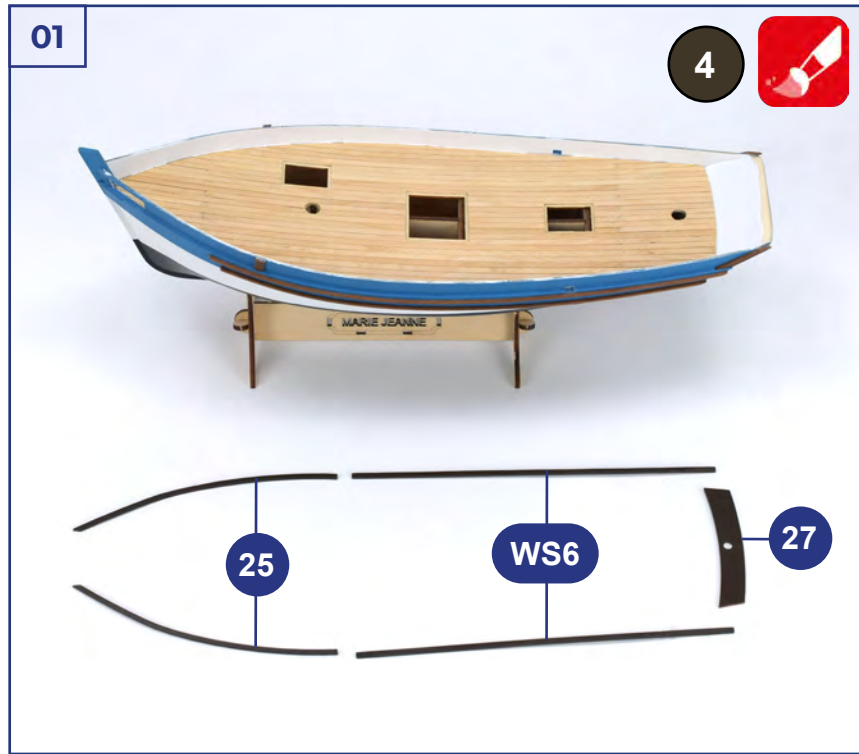

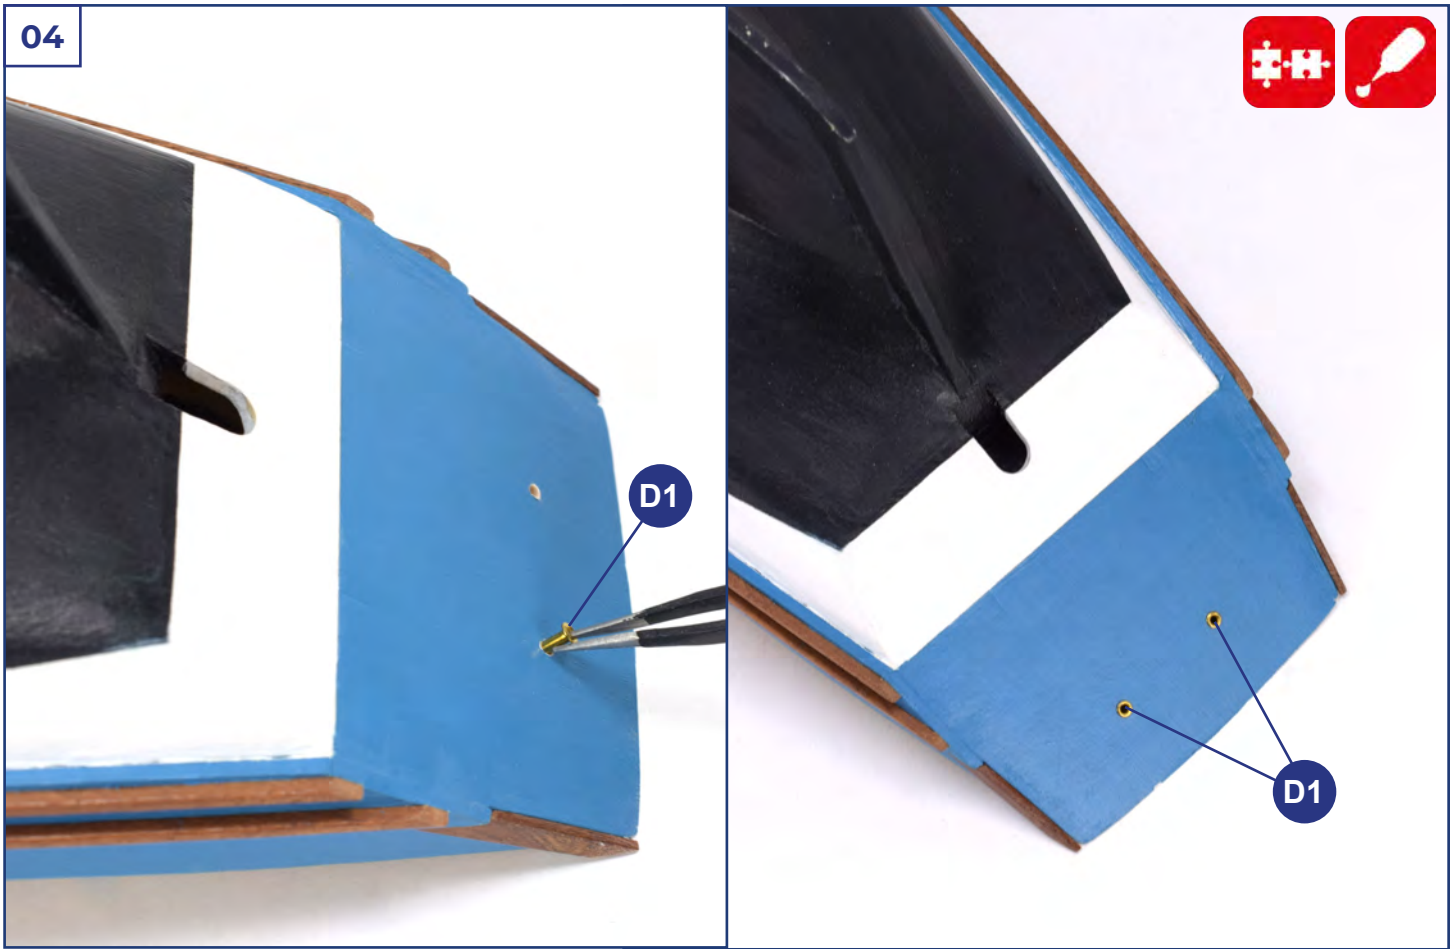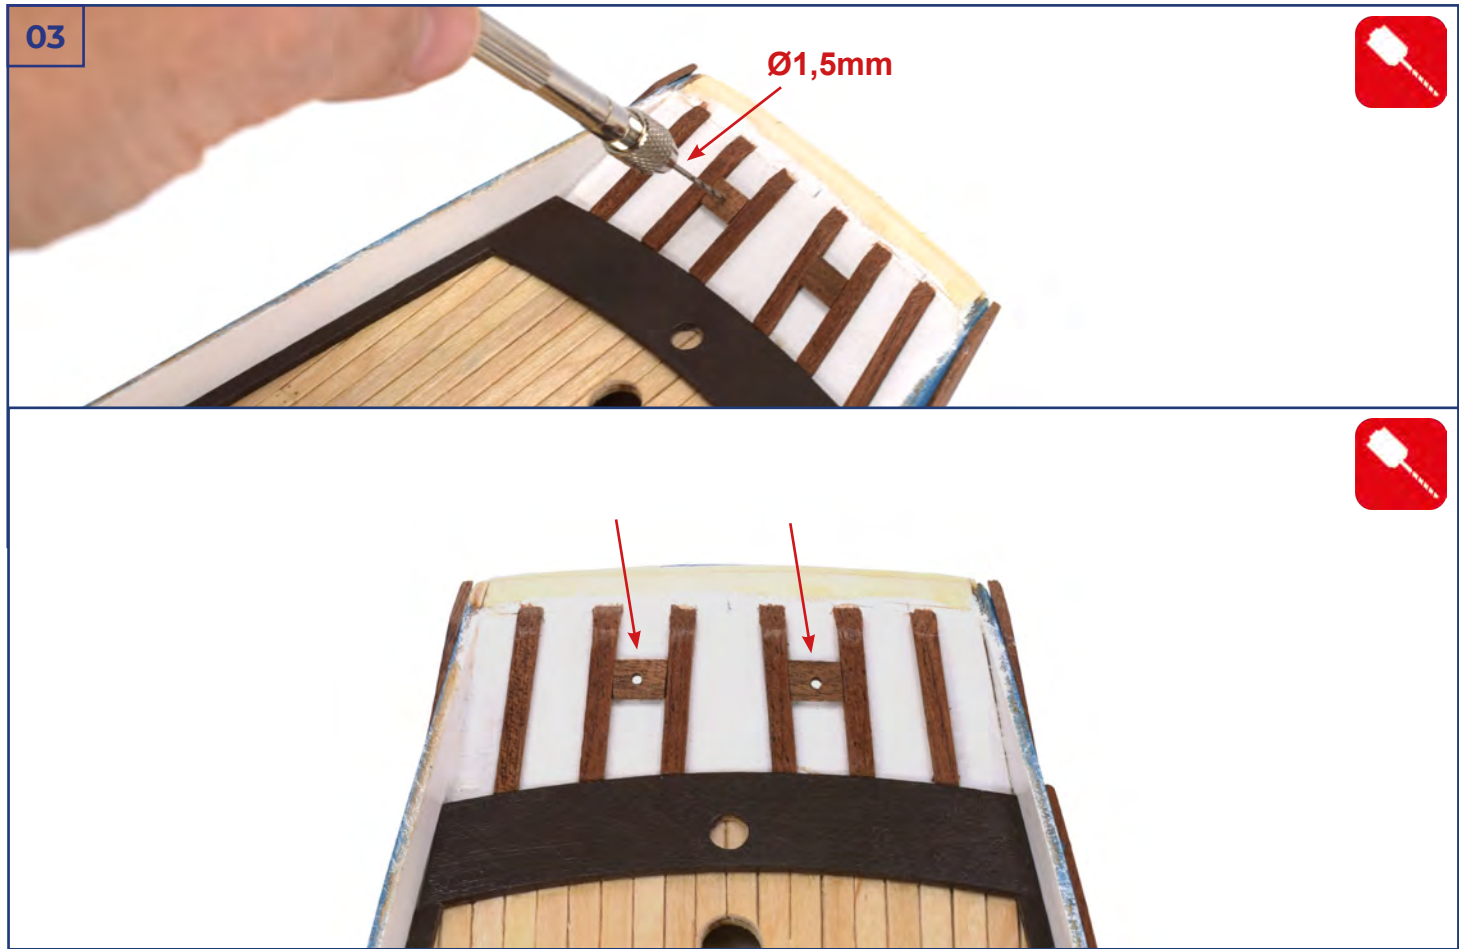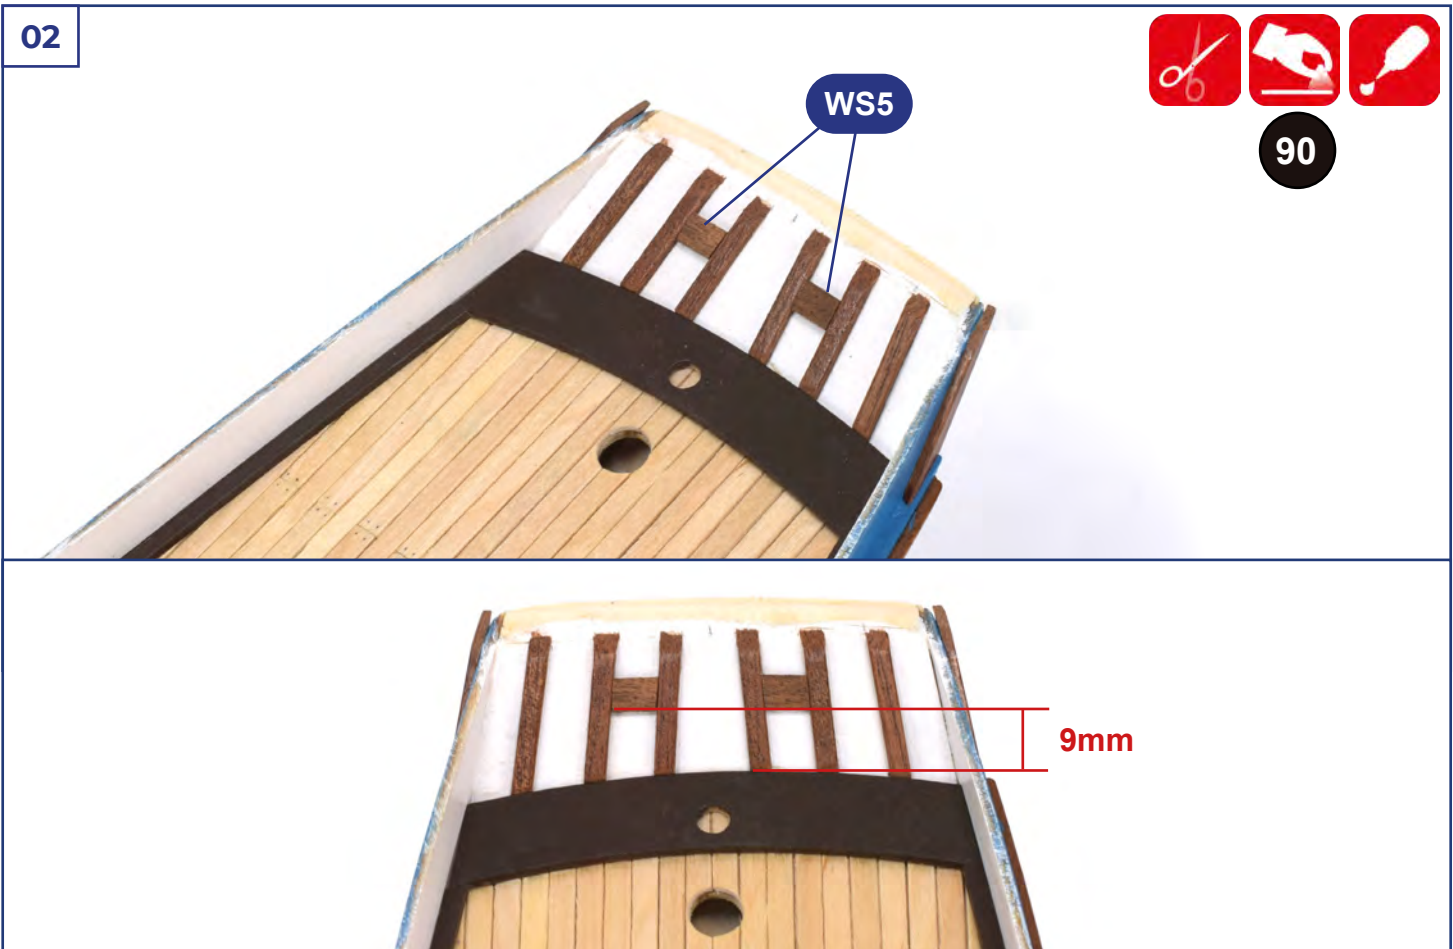

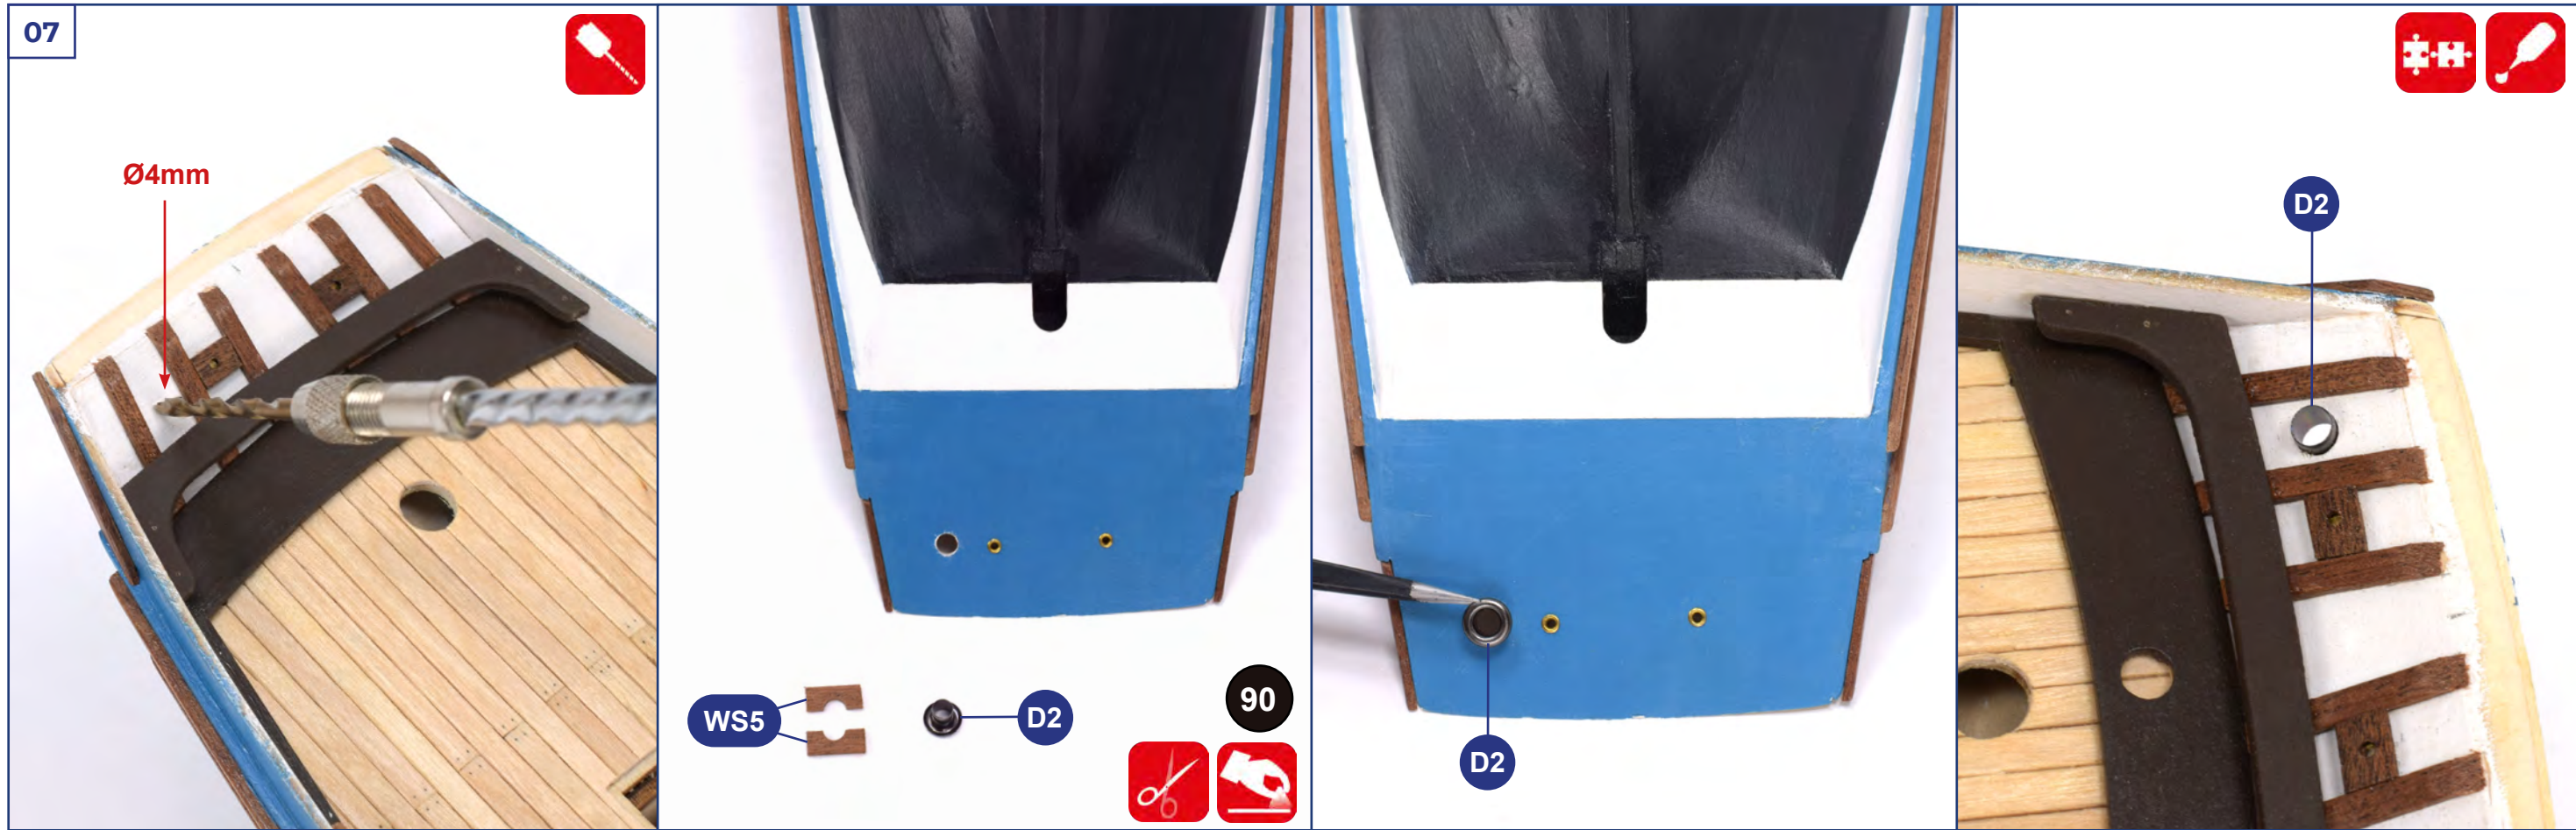

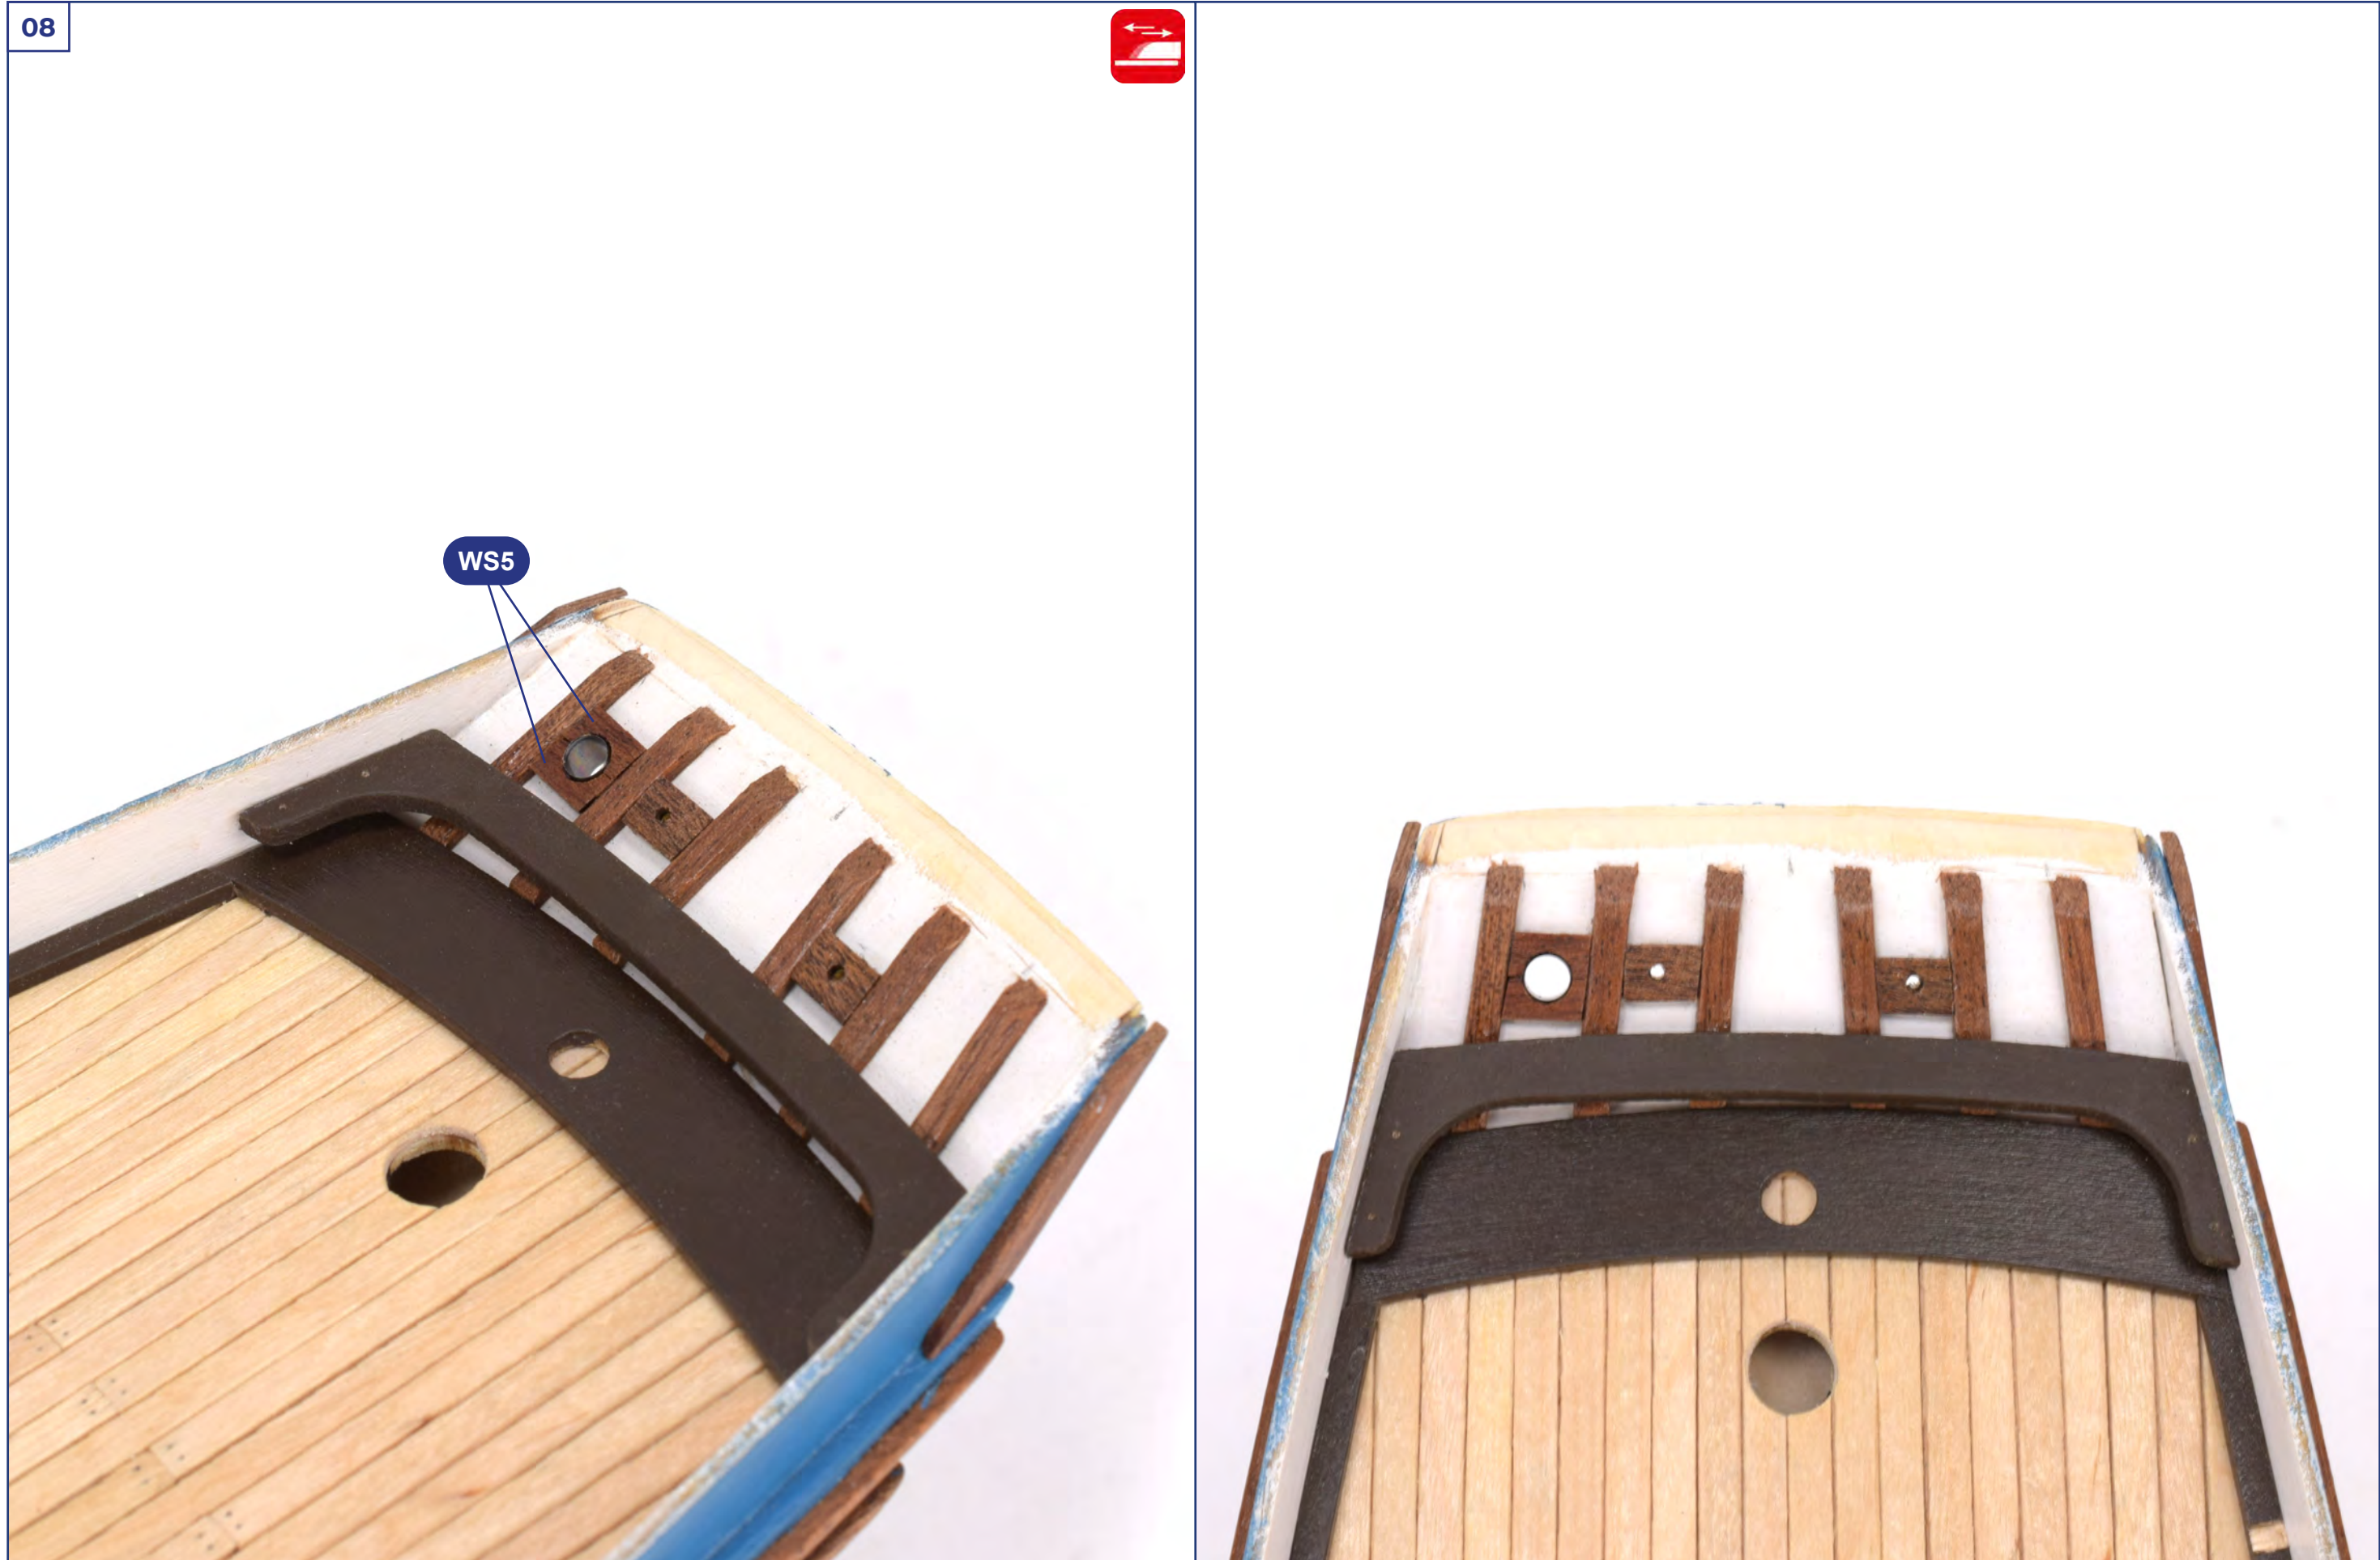

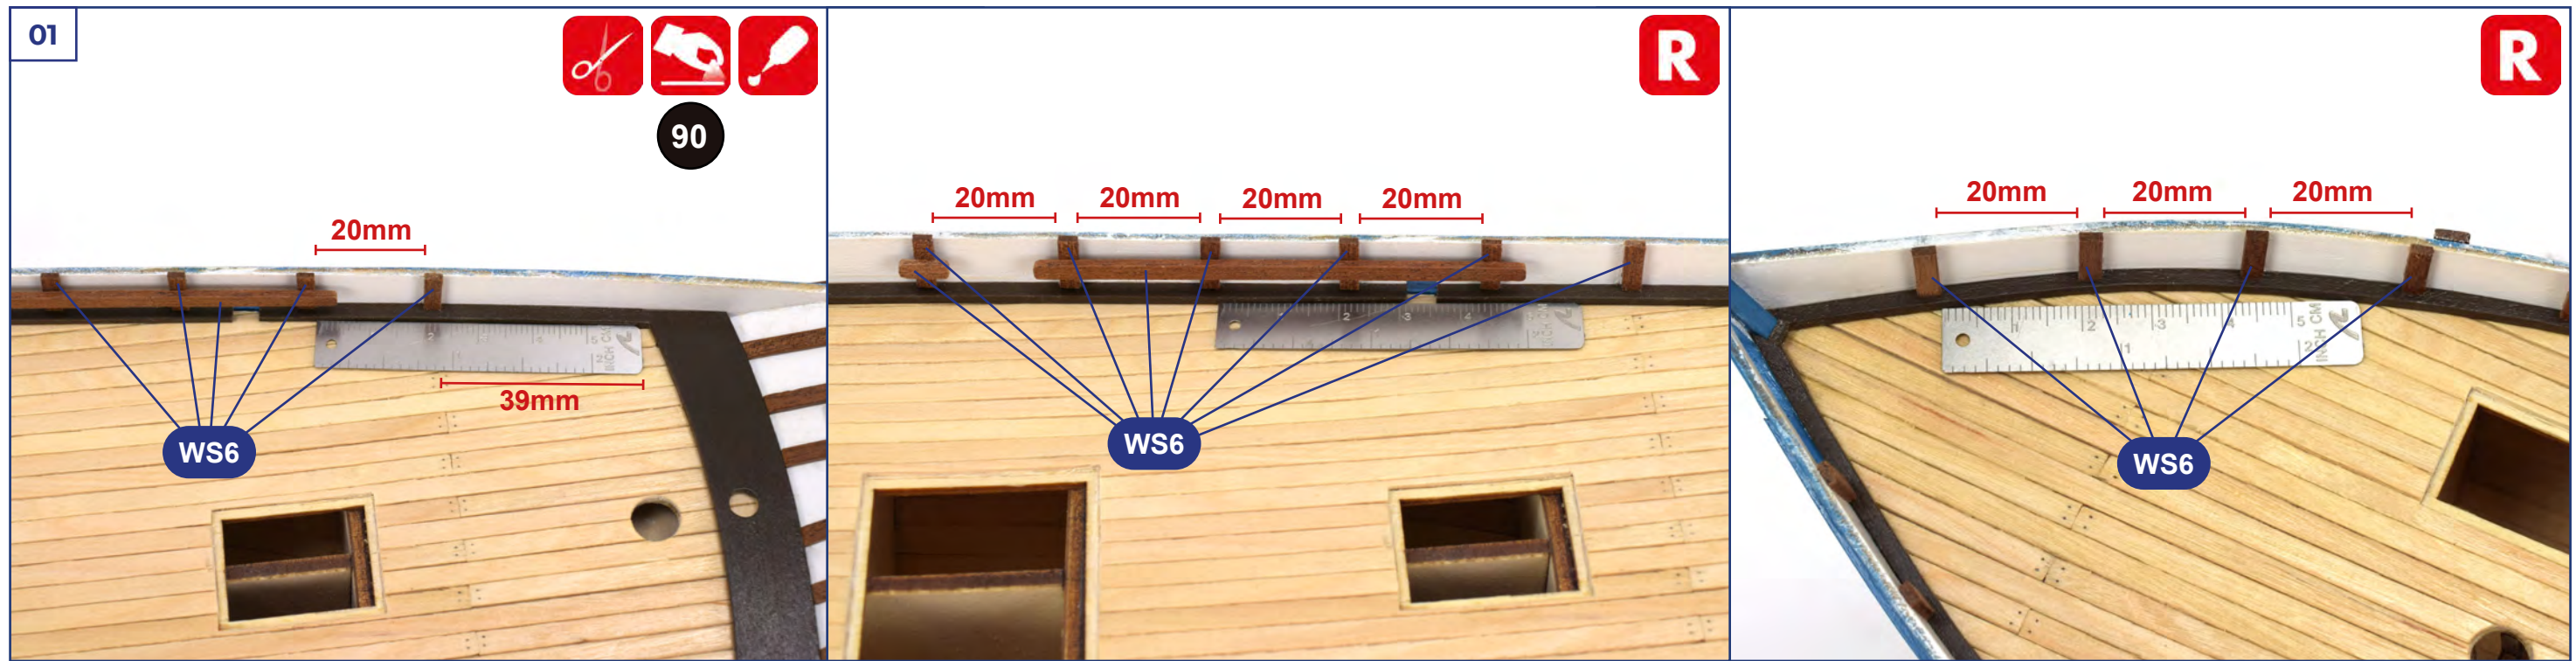

01



90

Ø1mm

WS6

45mm



WS6


WS6

02



WS6

01

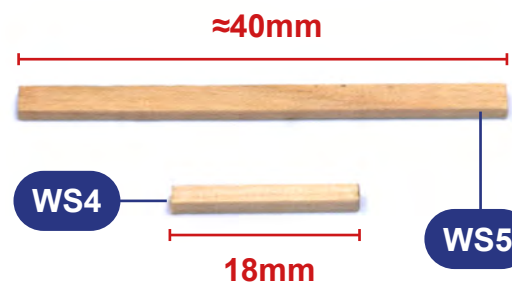

 2x2mm



30mm

02







03




04



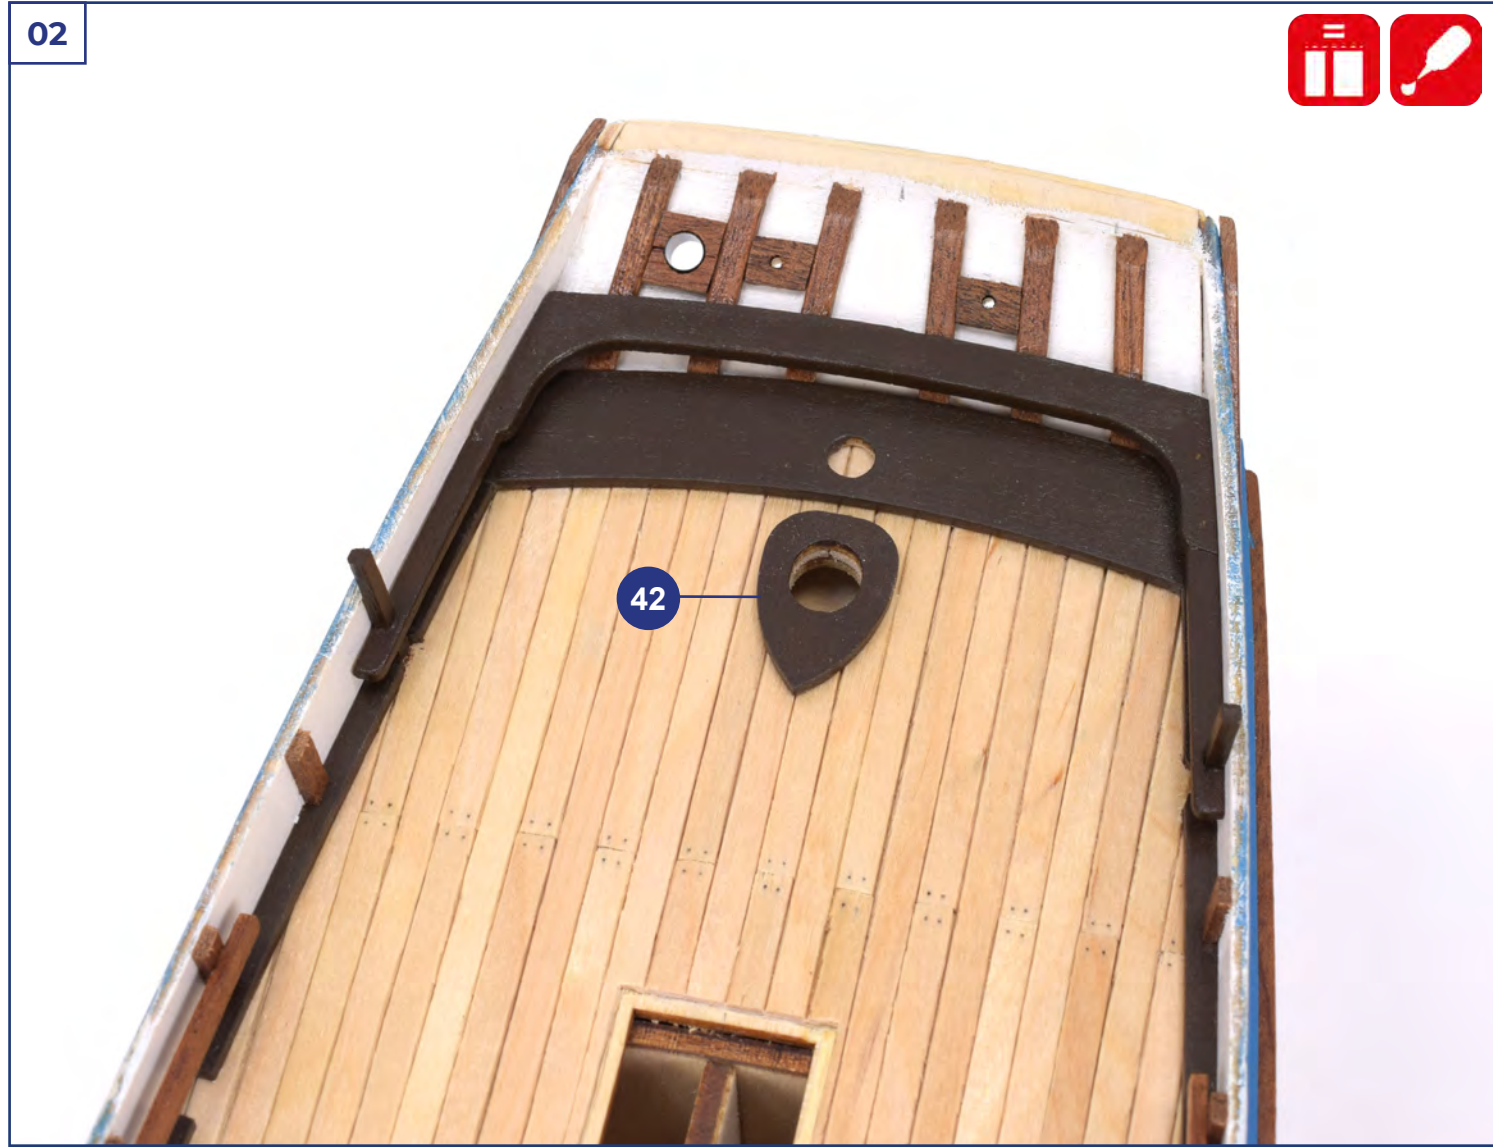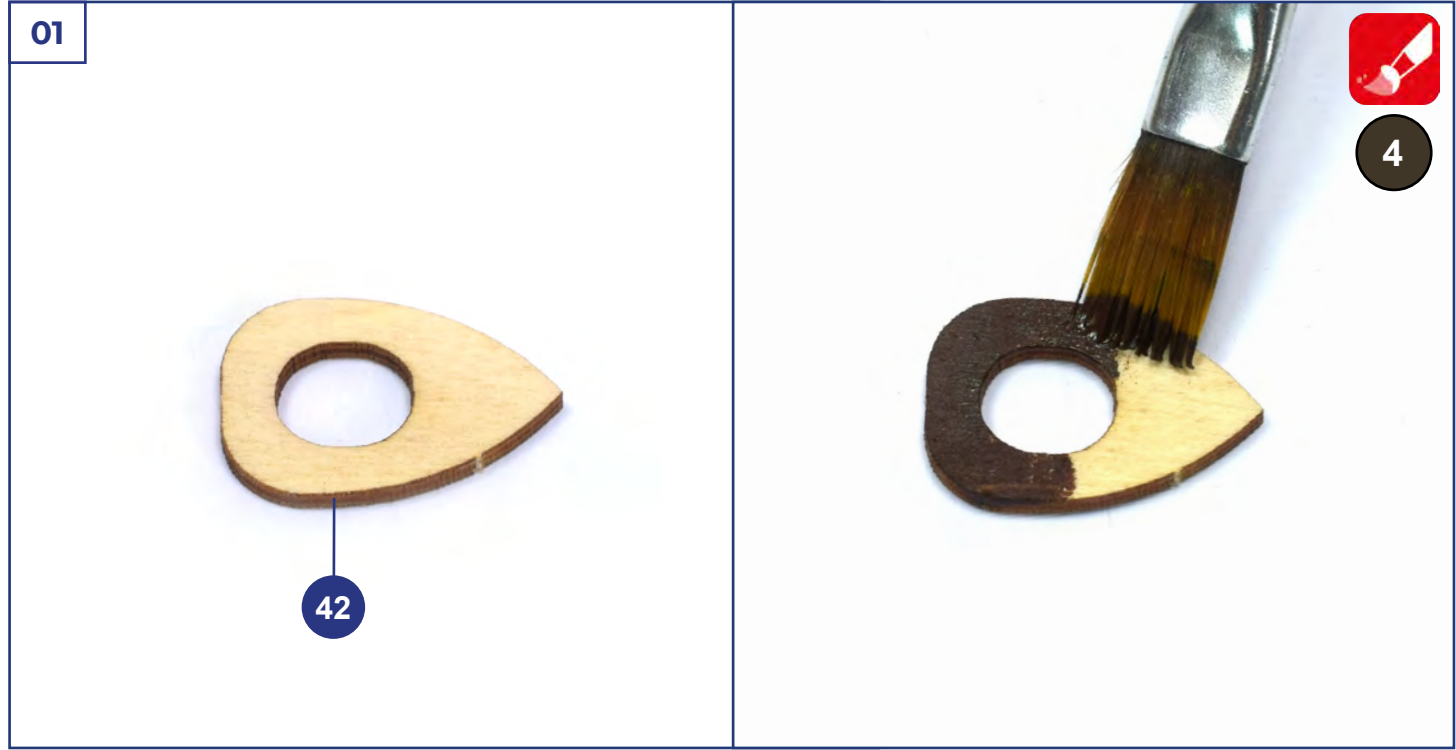


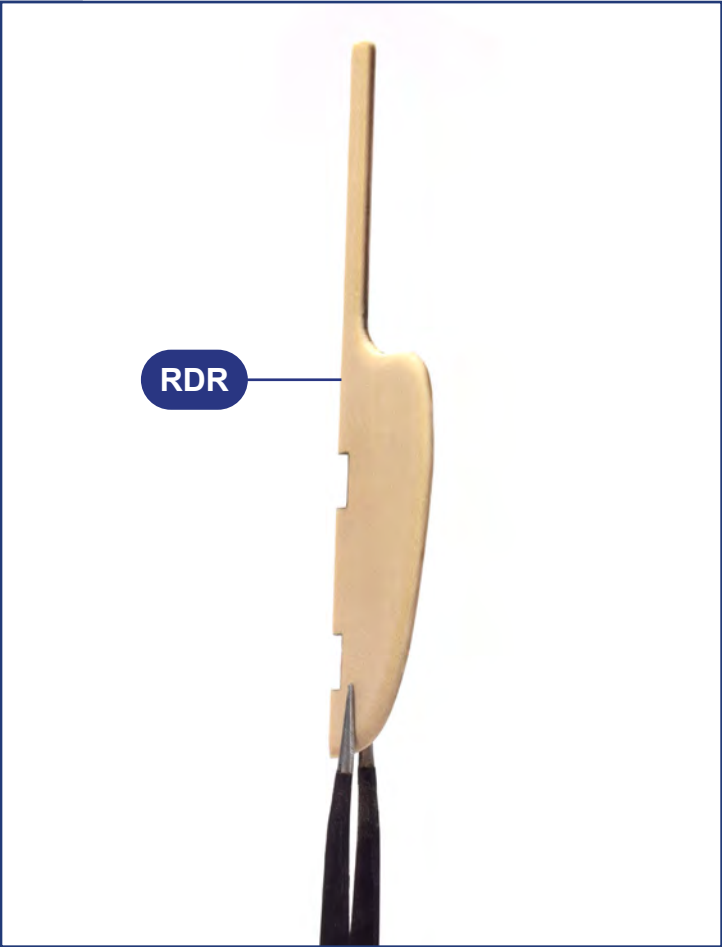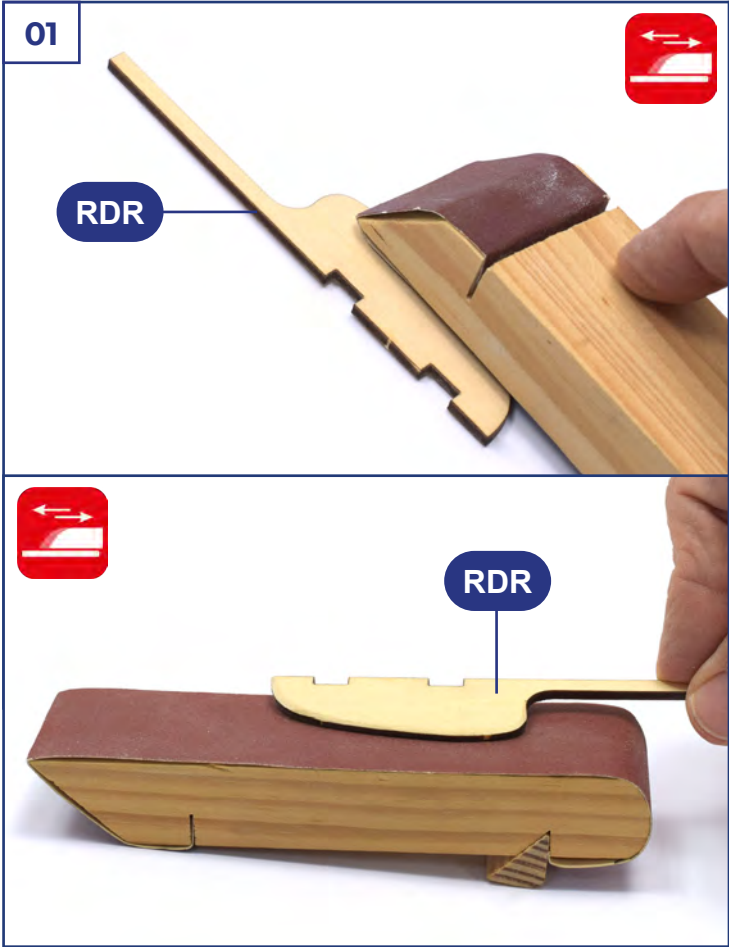

05

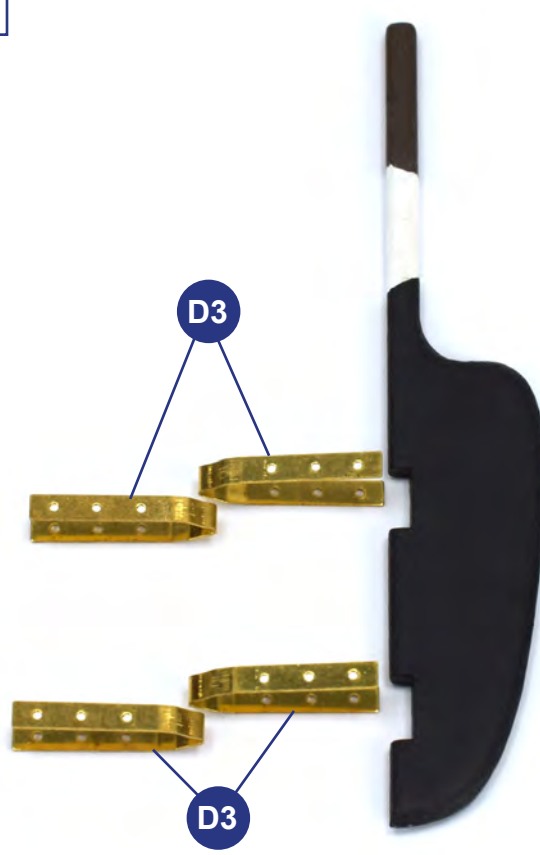


06

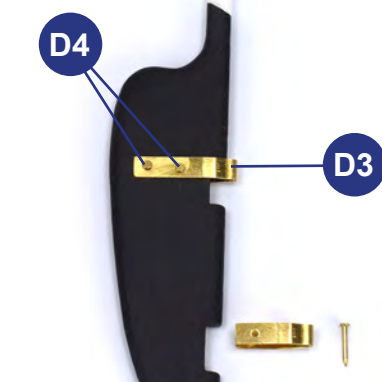

Ø0,5mm



07

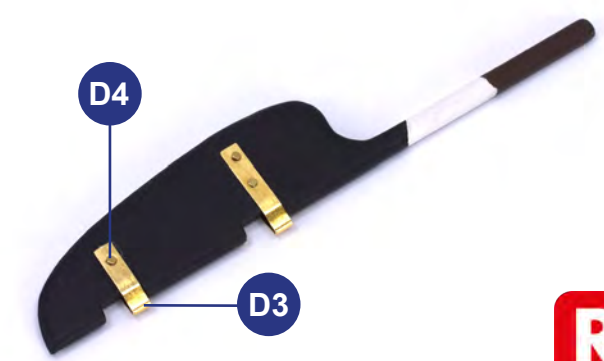

08



Ø1mm

09



Ø1mm









01




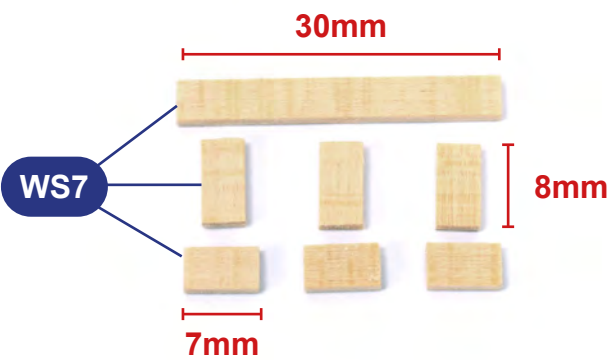




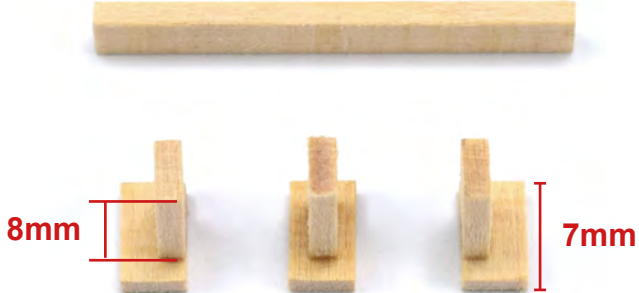



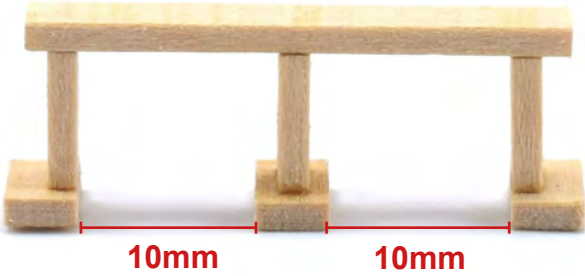

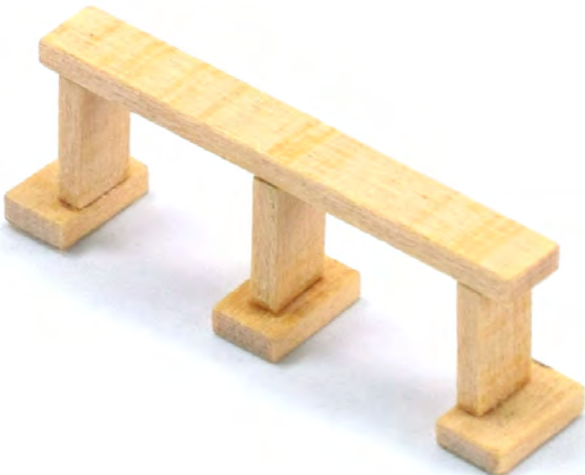

02


90








03







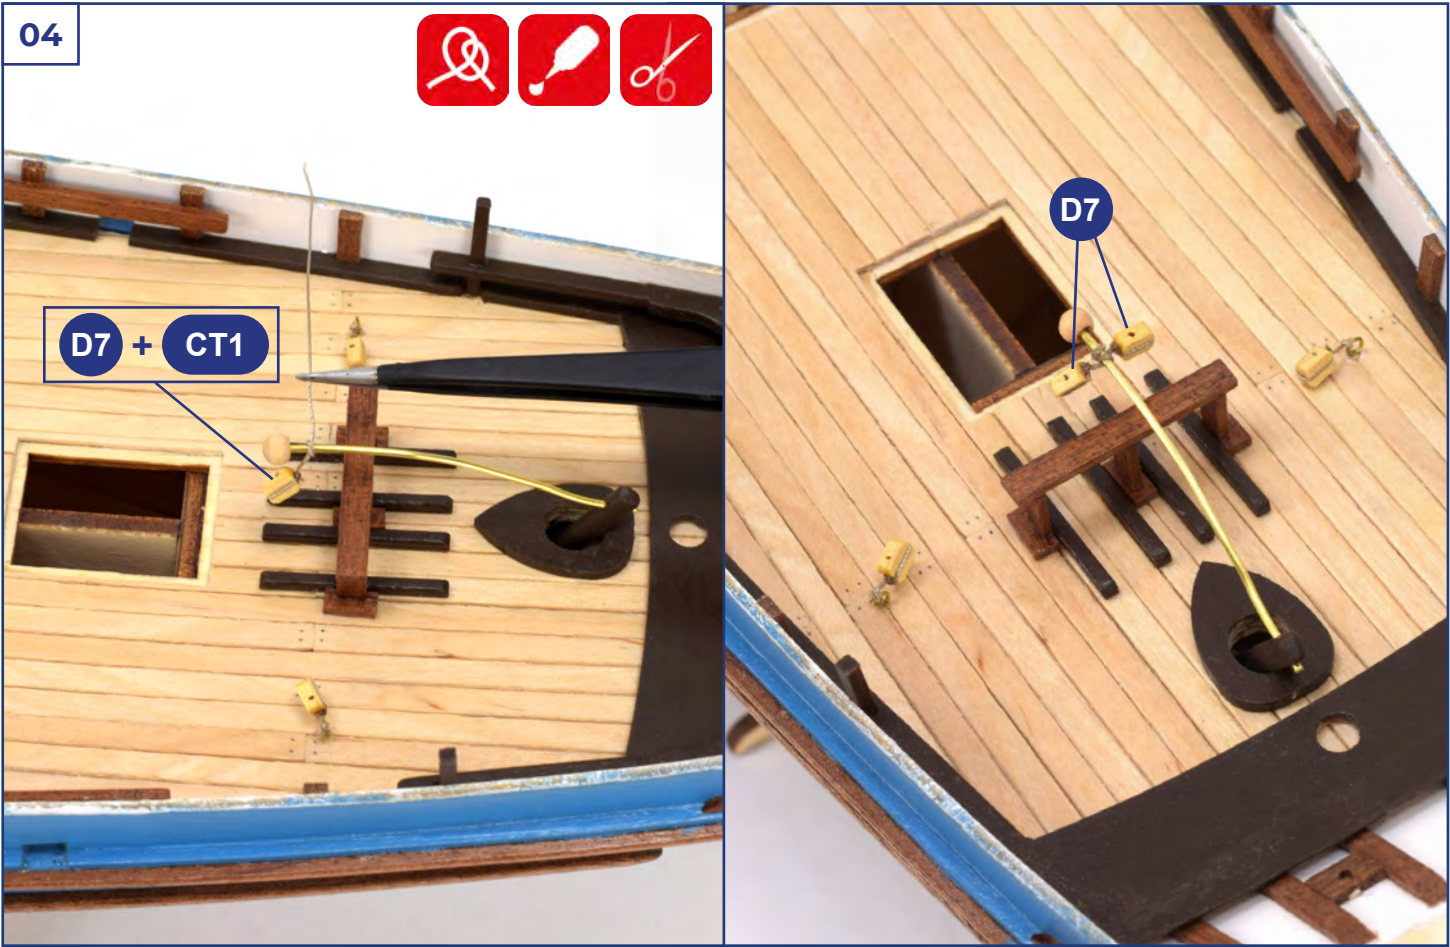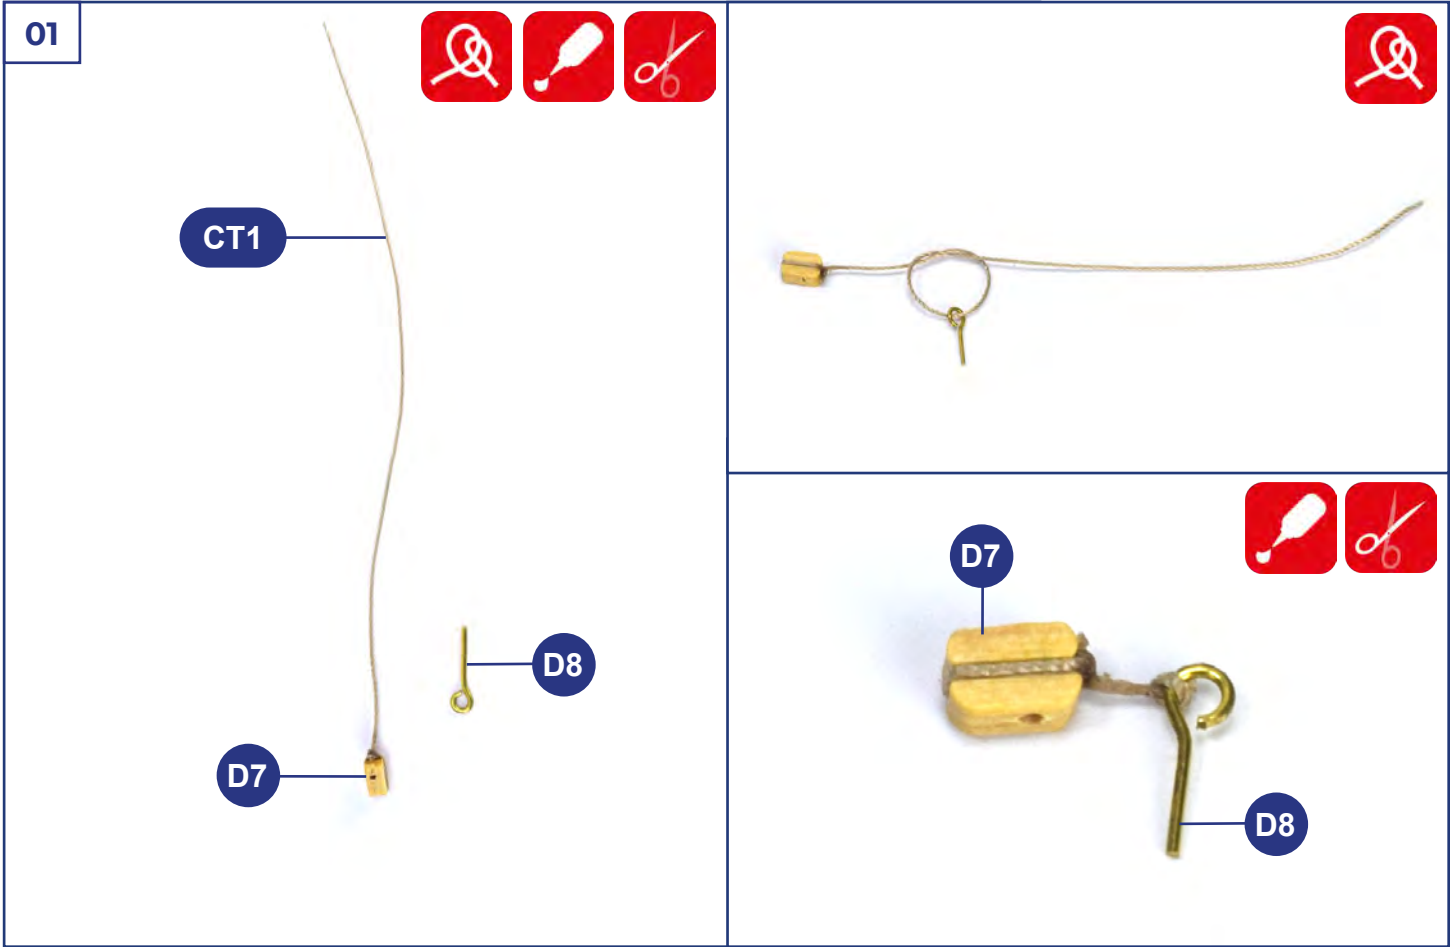

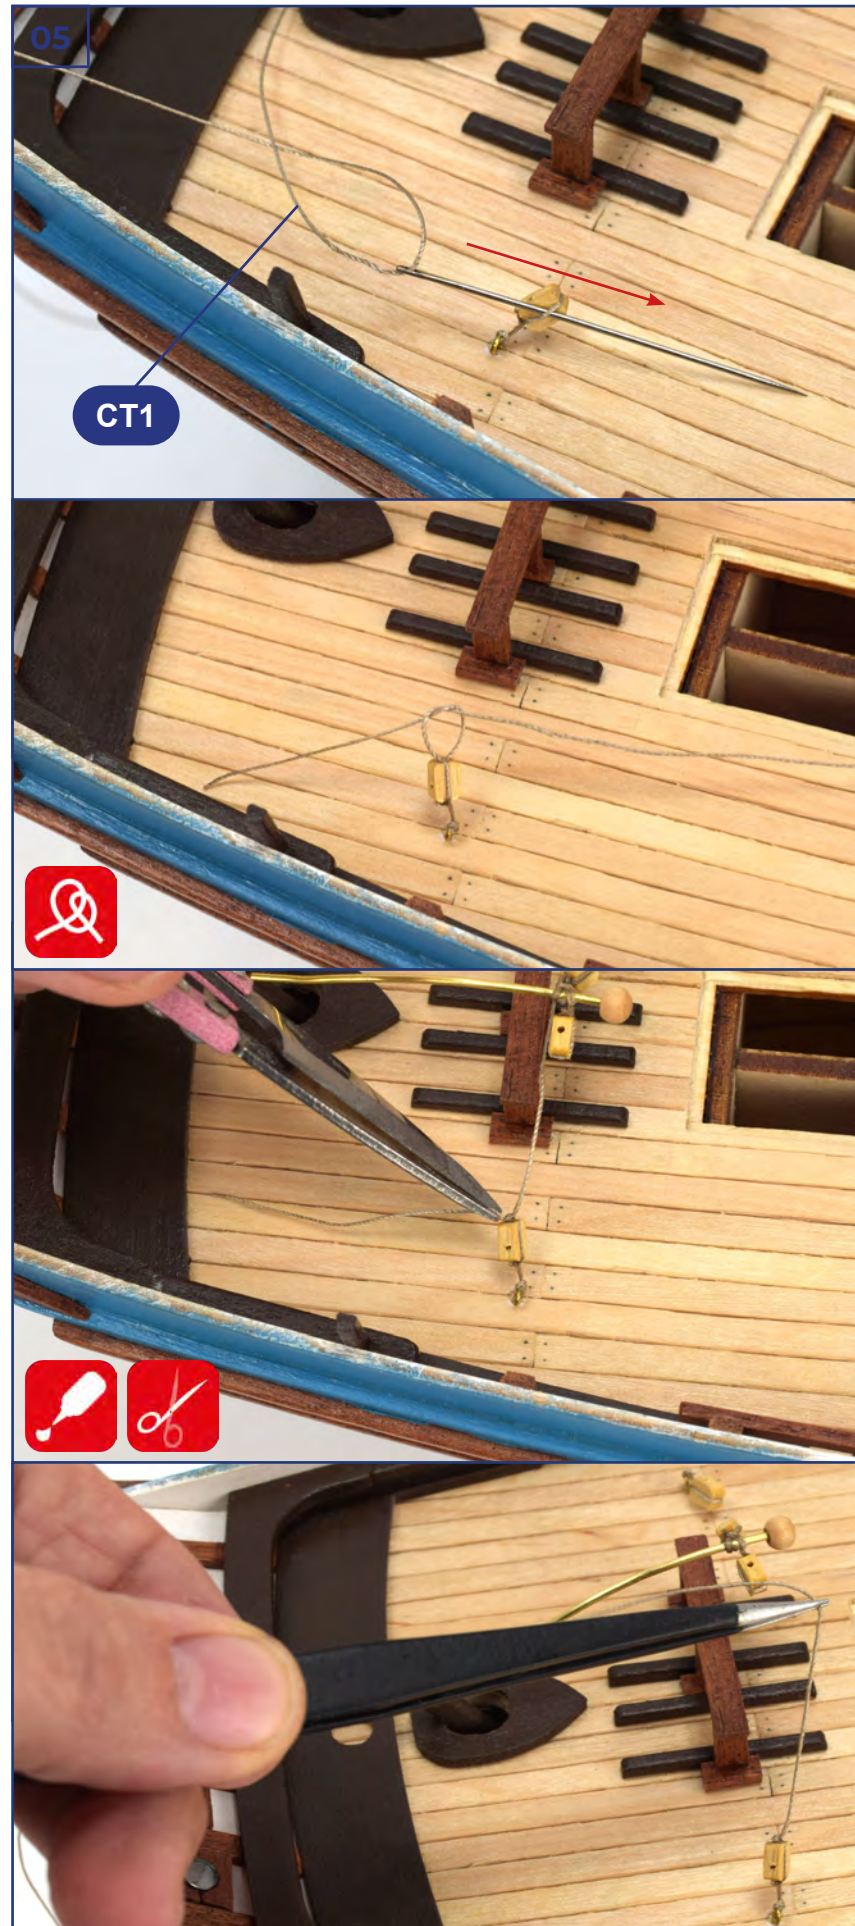

01

101

102

103

100

101

100

101

101

102

90°

90°

02

1

03

WS6

MICROSHAPER B
ref. 27301
Sold separately

WS6

04

WS6

90°

WS6

≈40mm

R

R

a

25mm

33mm

05

36mm

33mm

WS7

90°

90°


b

36mm

36mm

06

R

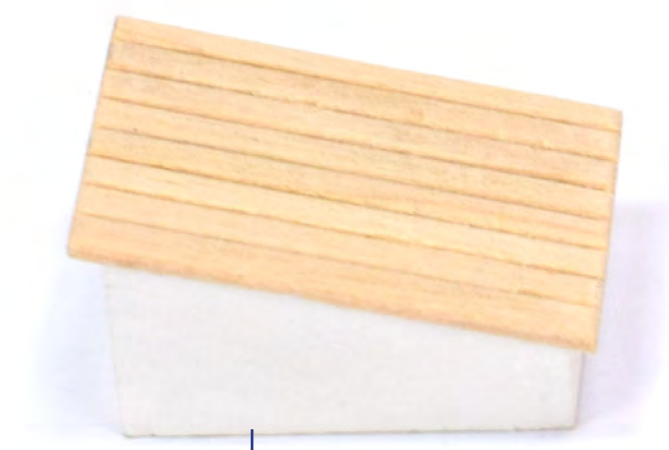

a



b

41mm

41mm

WS6



c

33mm


23mm

WS6

$c = 96 + 97 + 98$

07



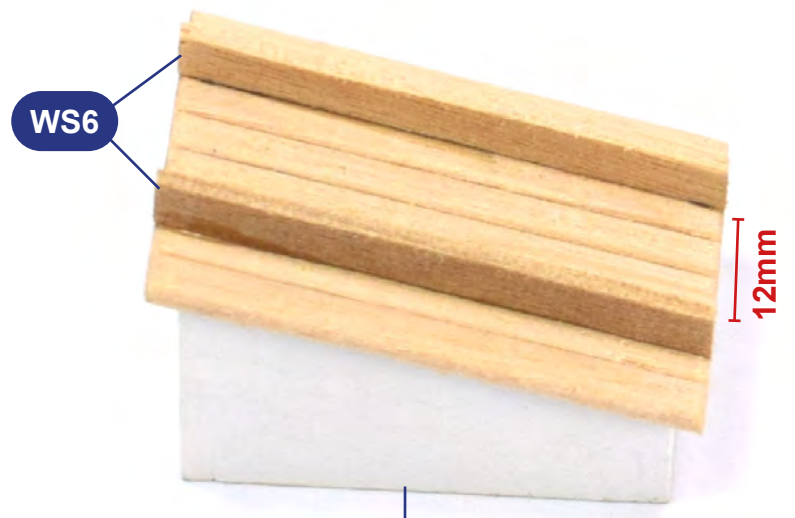

a

WS6

12mm



b

WS6

18mm



c


WS6

12mm

08



4

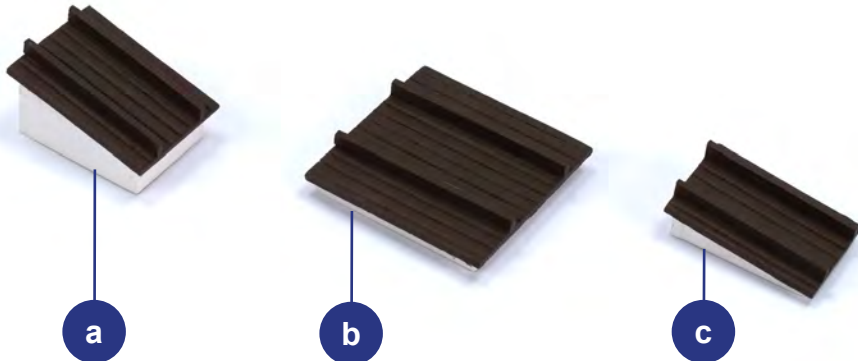


a

b

c

R

09

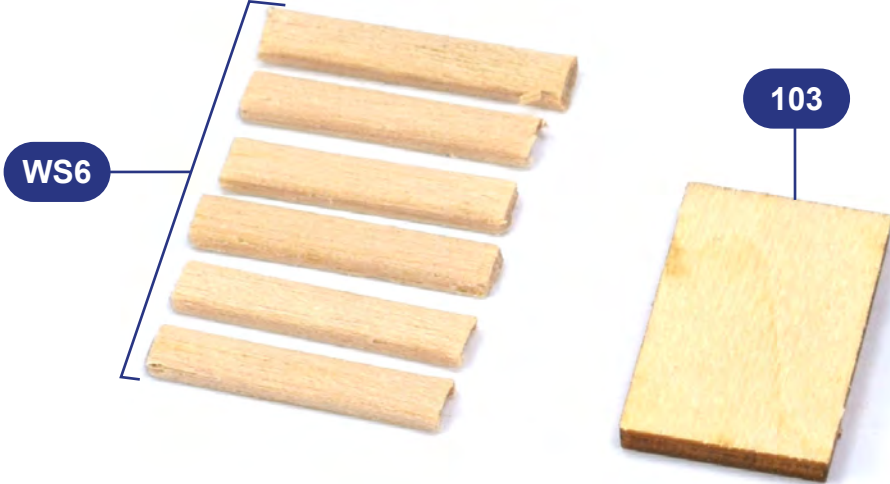

WS6

103

10



15x15mm

22x15mm


15x15mm

103 + WS6

99 + WS6


95 + WS6

R

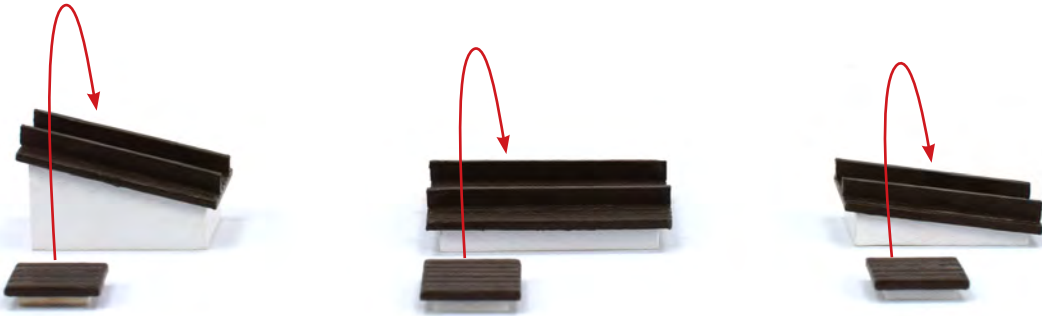

4

11

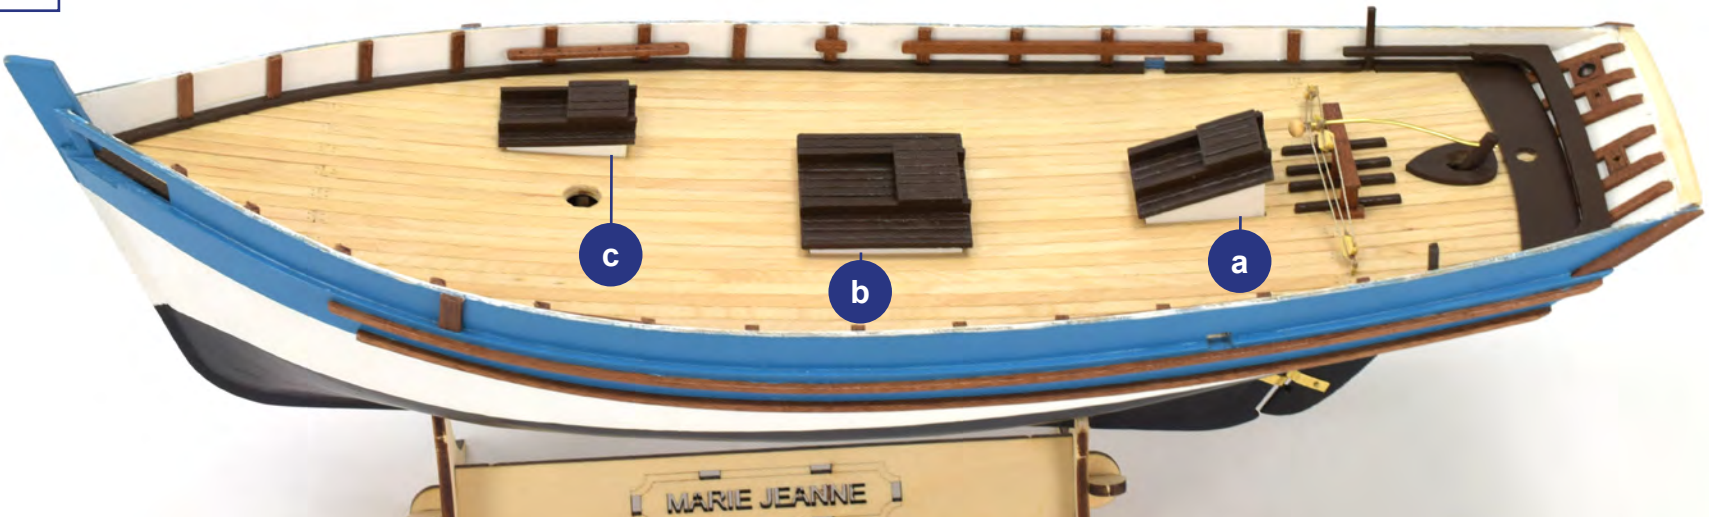

a

b

c

MARIE JEANNE



MARIE JEANNE


12










4










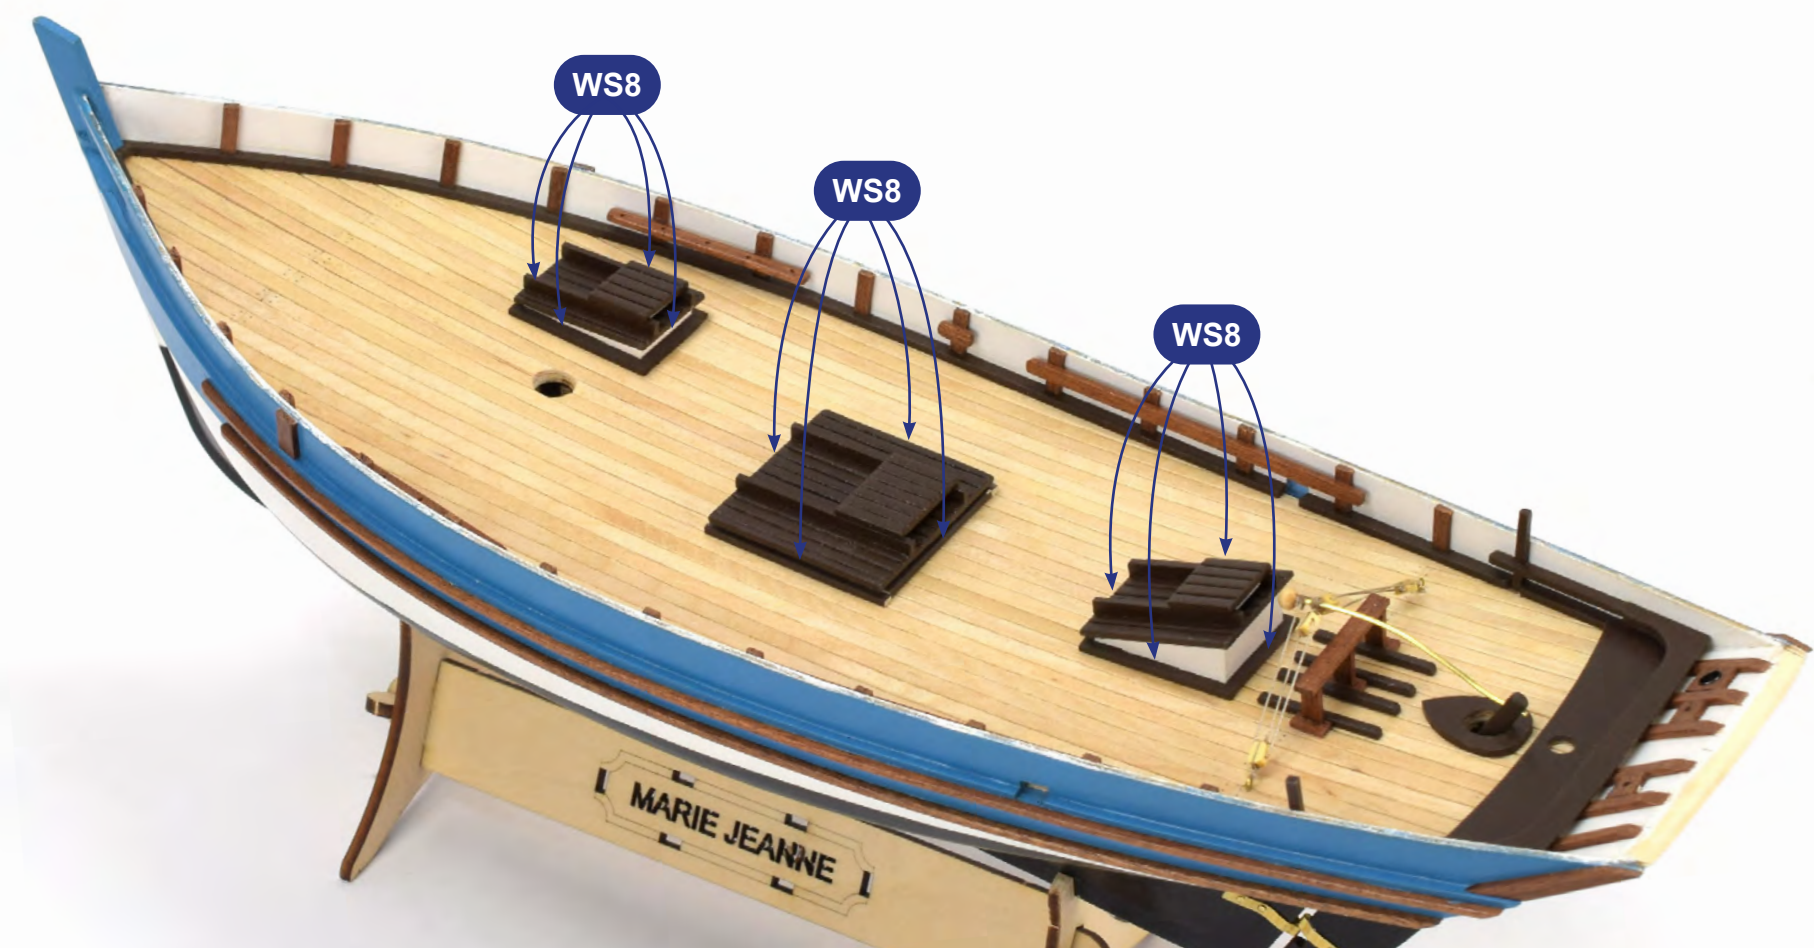

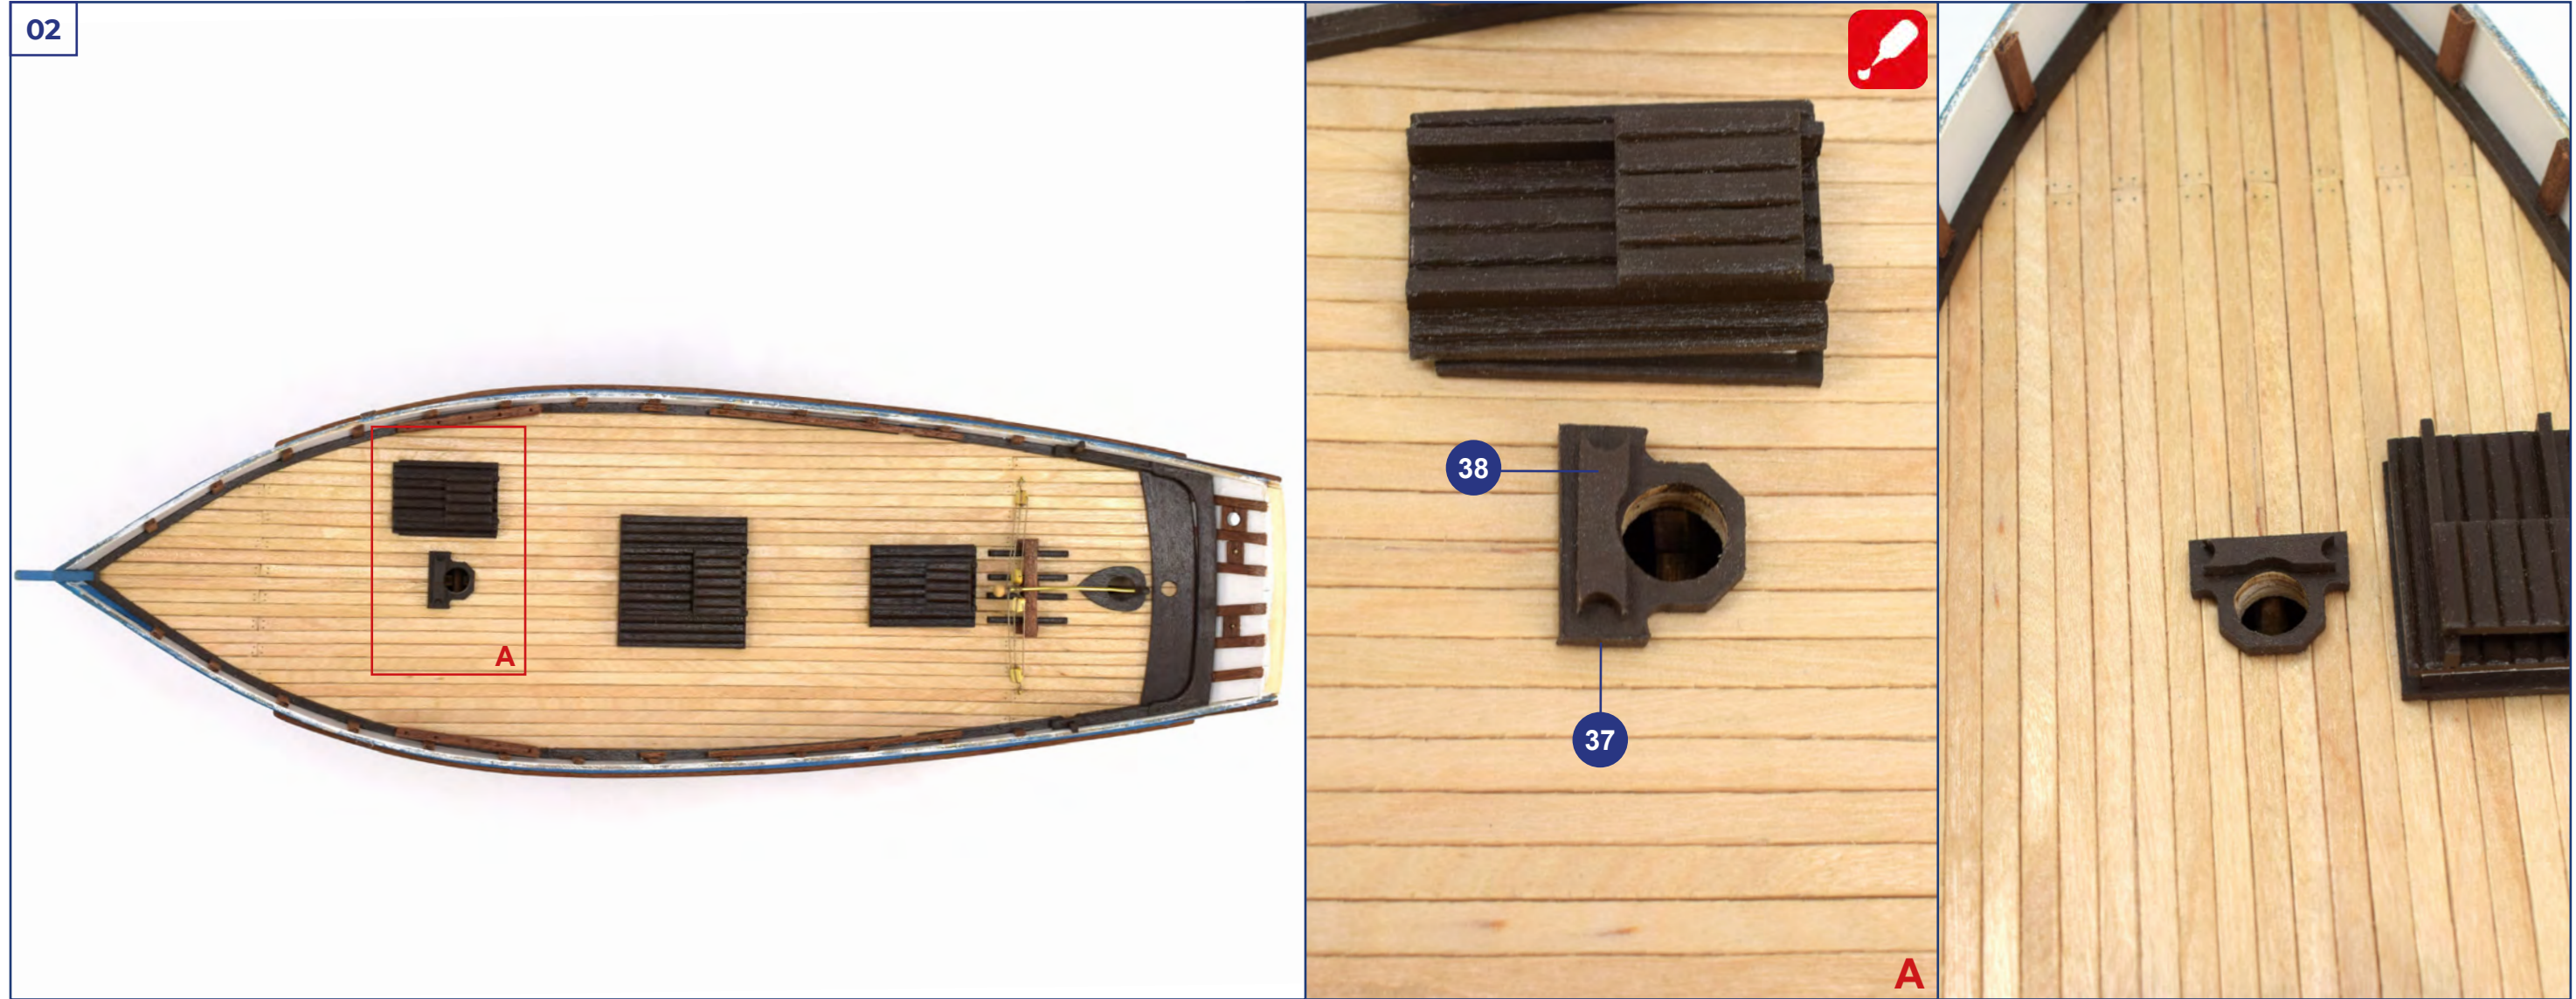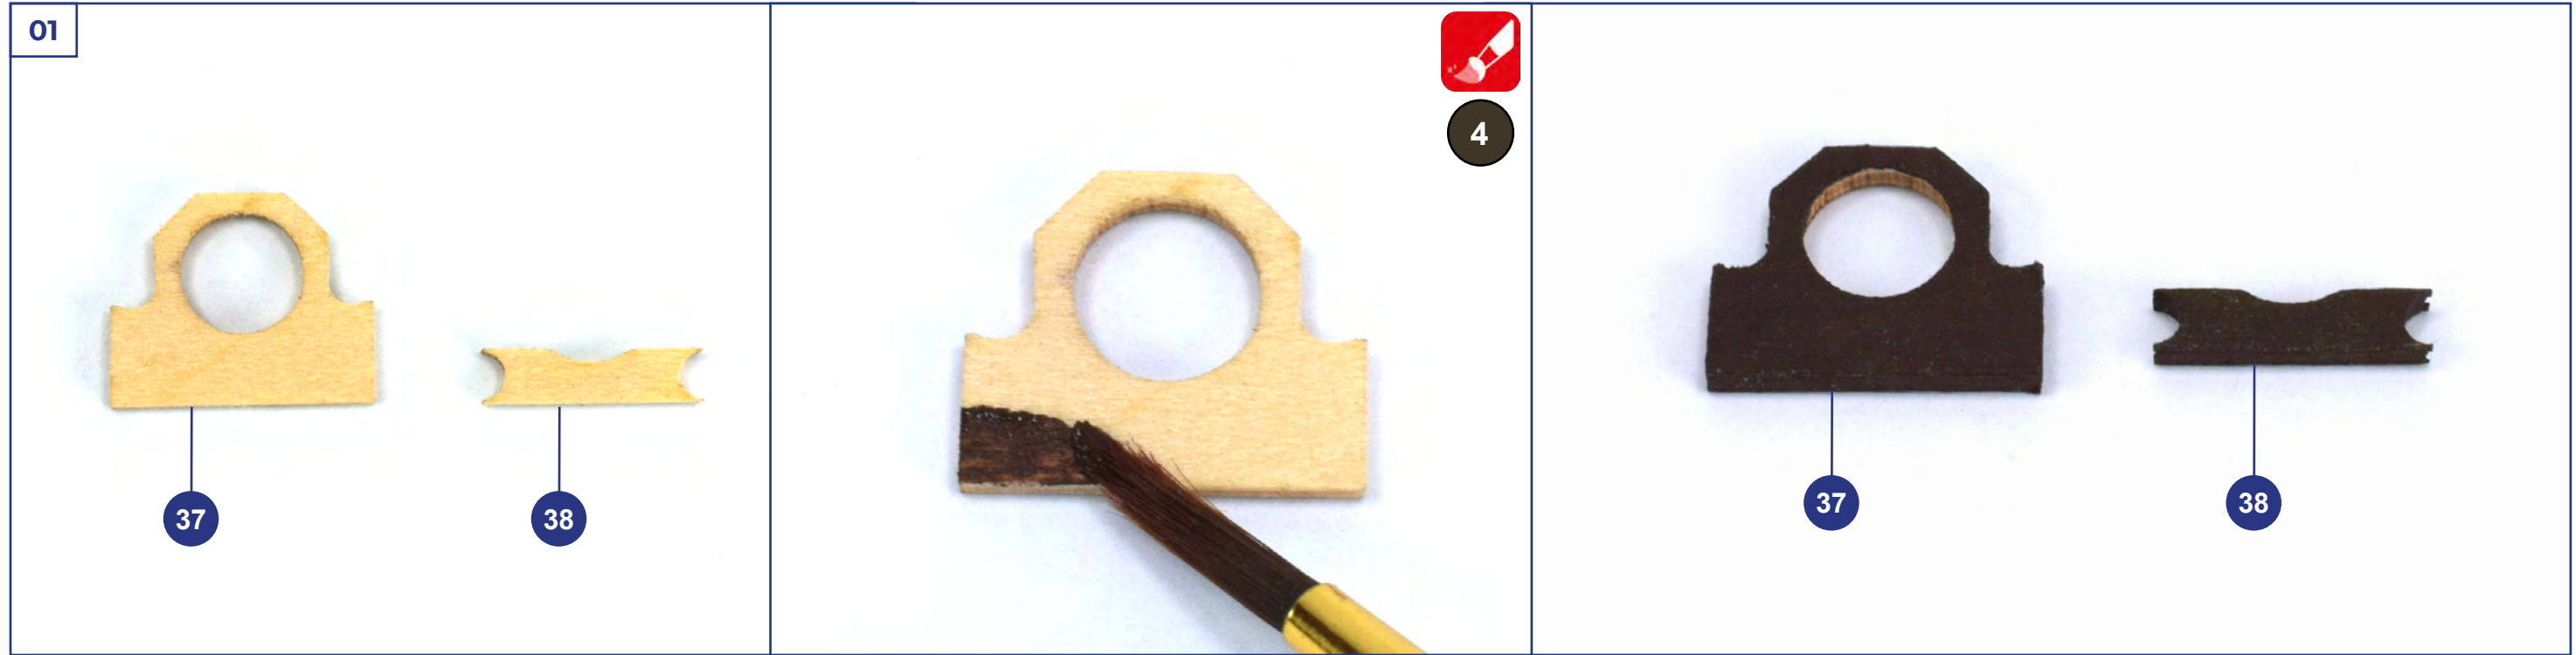

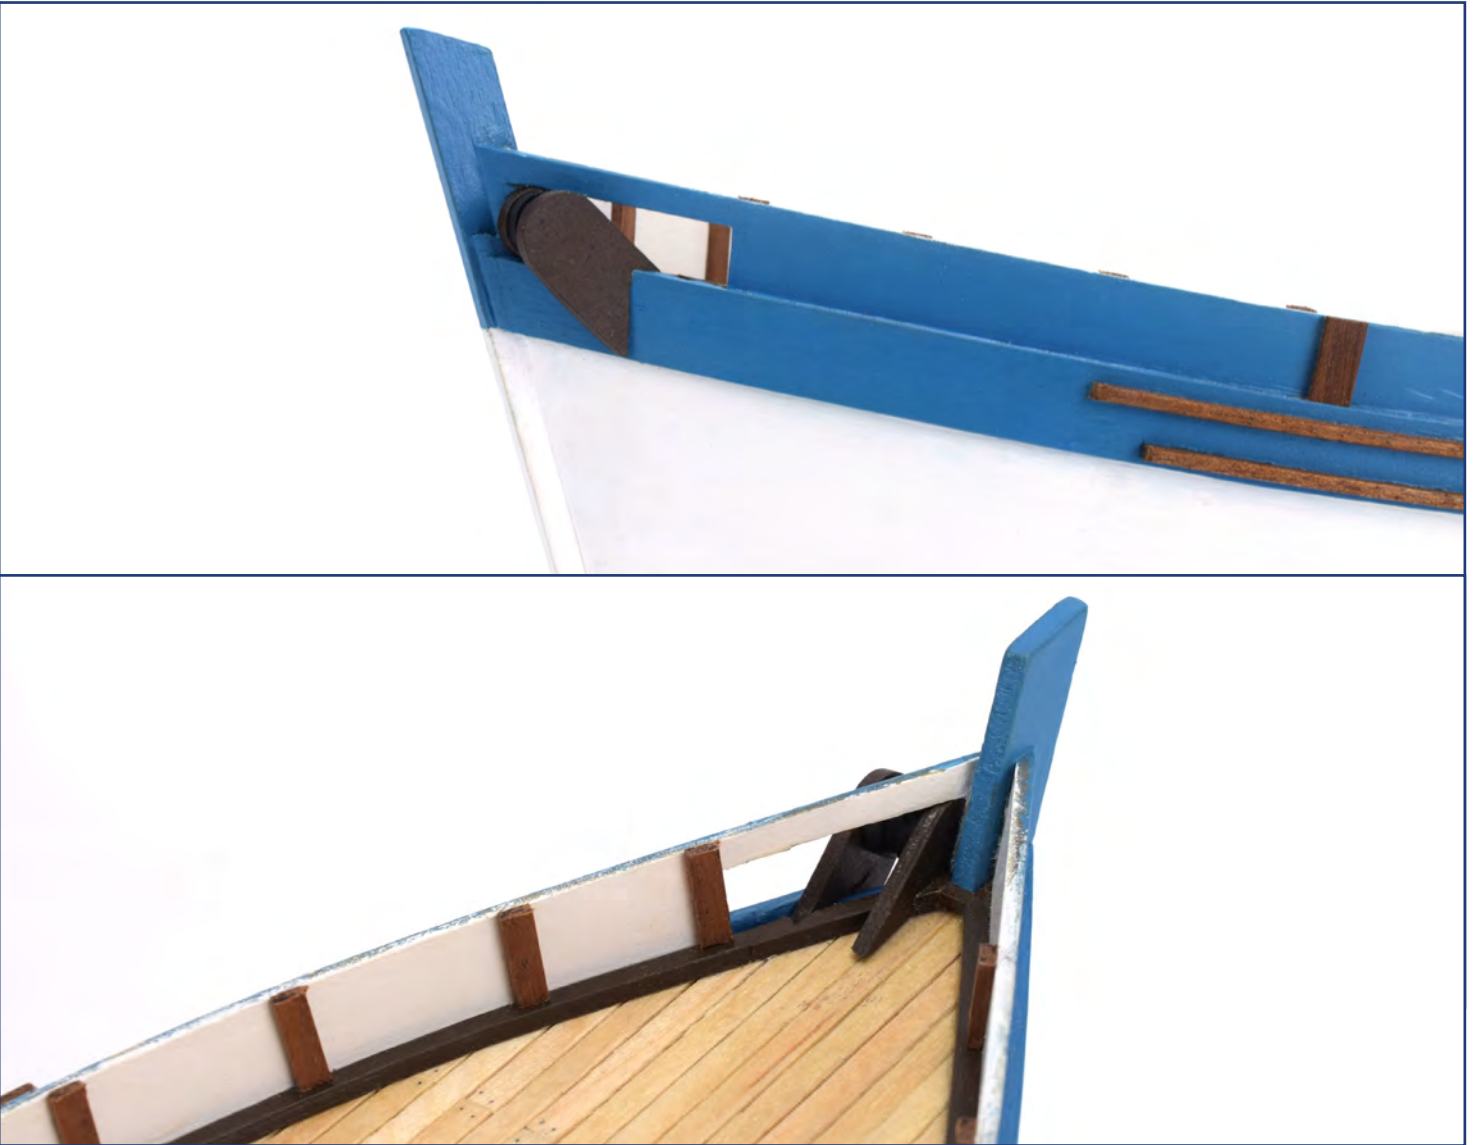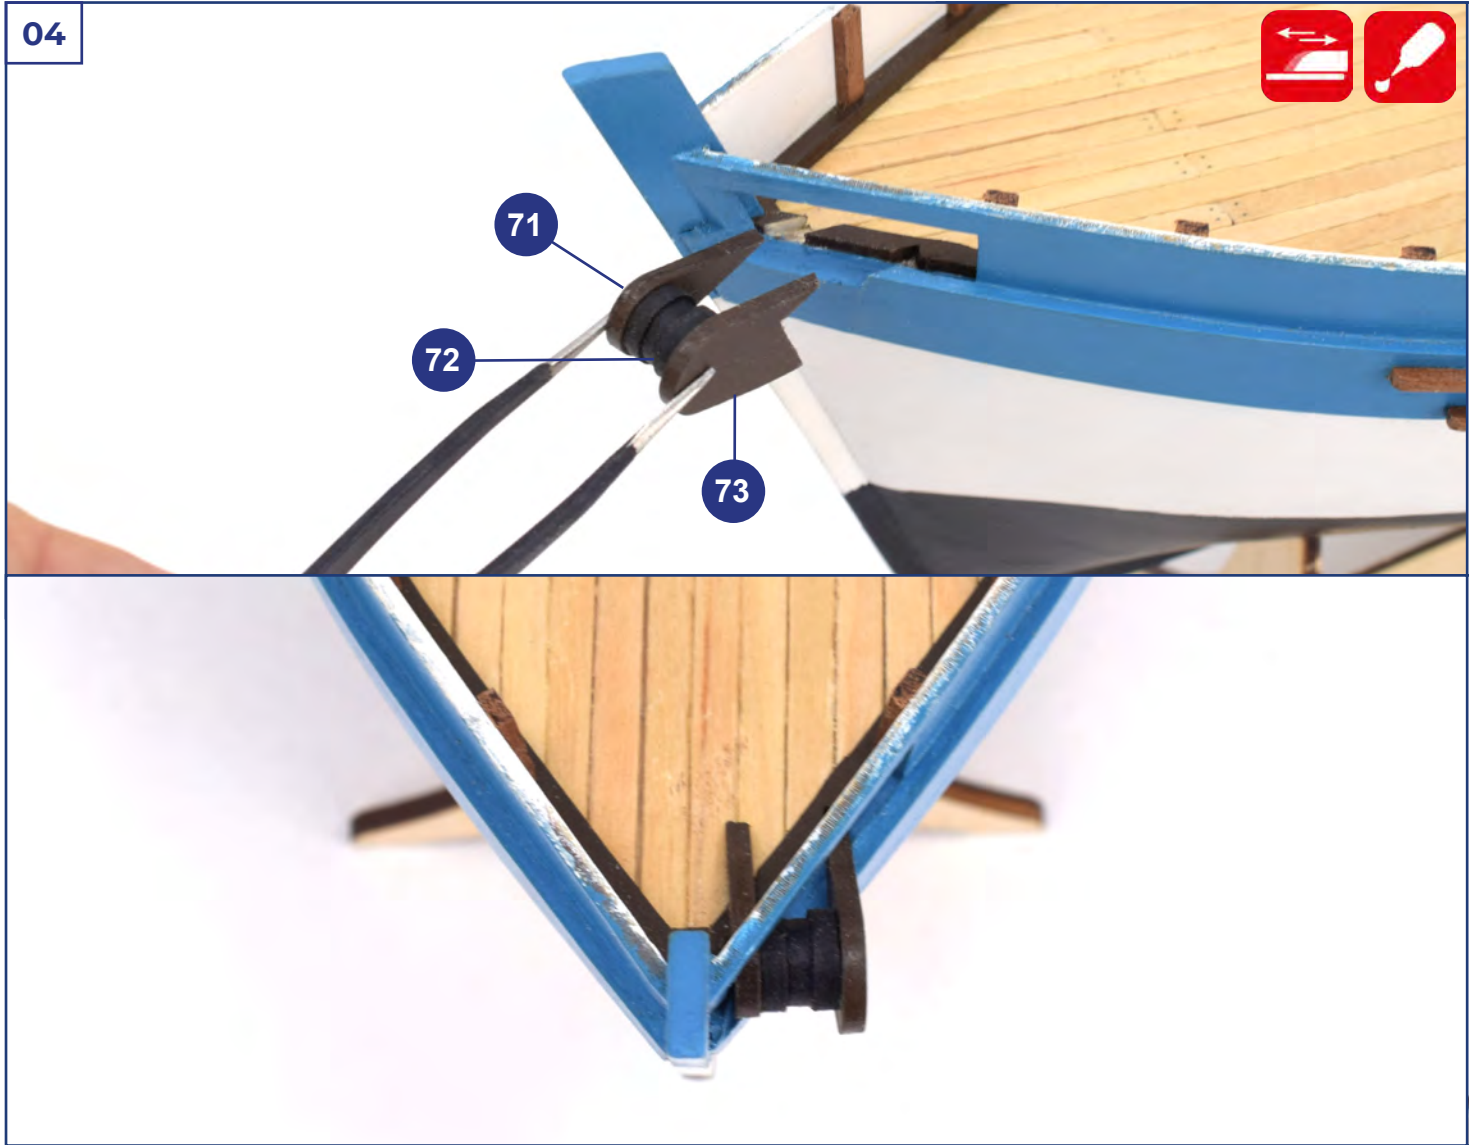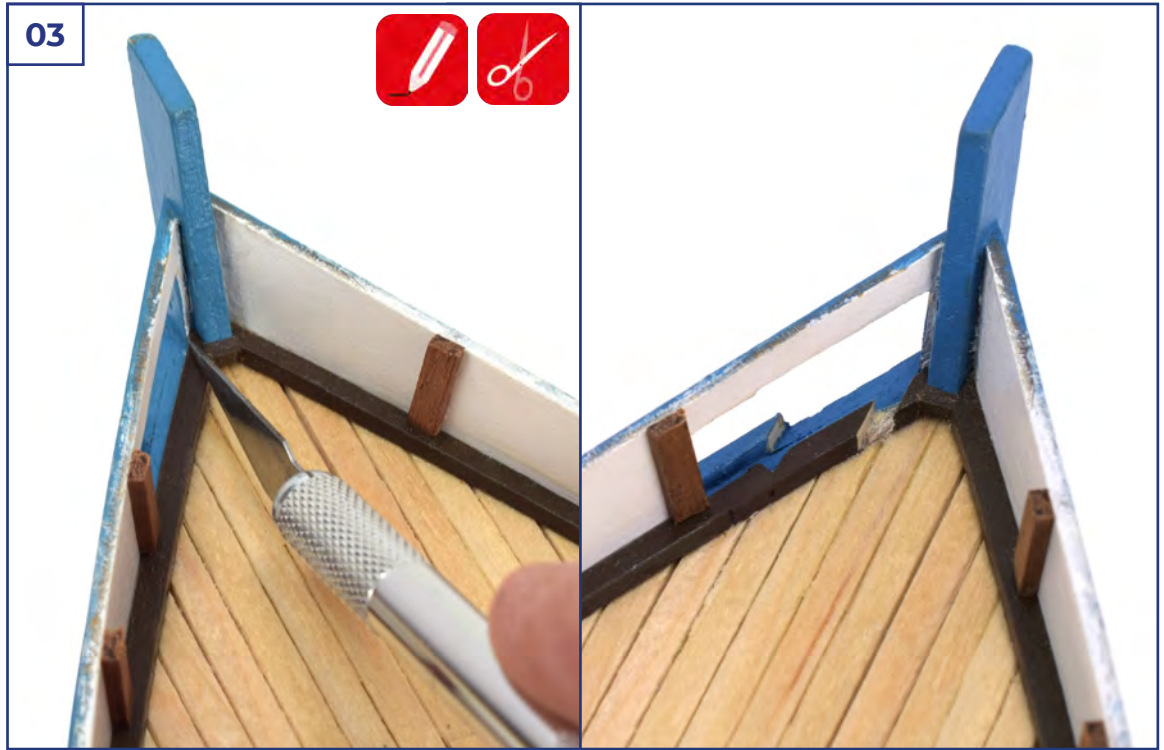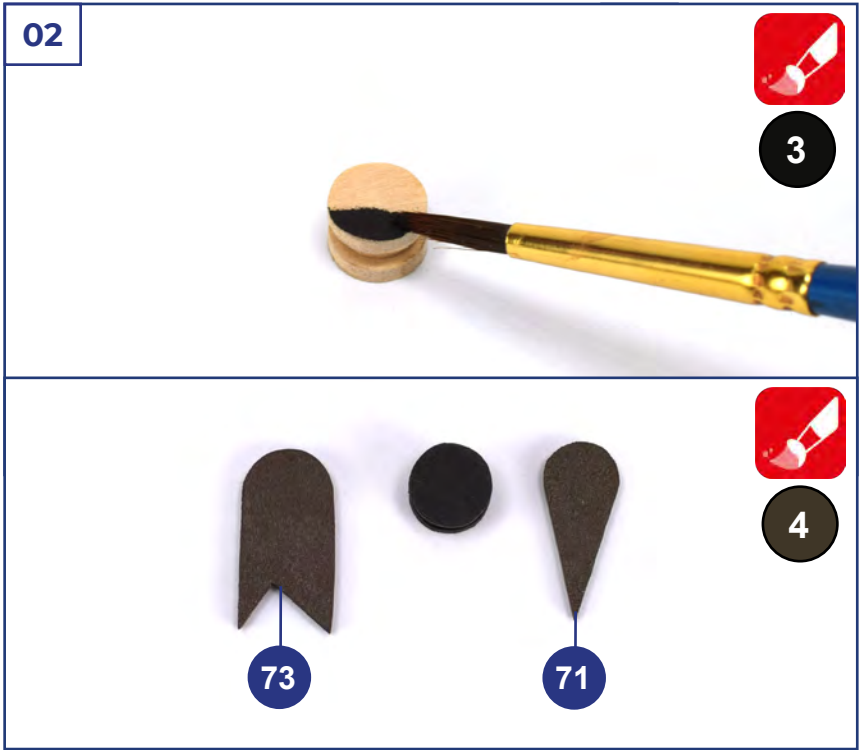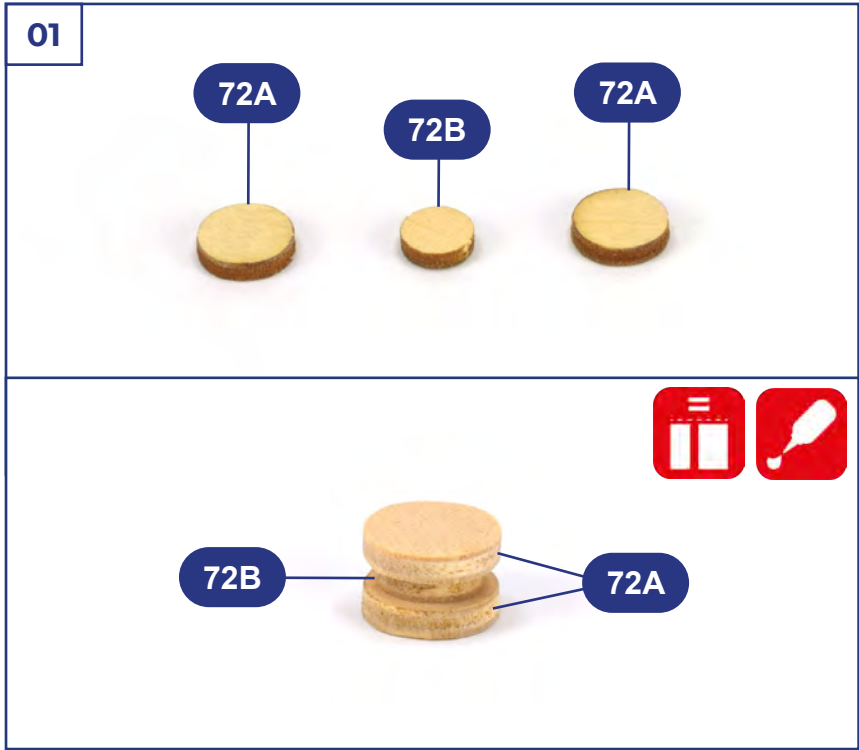


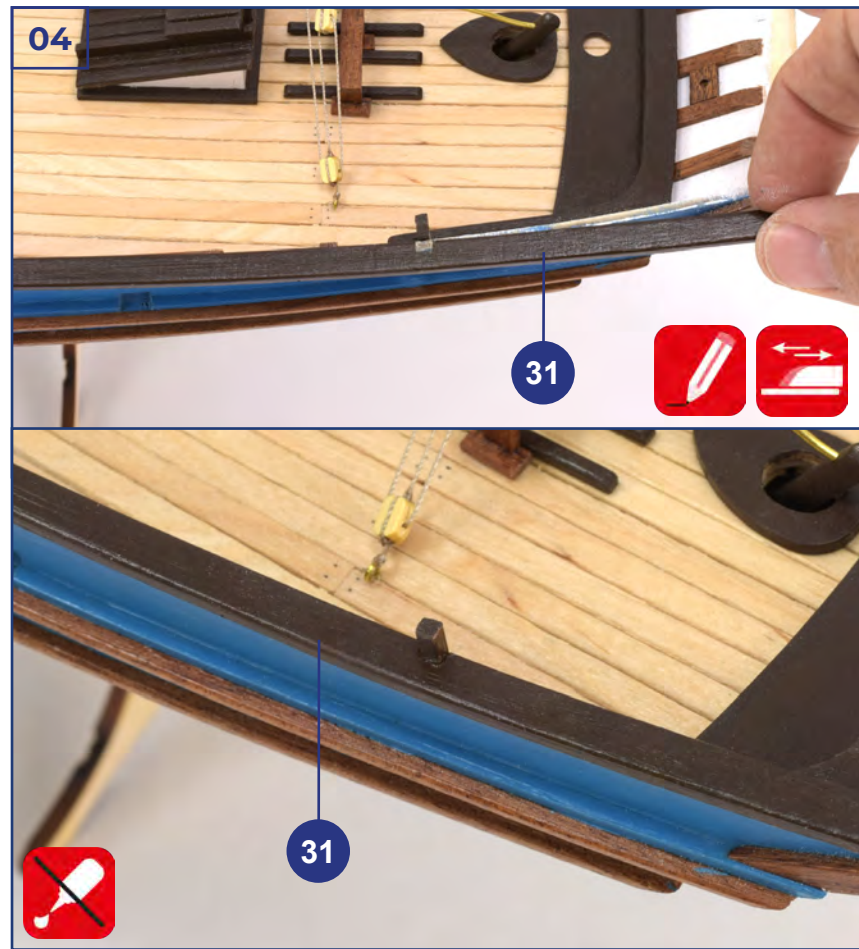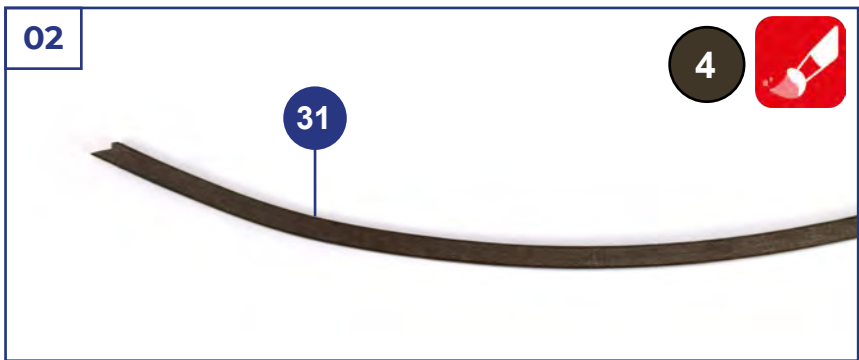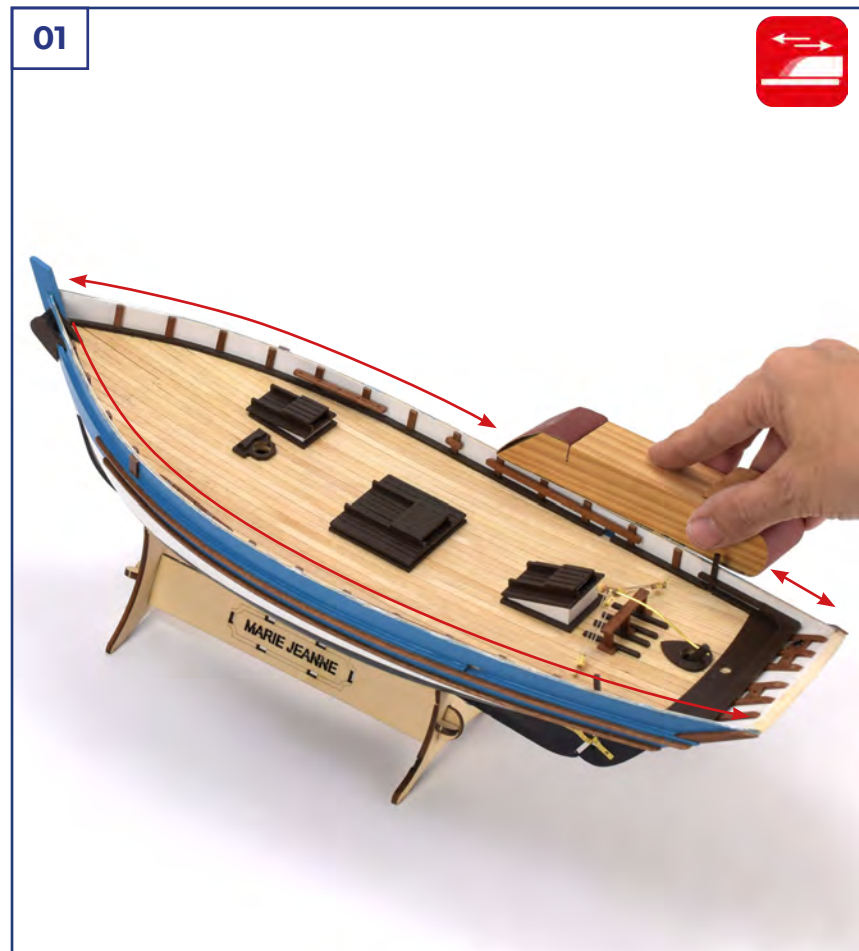

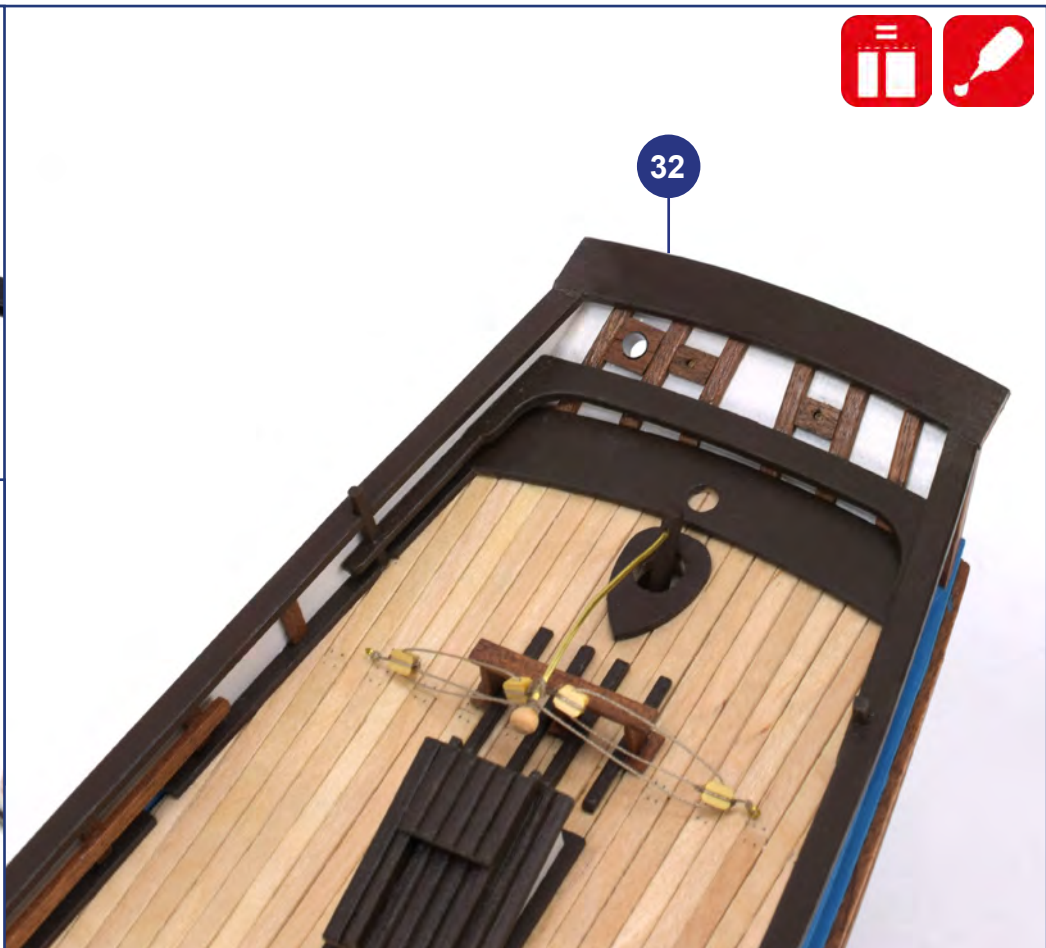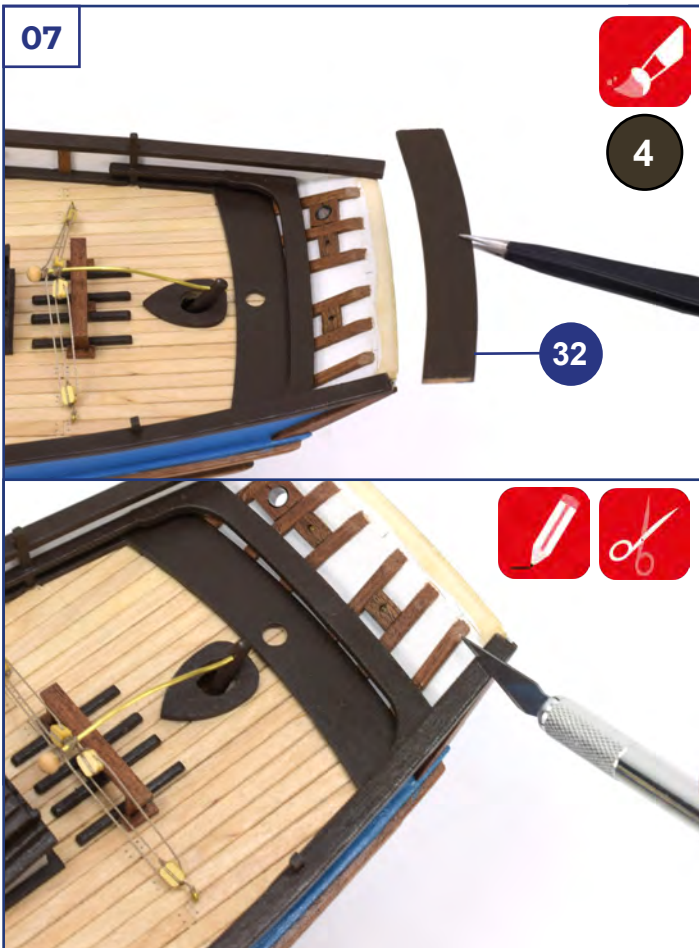

01

P5

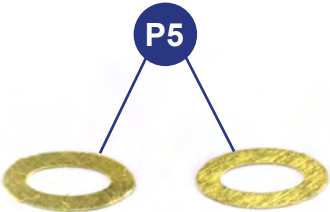




02




P5


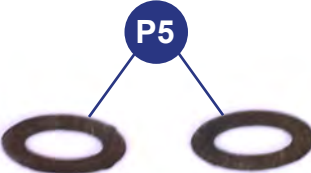


95

03

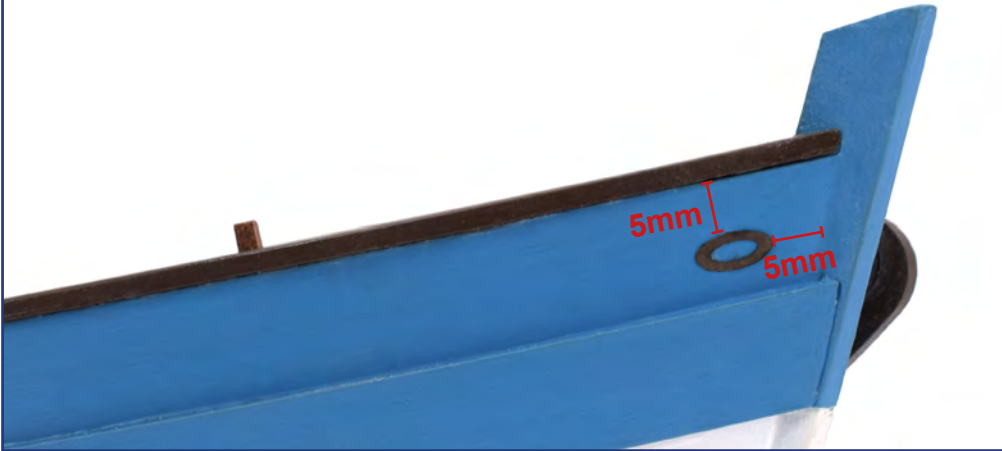

04

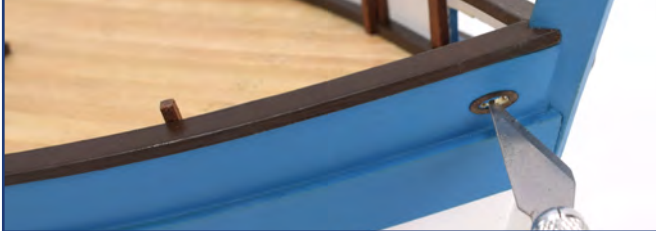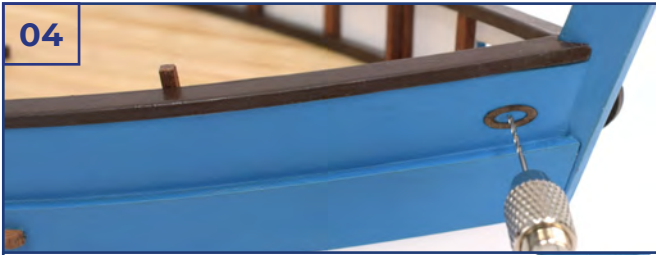





05



06



3

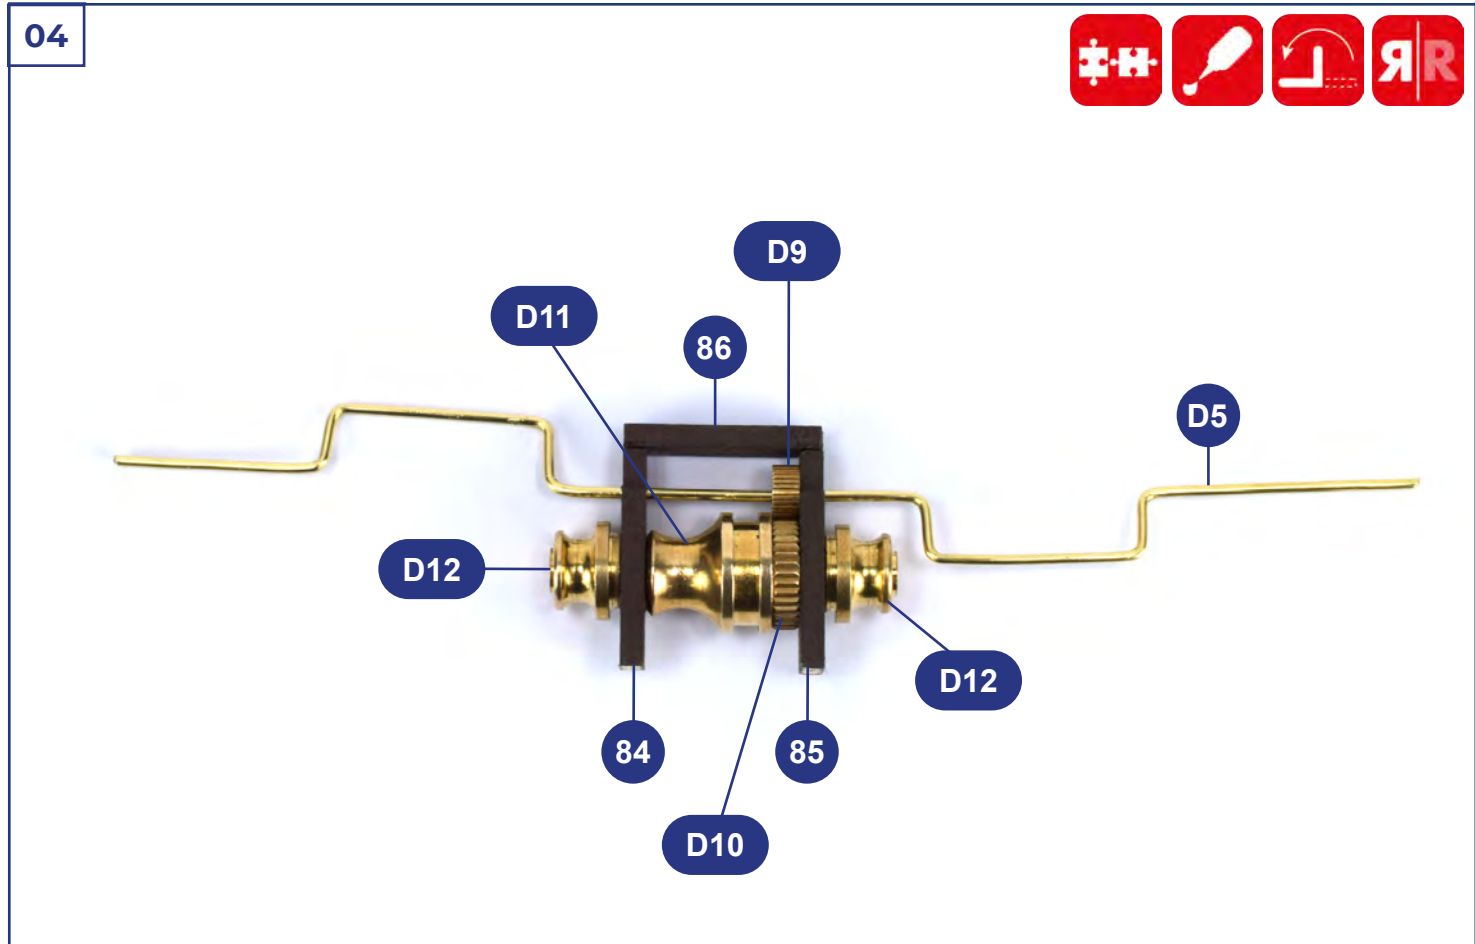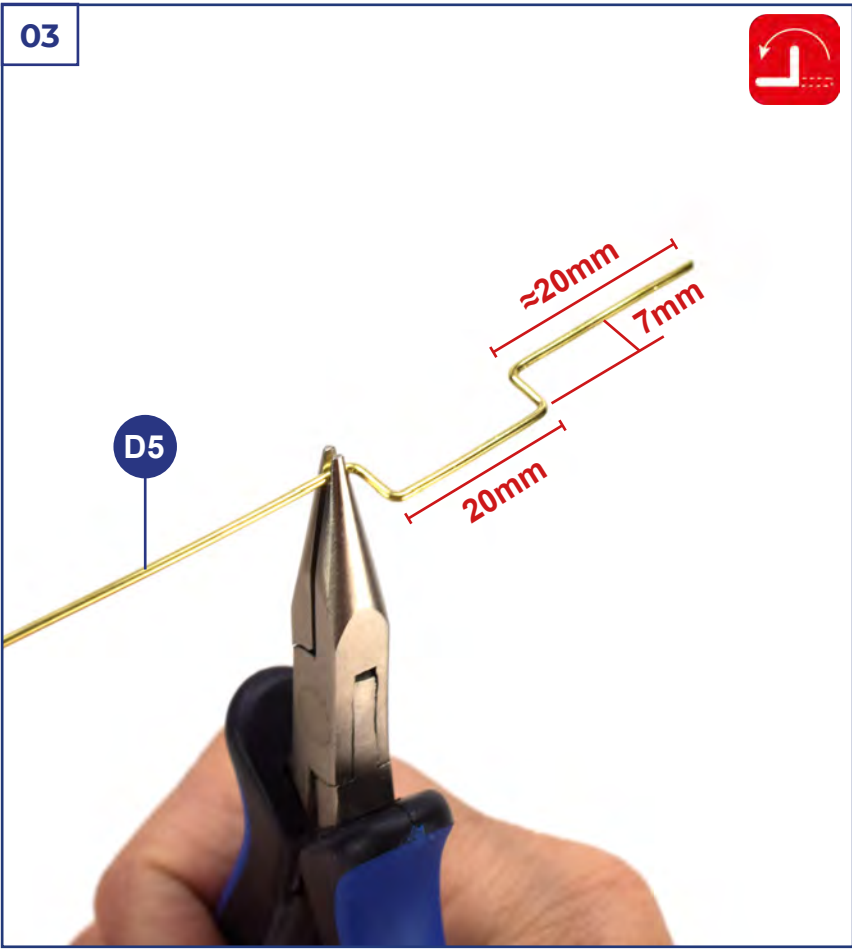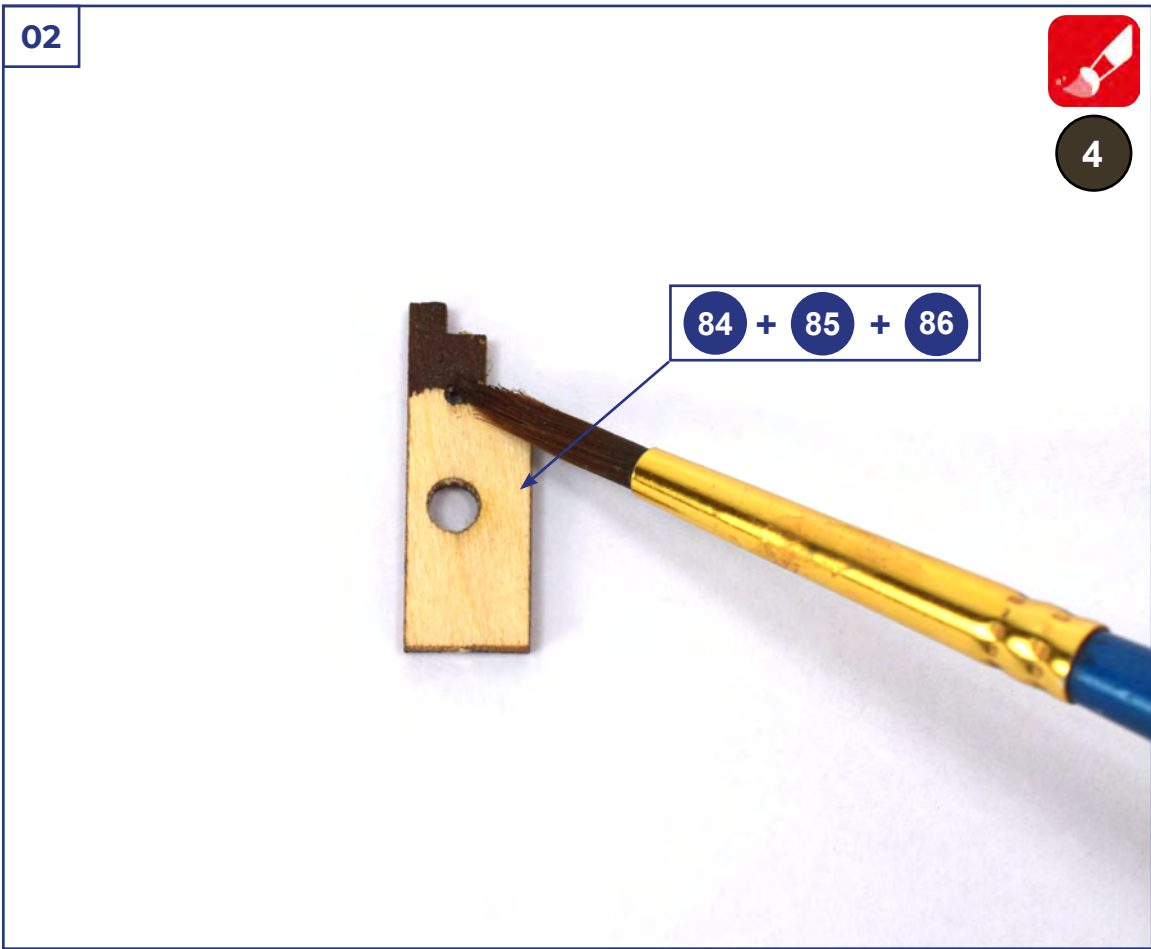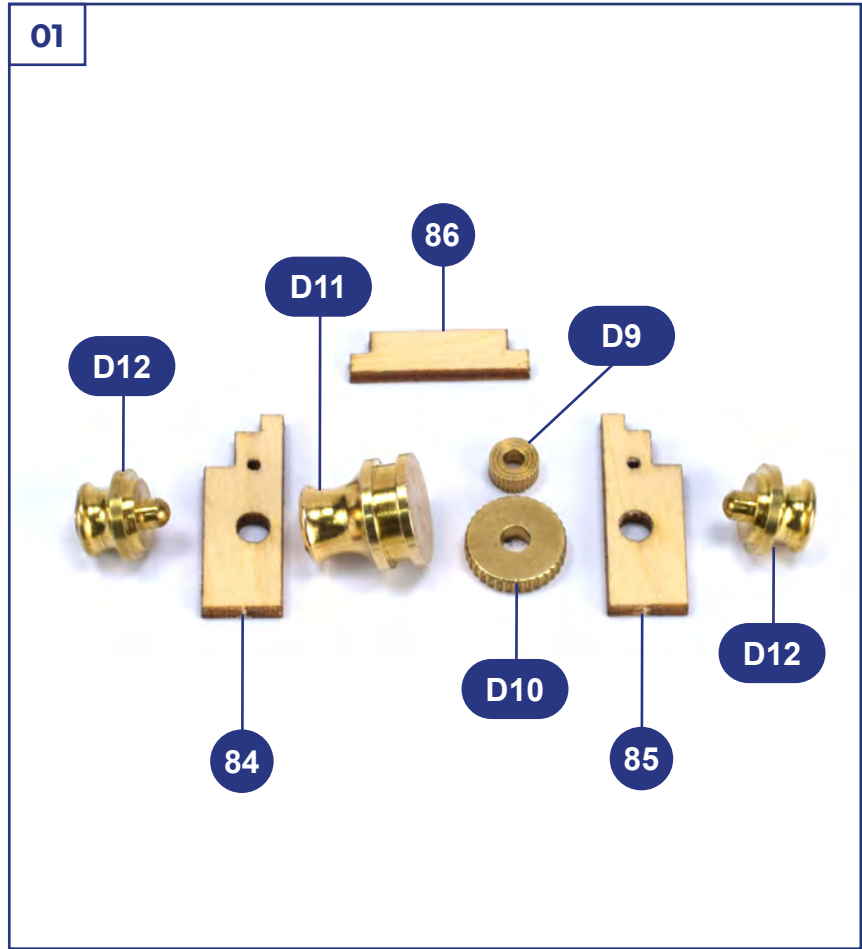

05



06



Ø0,5mm




D8




D8

07

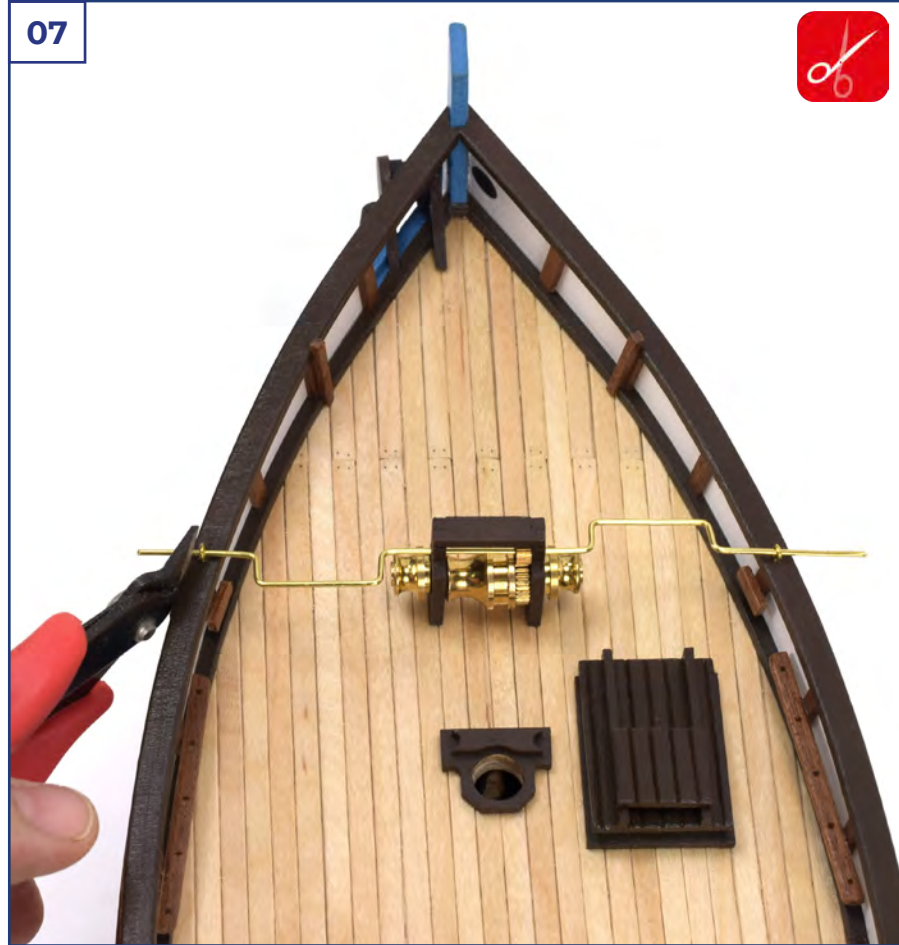

D8

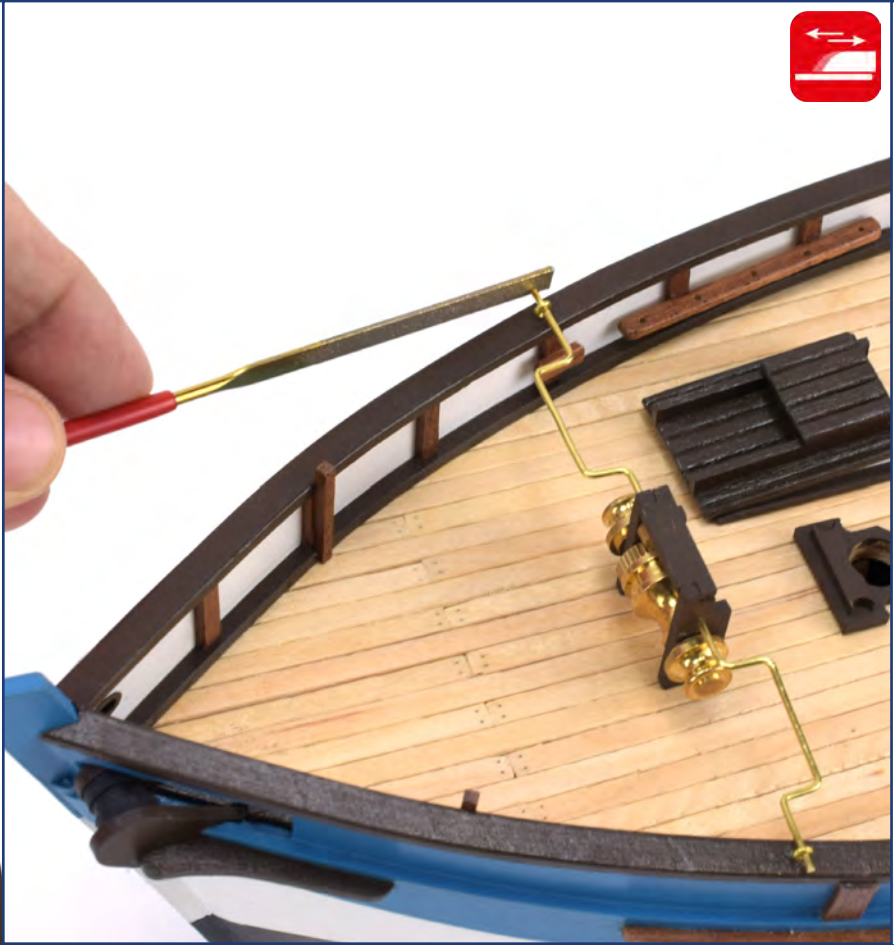


D8



D8

01

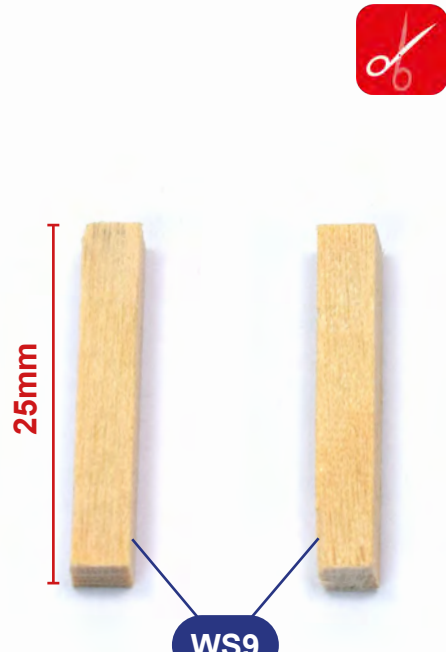

25mm

WS9


02




WS9



03

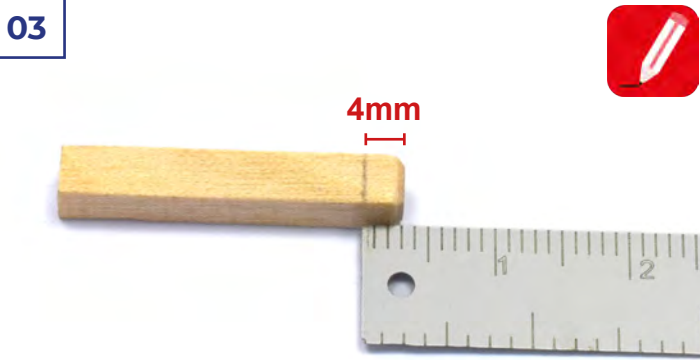

4mm

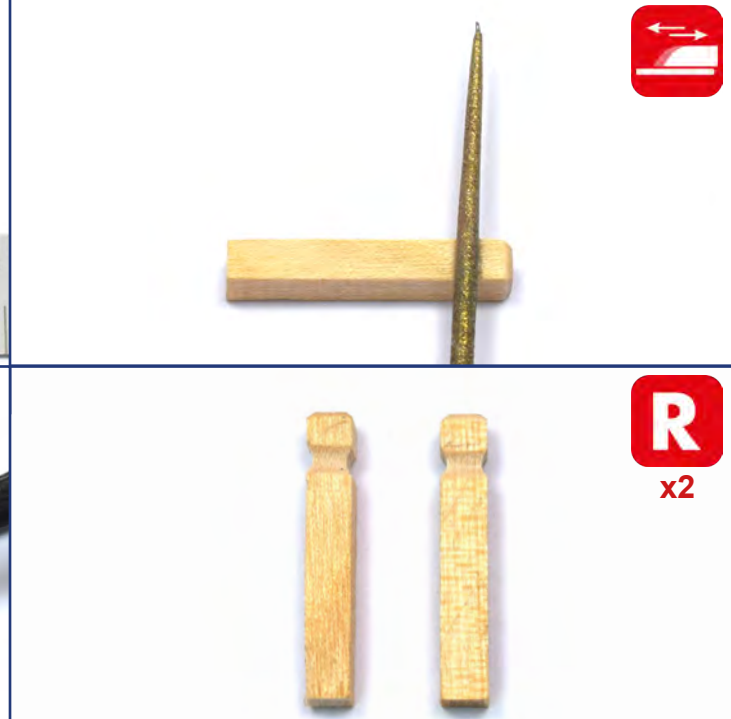

R
x2

04



90




WS9

05

Ø5mm → Ø3mm

90 00

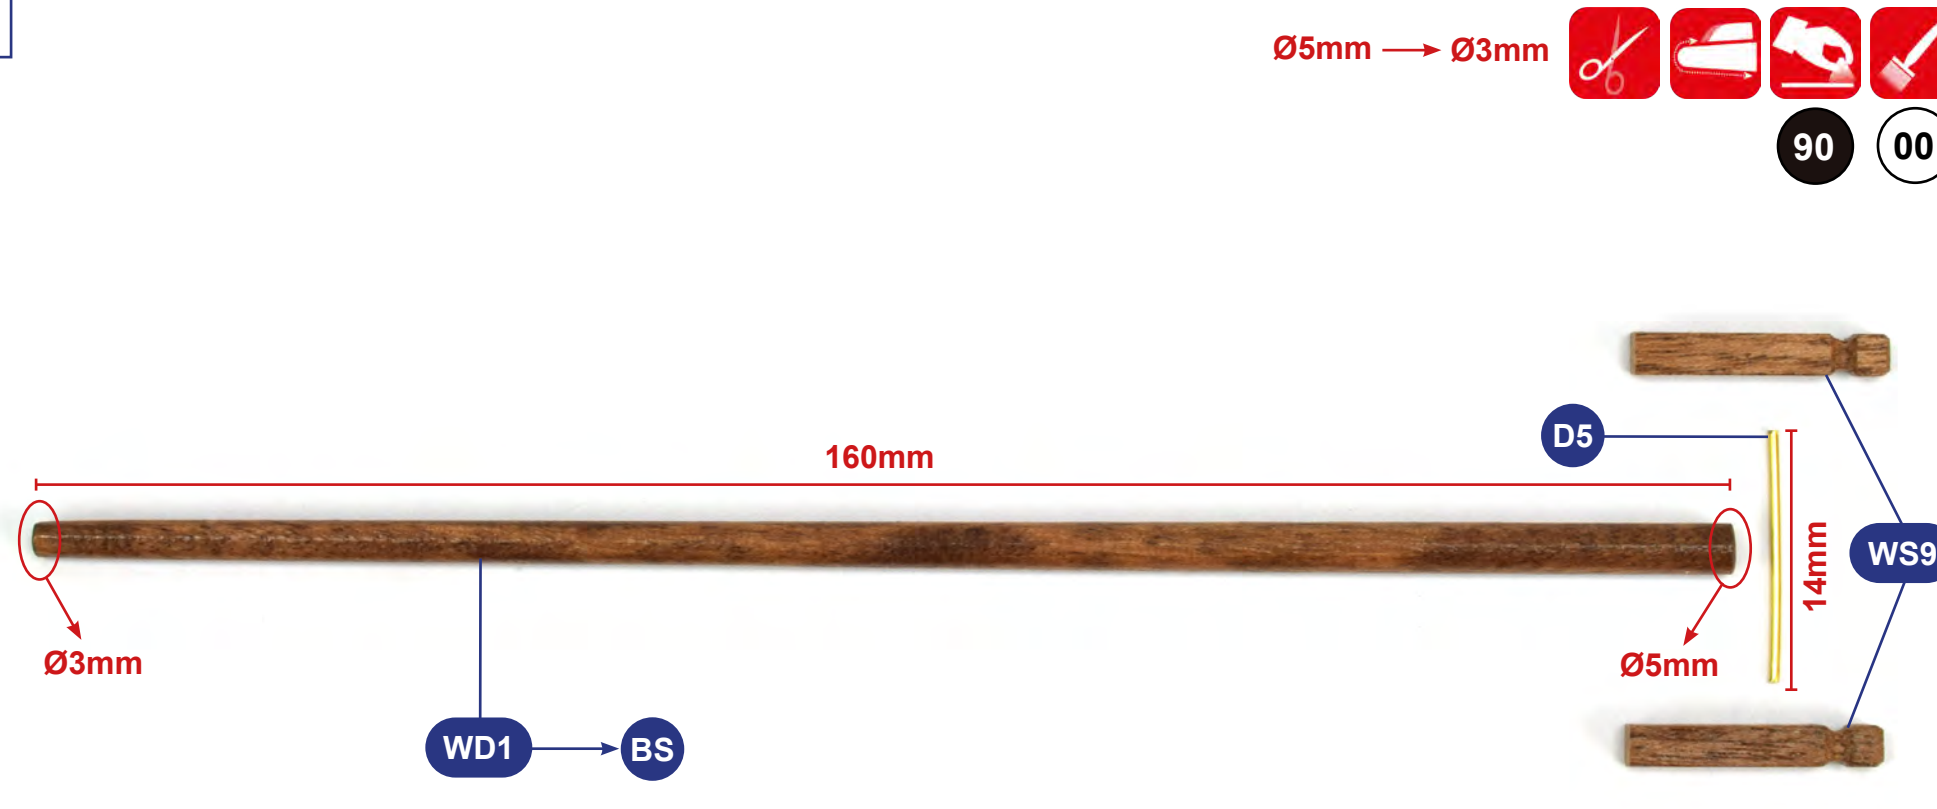

160mm

Ø3mm




WD1 → BS

D5

WS9

14mm

Ø5mm

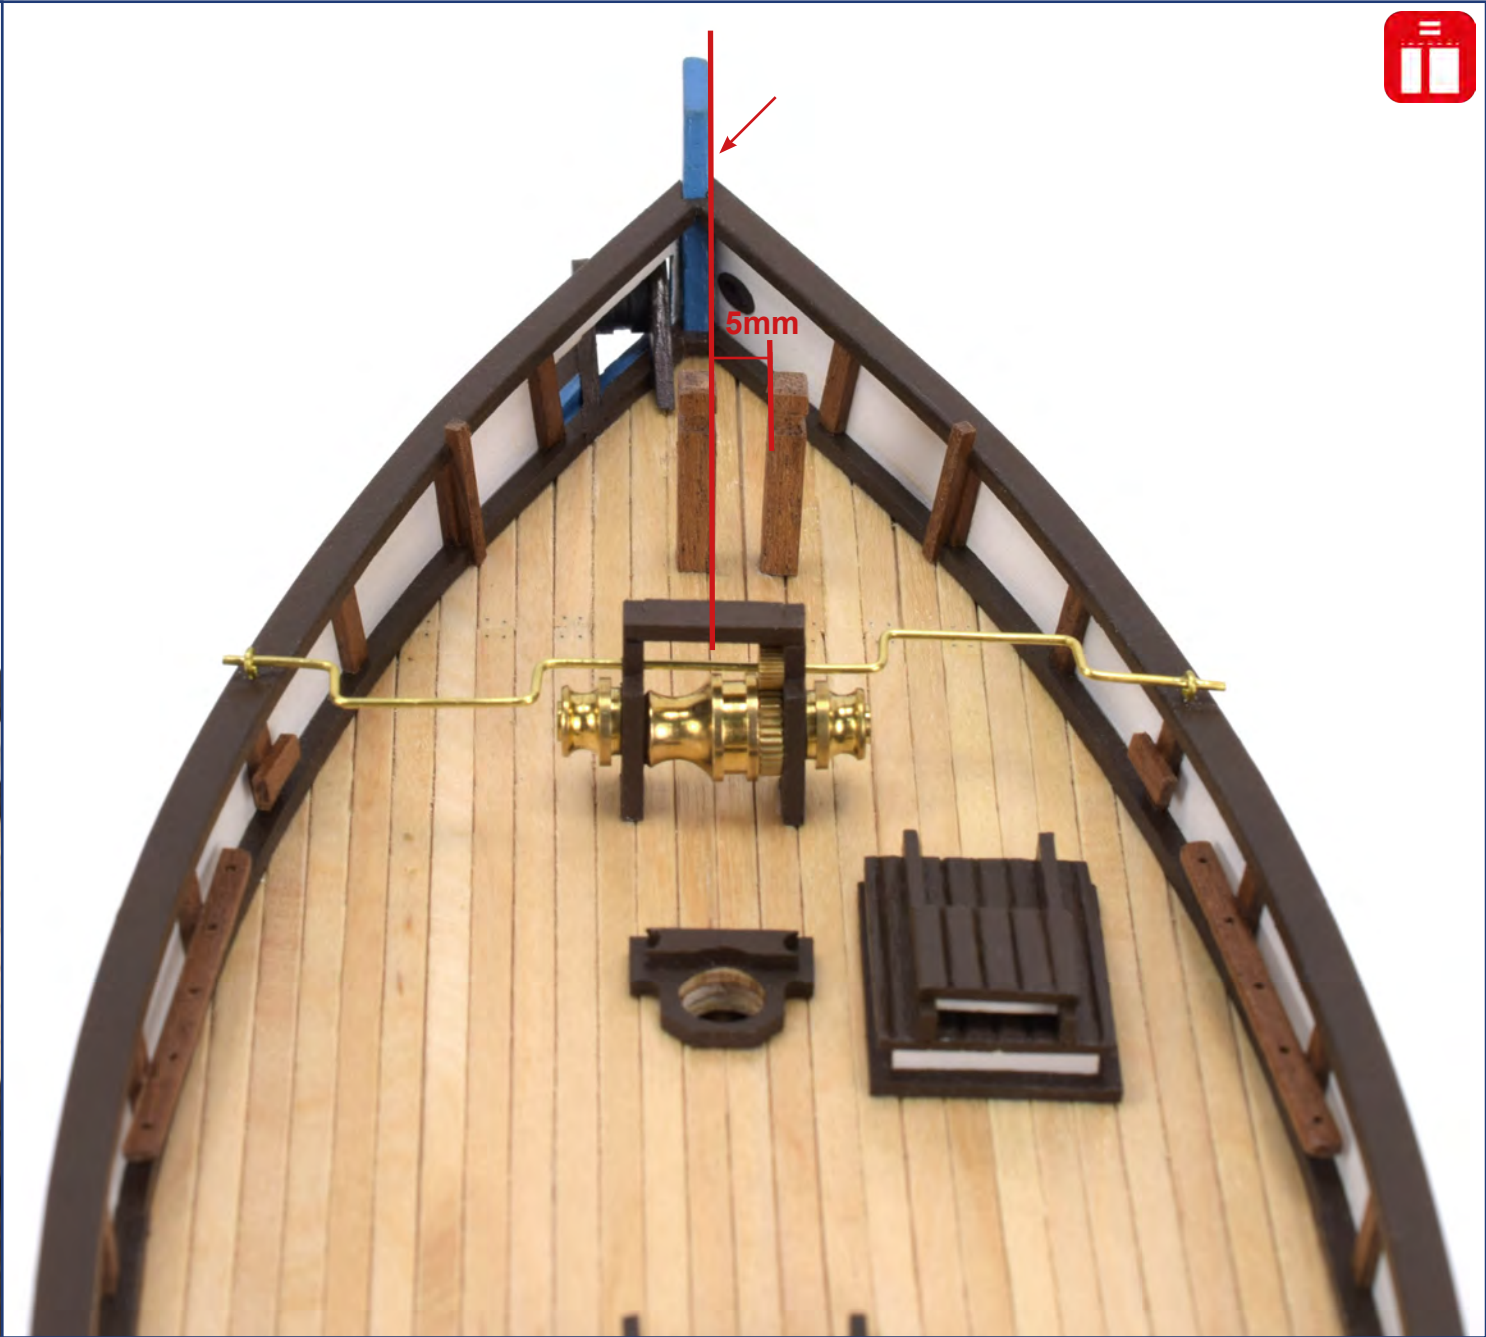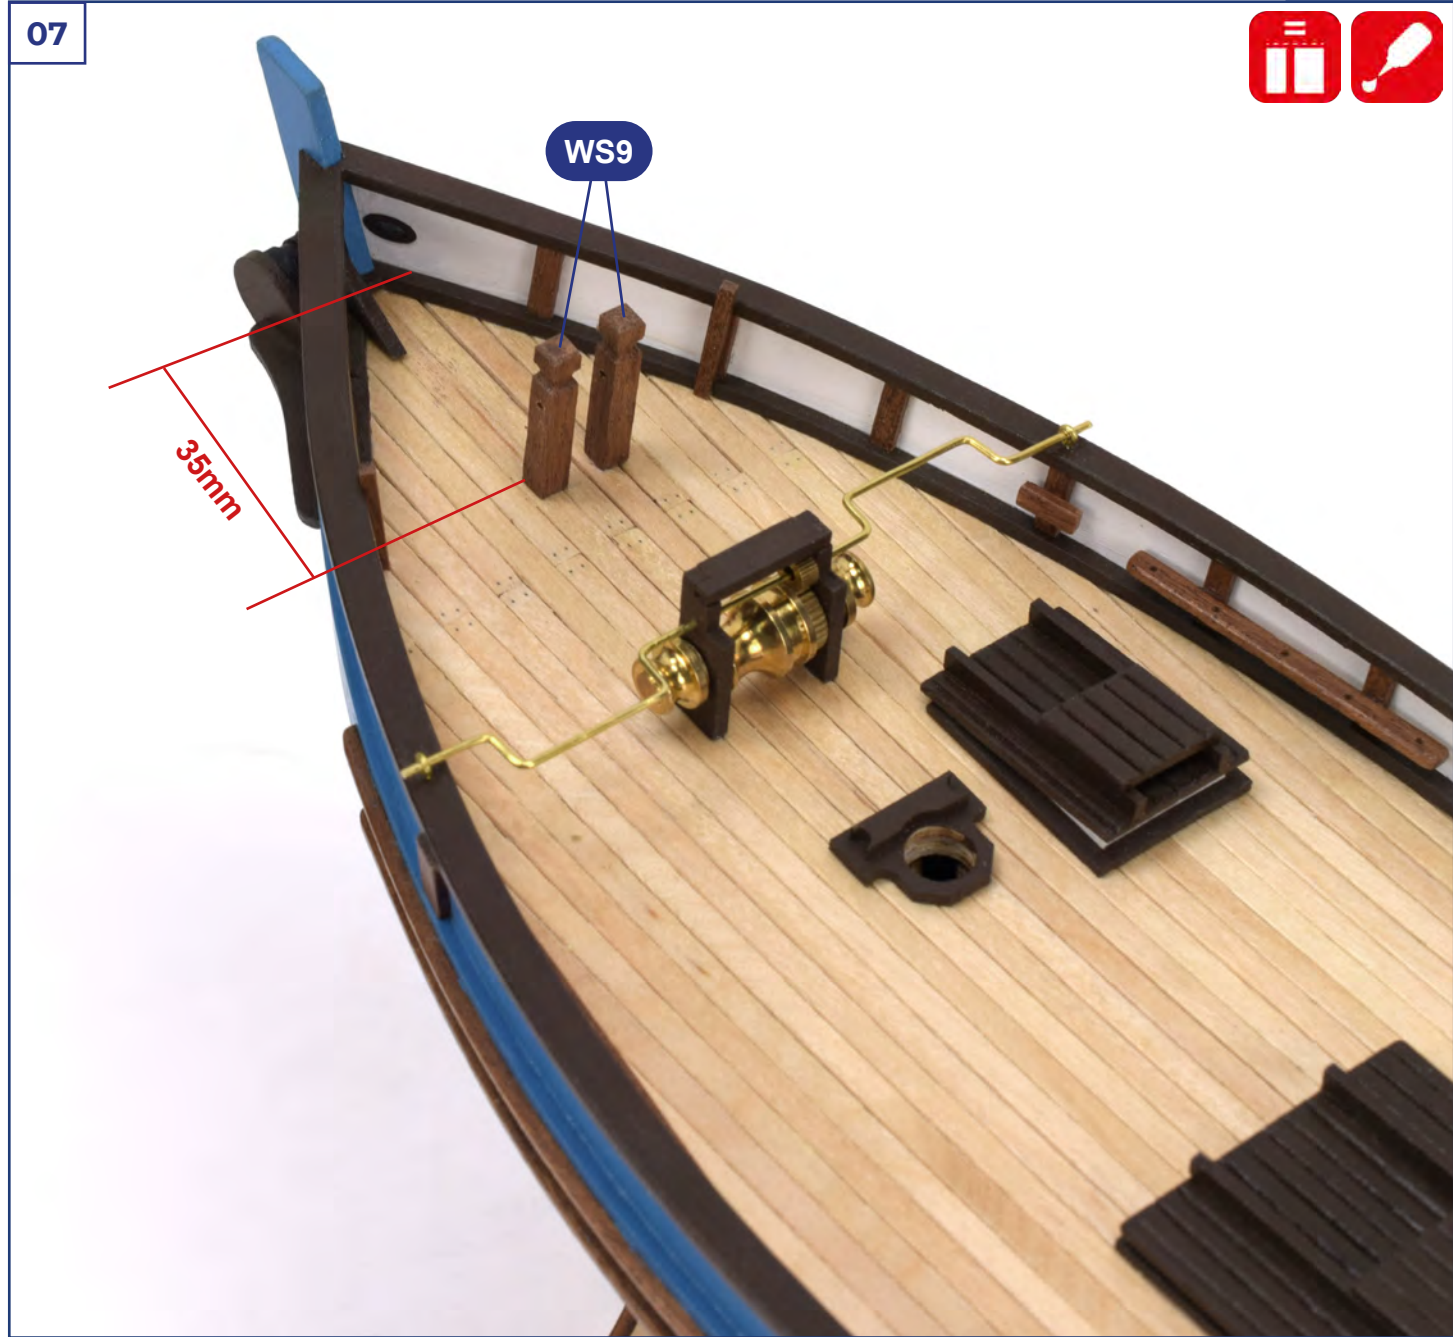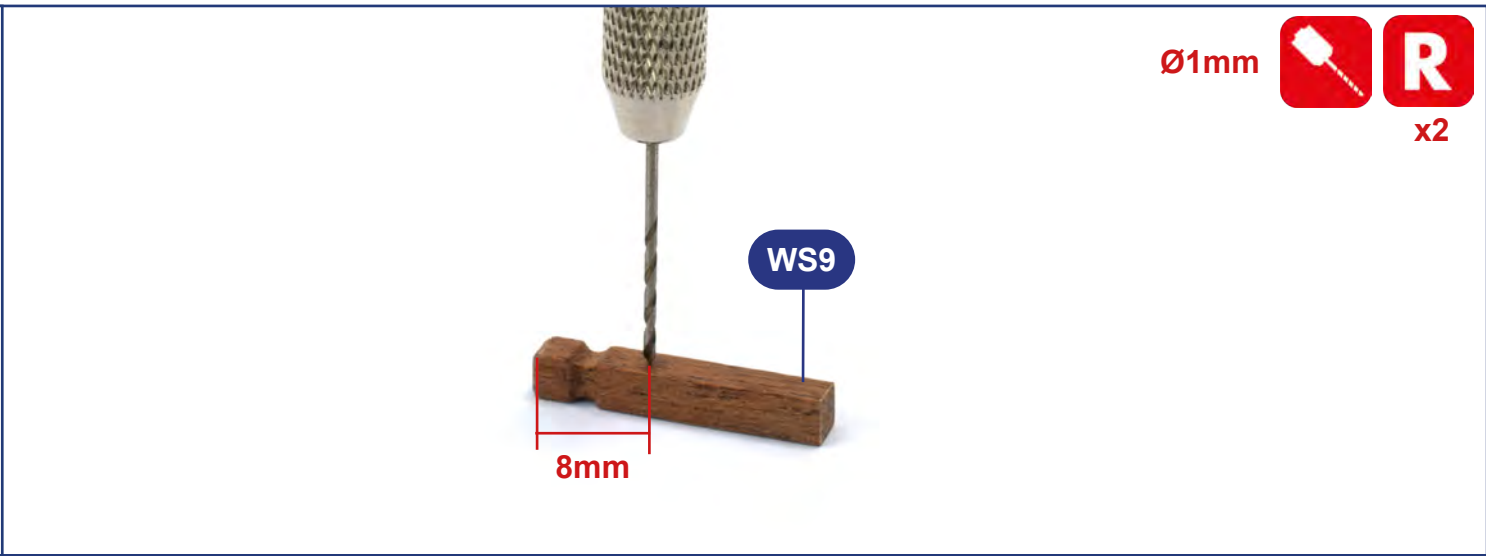

01

WS5

40mm

↓

Ø3mm

WS5

02

↔

↔

↔

03

5mm

≈3mm

WS5

R

04

WS5

4

74

WS5

74

05

WS5

5mm

↔

↔

01










02





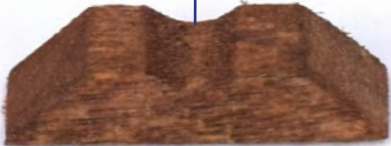


03











04




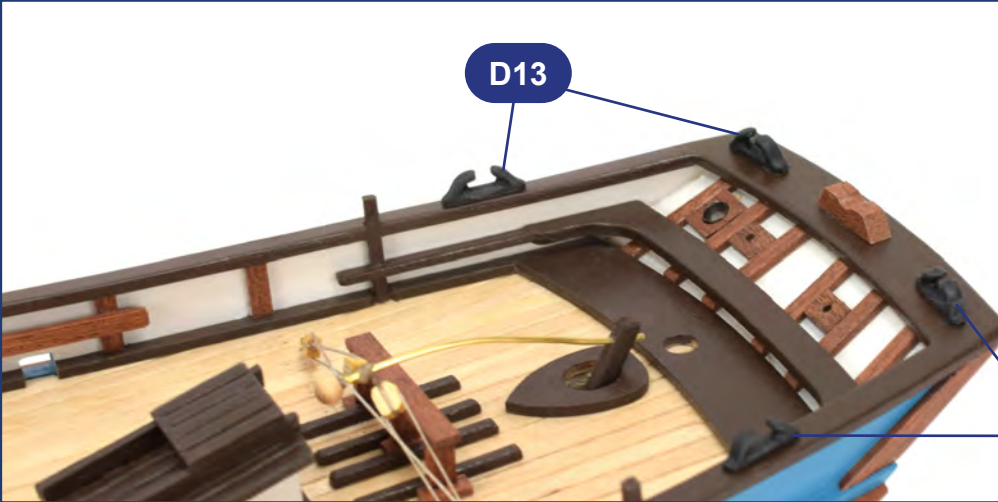


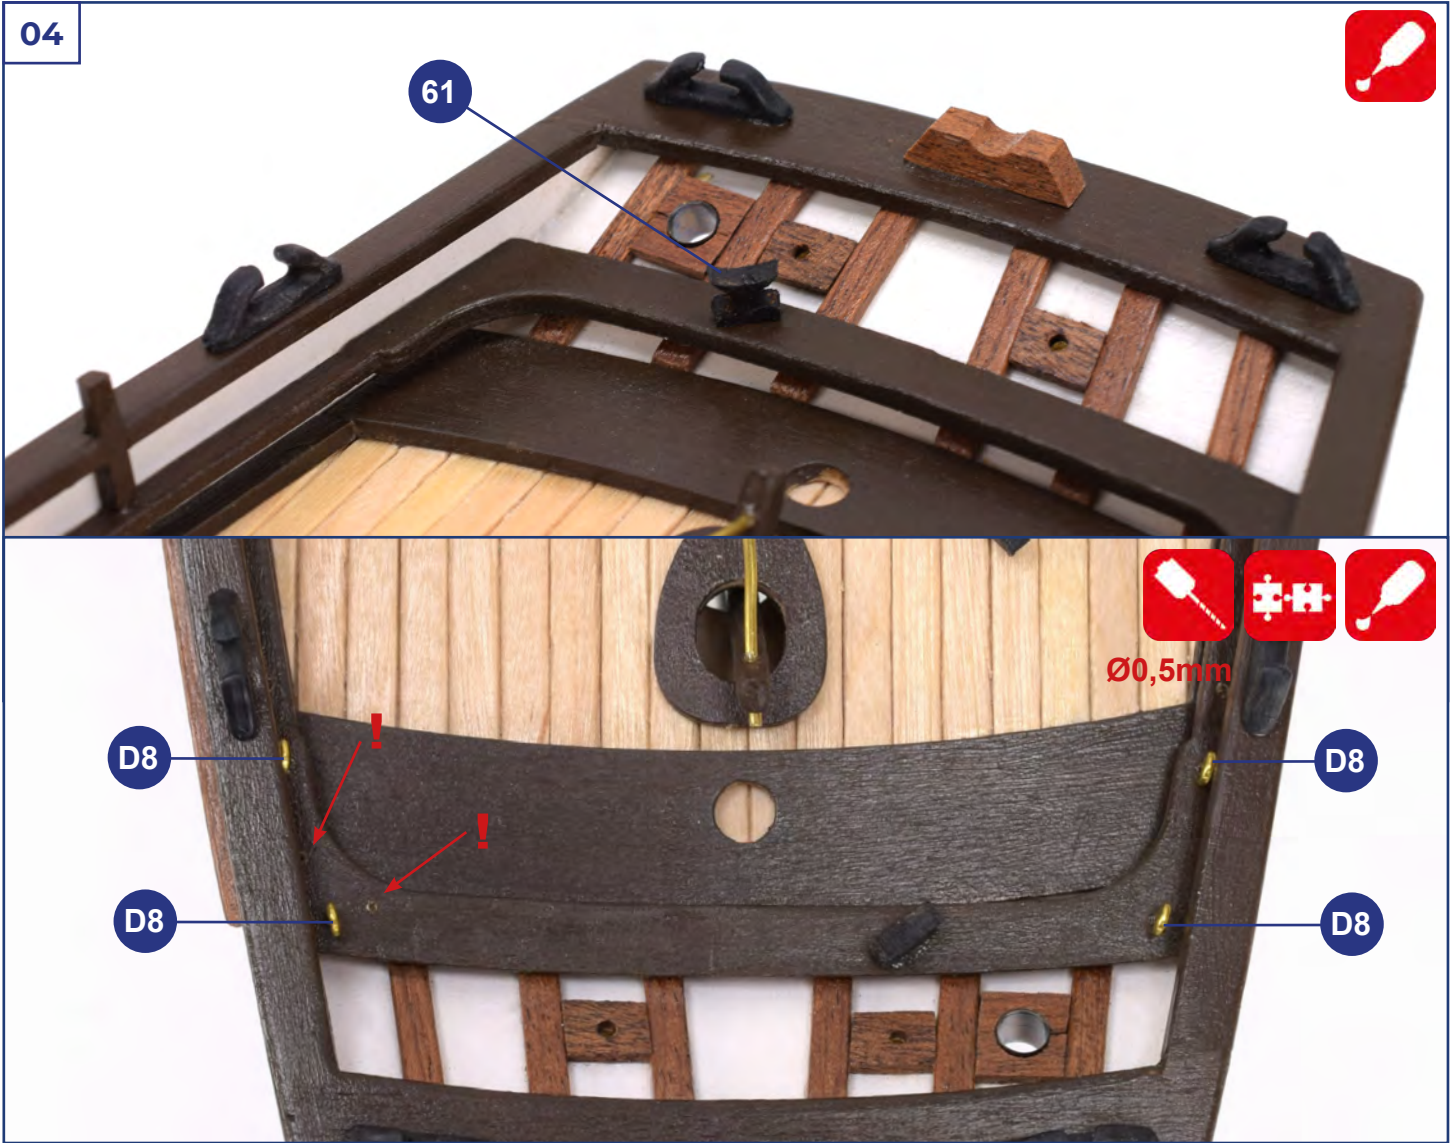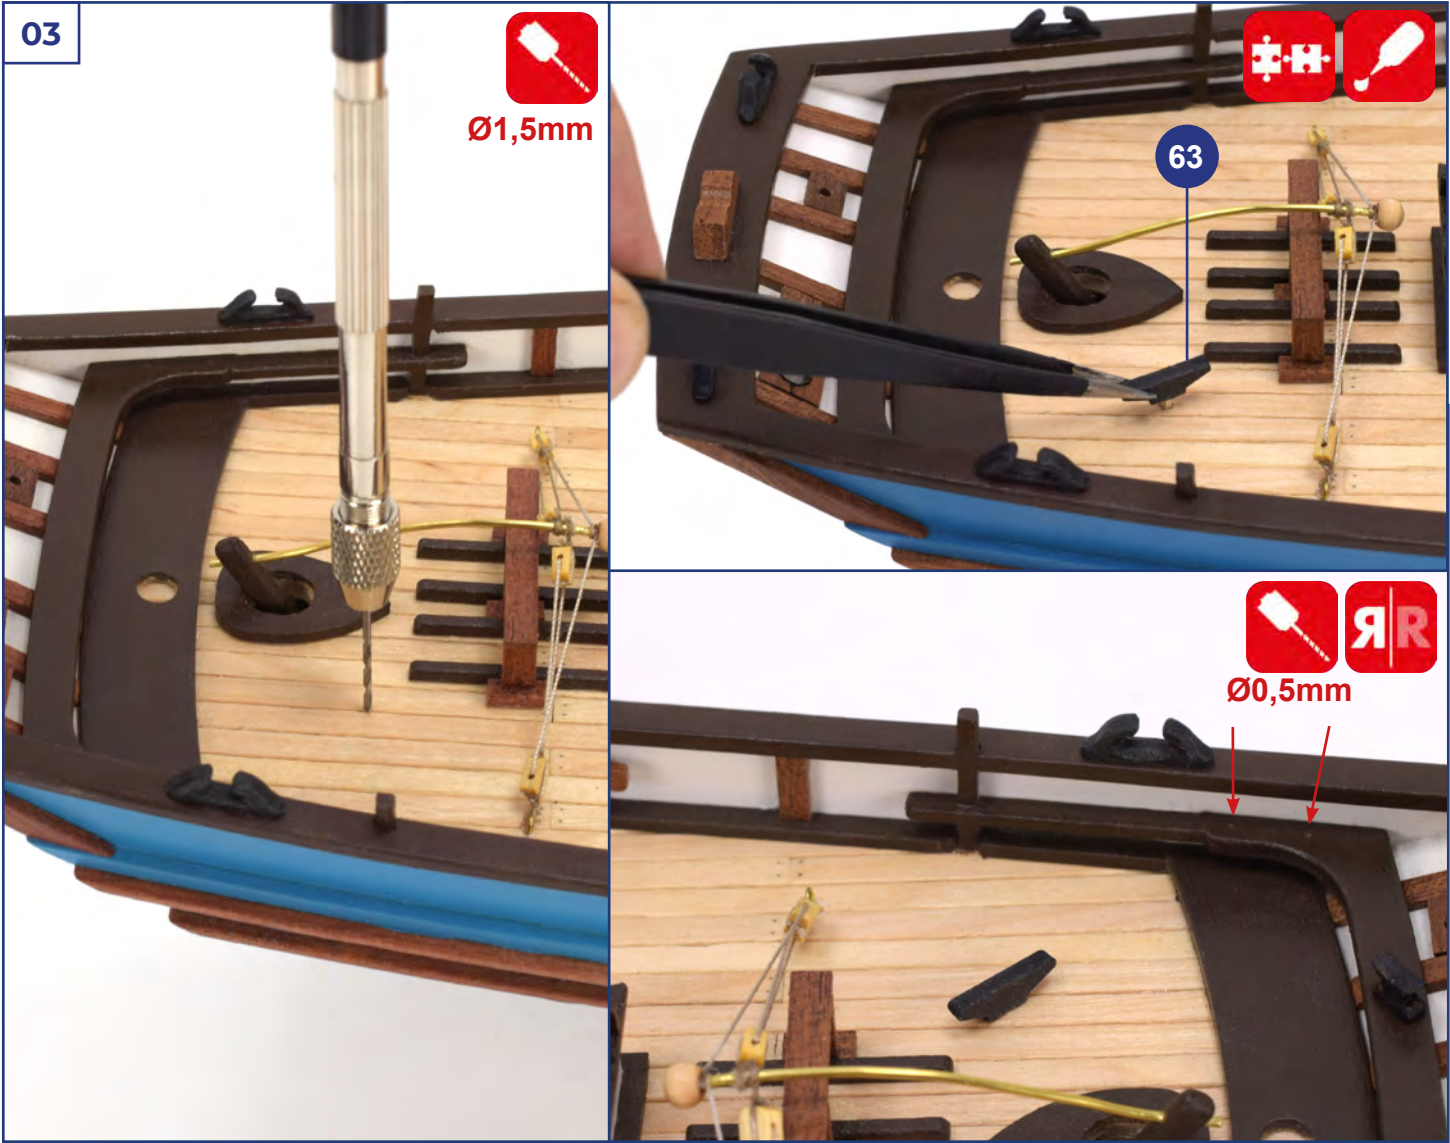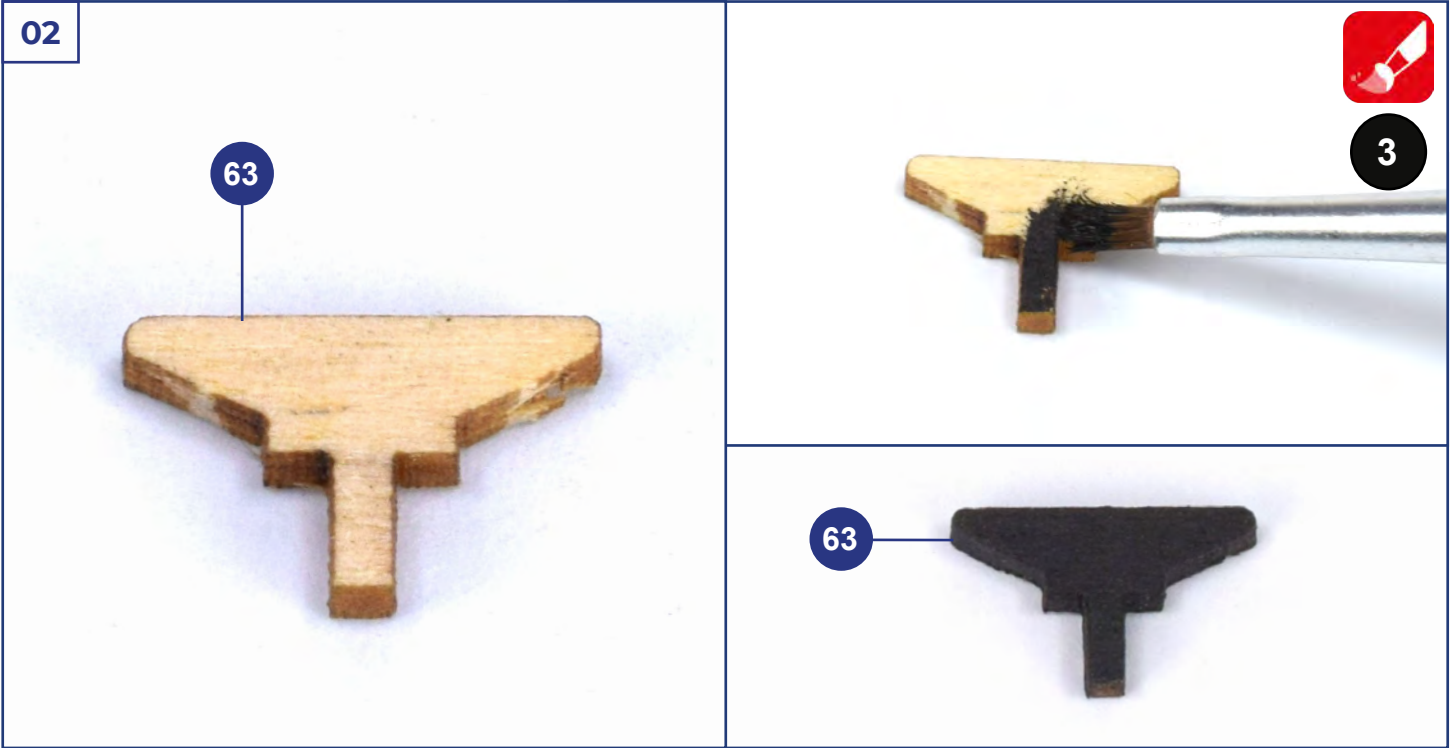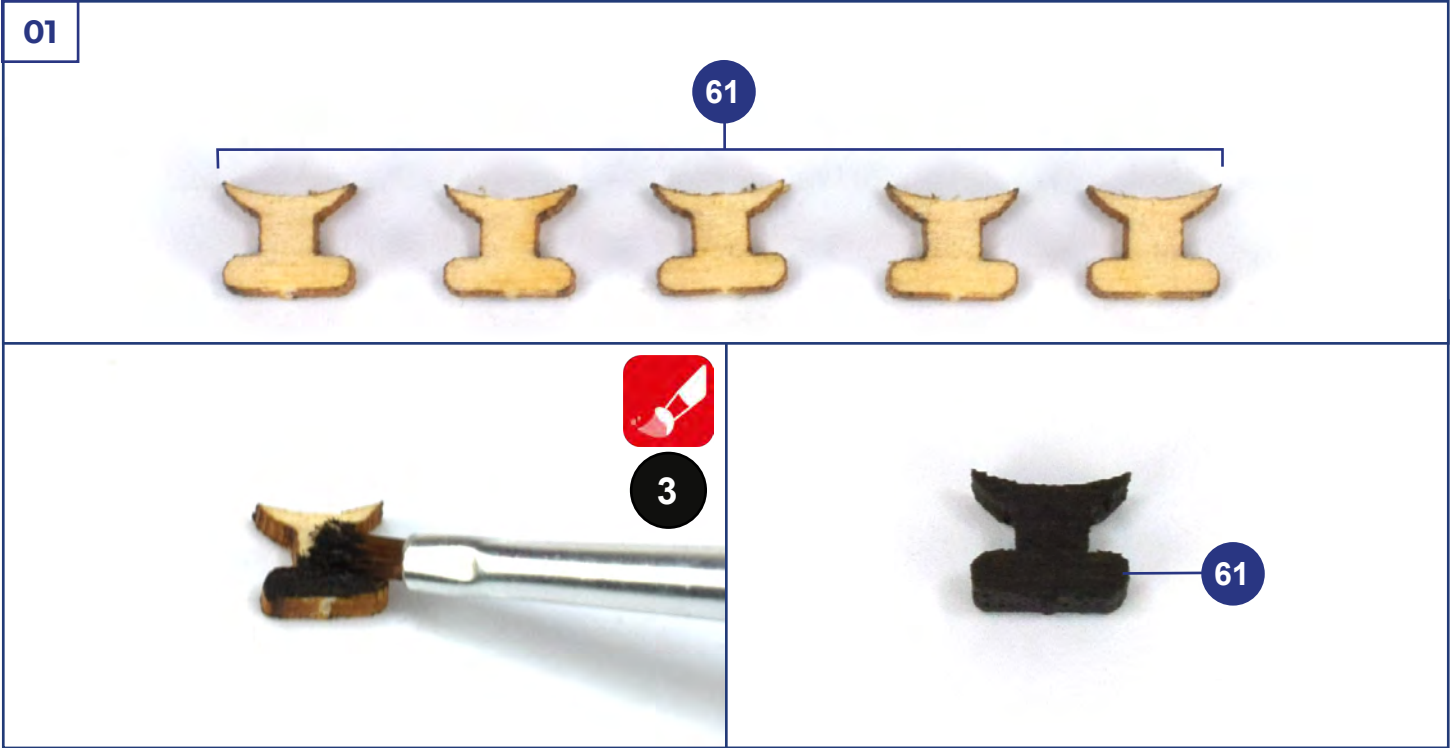



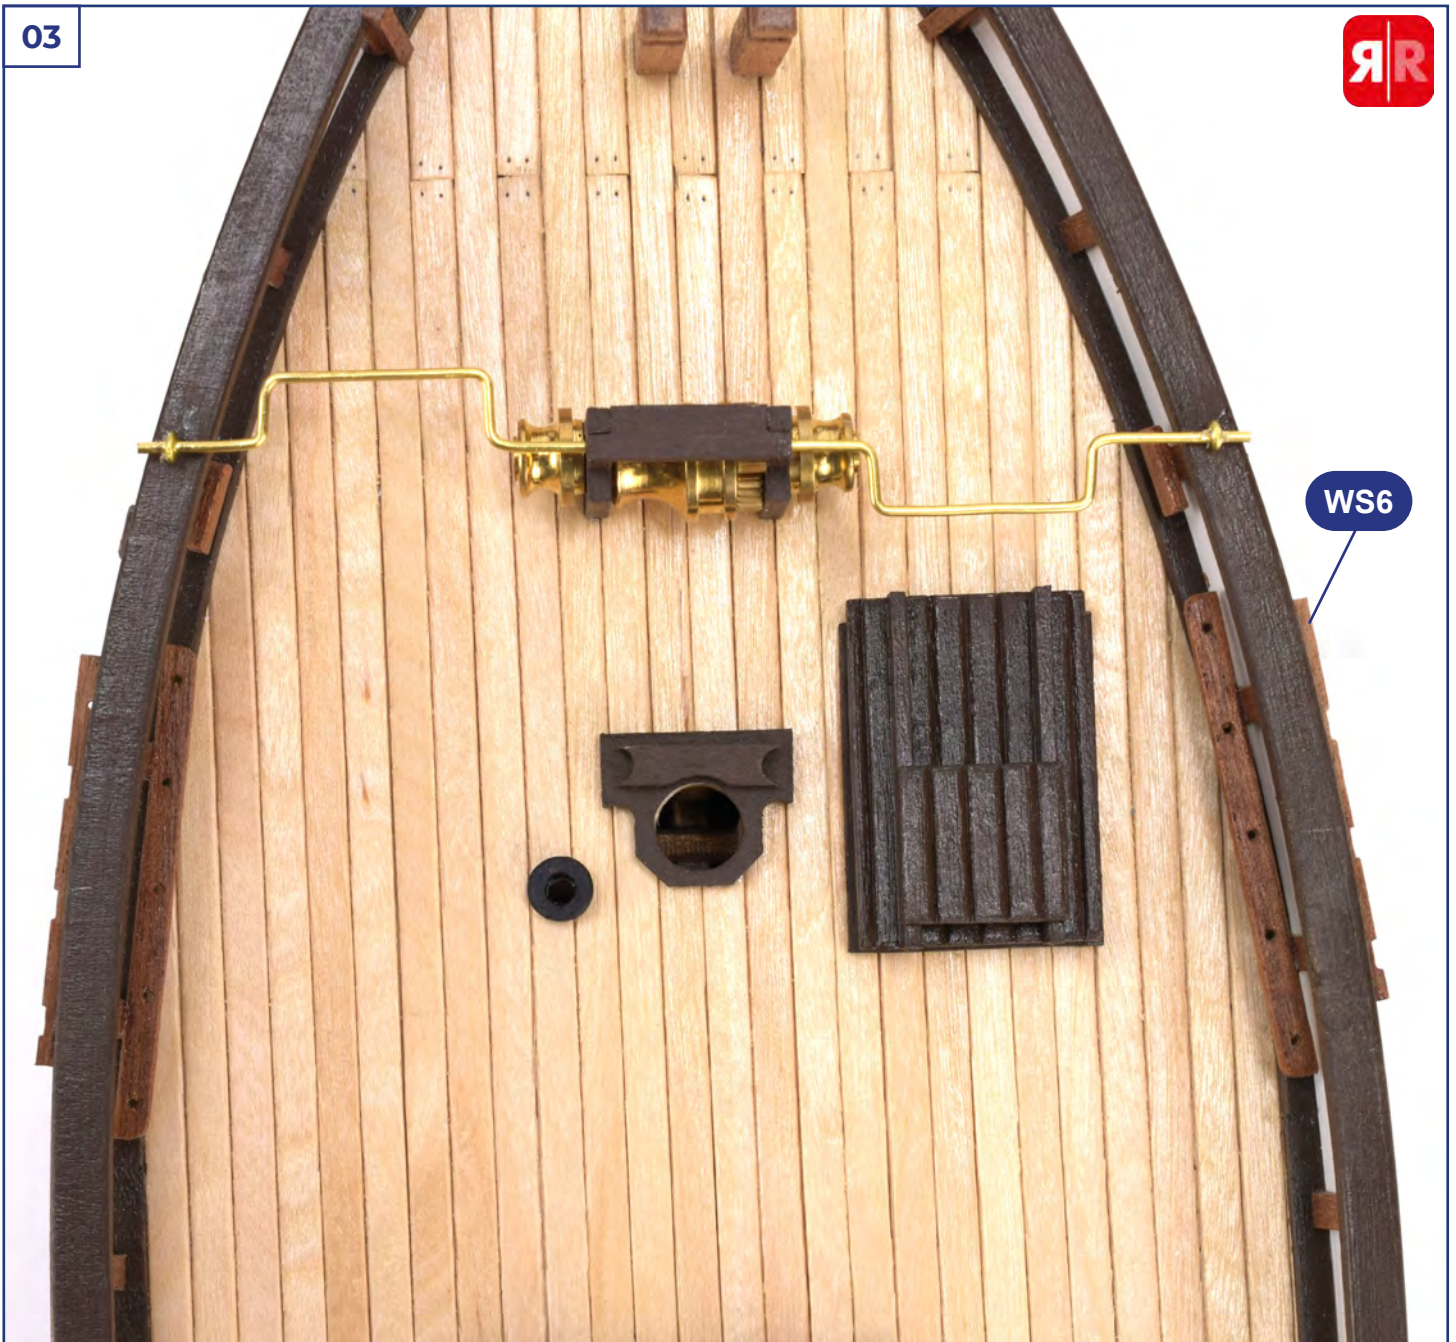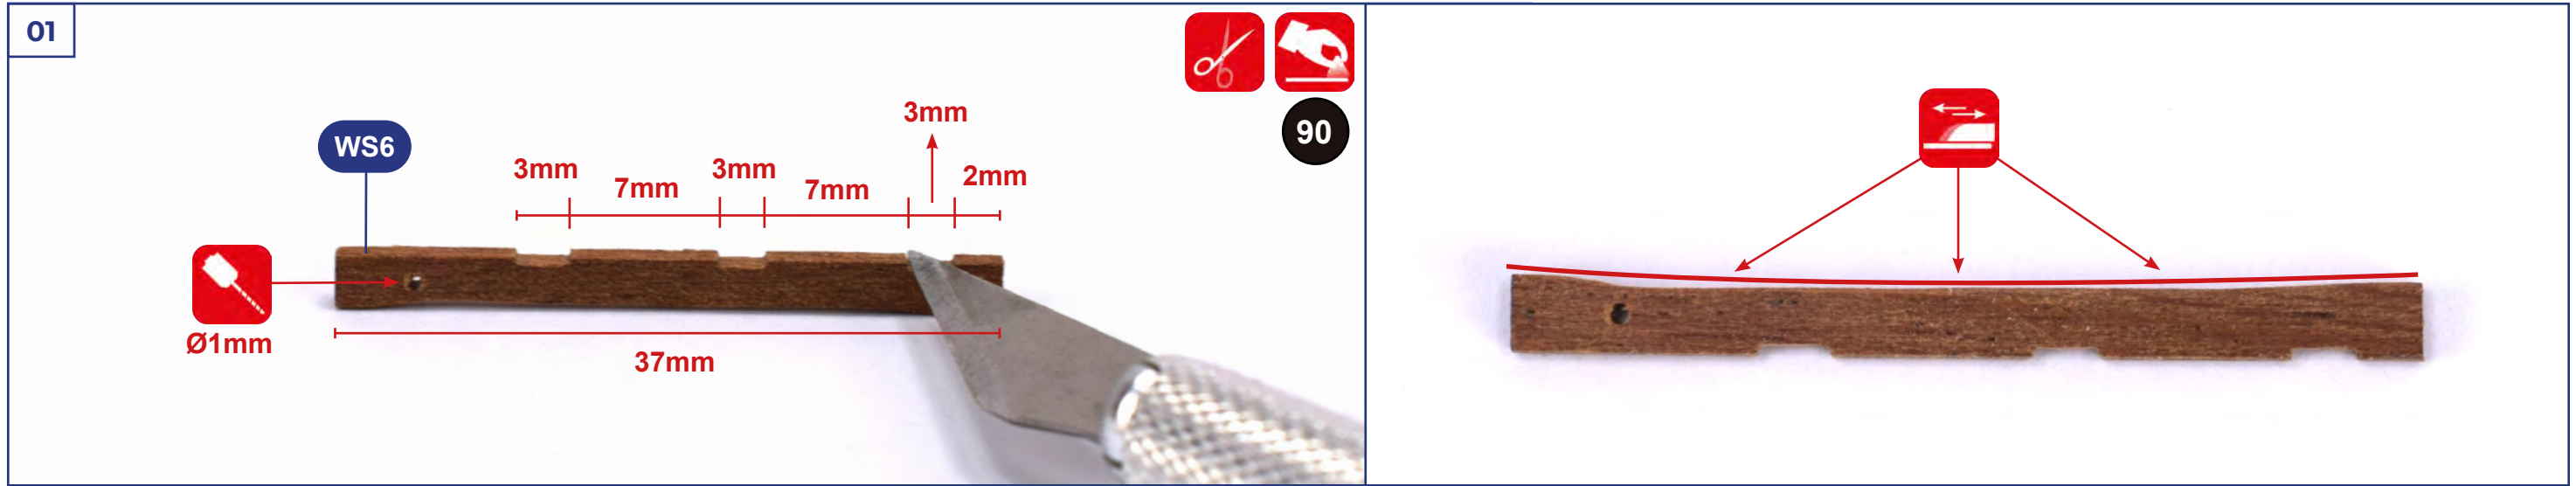


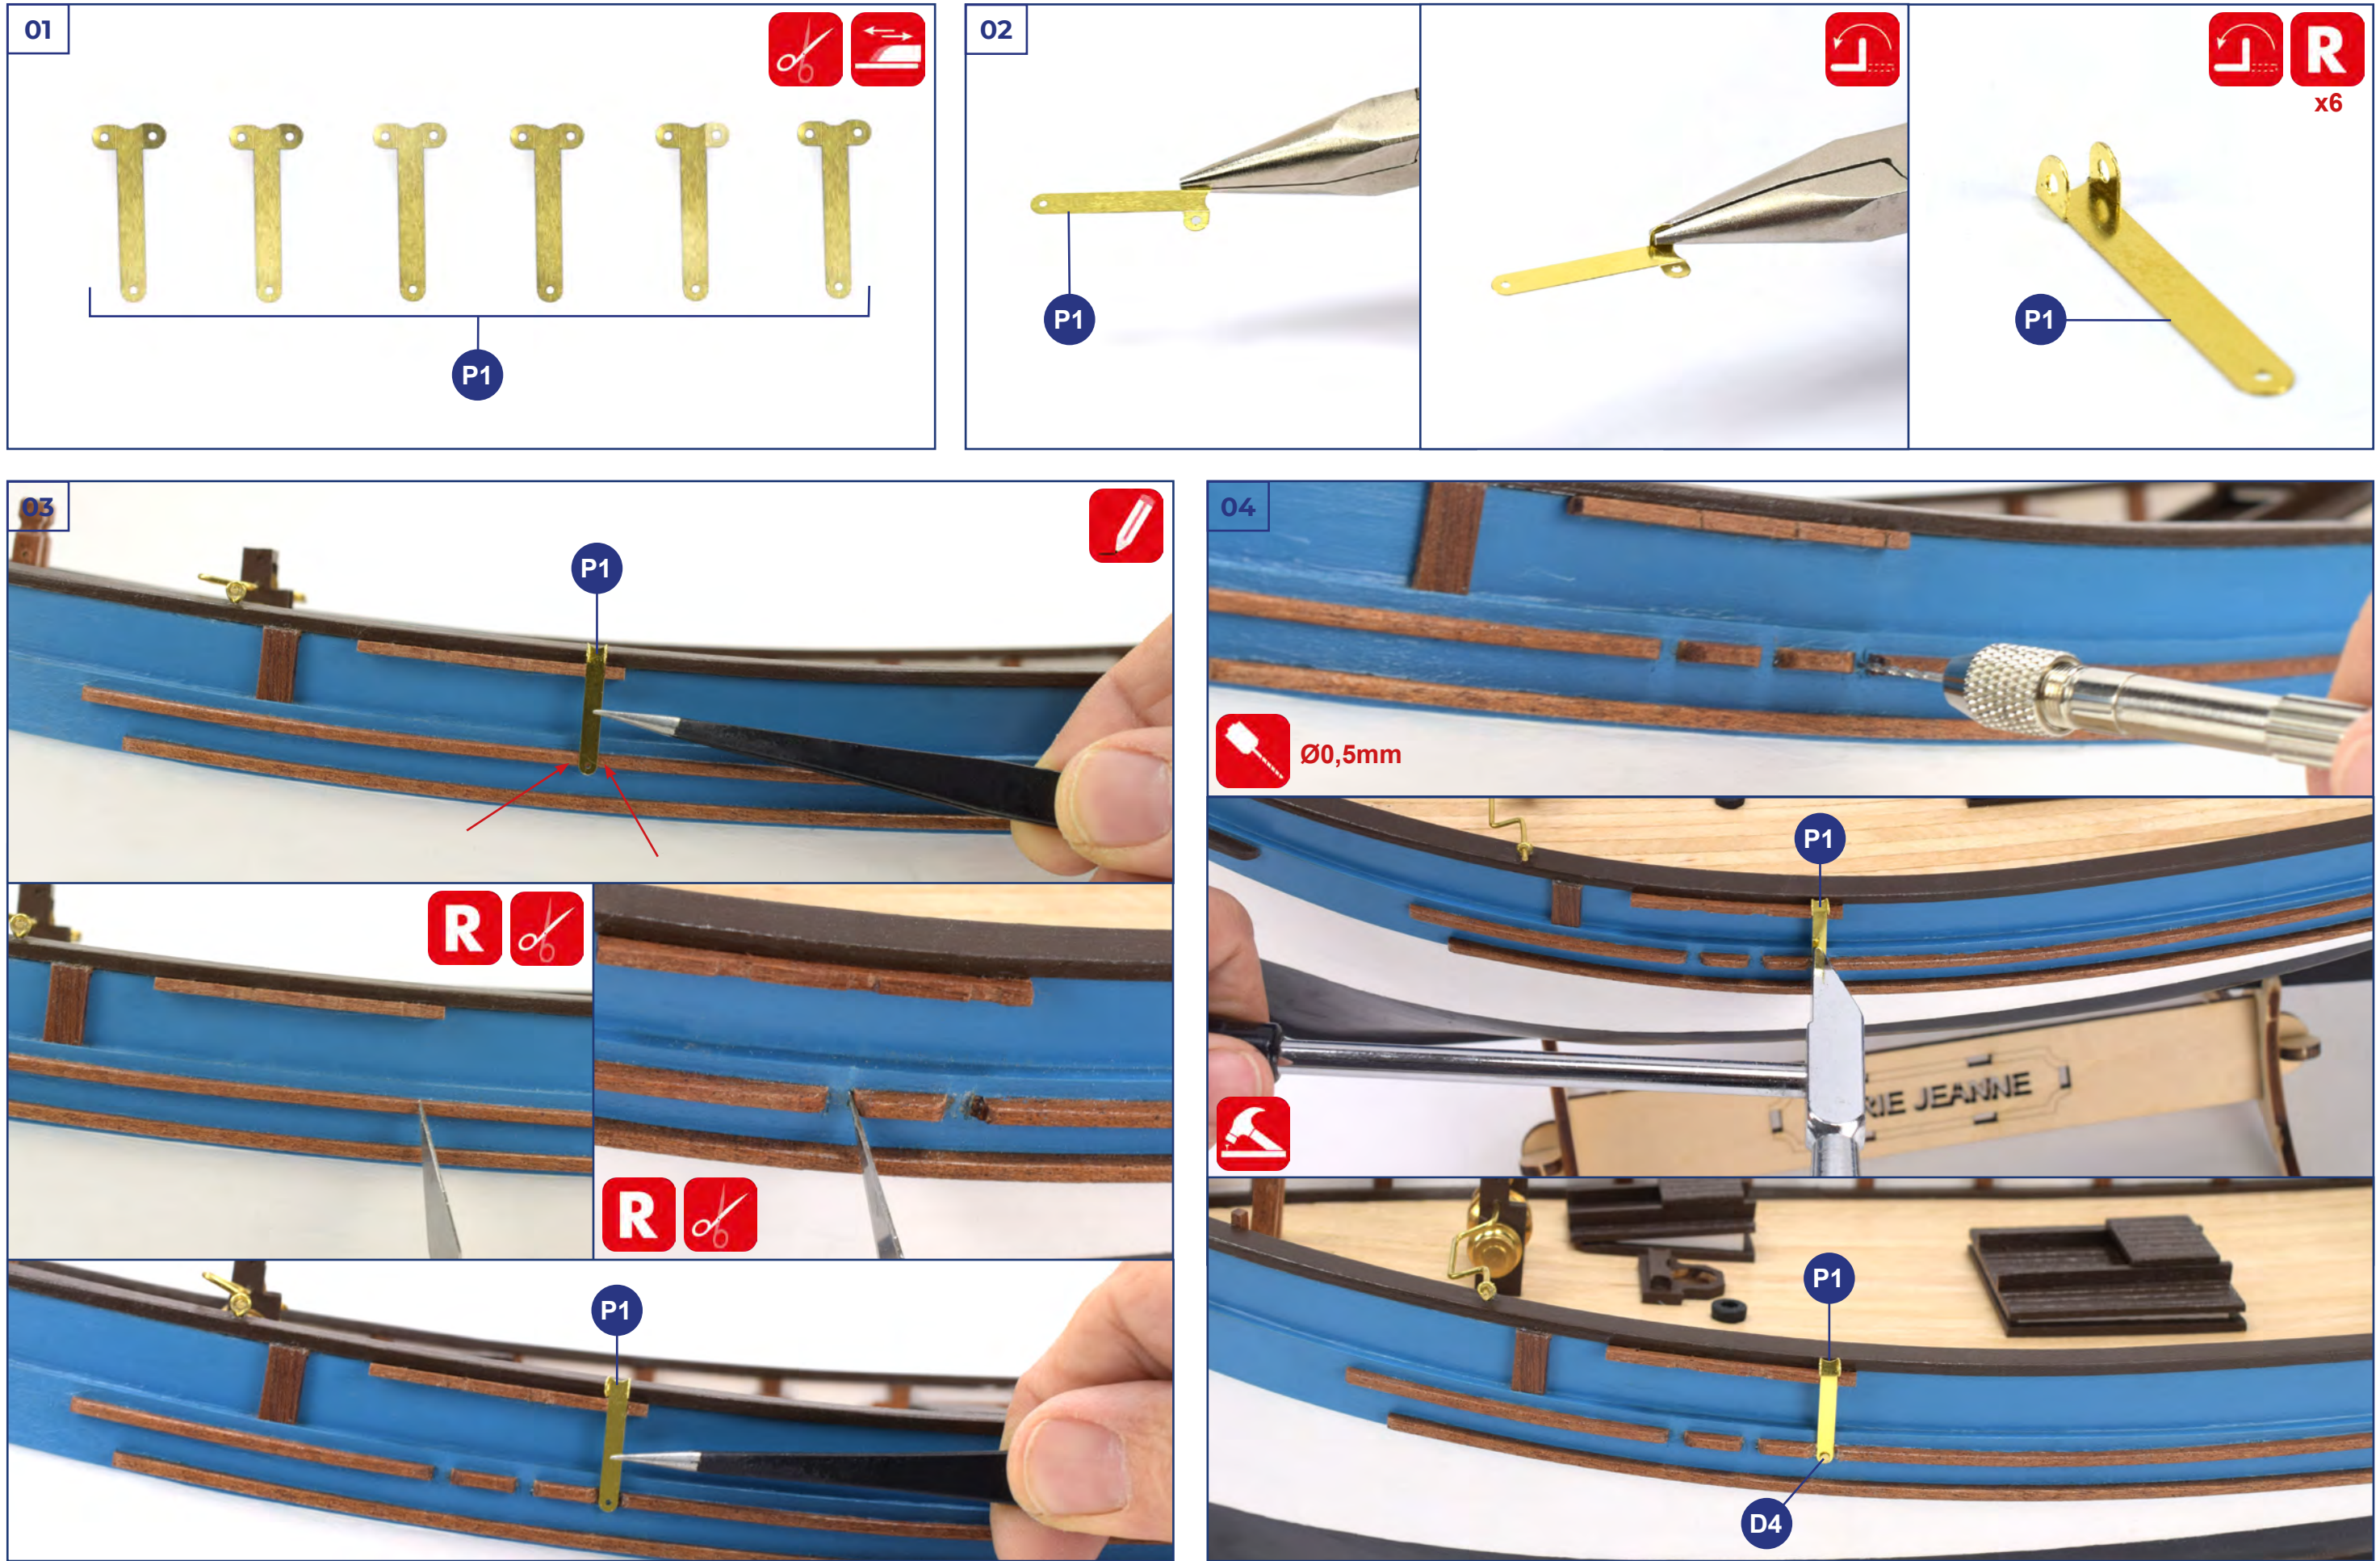


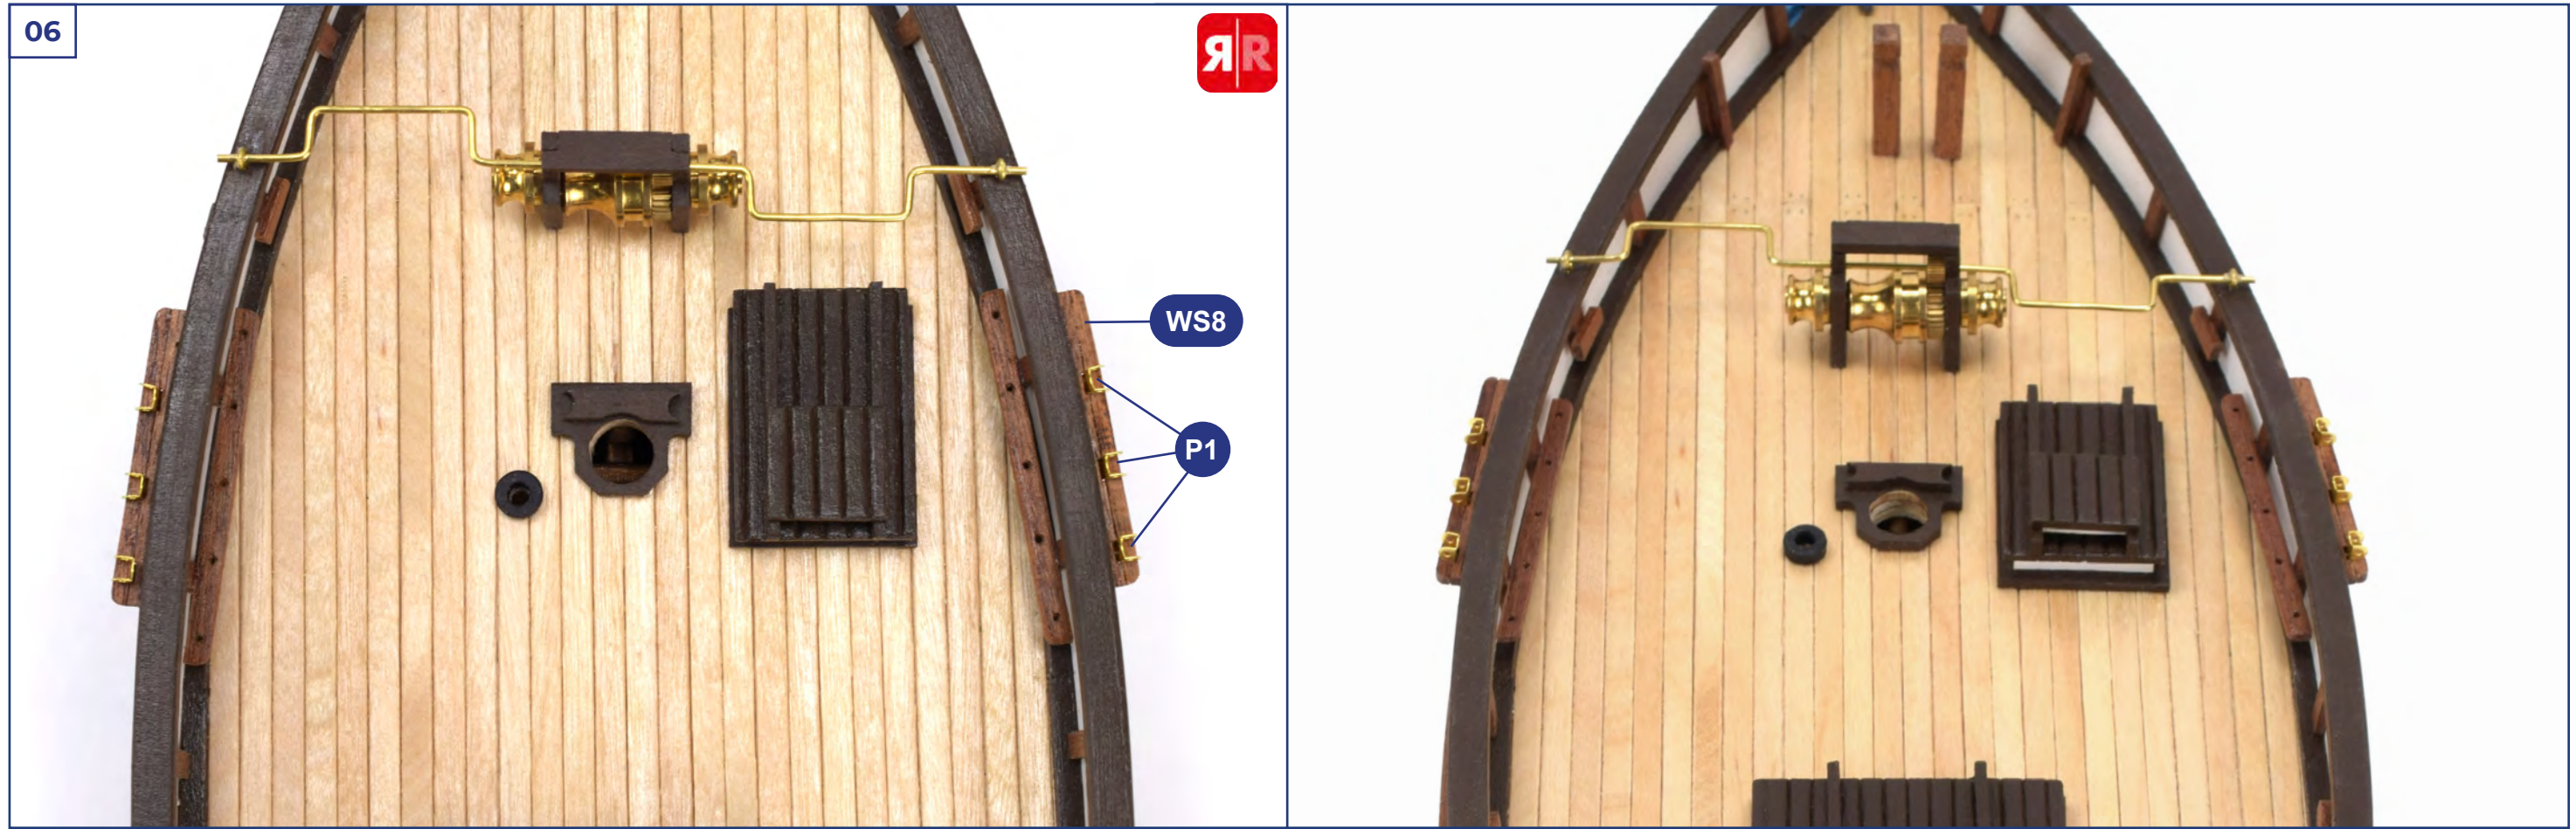

01




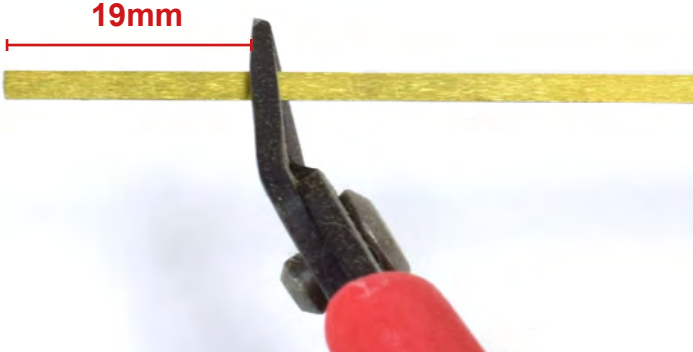

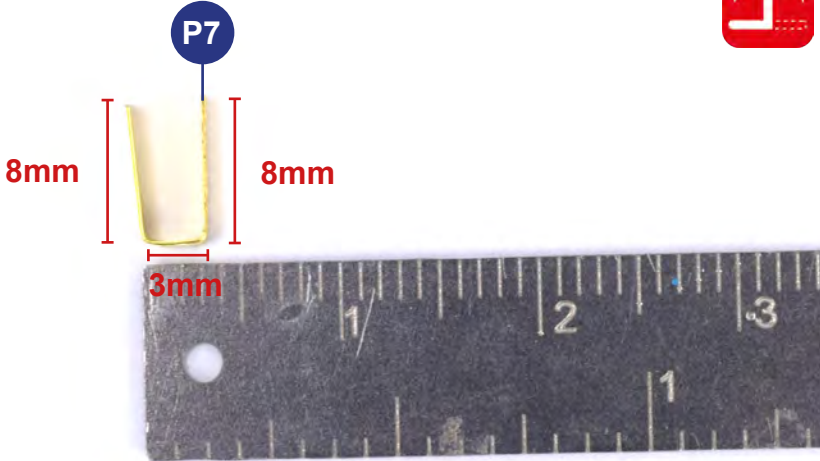




02




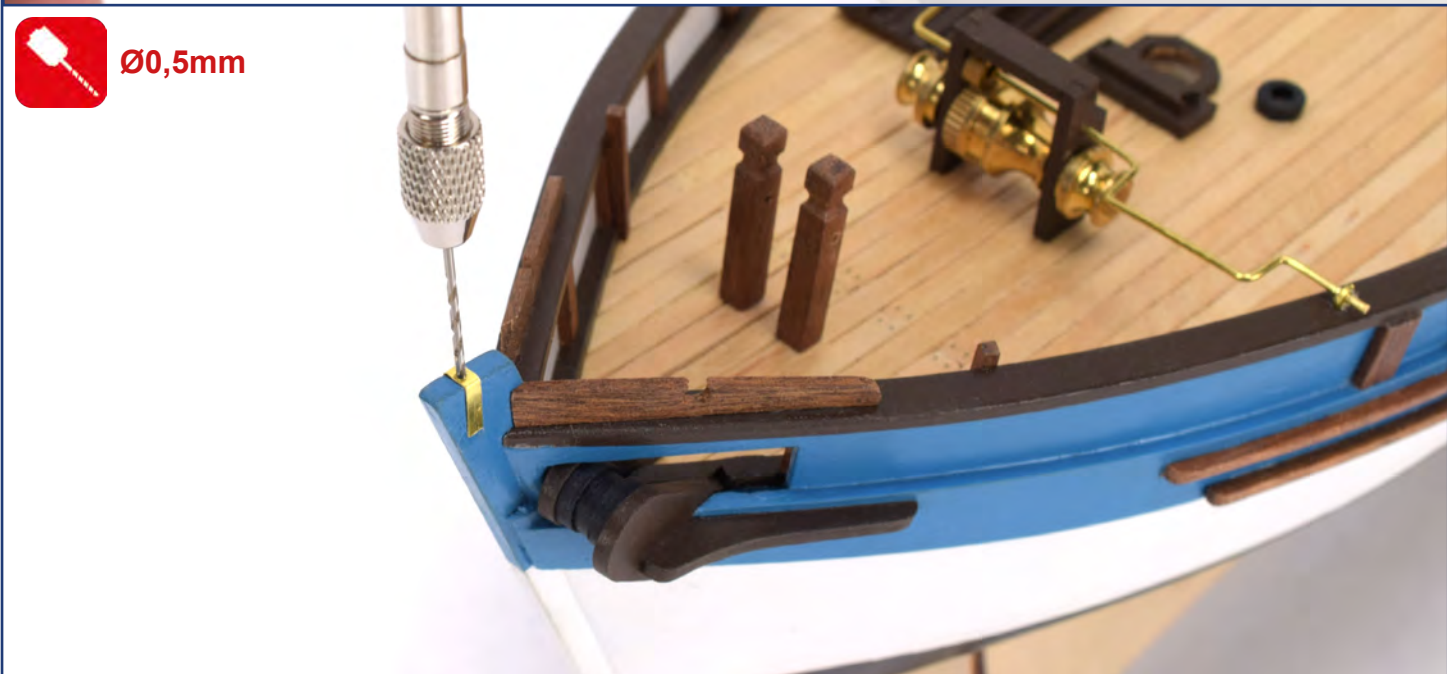



03


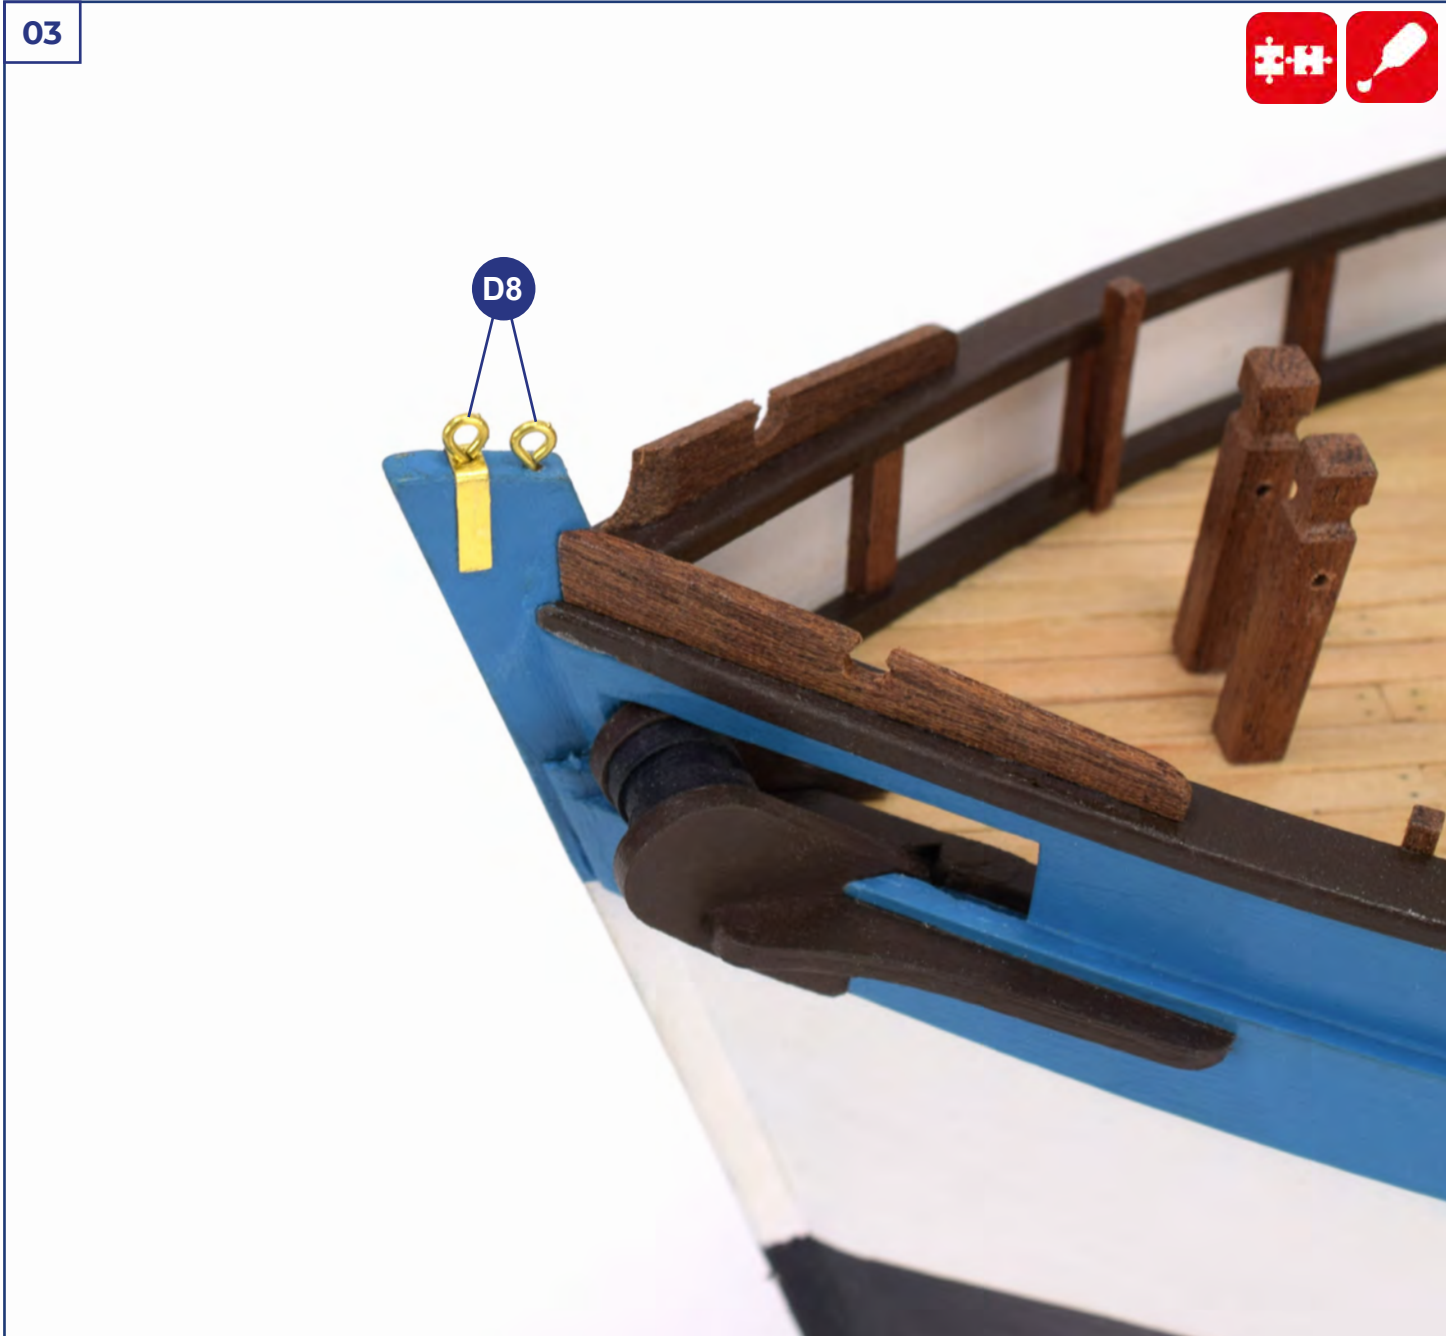


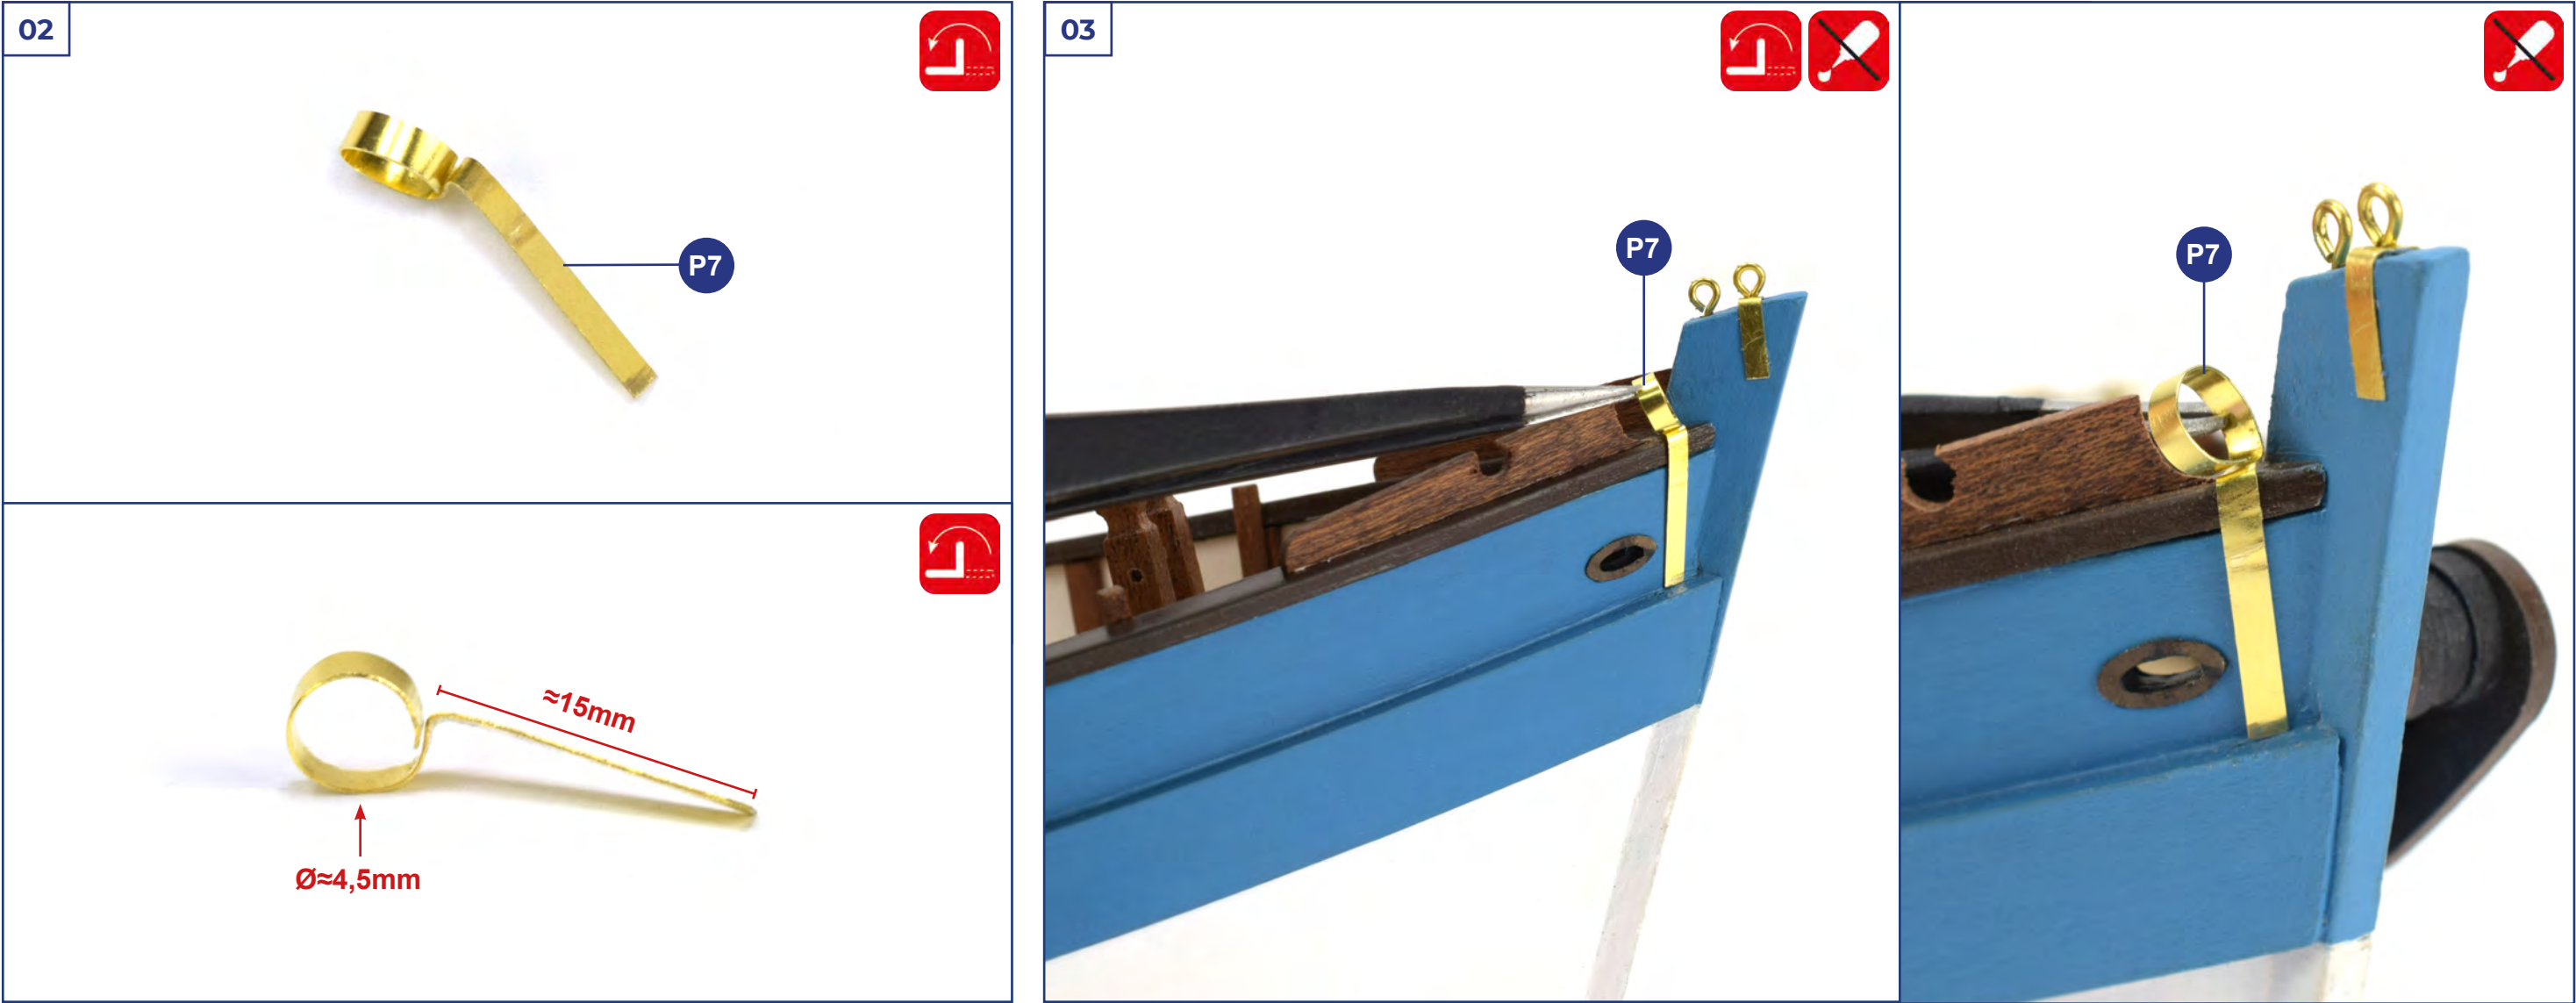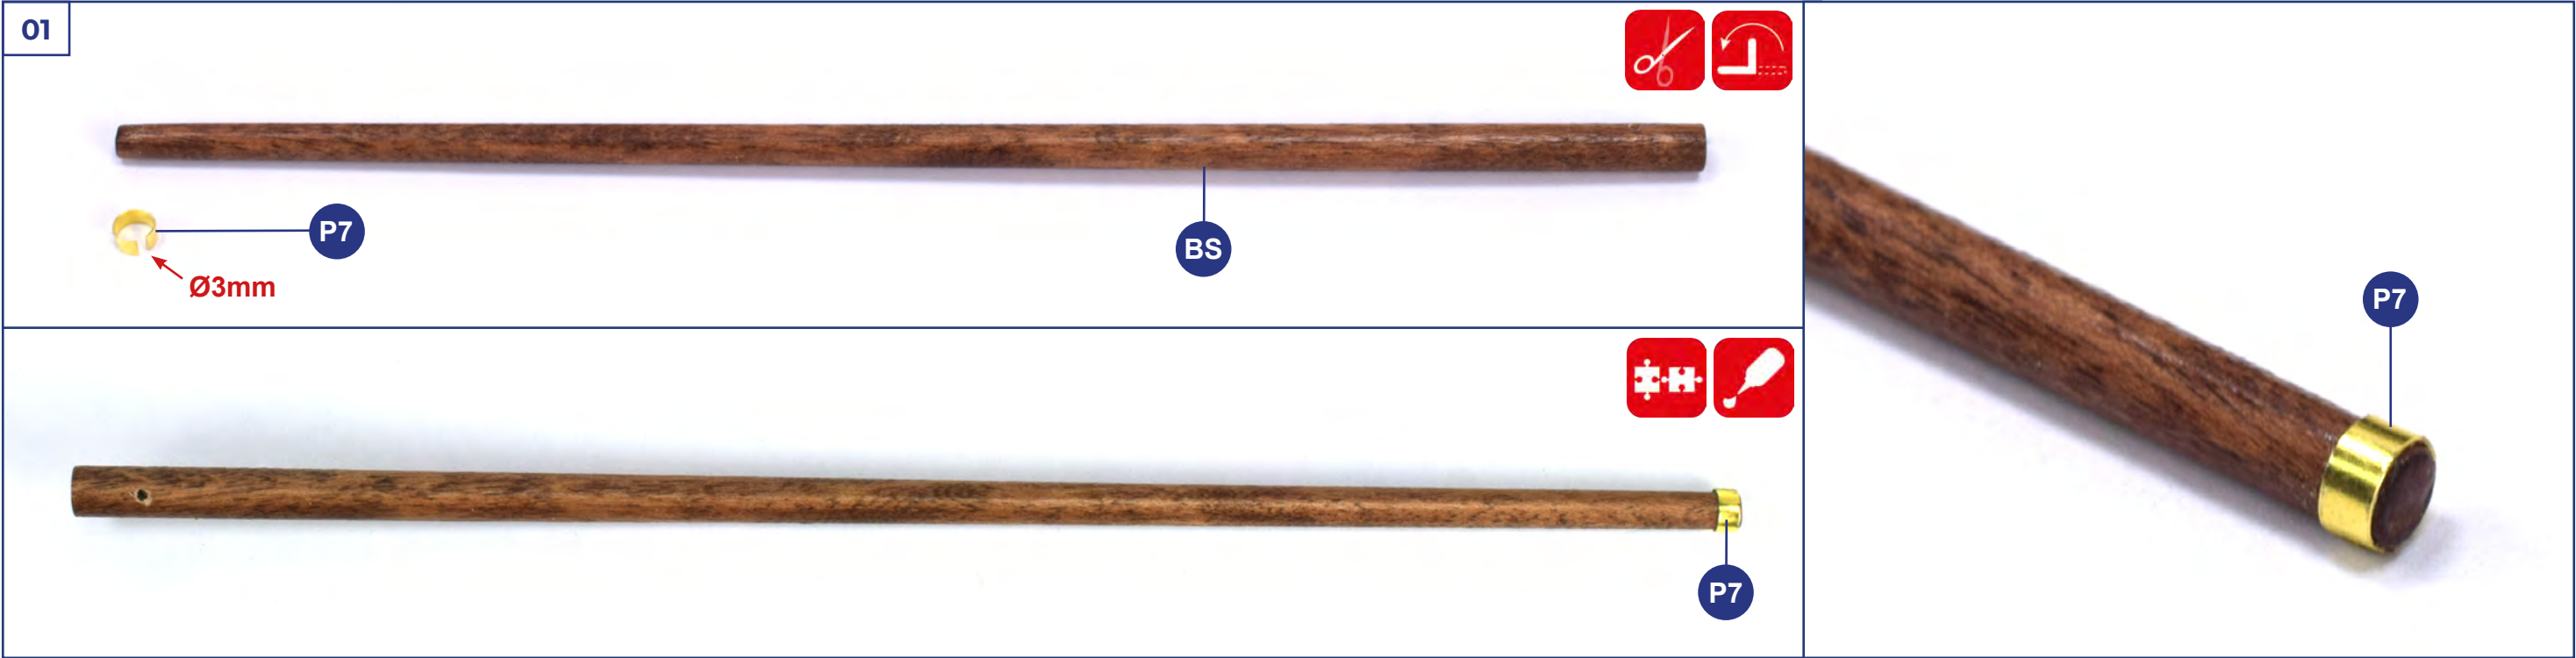

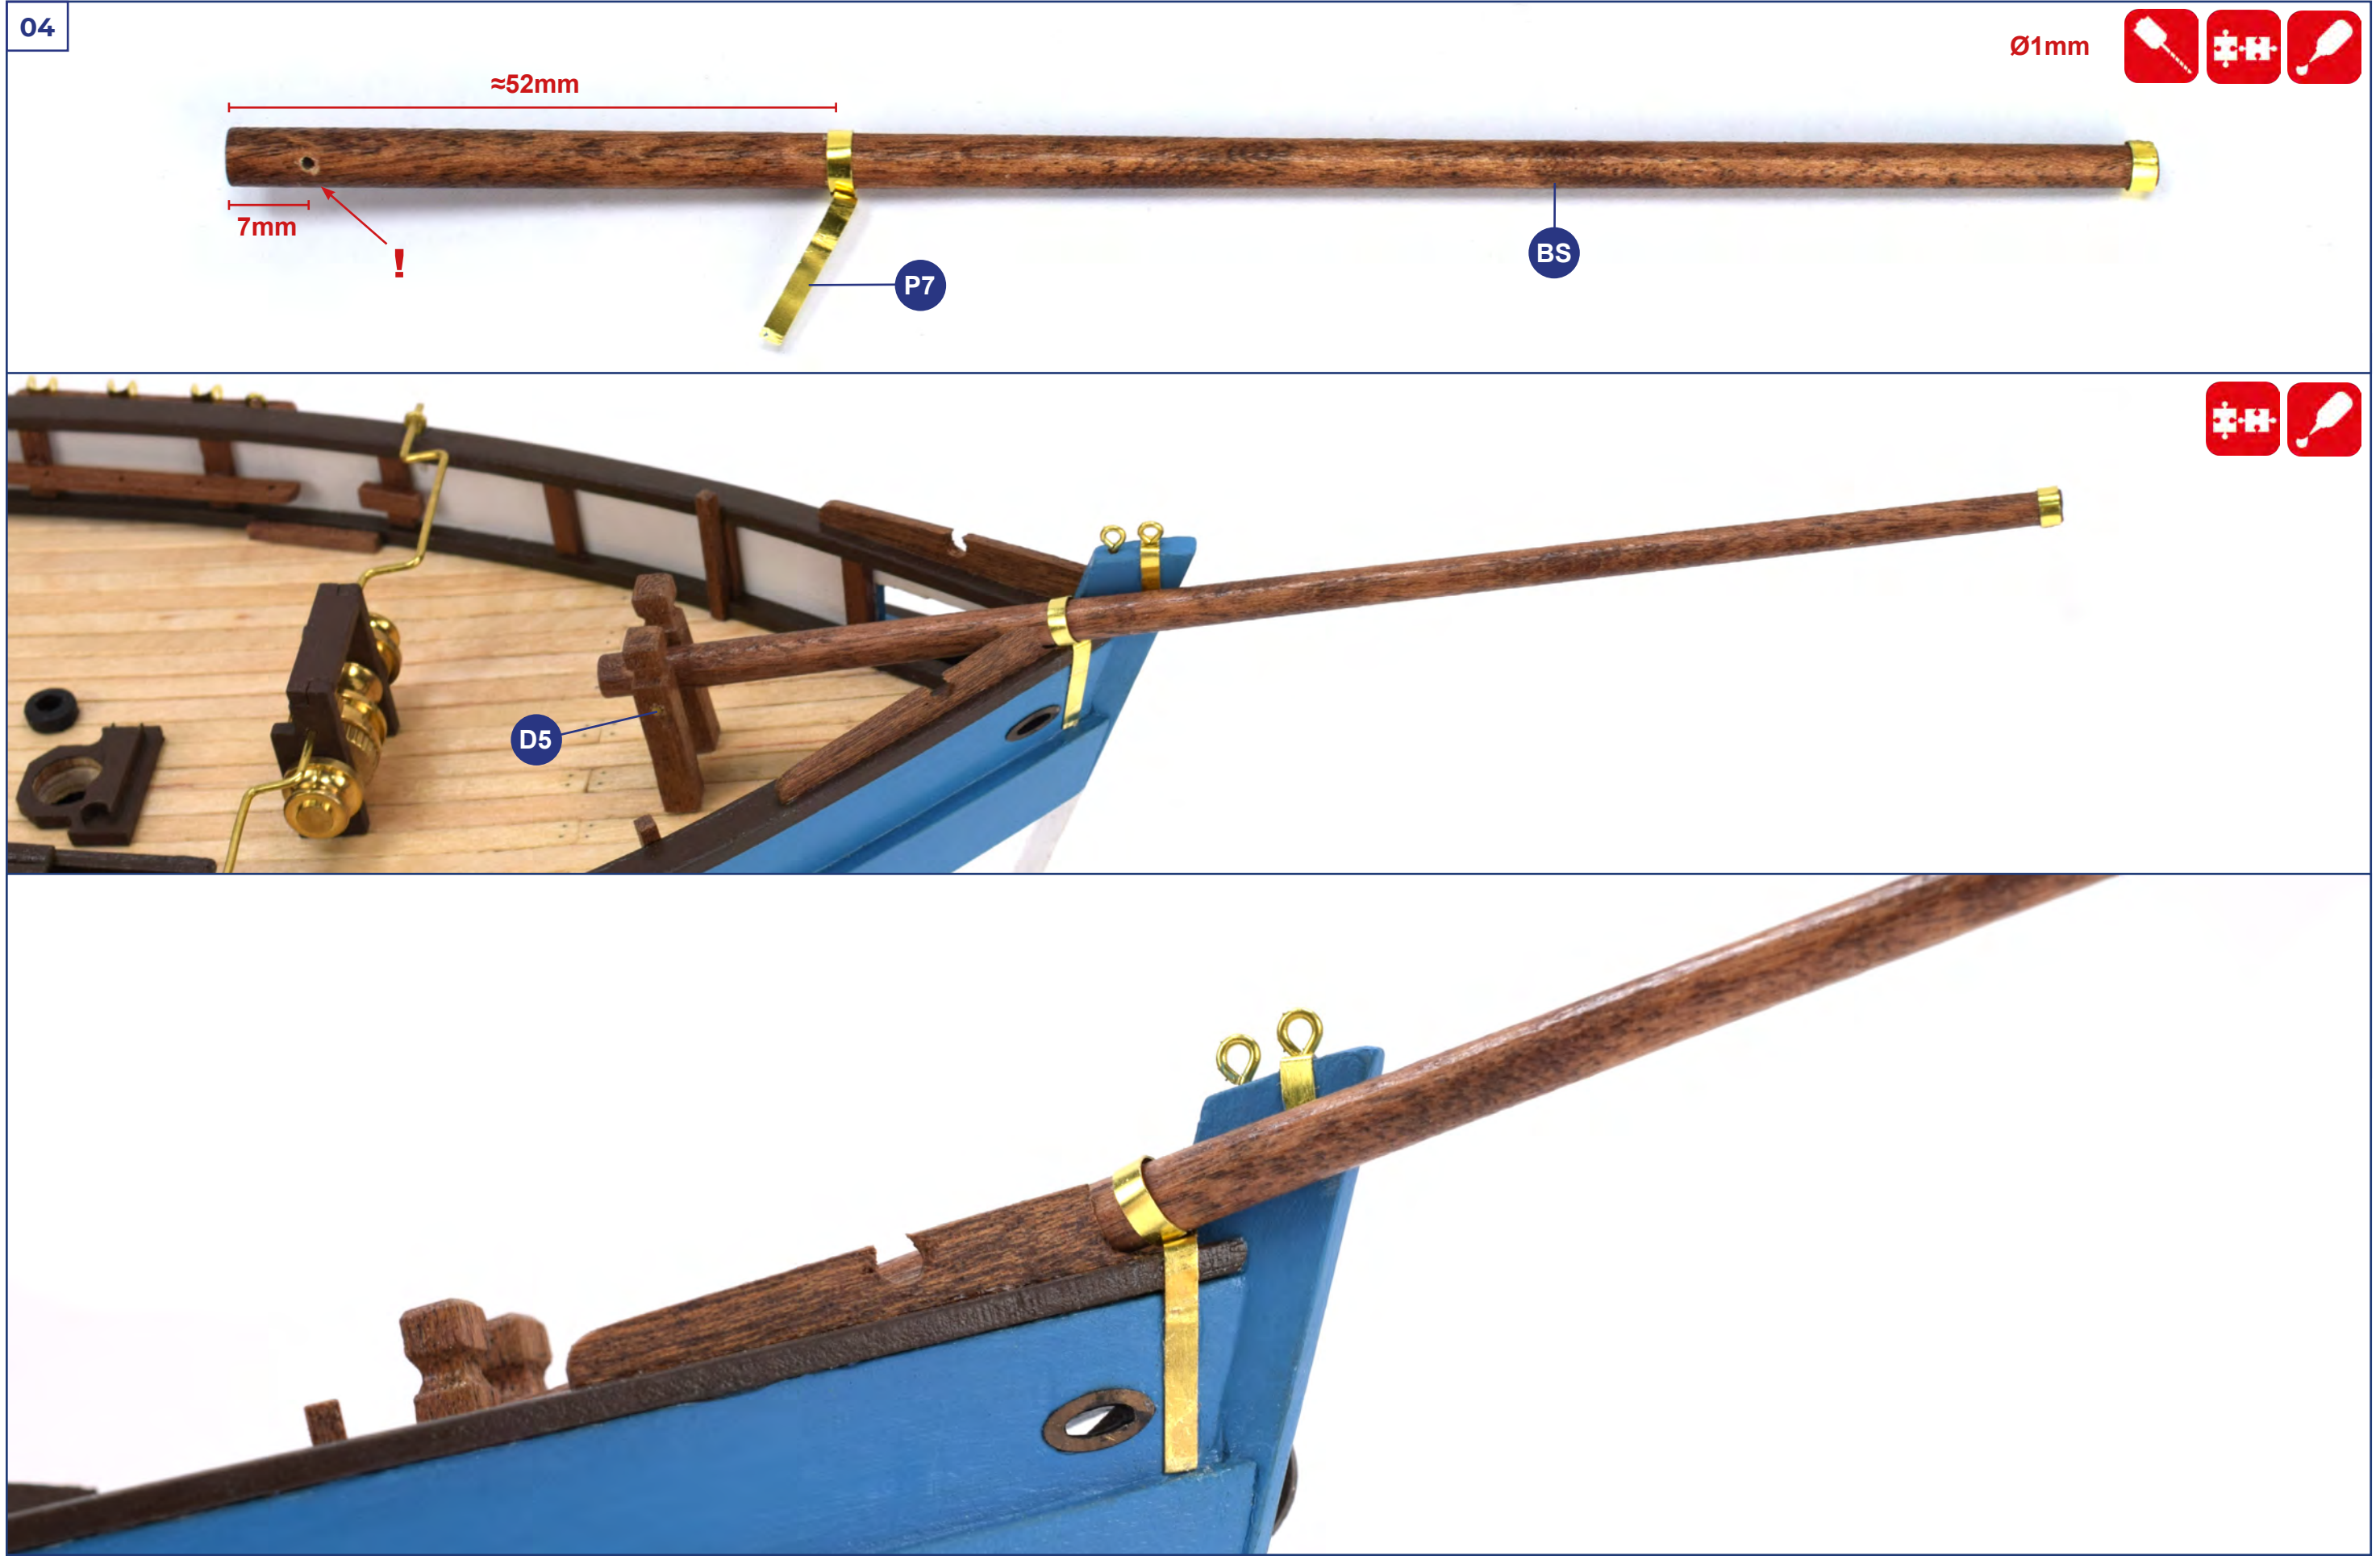


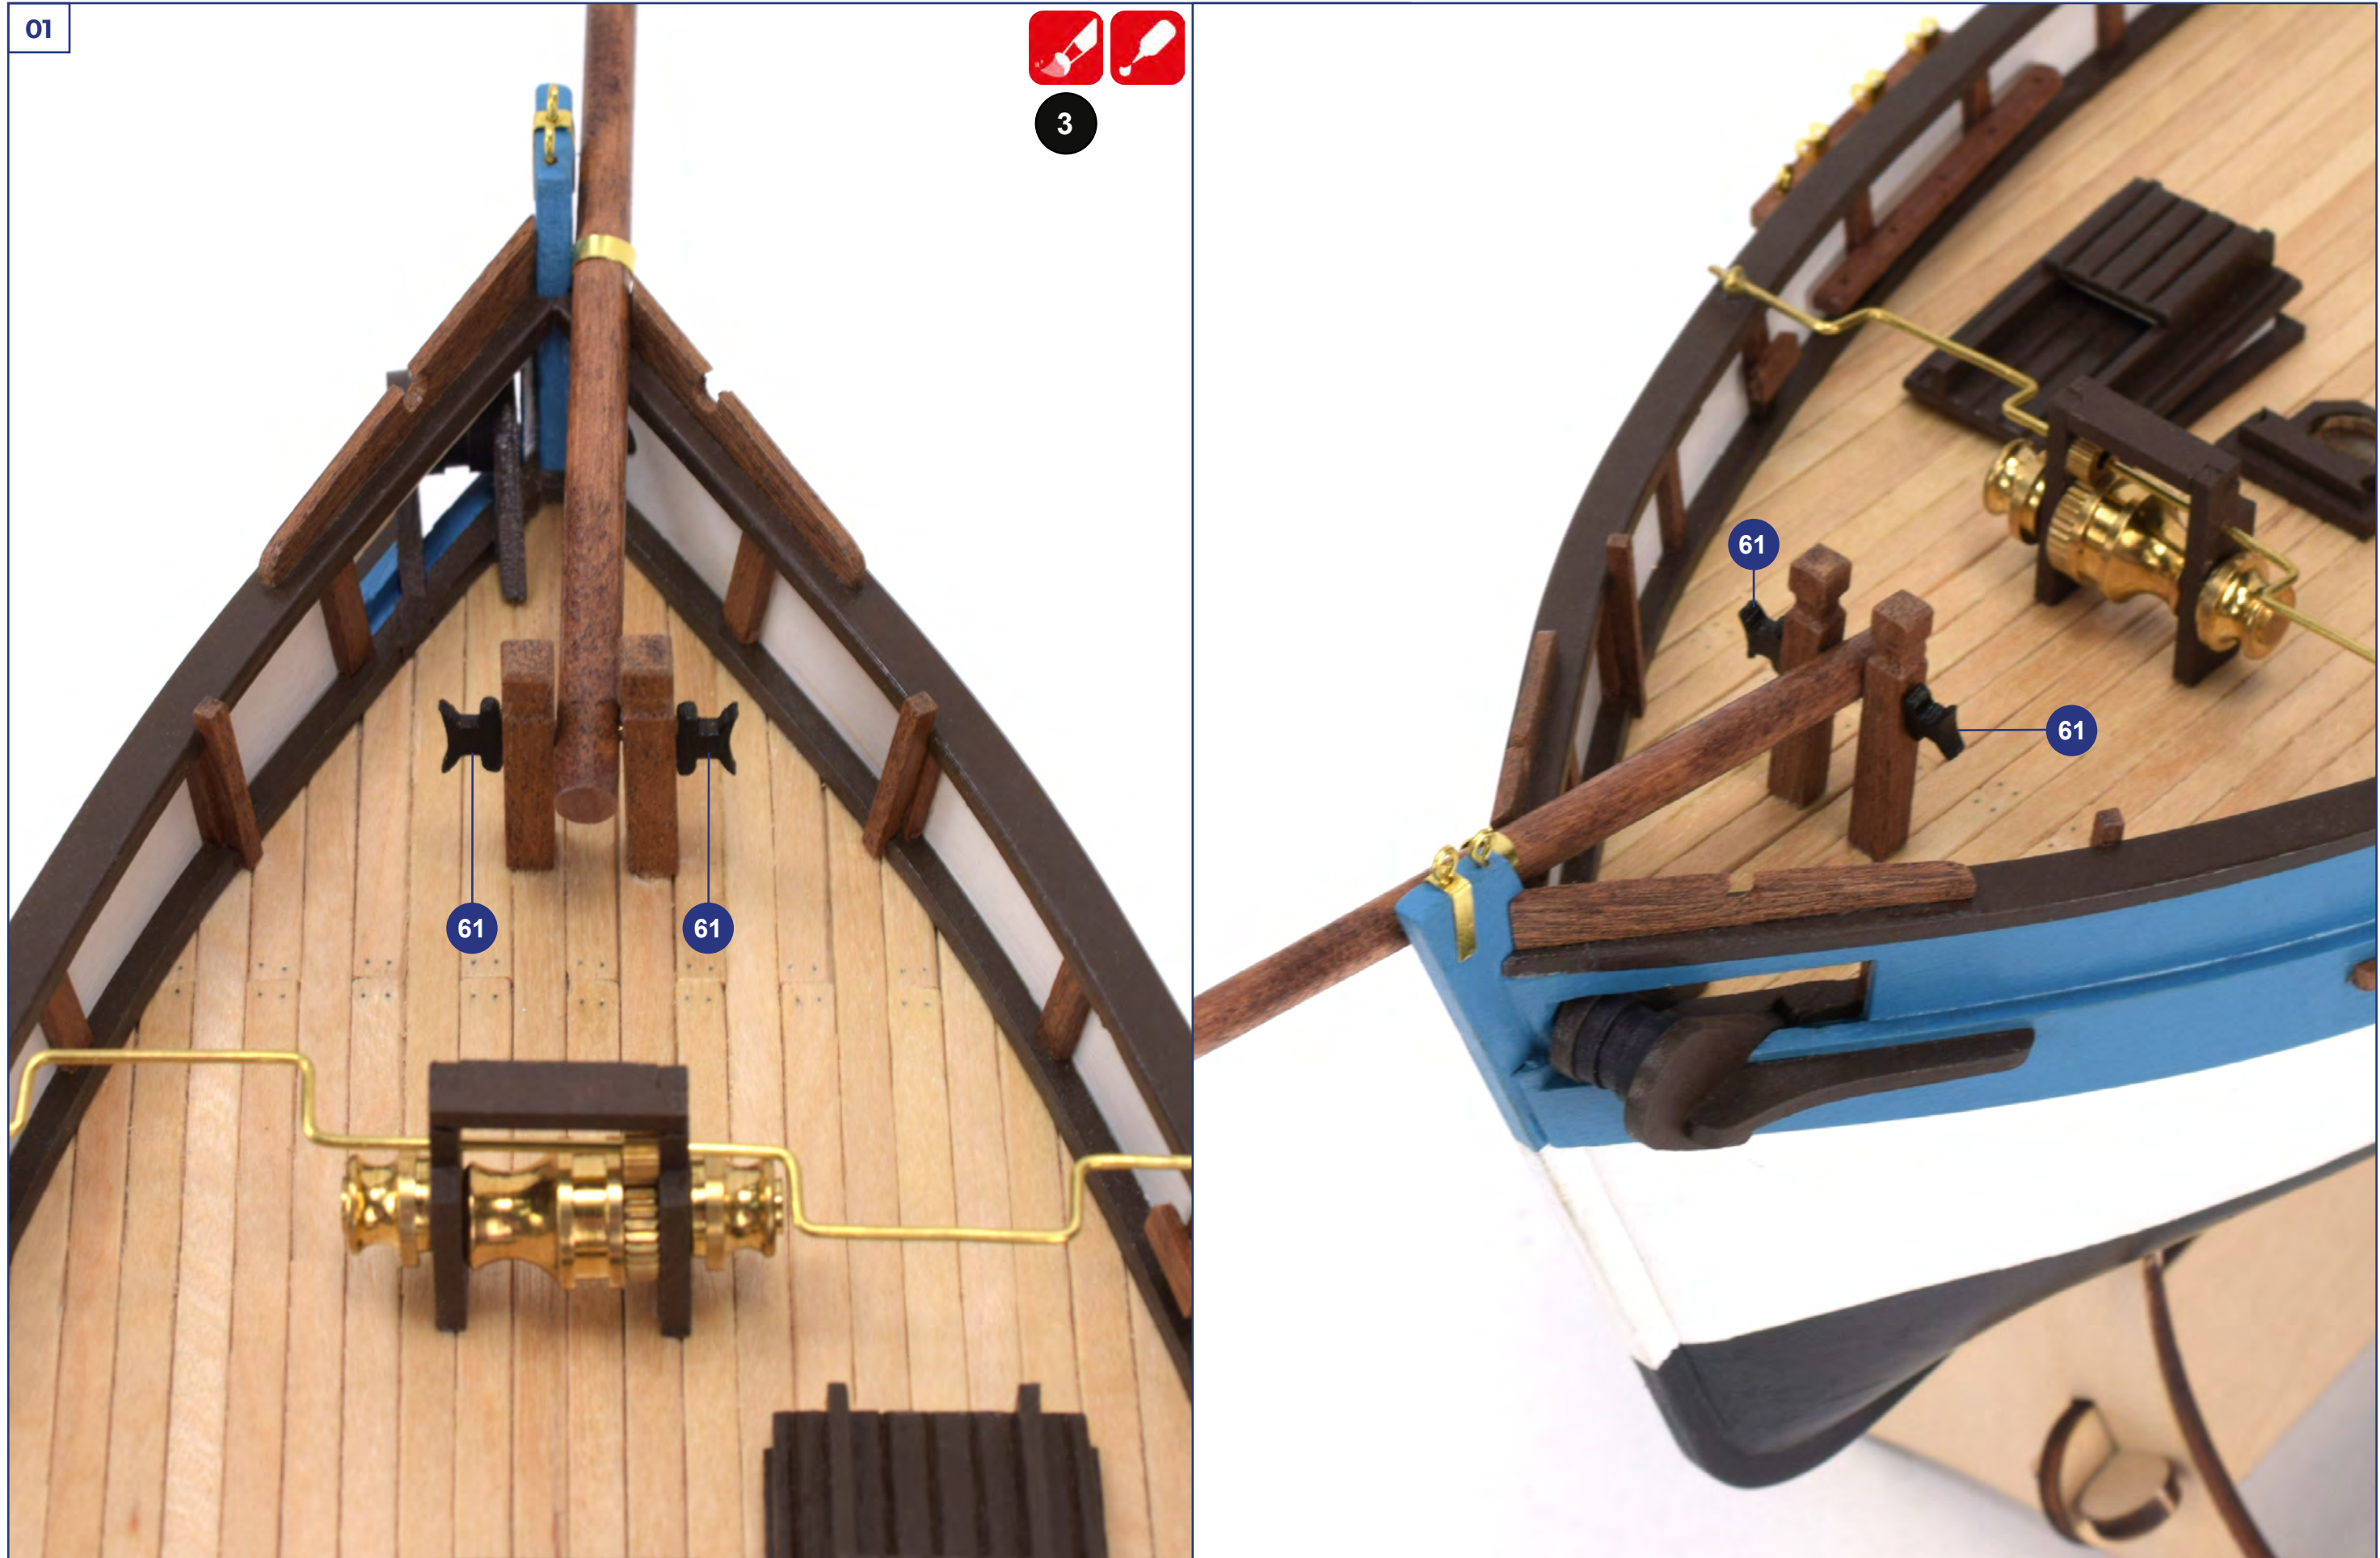

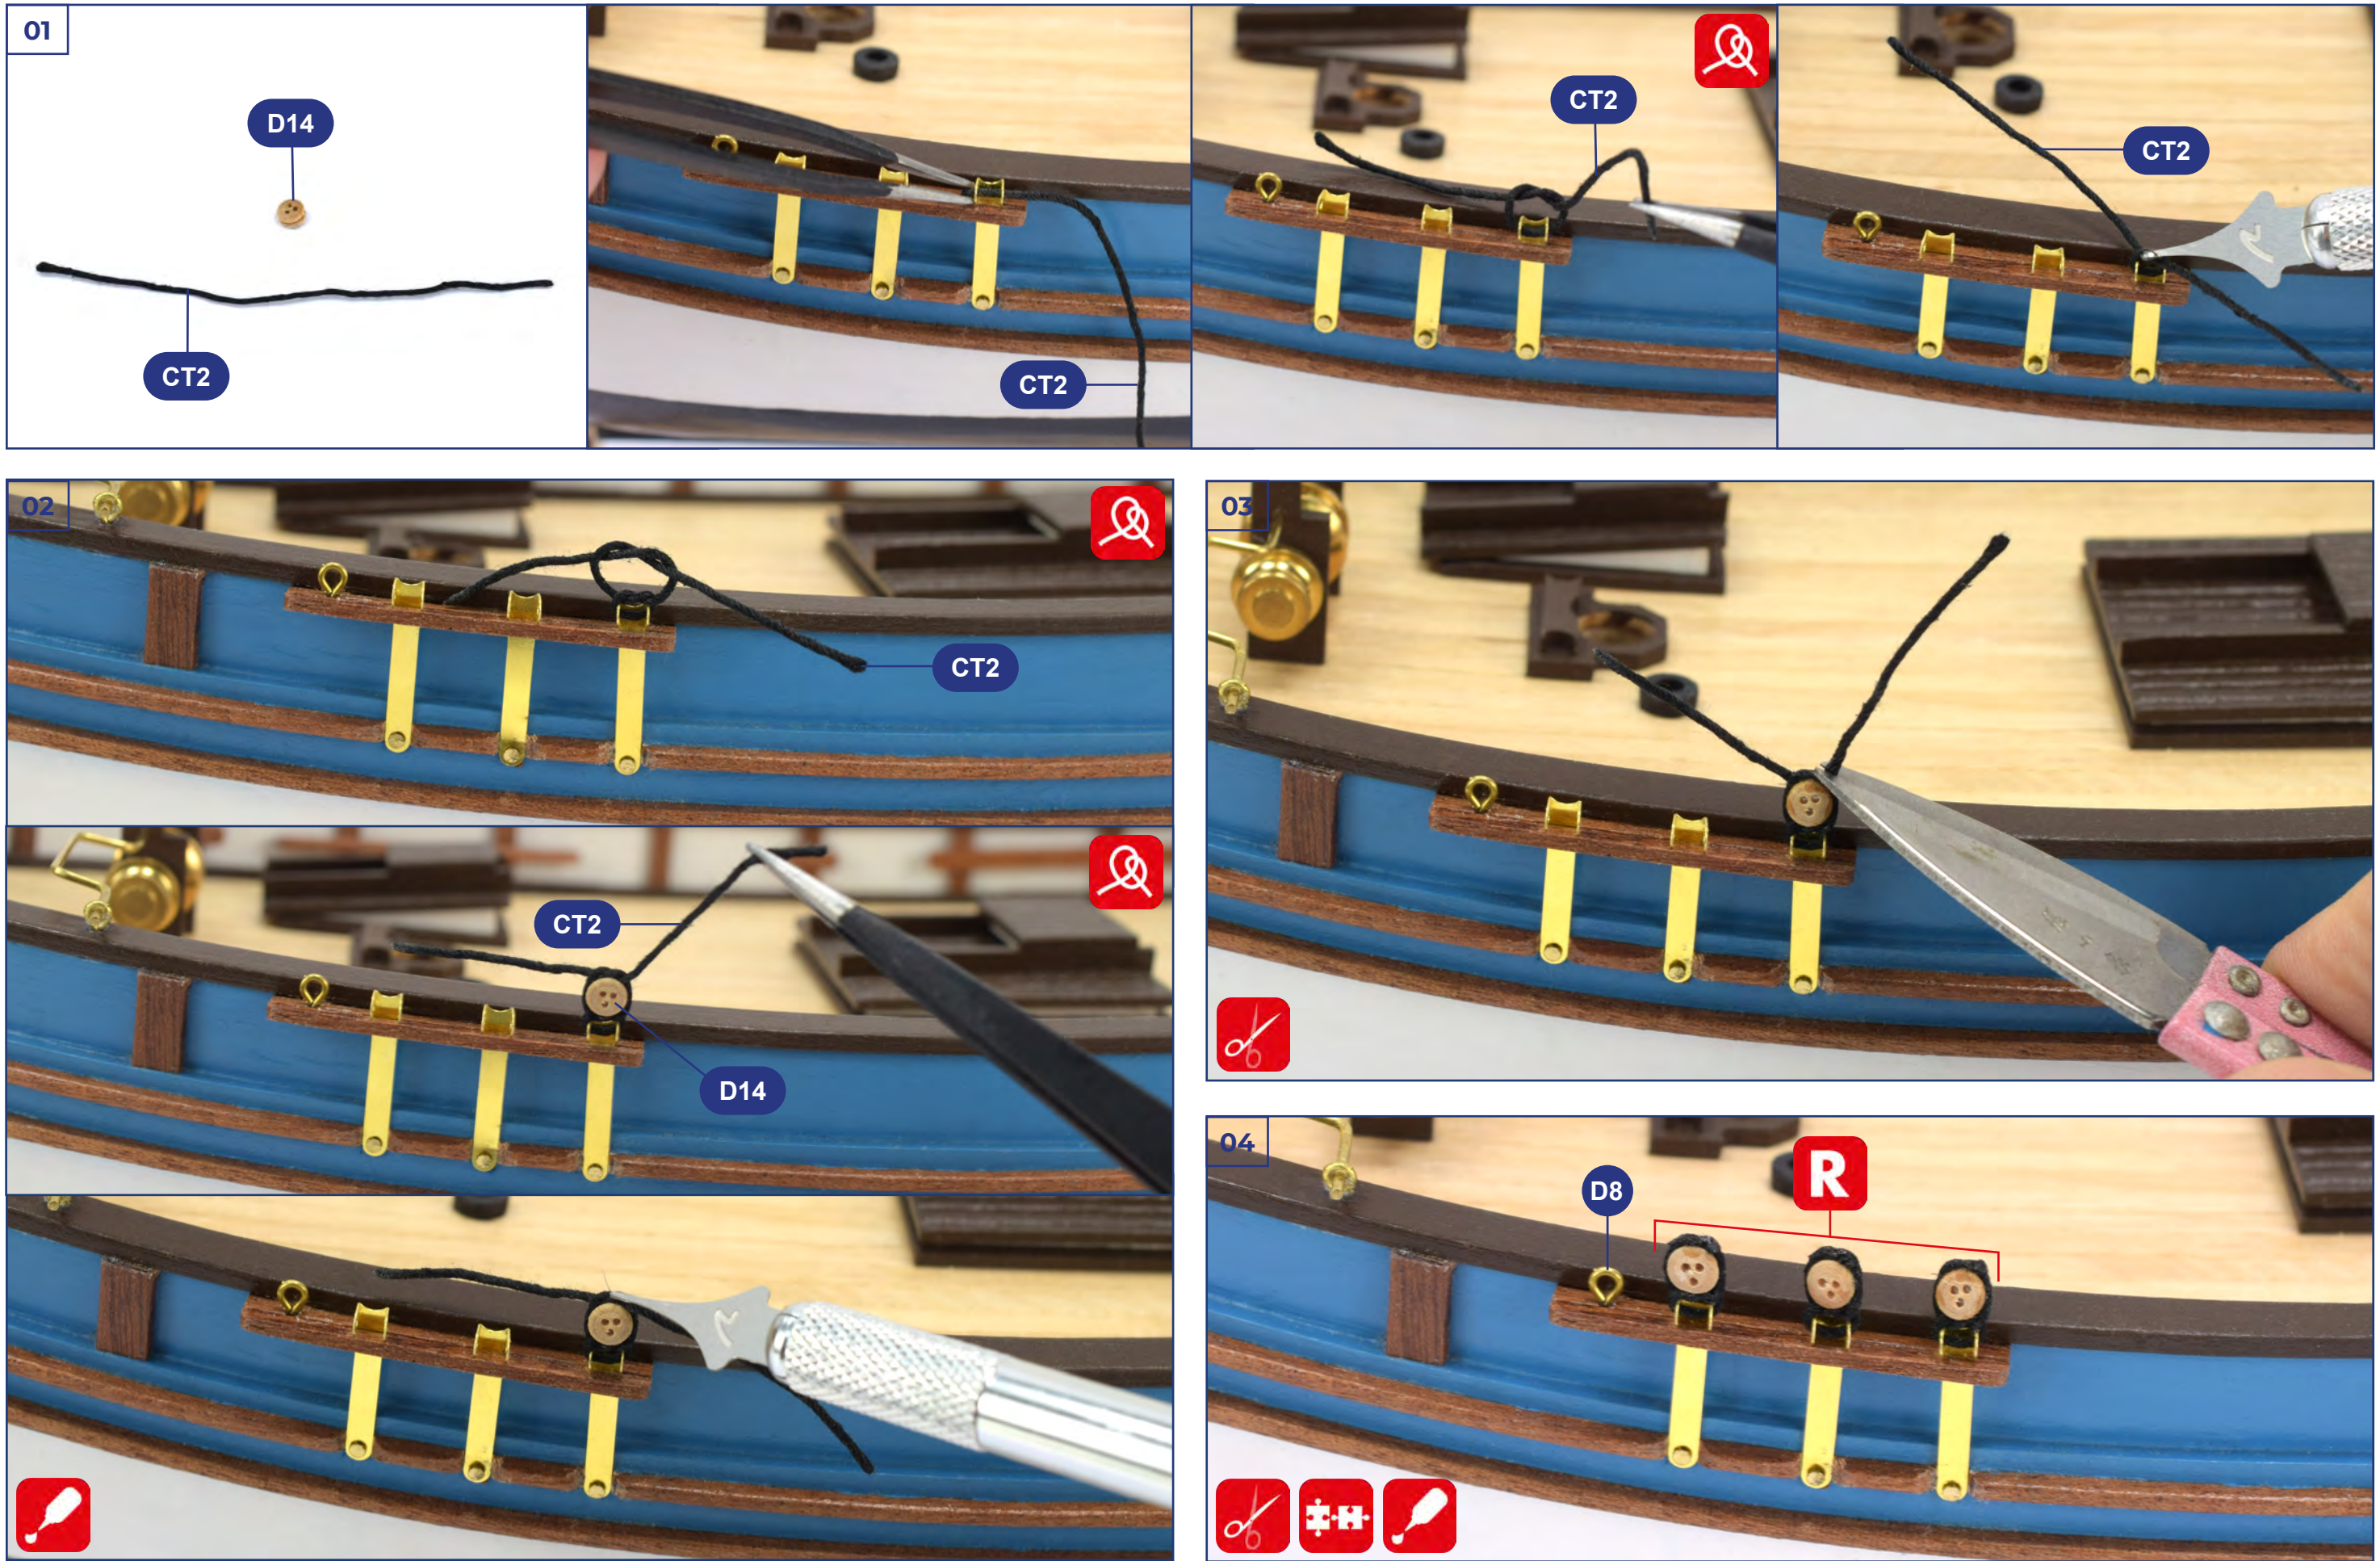

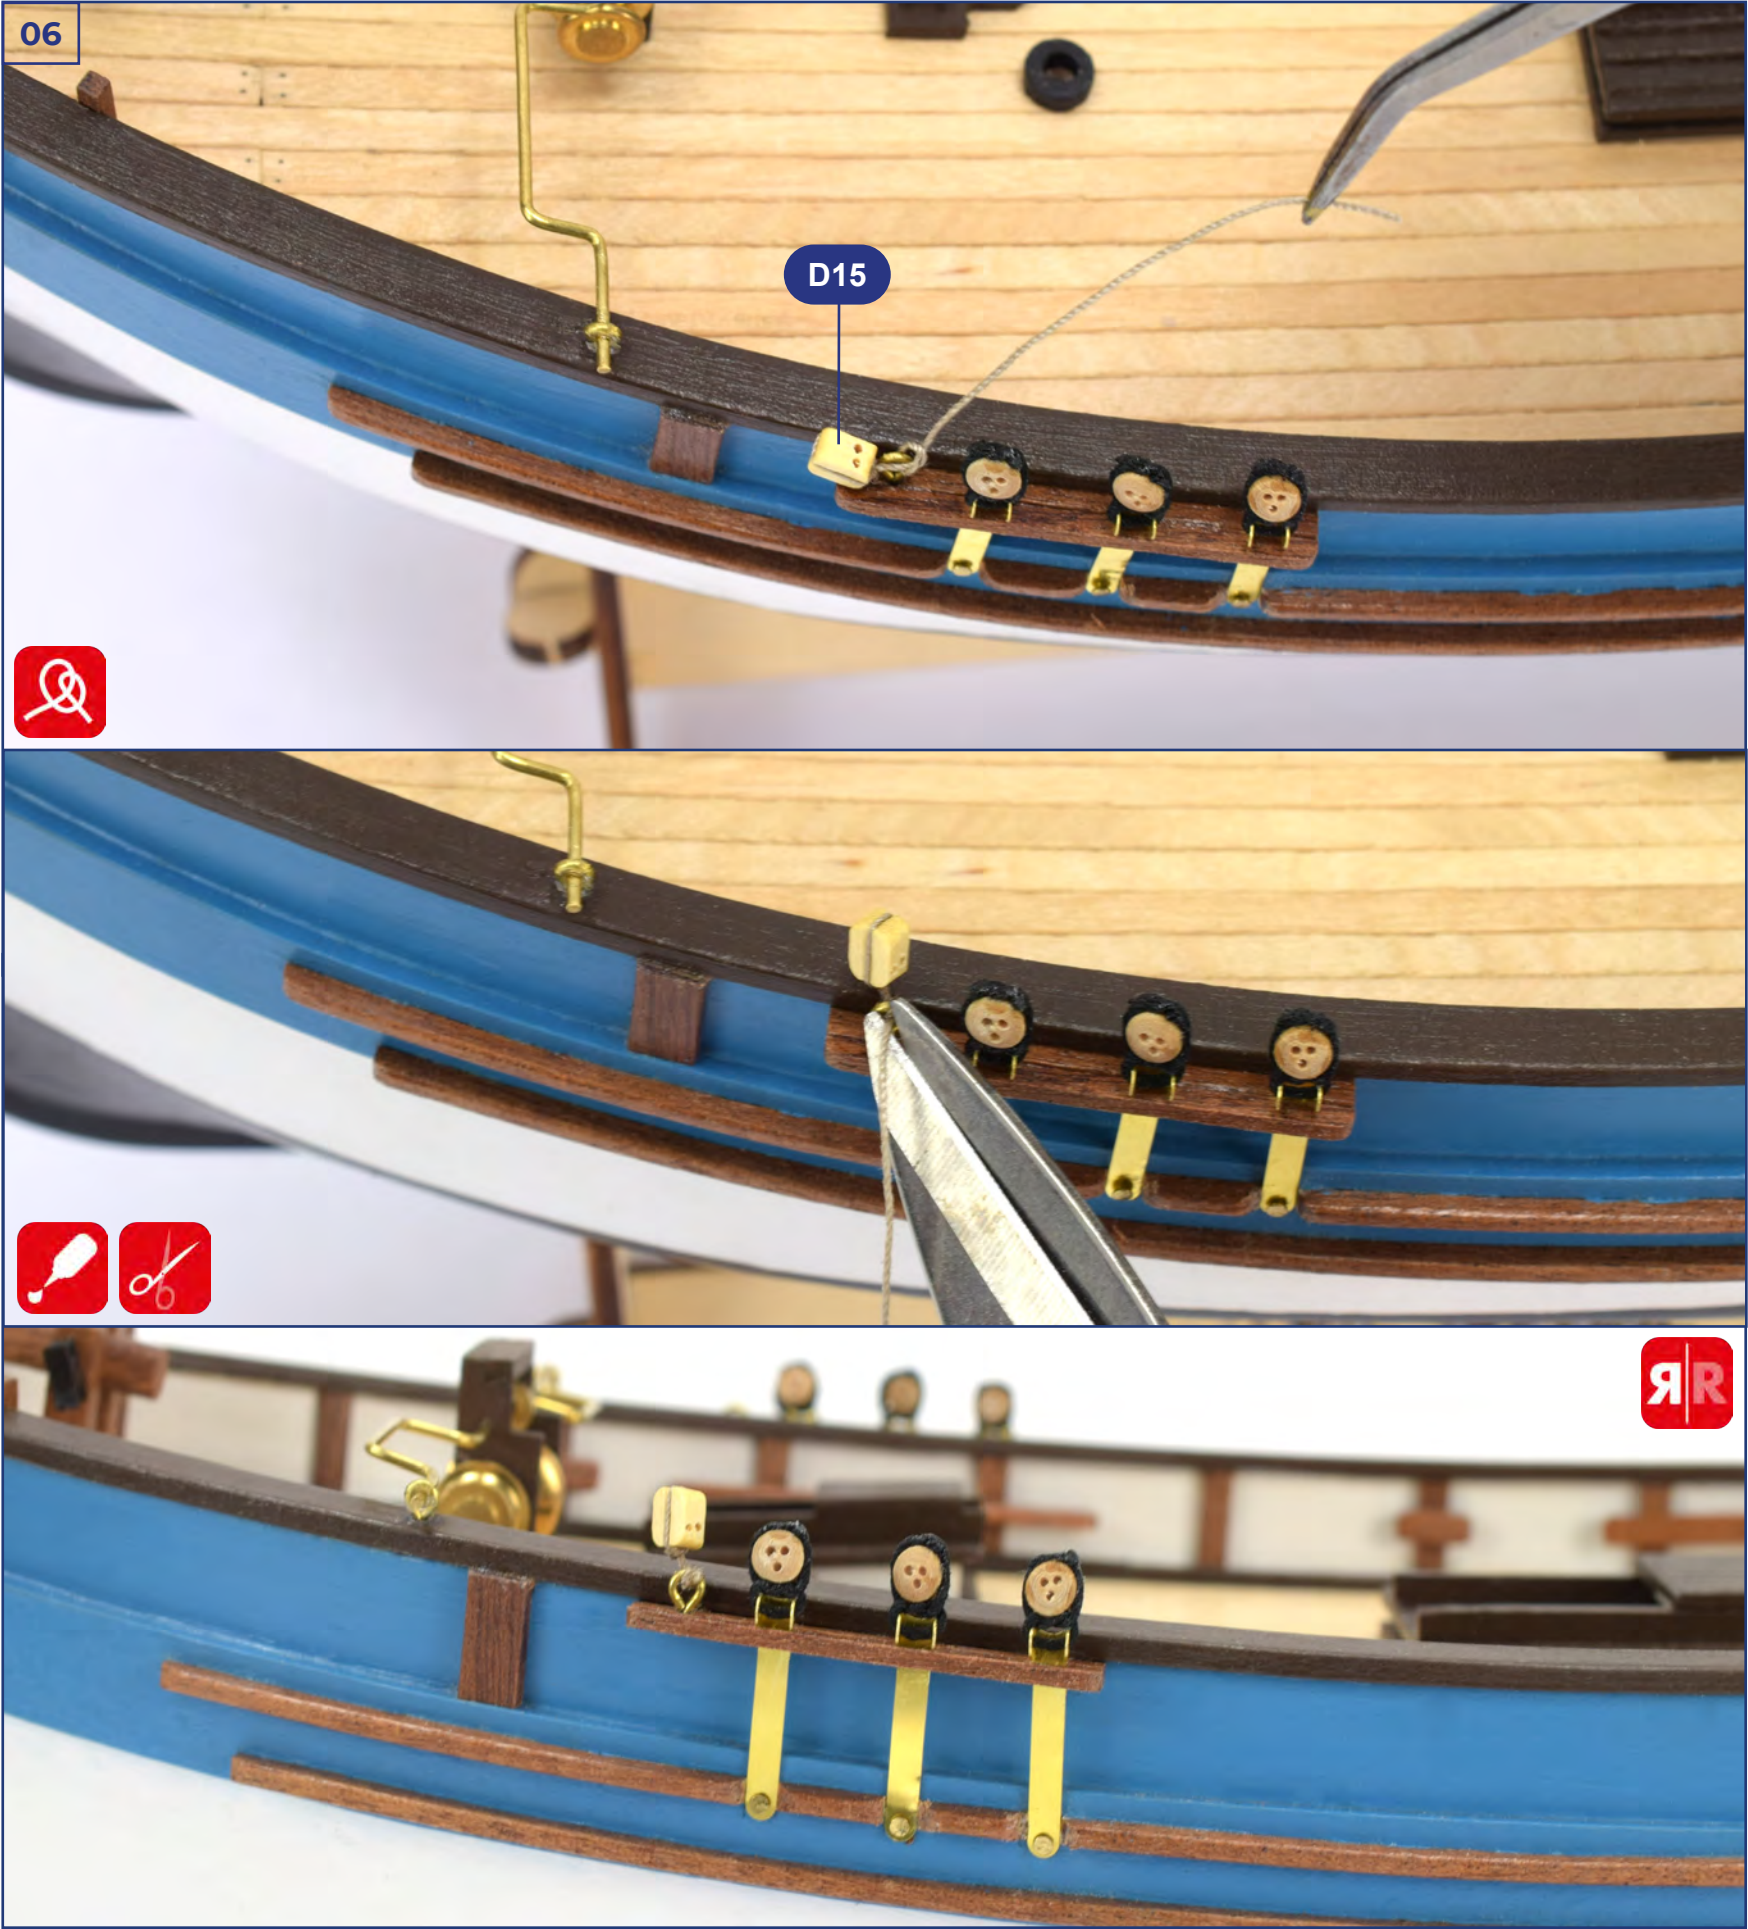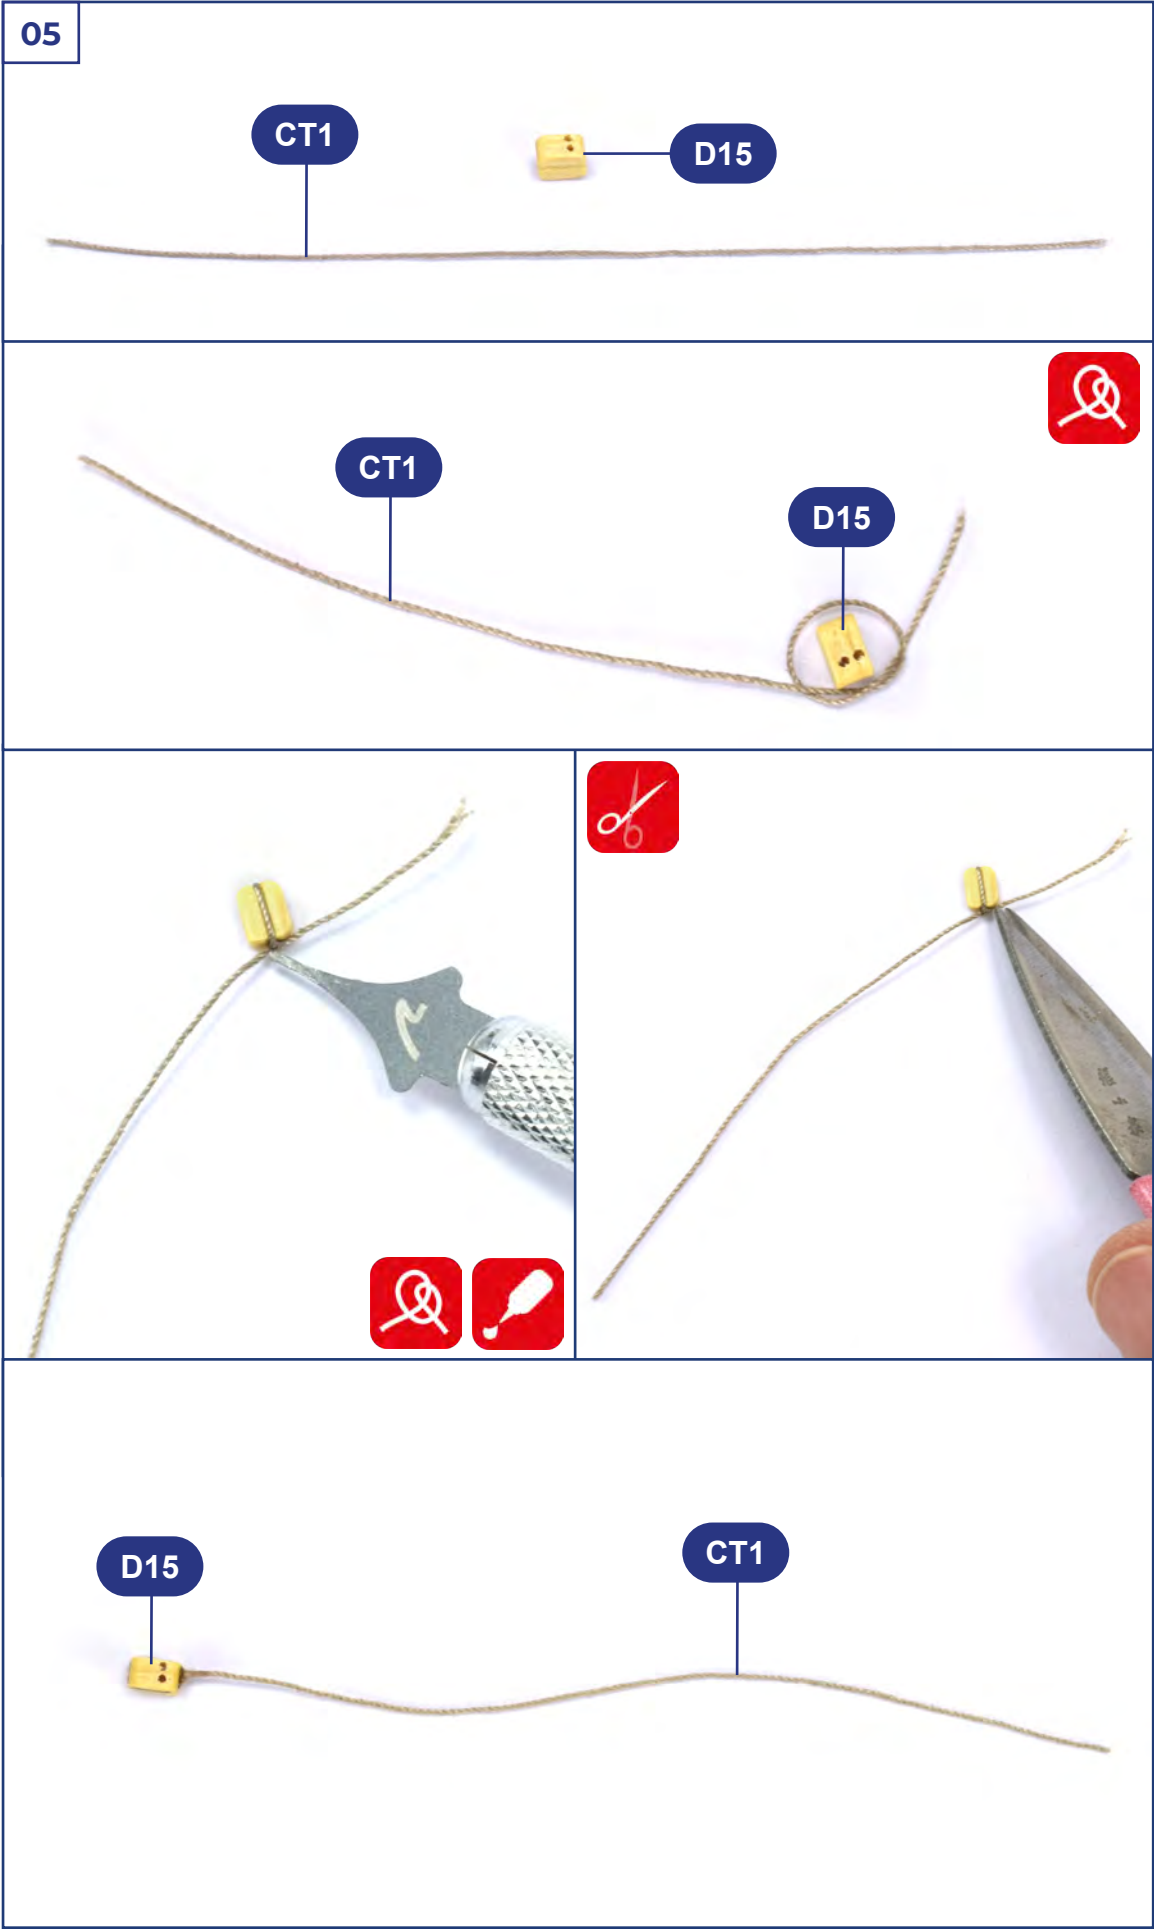

01

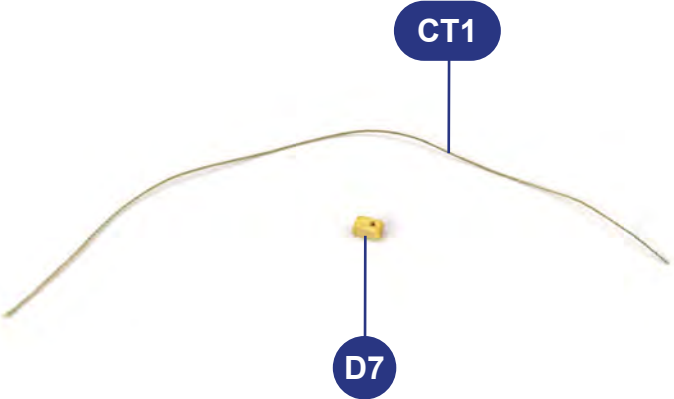


CT1


D7





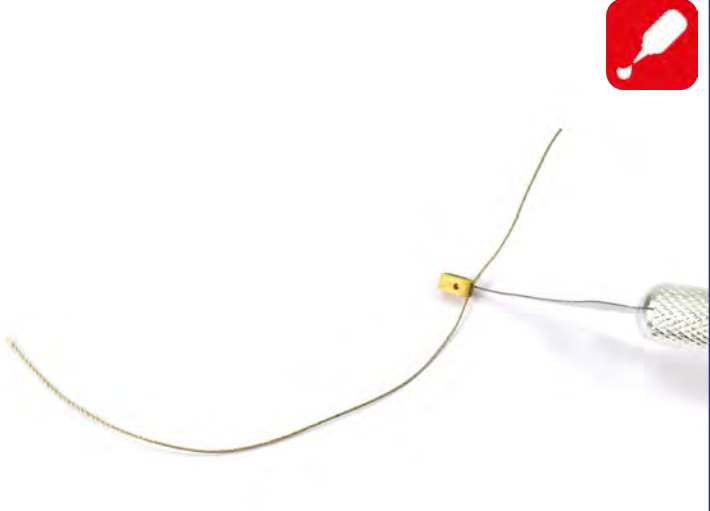



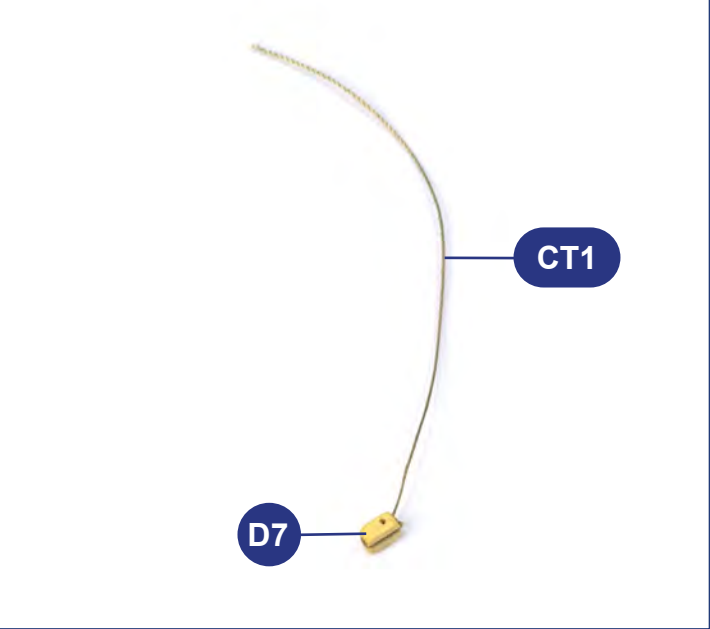

CT1


D7

02



Ø0,5mm




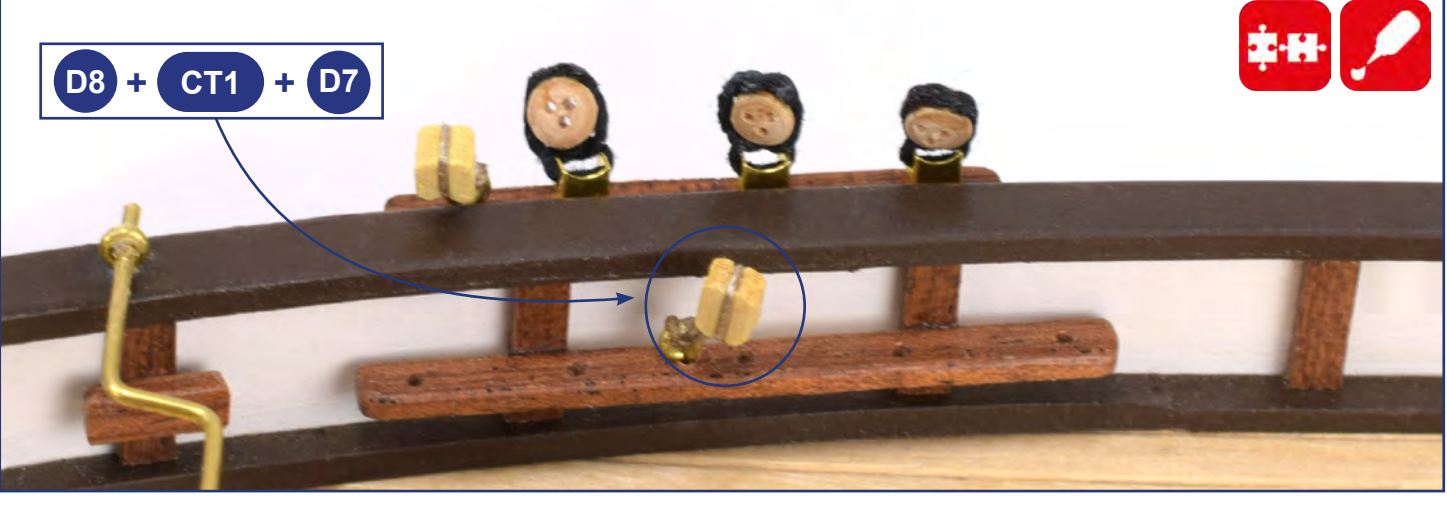

D8 + CT1 + D7



03

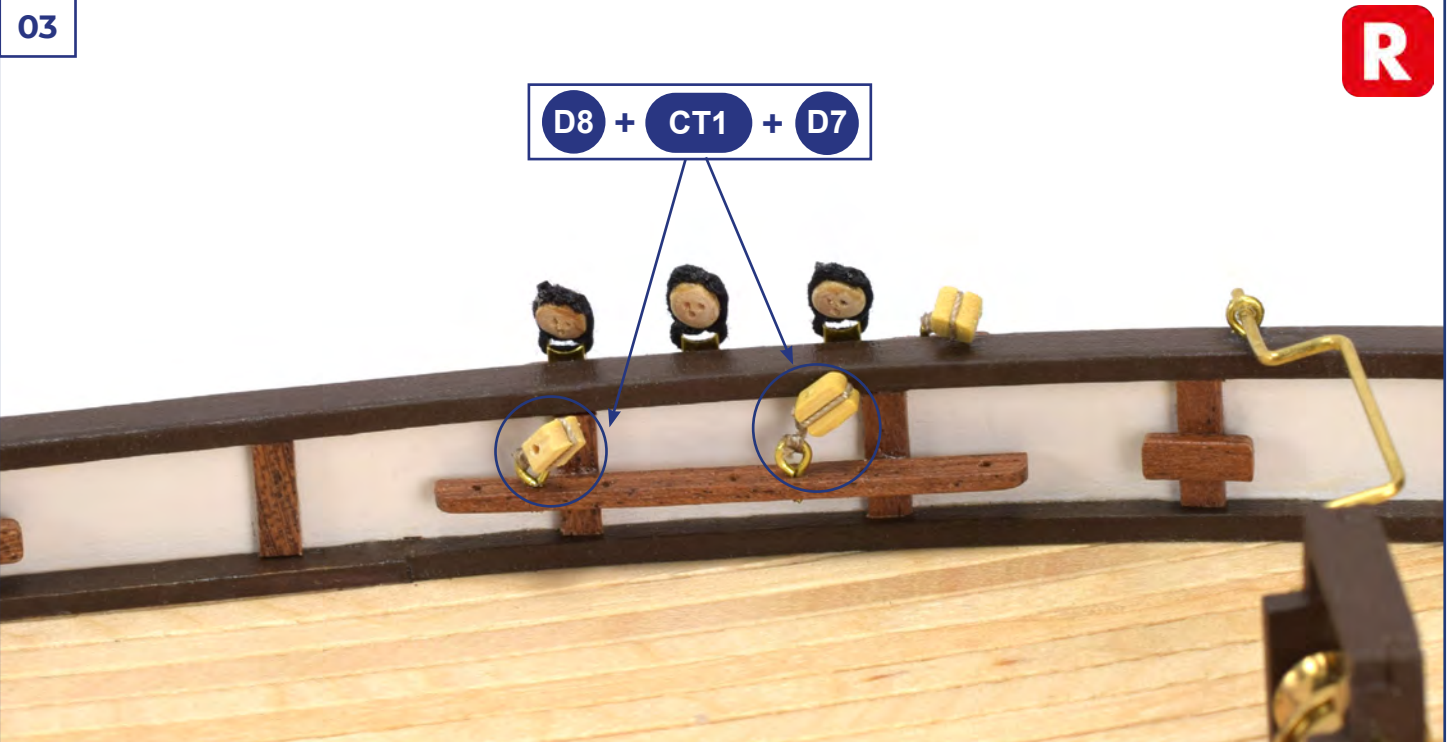

D8 + CT1 + D7



04

Ø0,5mm

3




D8 + CT1 + D7

61

16mm

7mm

05

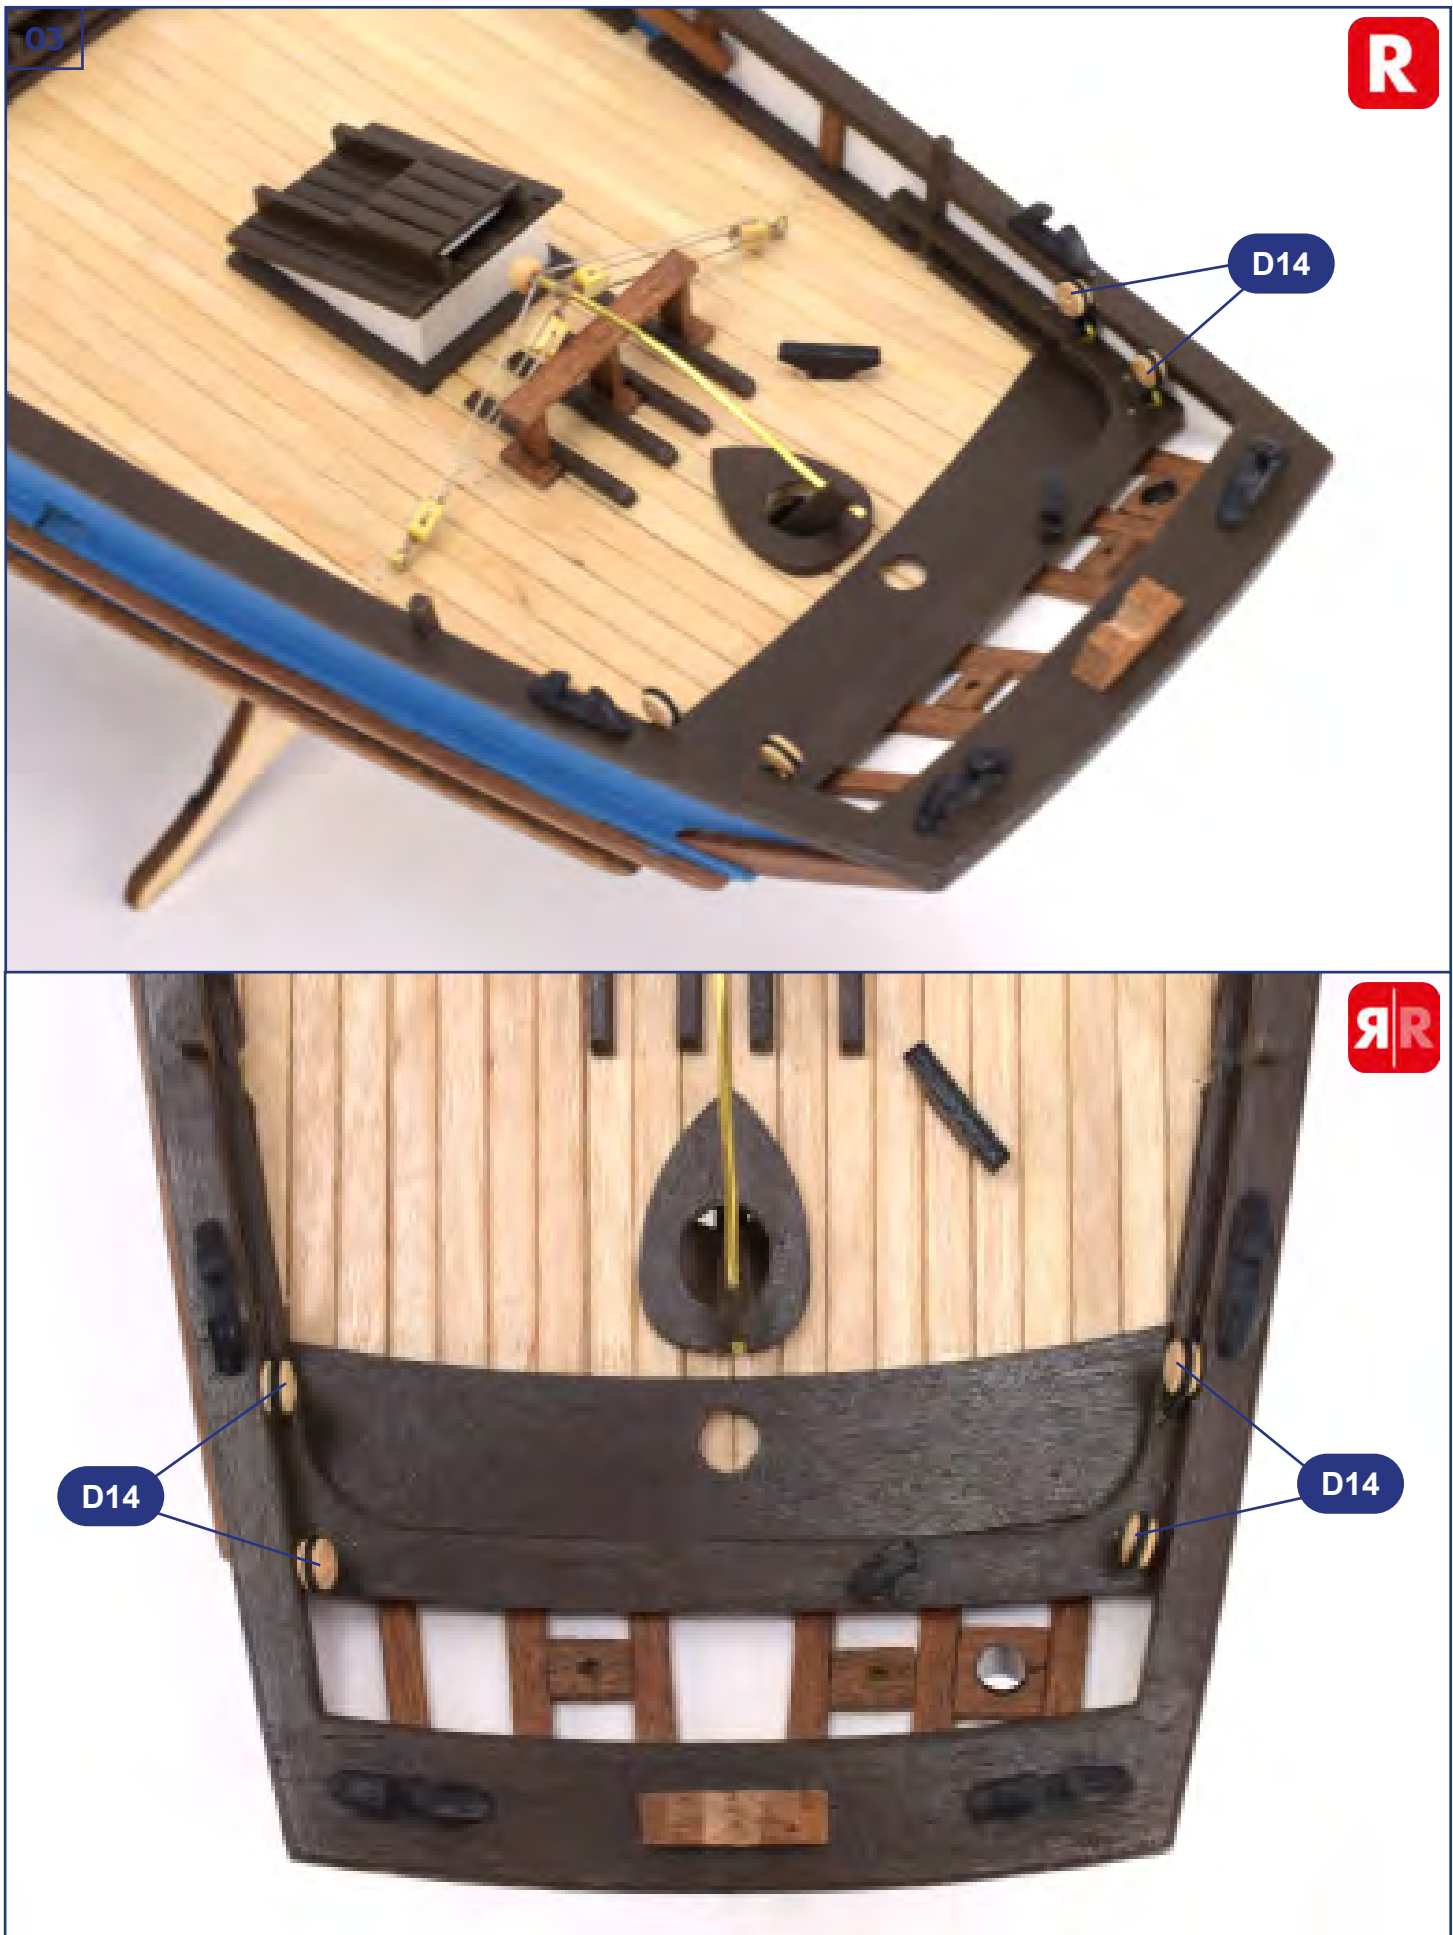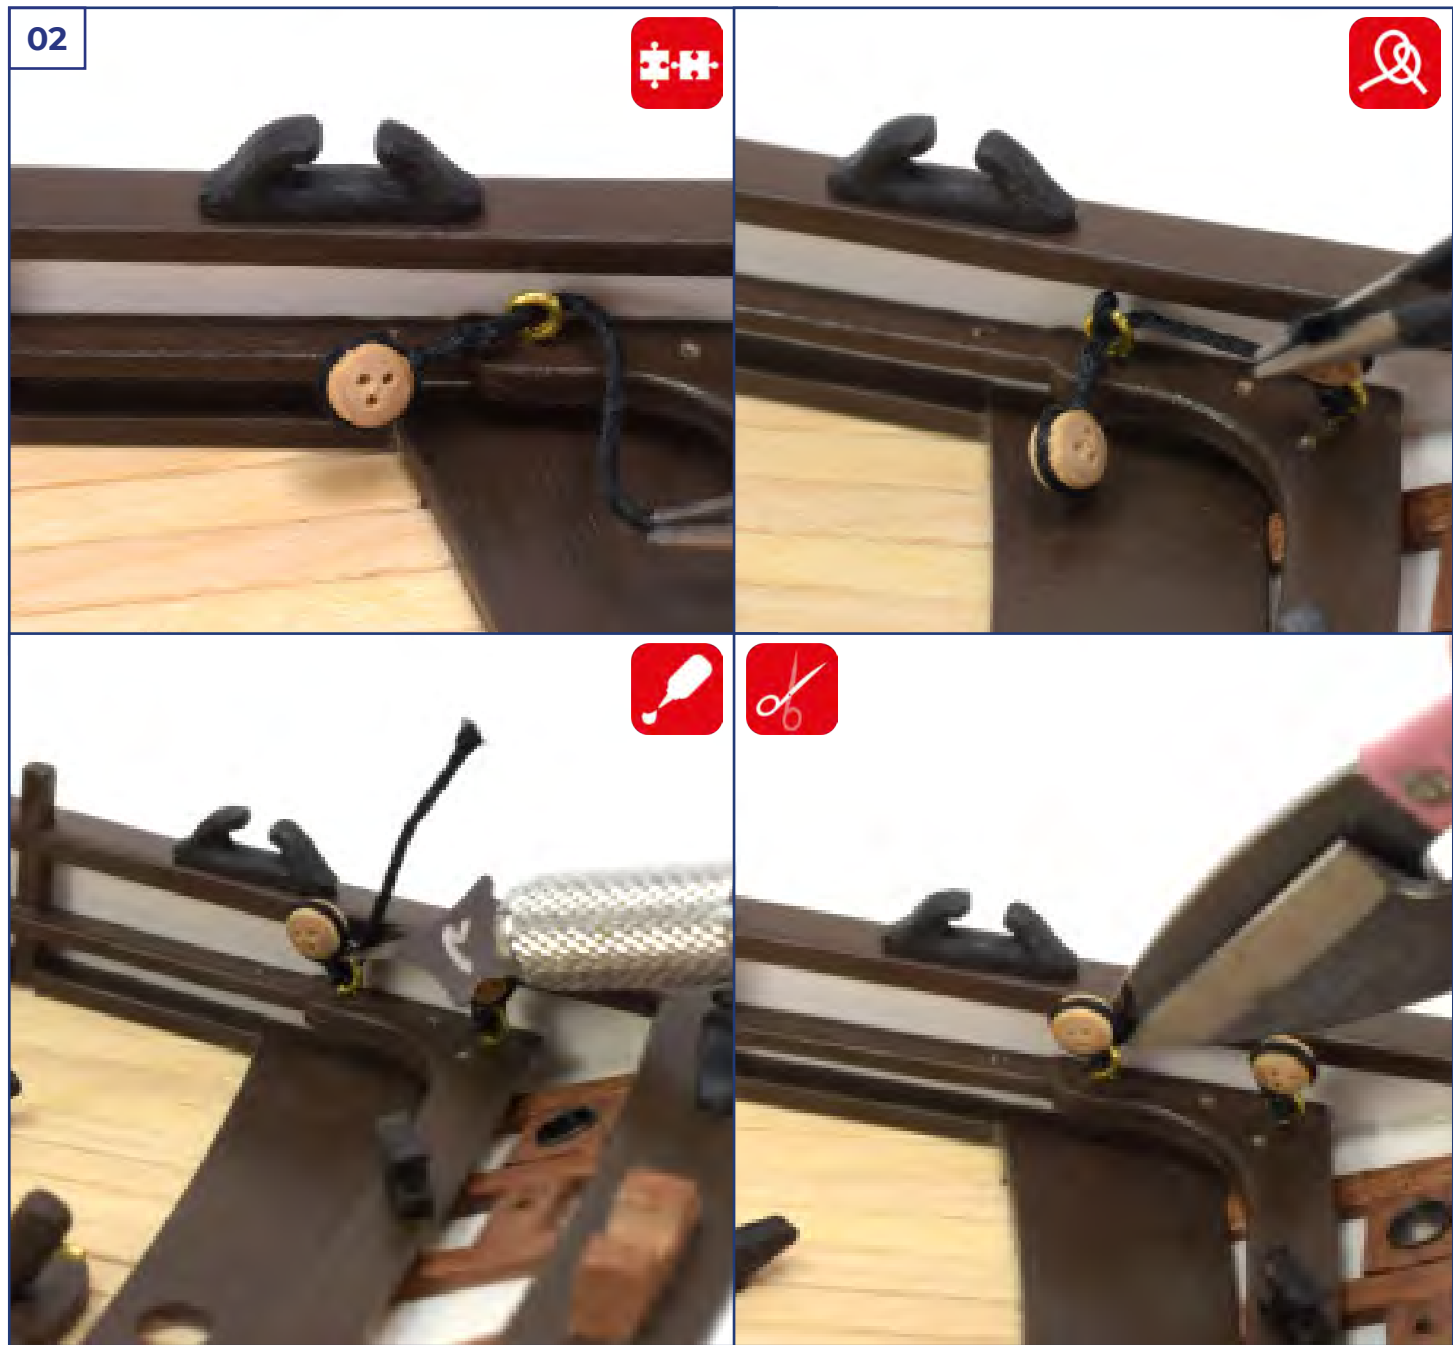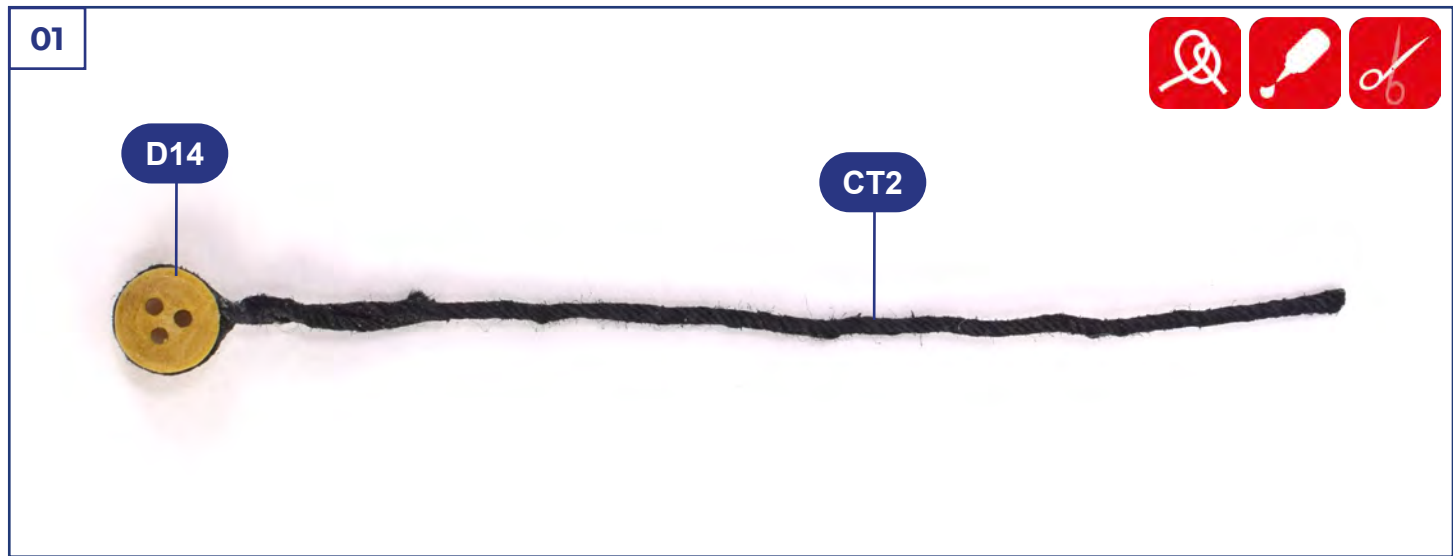

04

WS4

150mm

90°

90°

90°

90

WS4

R

WS5

05

R

WS4


5mm

R




WS4





WS4

01

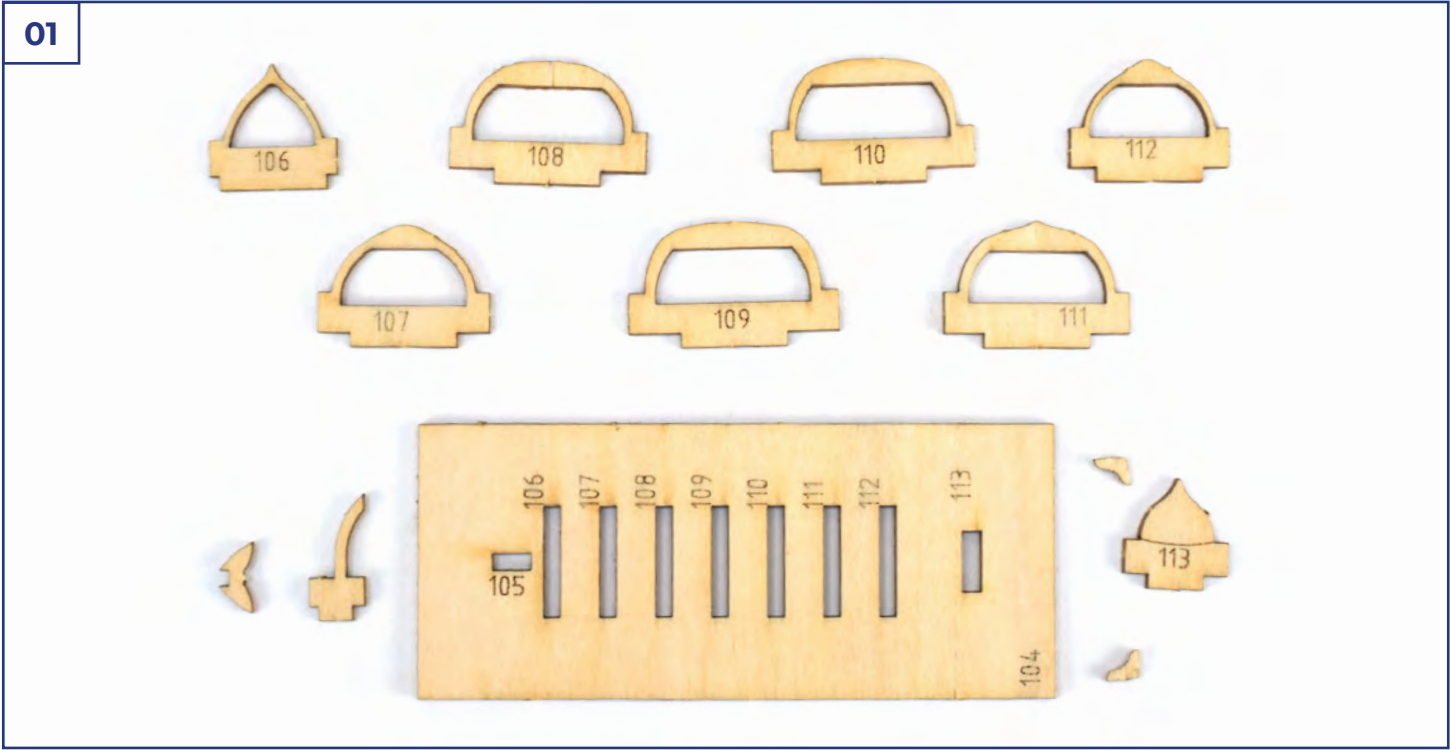

02

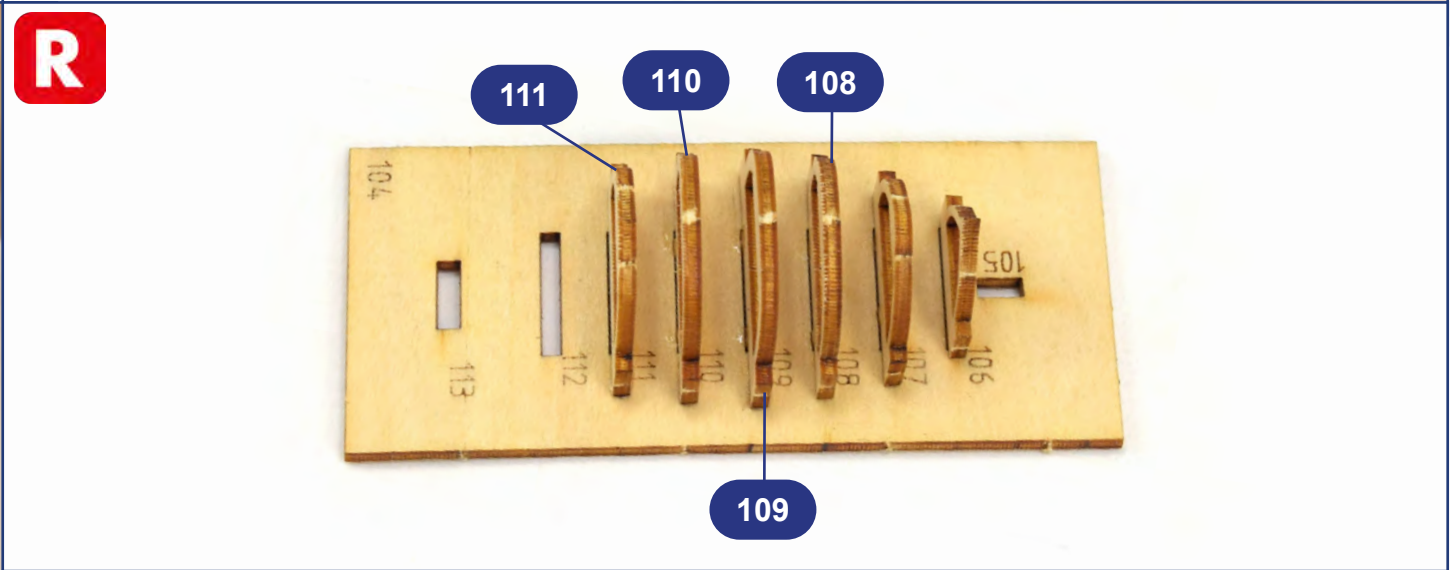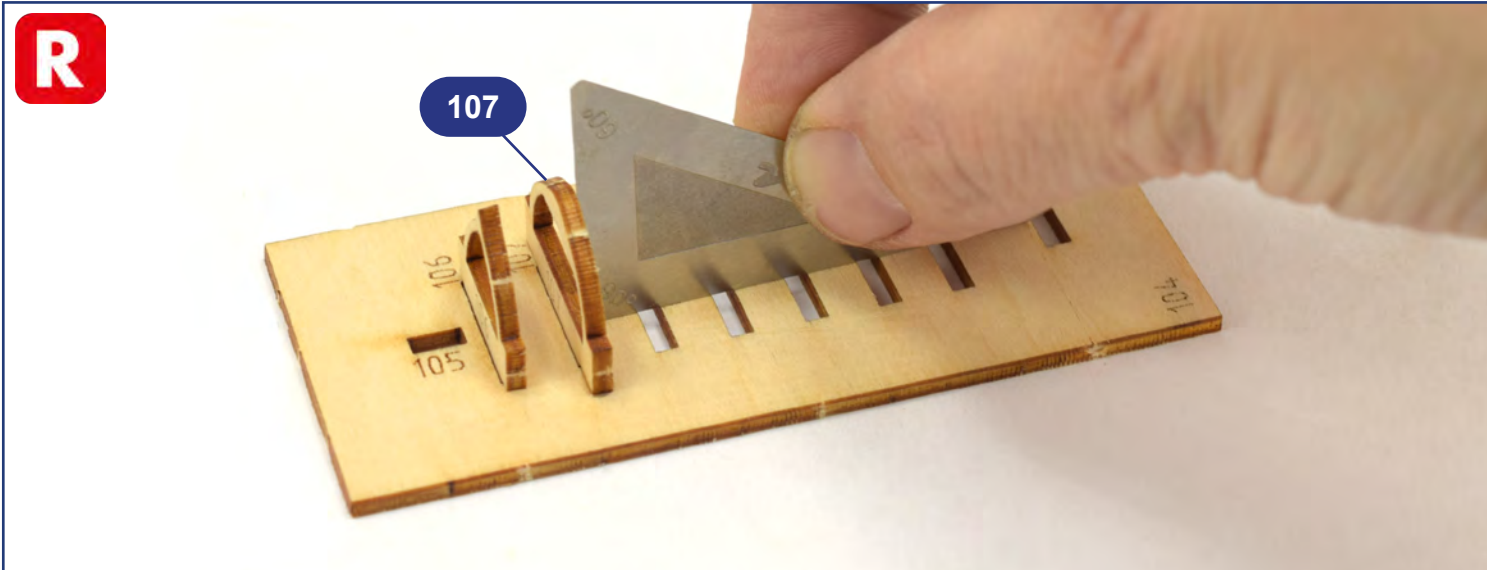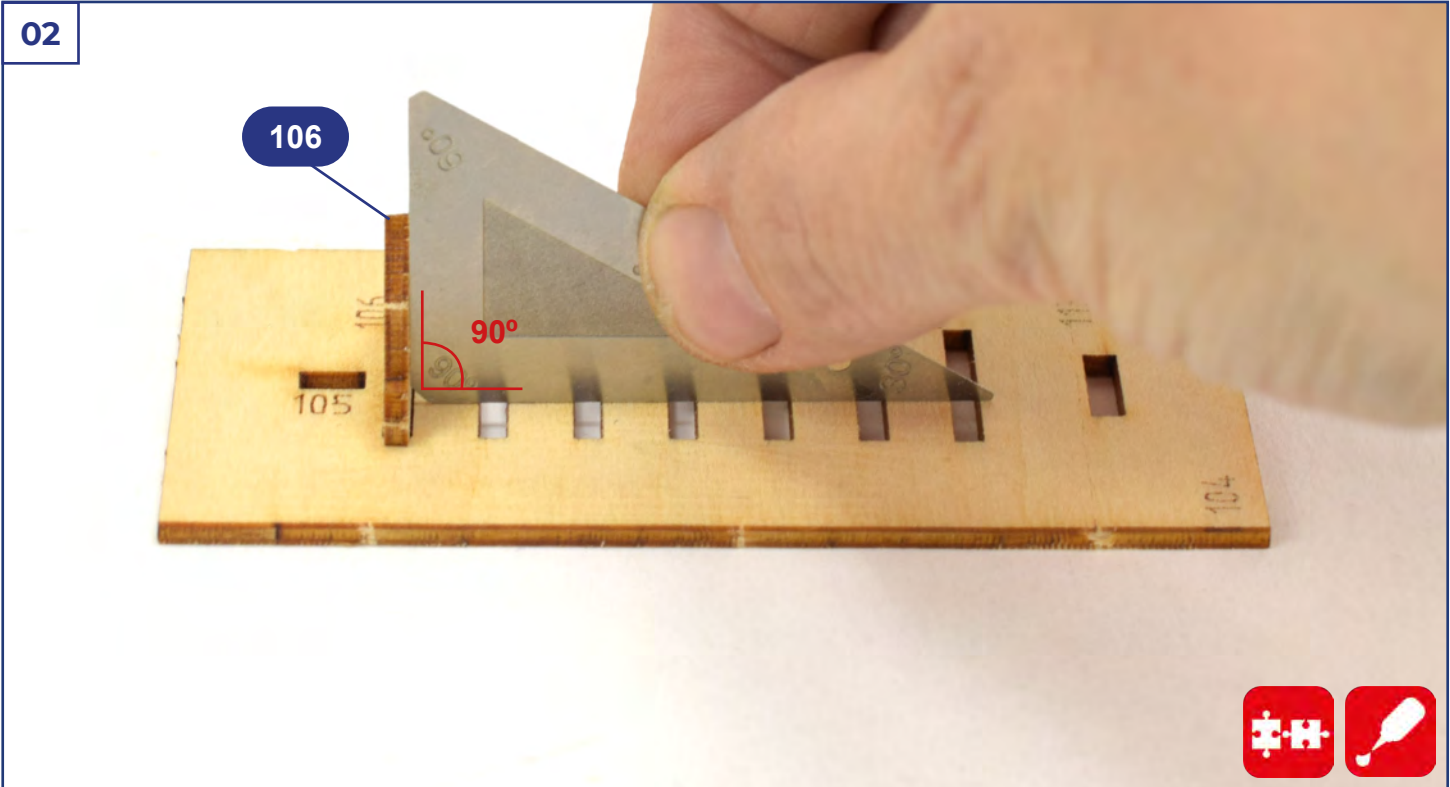


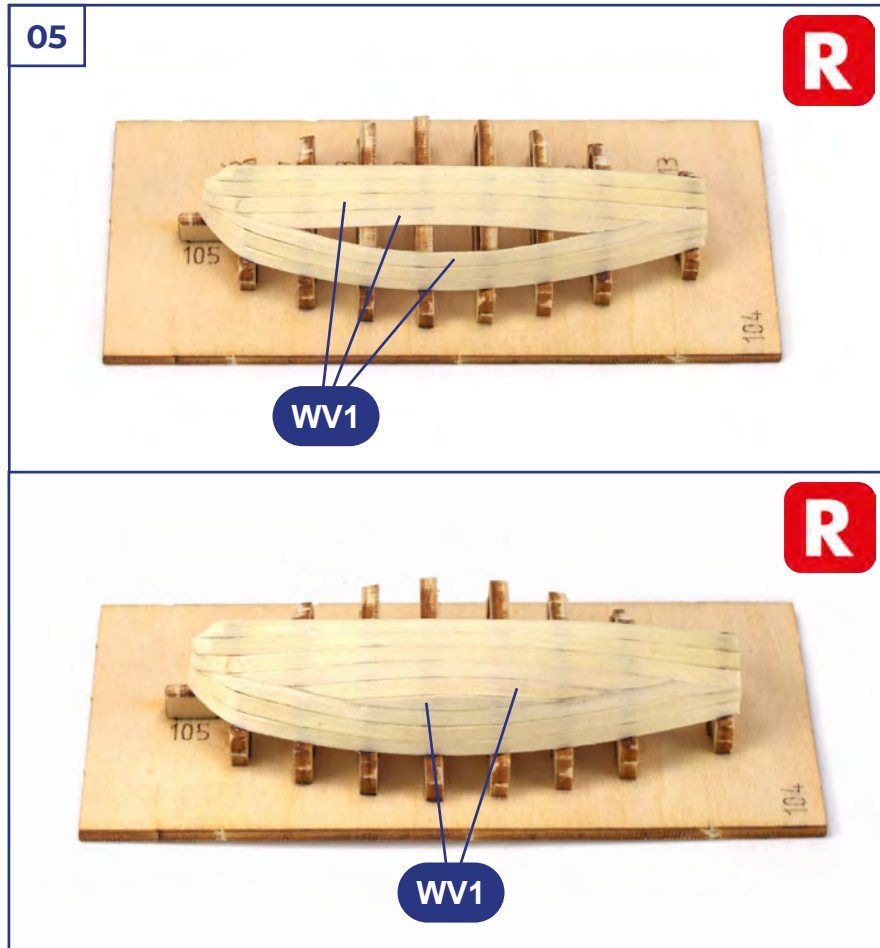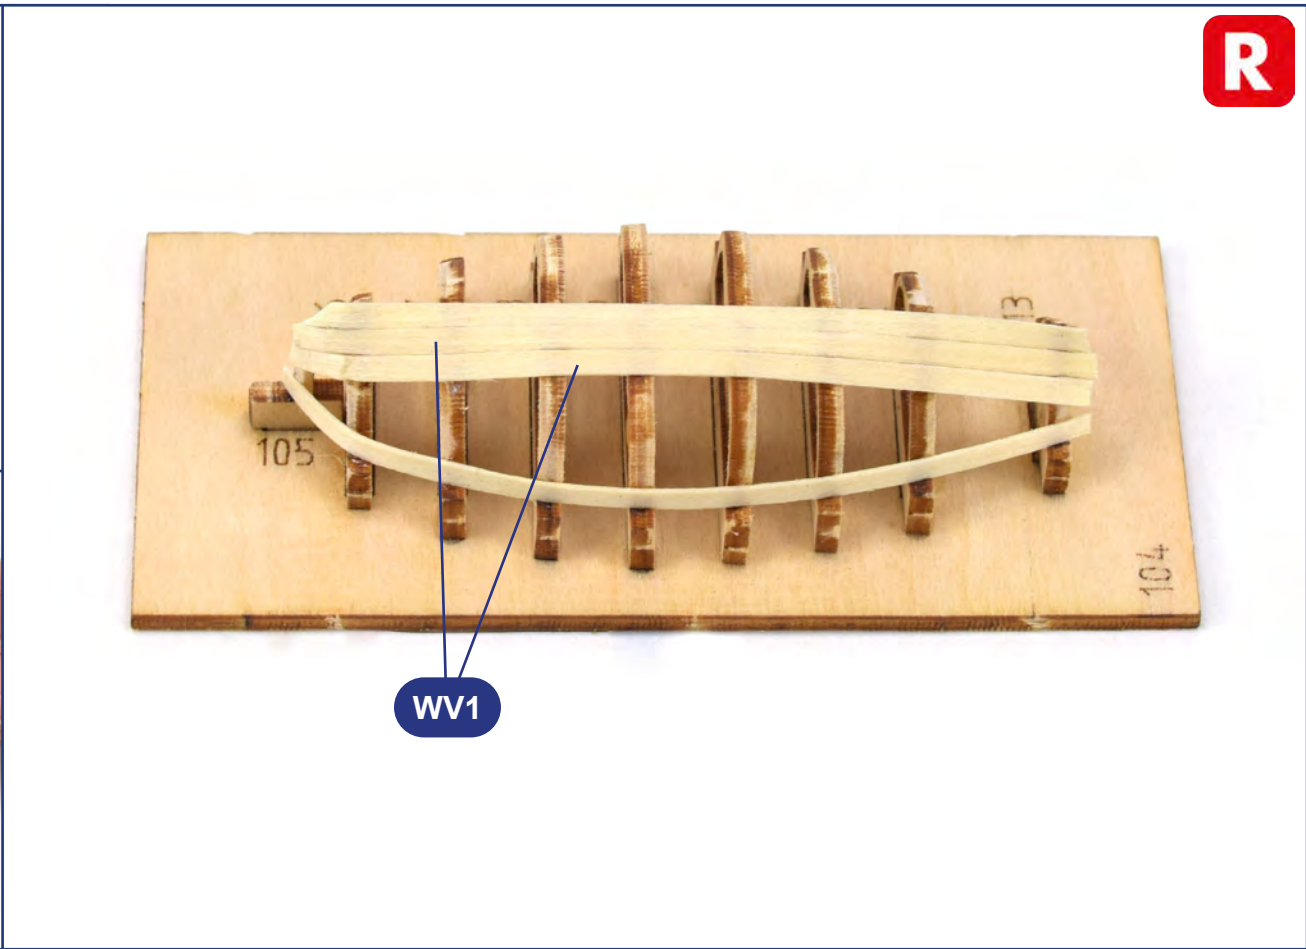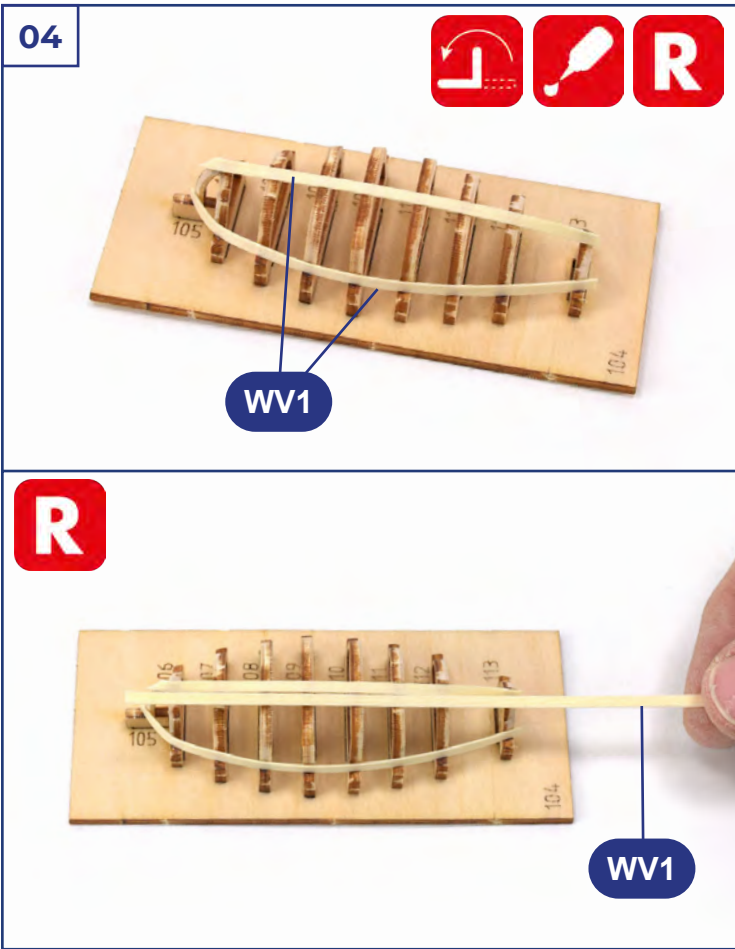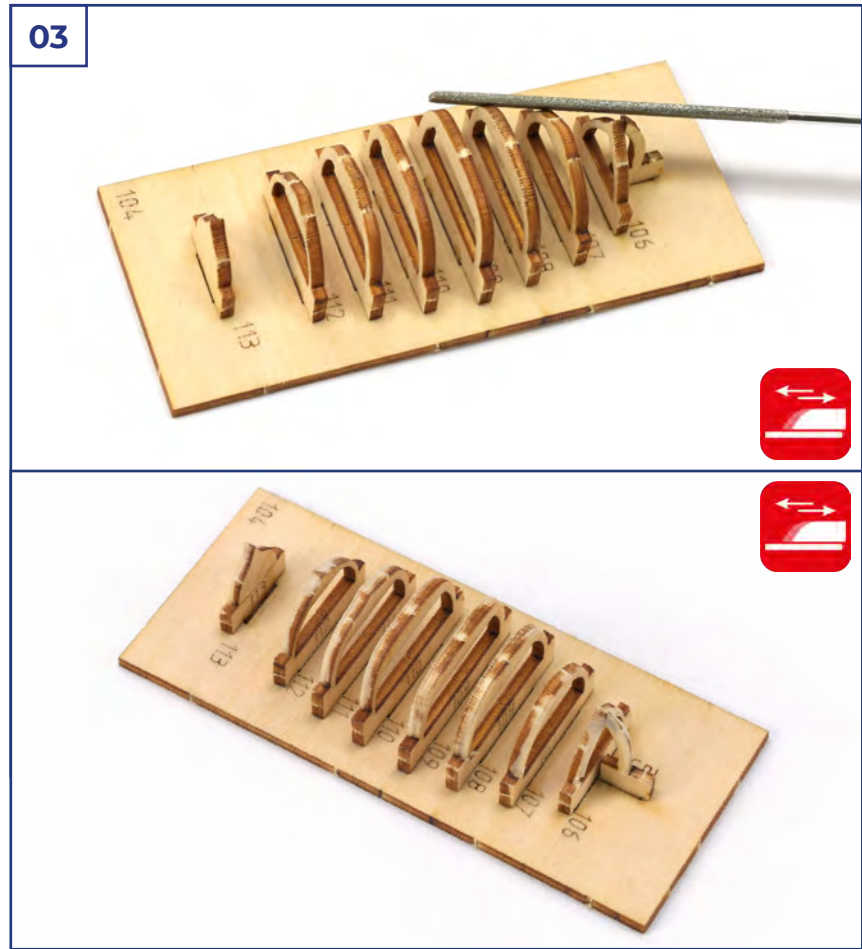

06



07


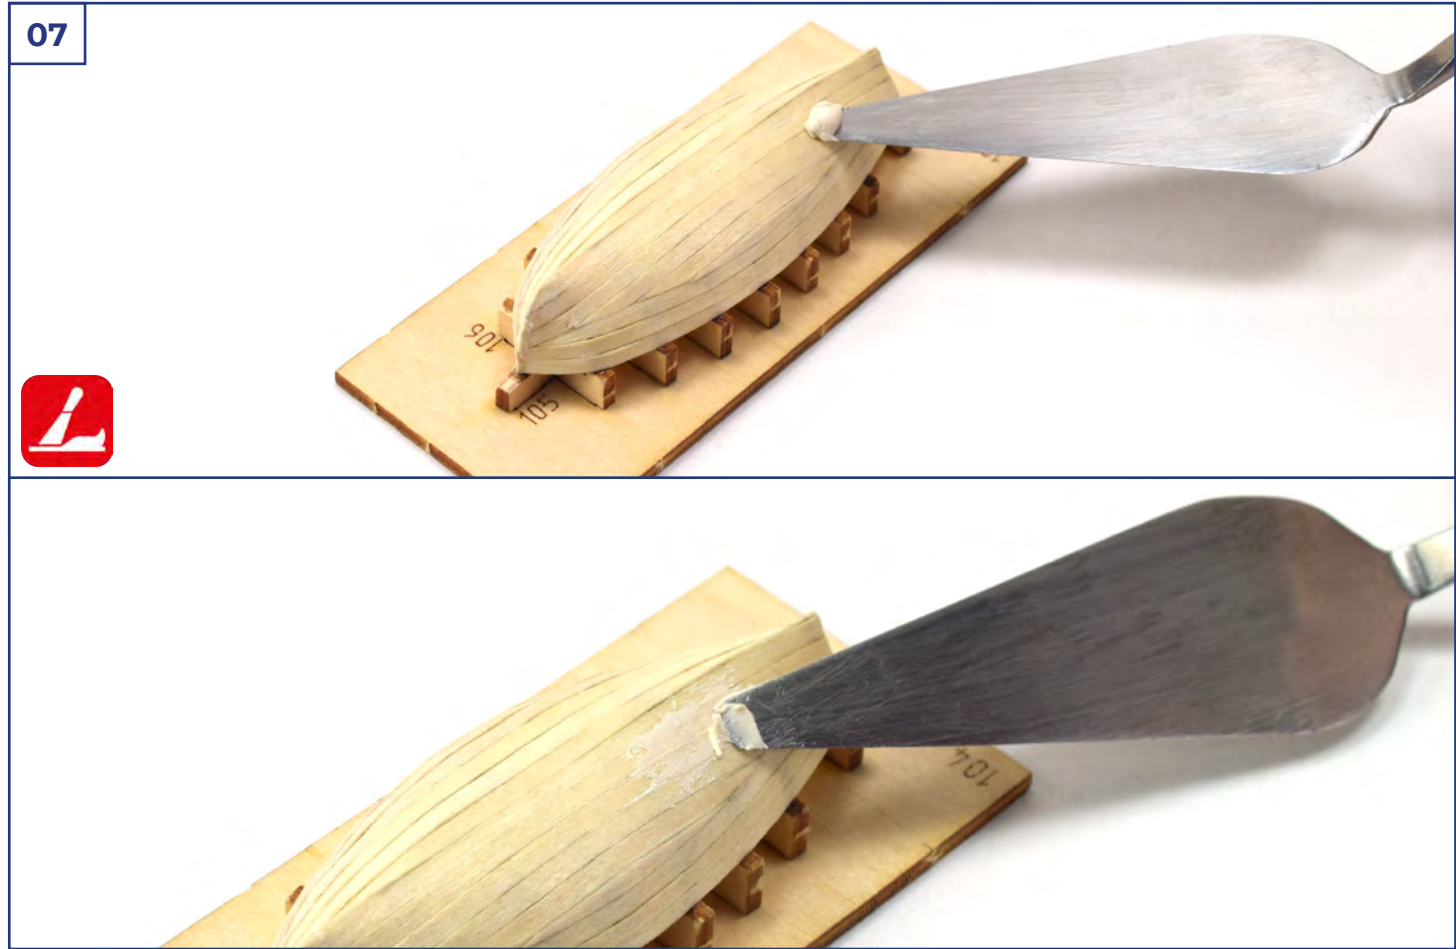




08






09






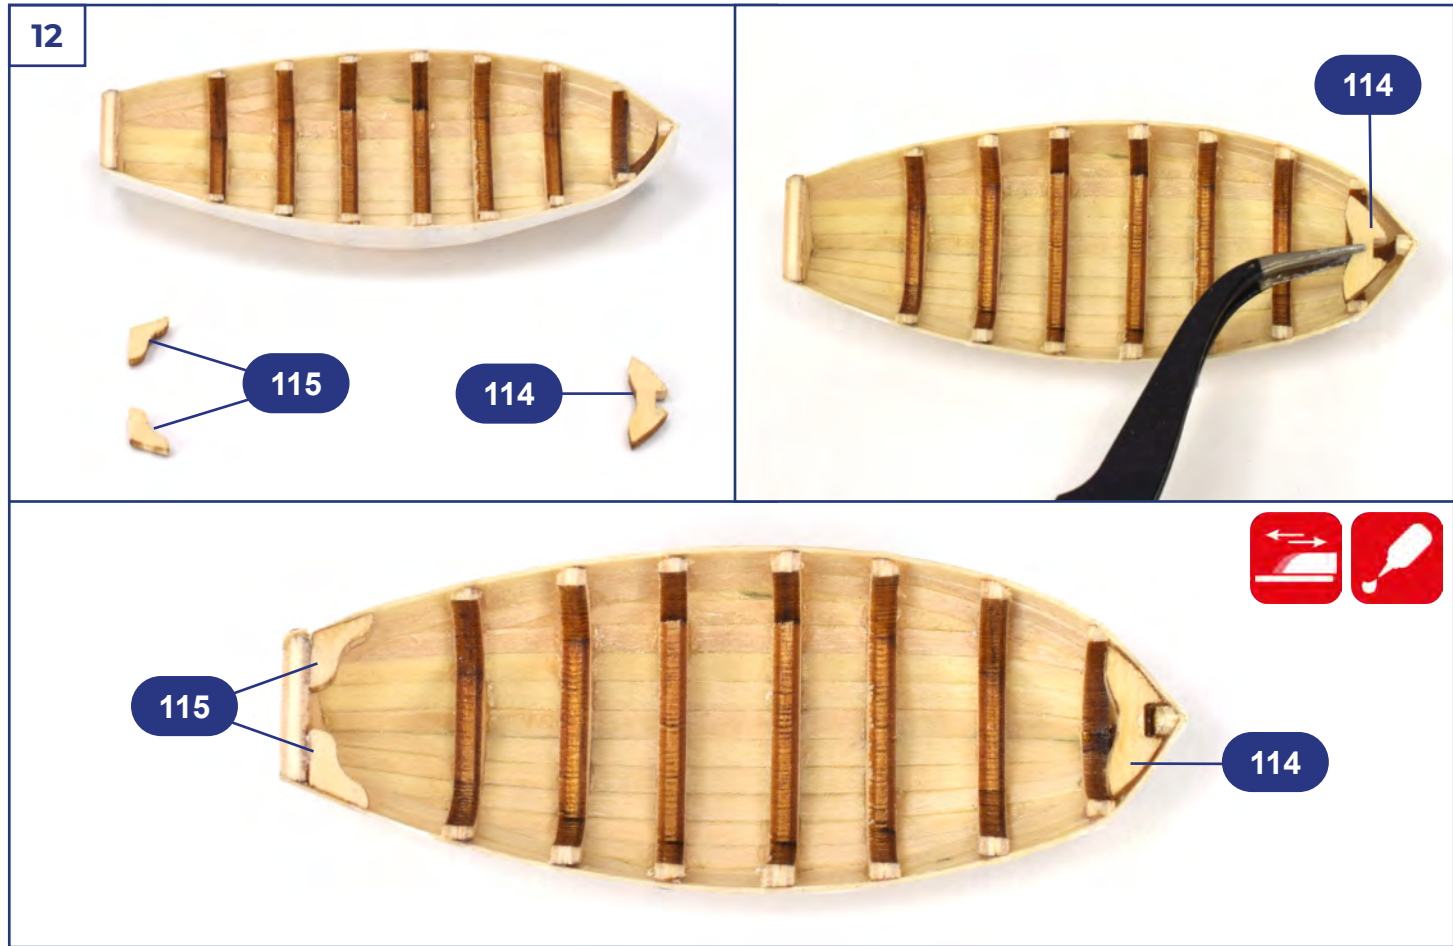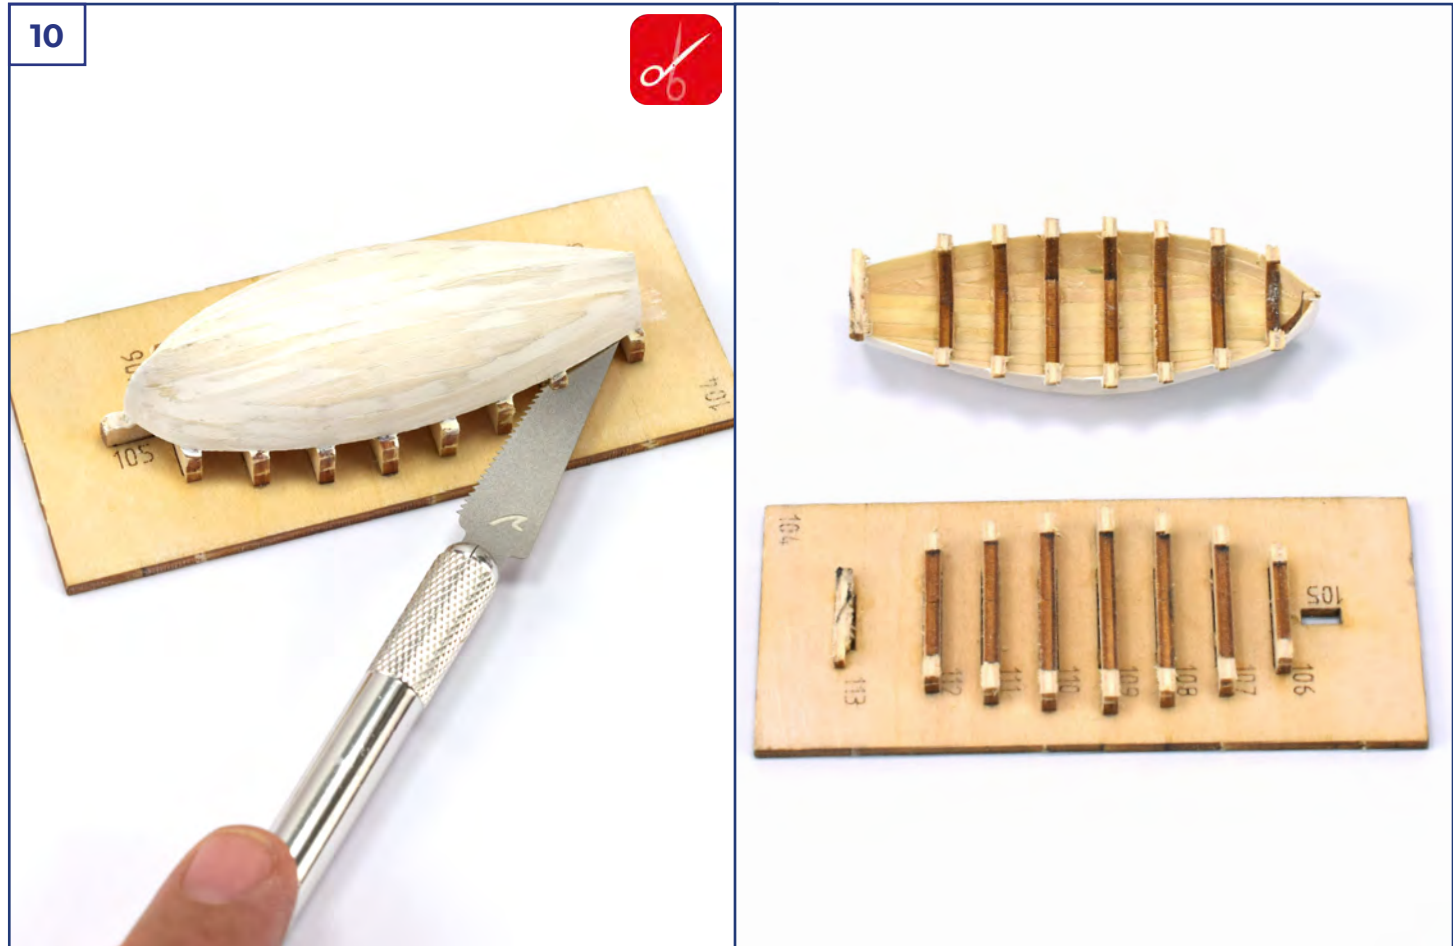

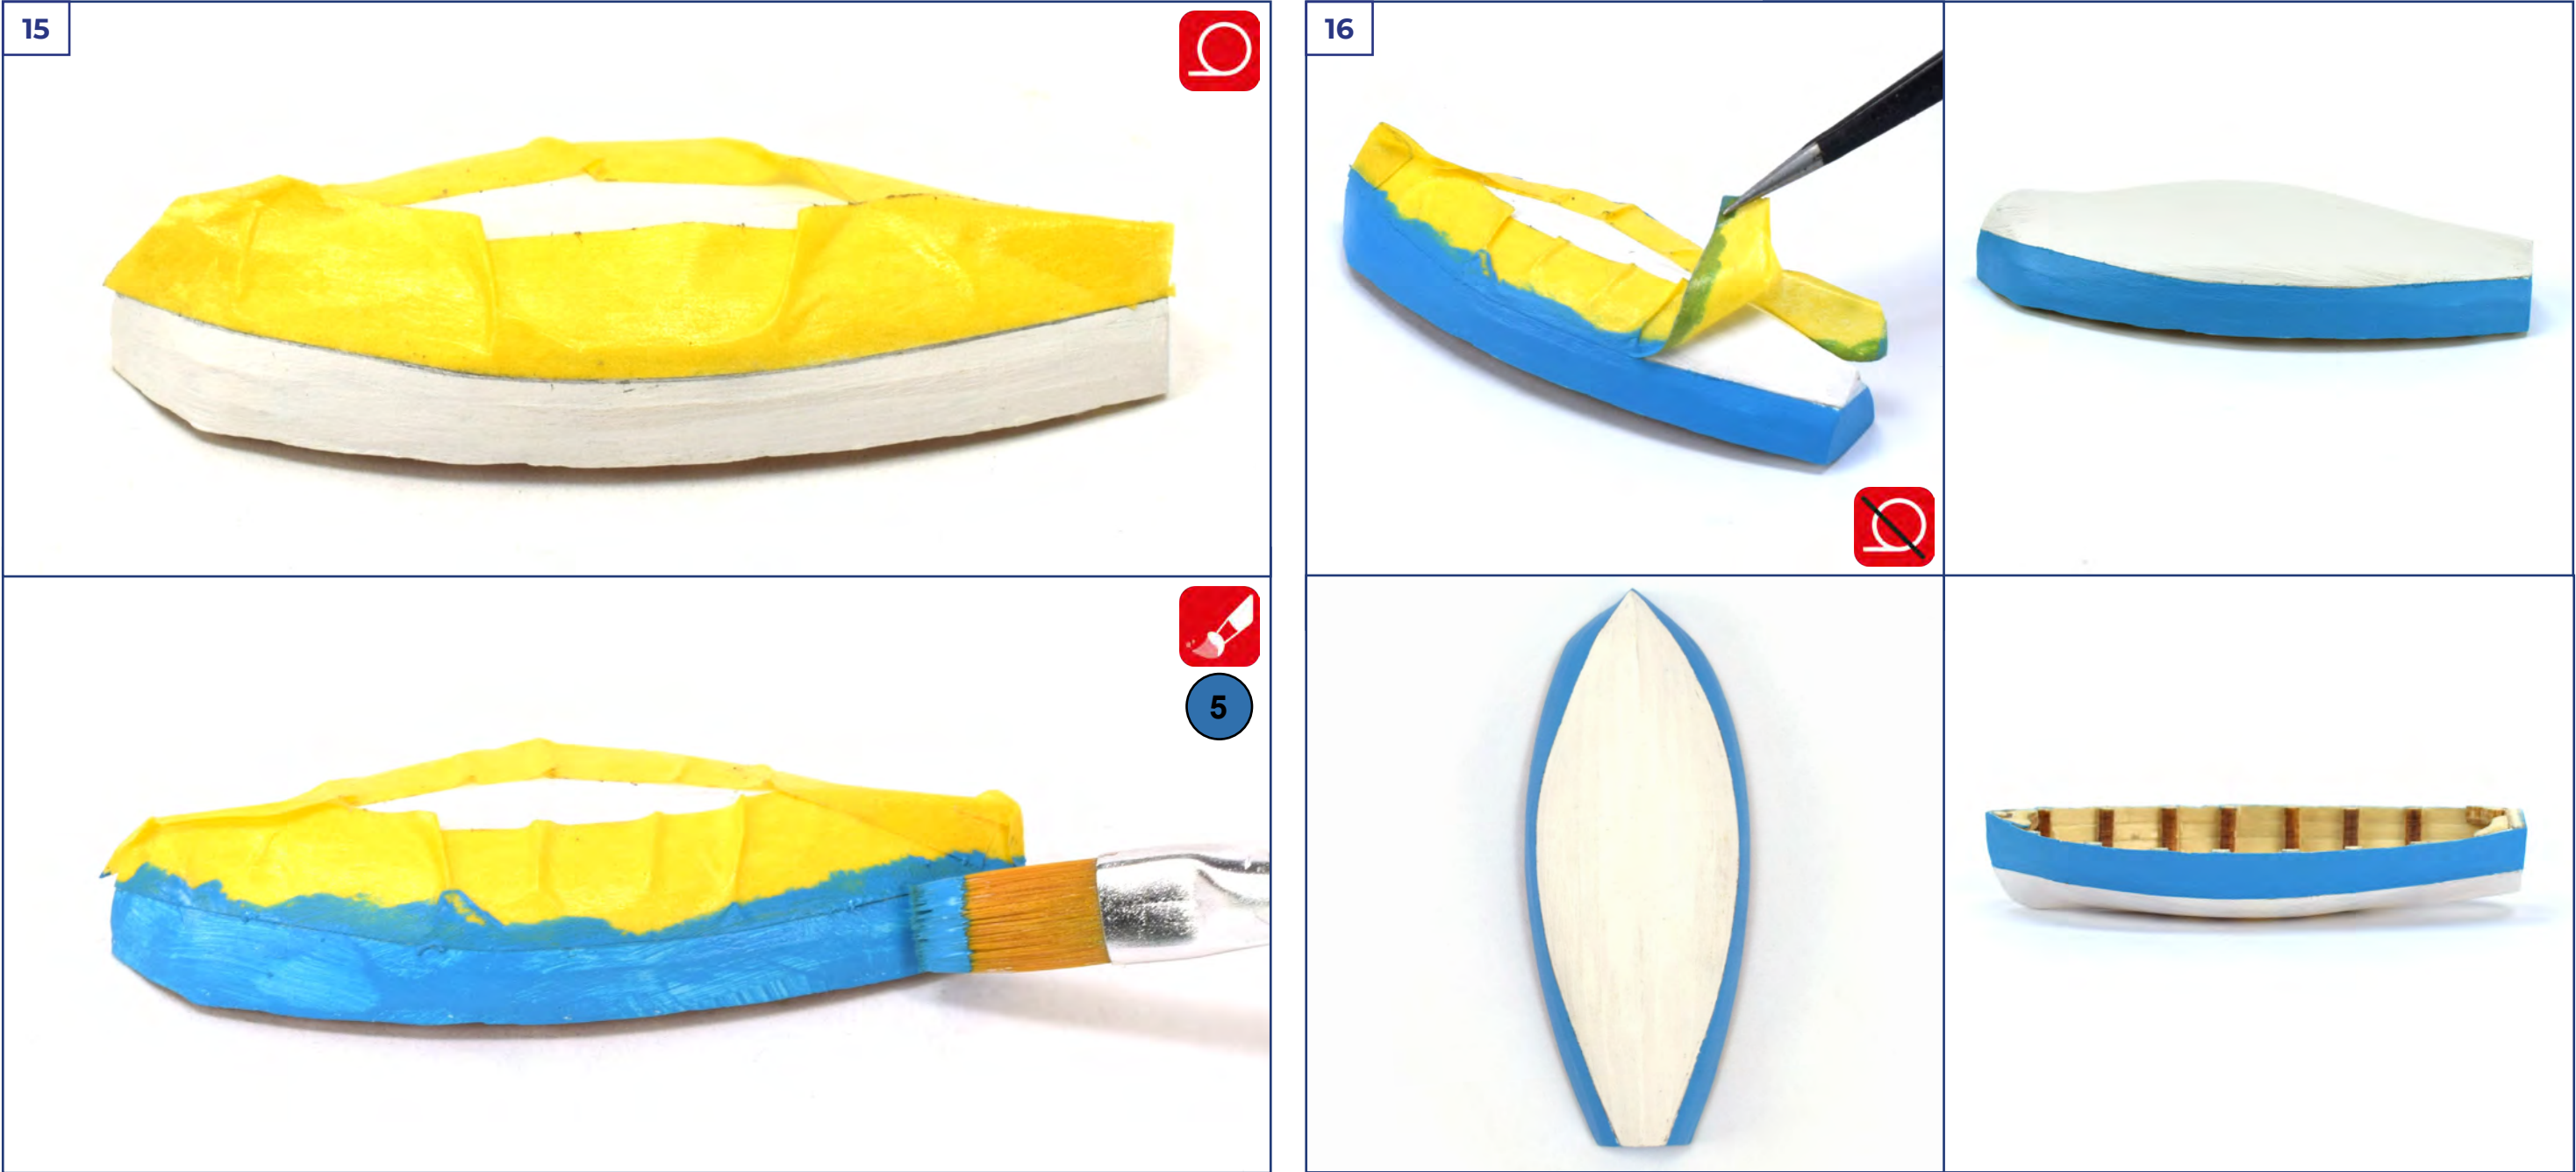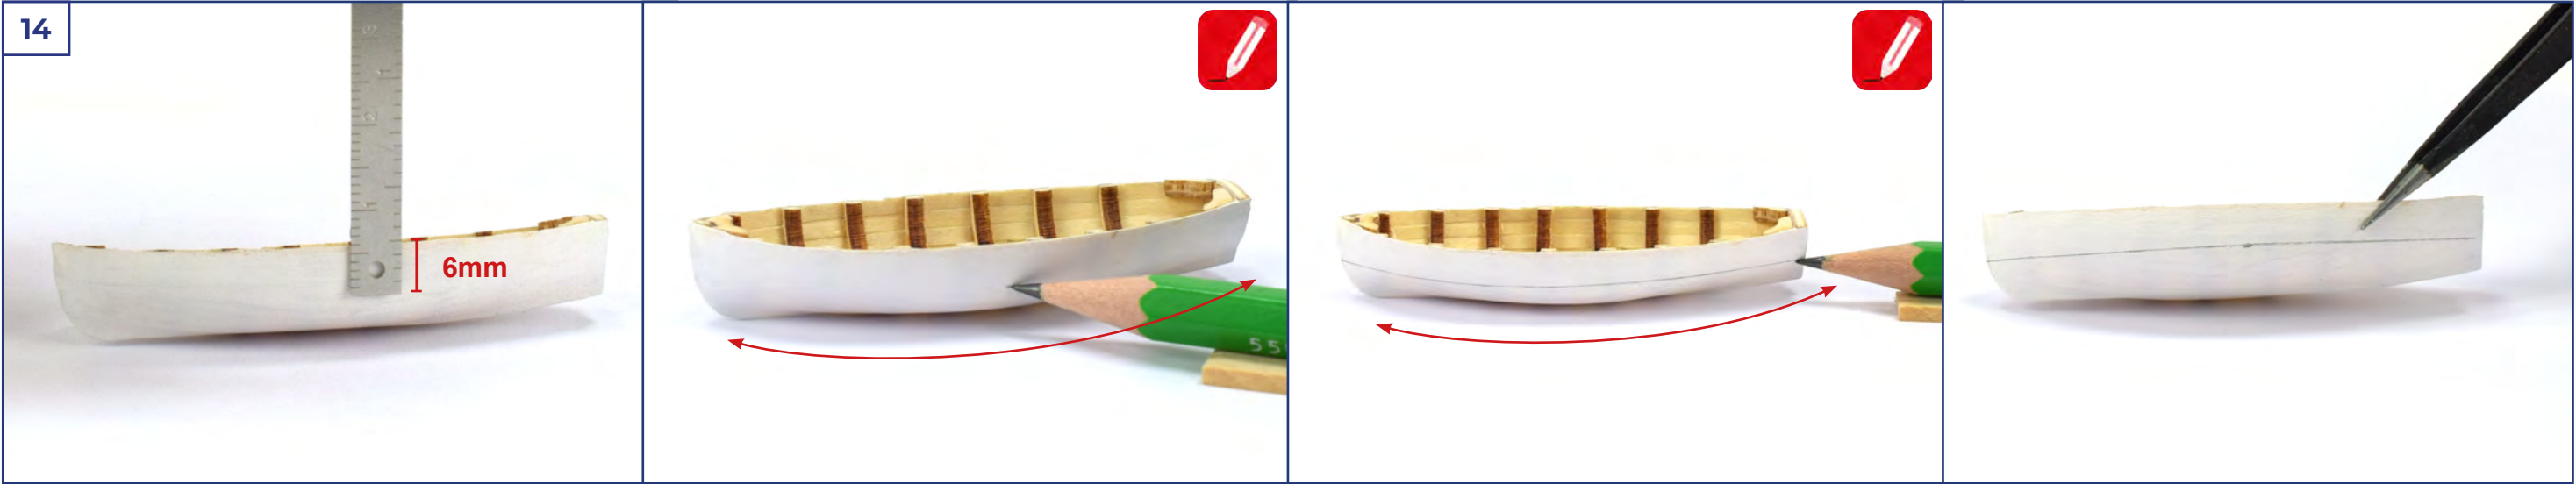

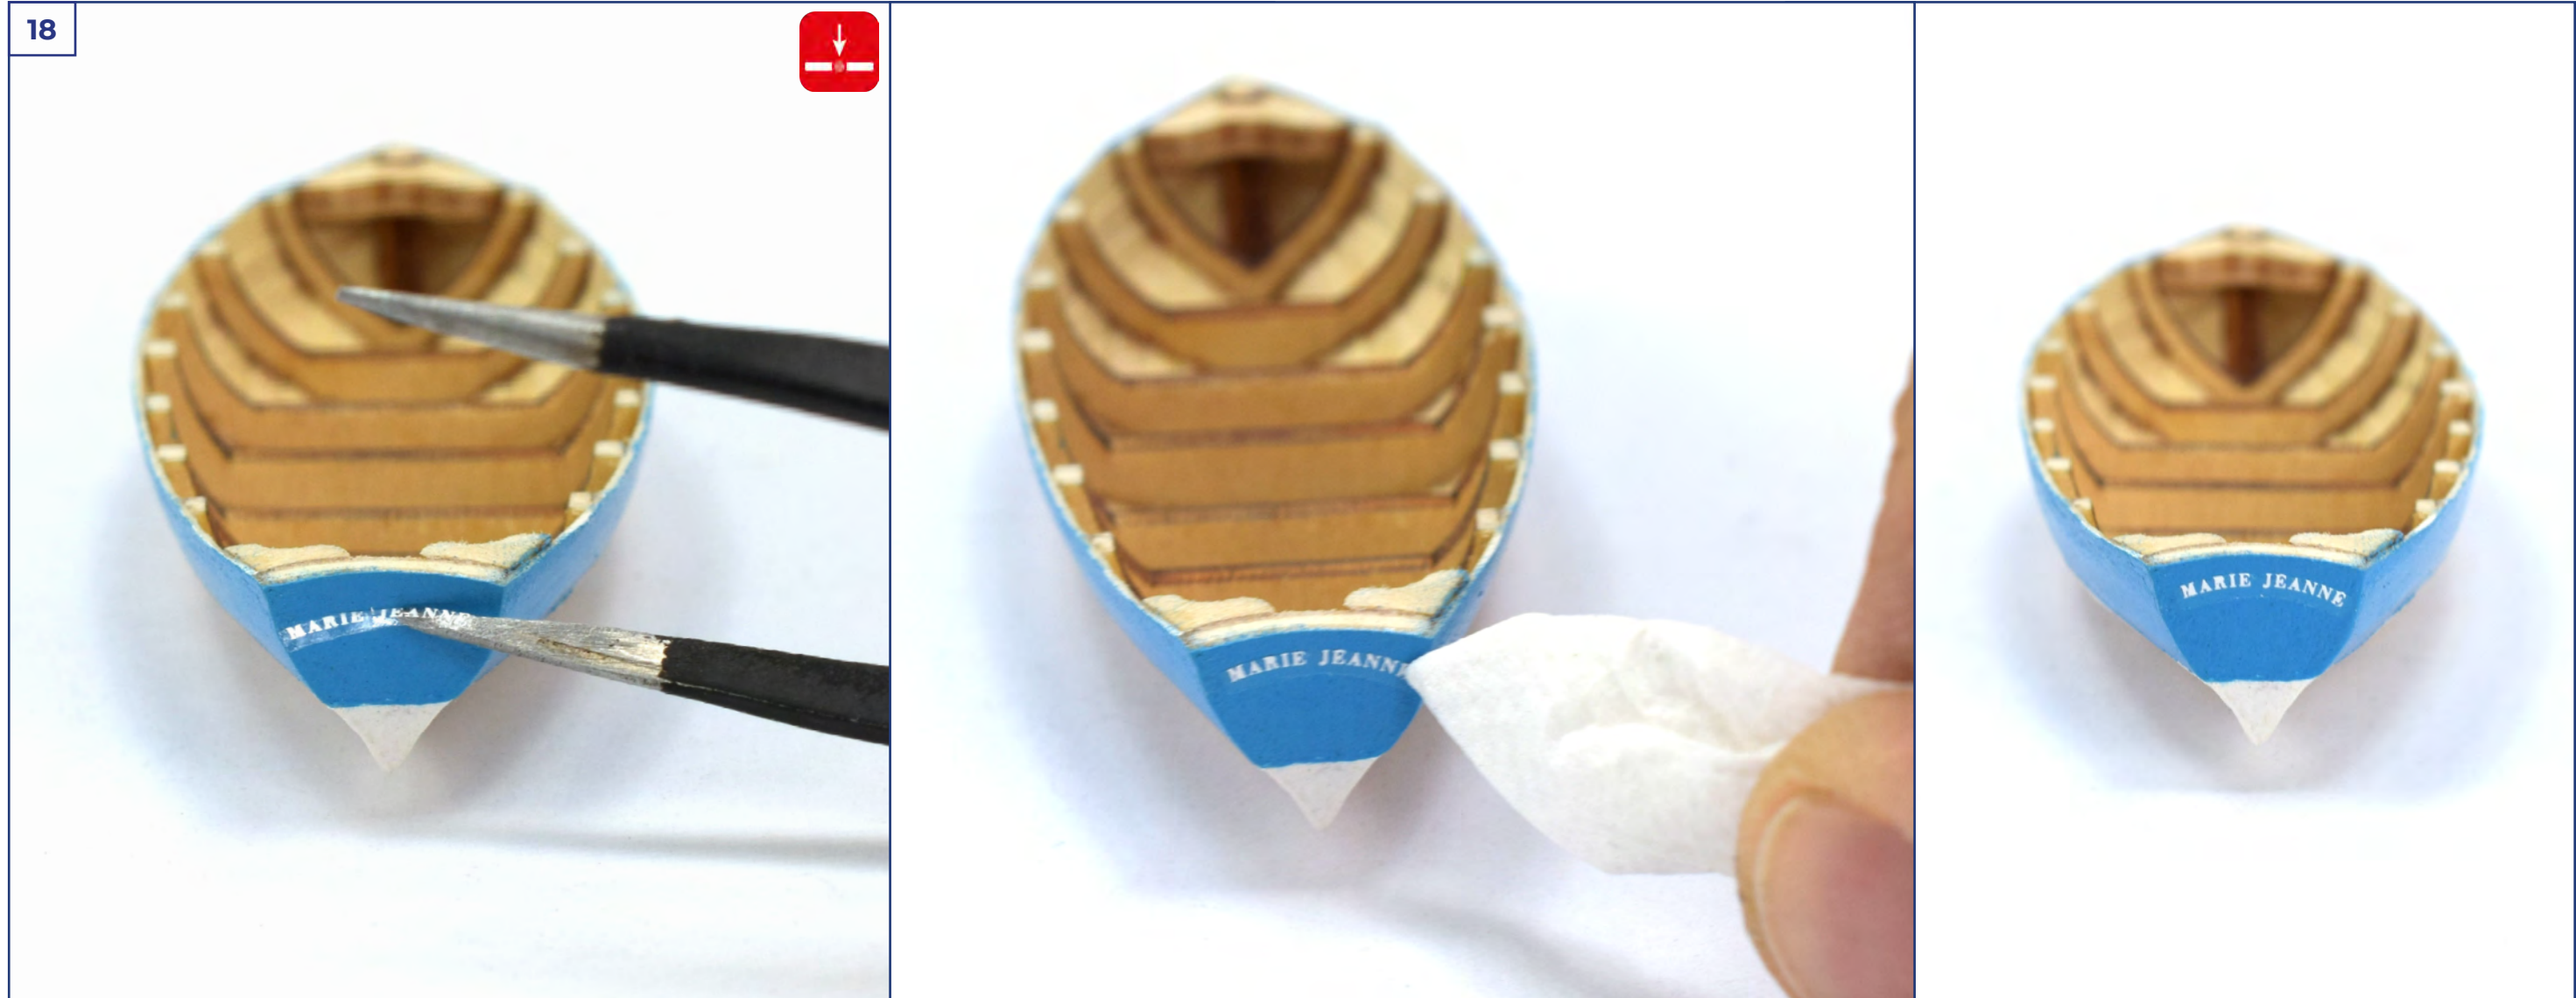

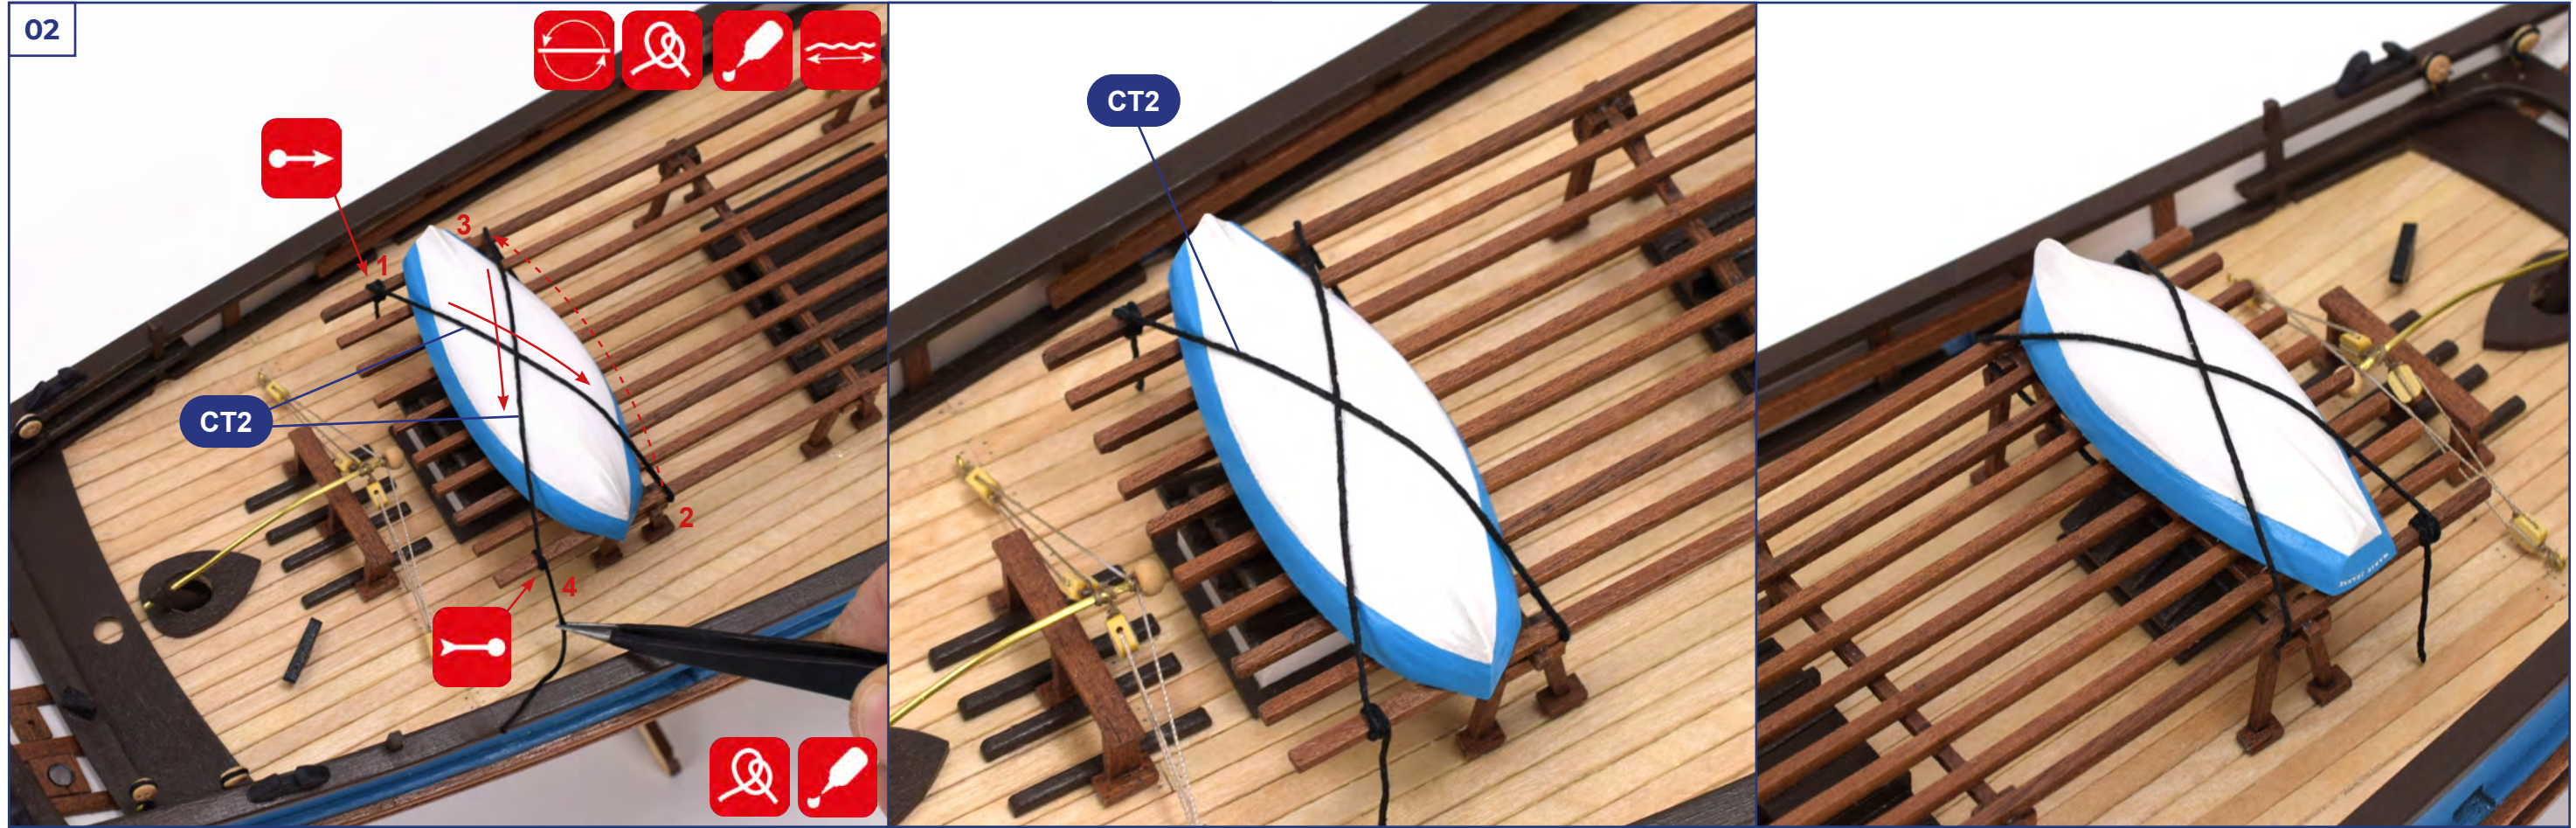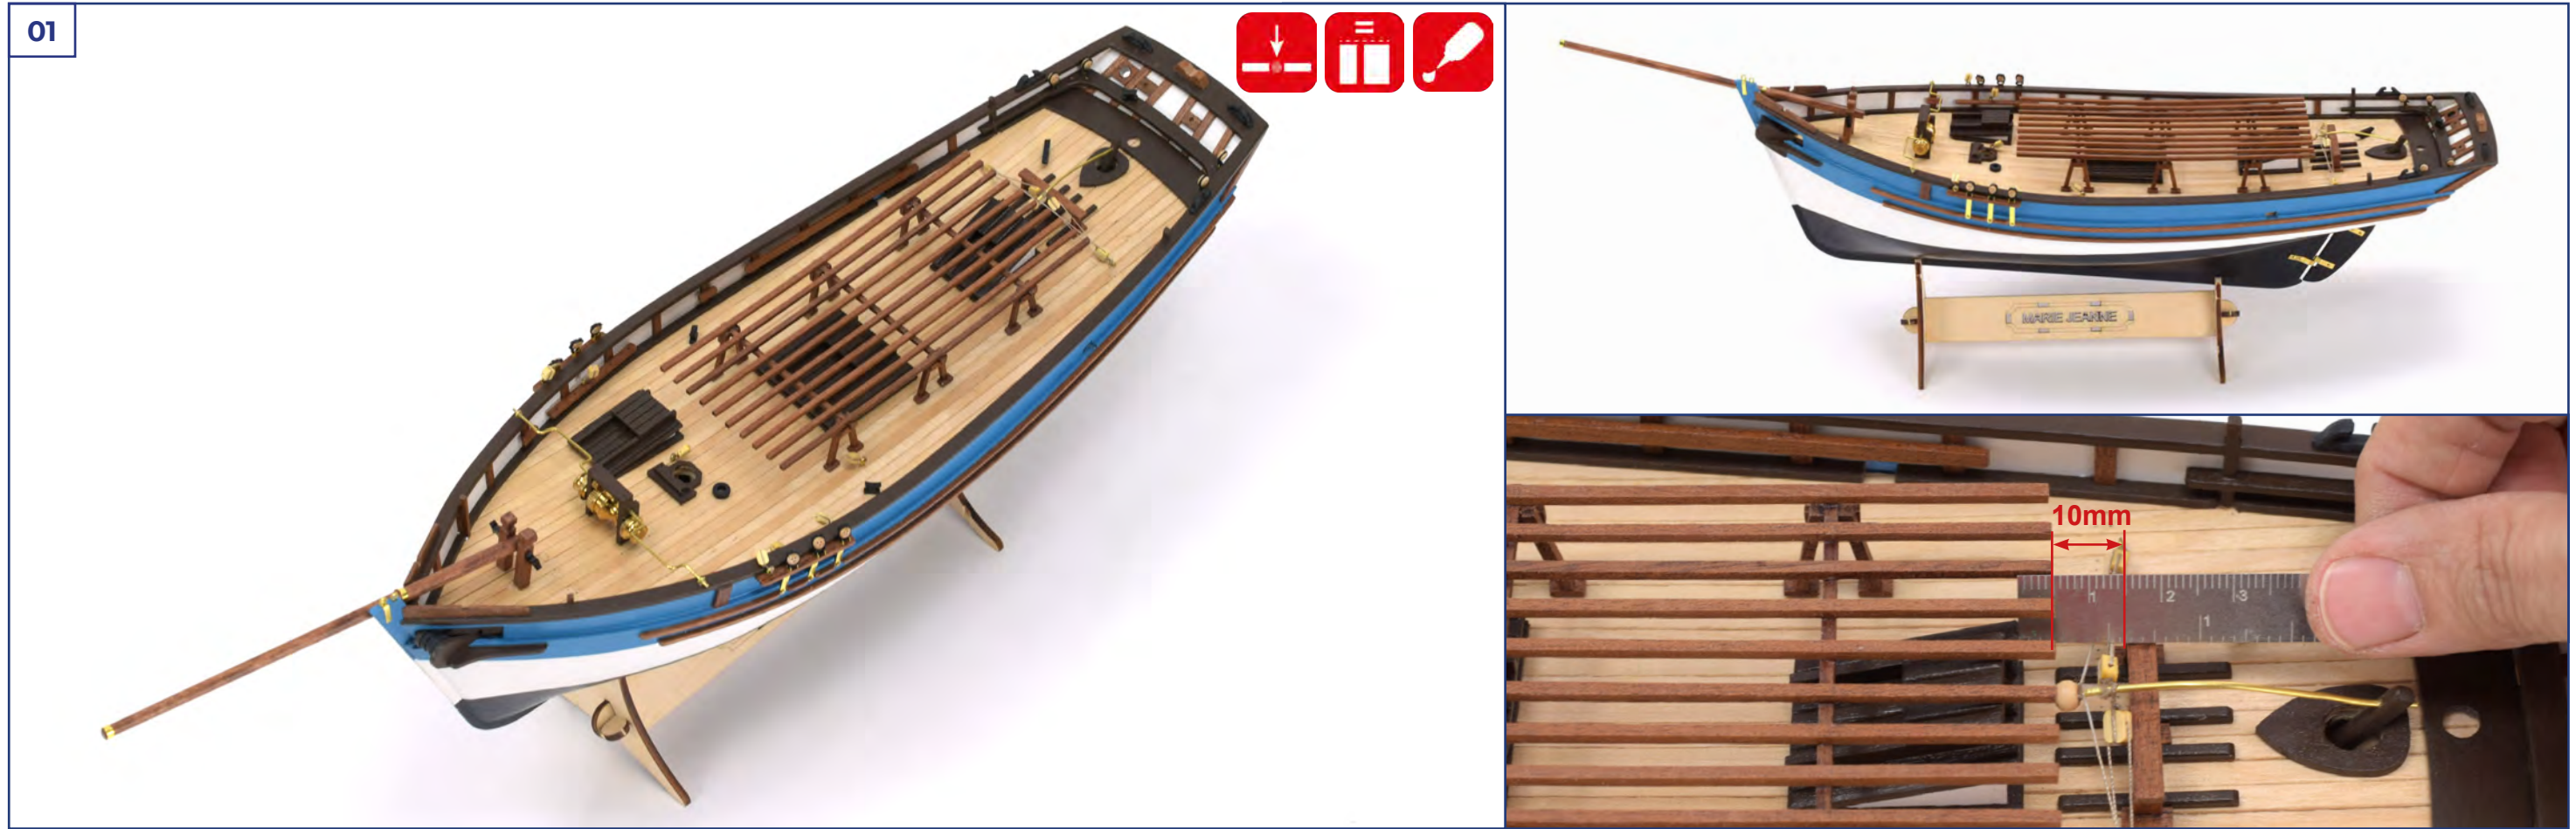

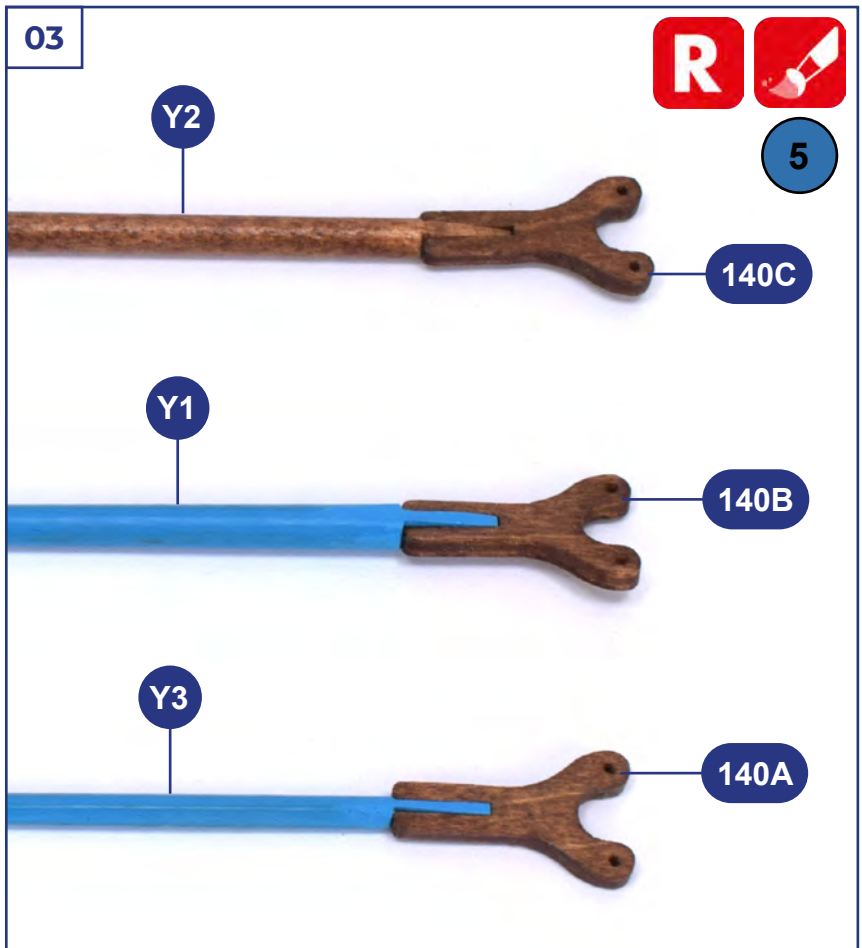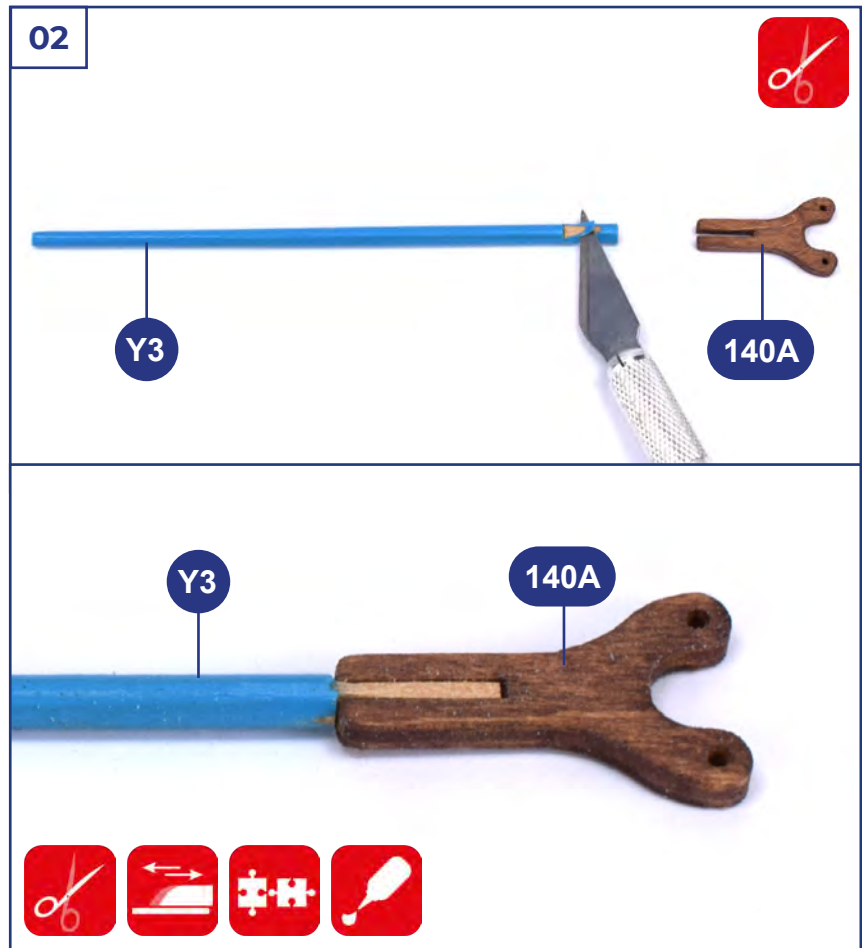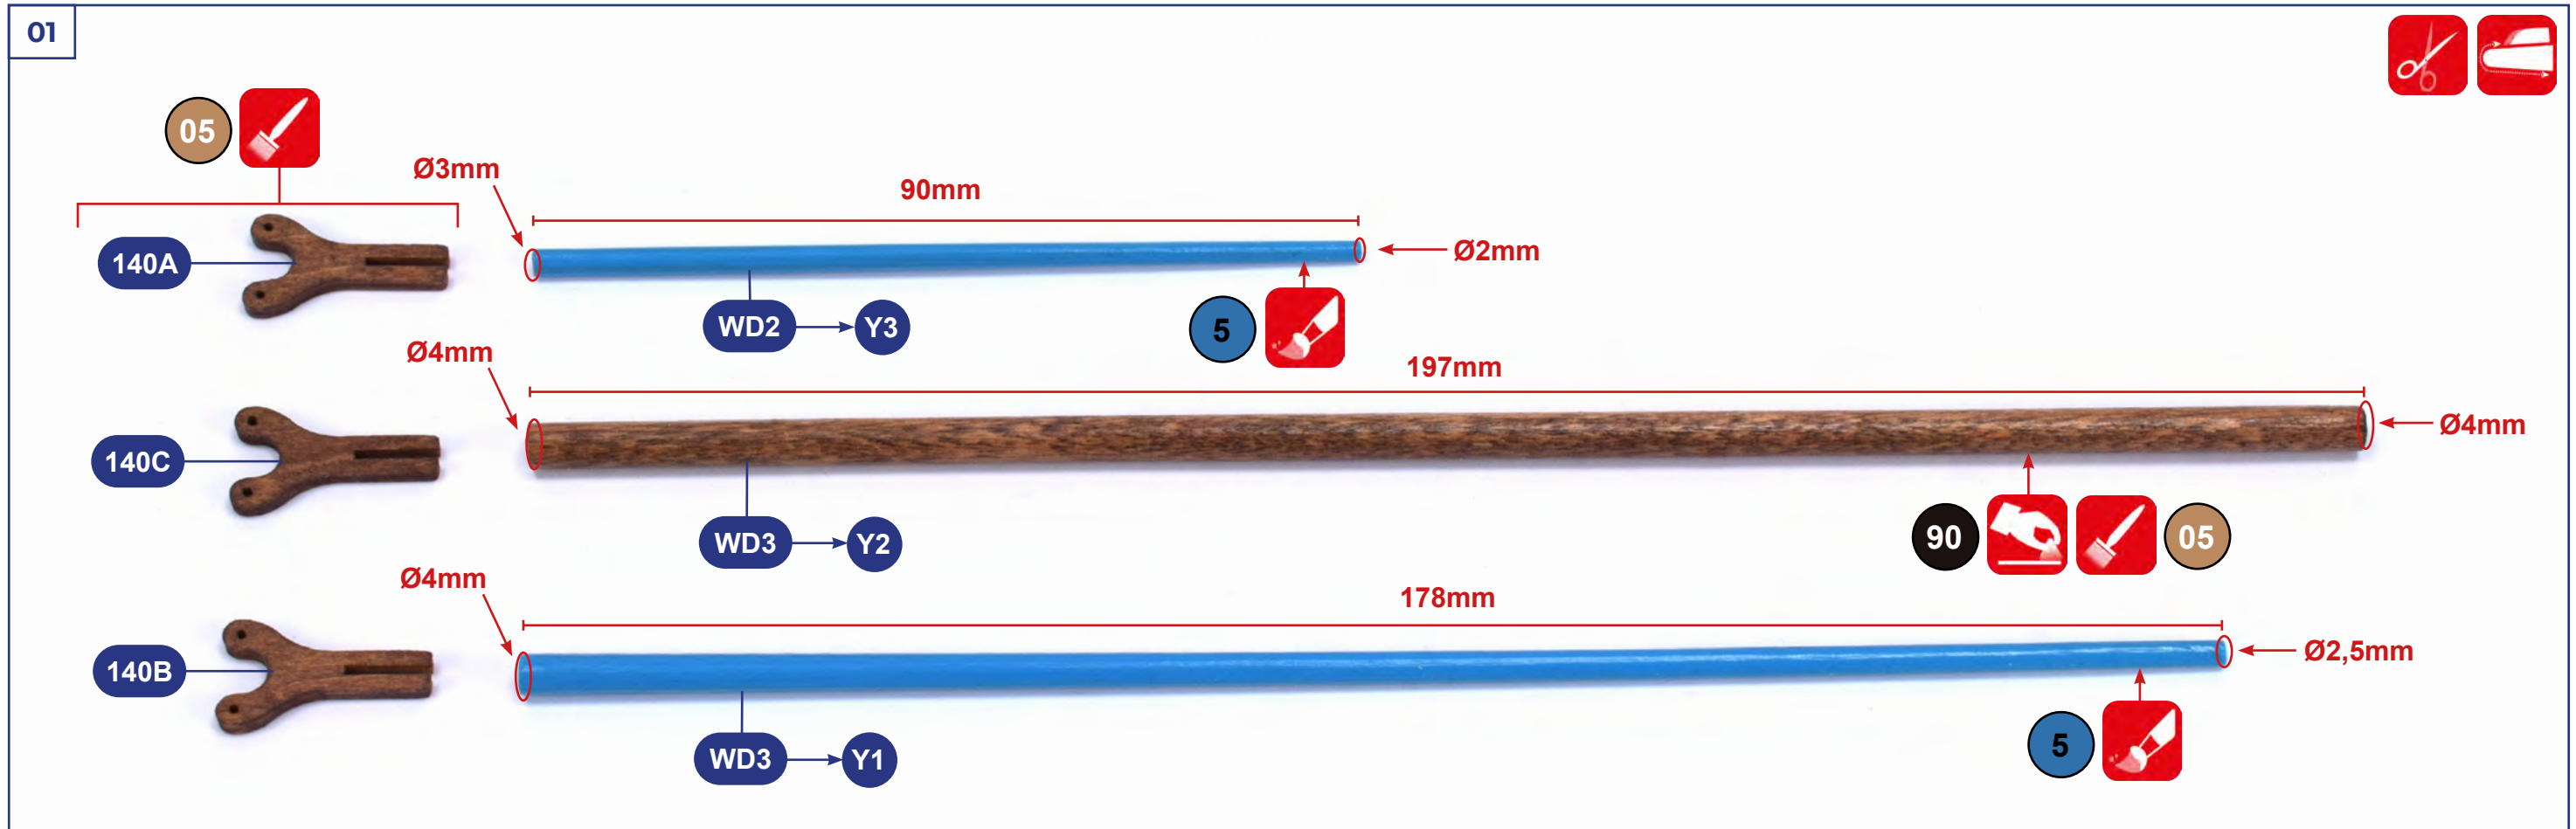

05

Y2

4

141

4

141

D15 + CT1

D8

D5

D15

141

D5

D8

Y2

D5

D8

141

D15

06

Ø1mm

07

WS4

90

86mm

<

08

Ø2,5mm

WD3 → Y4

Ø4mm

110mm

90

05

P2

P2

Y4

P2

09

Y4

P2

Ø0,5mm

Y4

D4

P2

Y4

D4

P2

10

Ø1mm

D5

D5

11

P7

Ø4mm

10mm

01

2

357mm

Ø8mm

Ø4mm

90

WD4

=

MM

MM

100mm

05





02

MM


MM

MM


MM

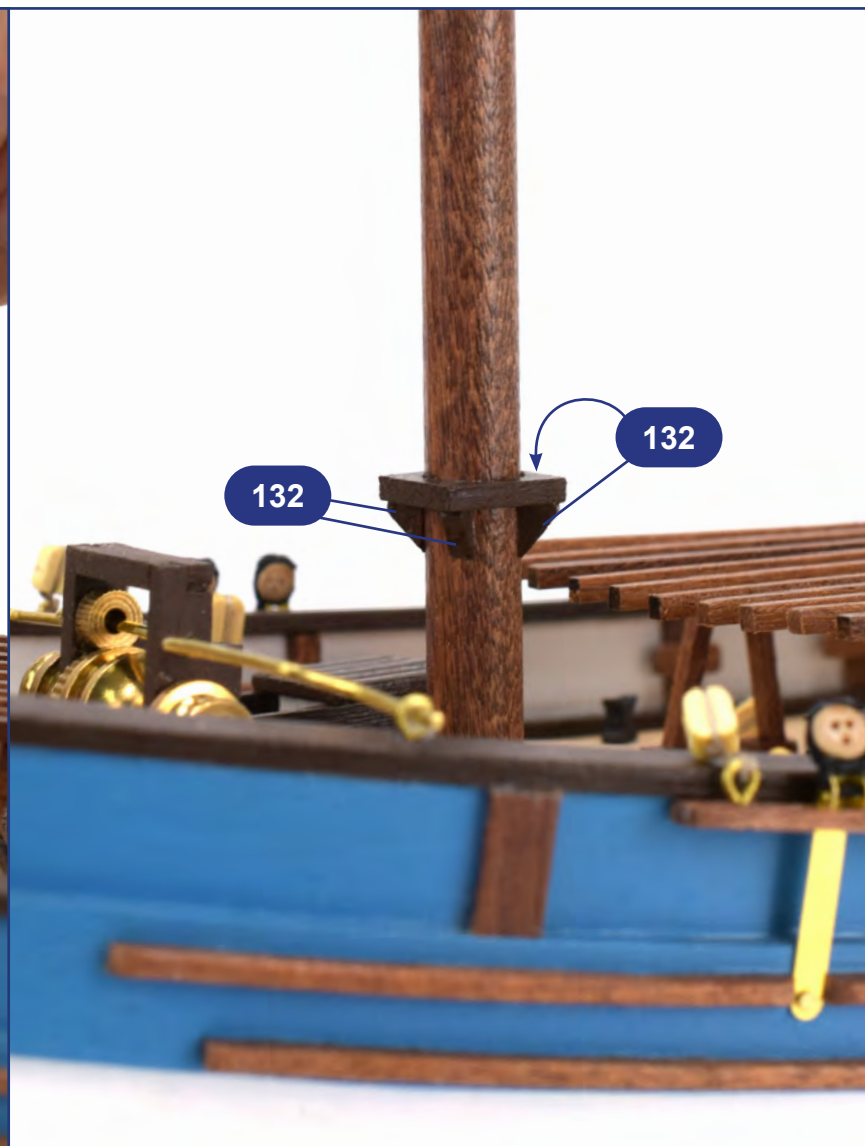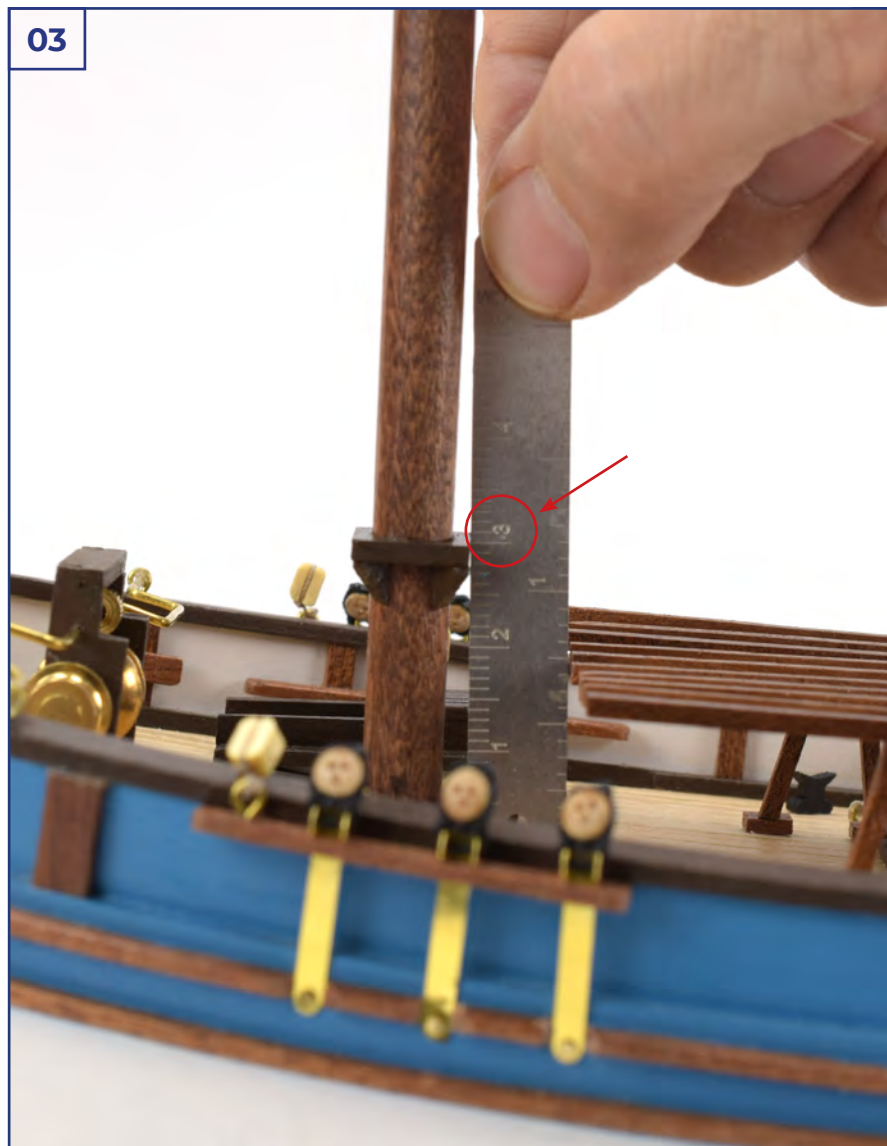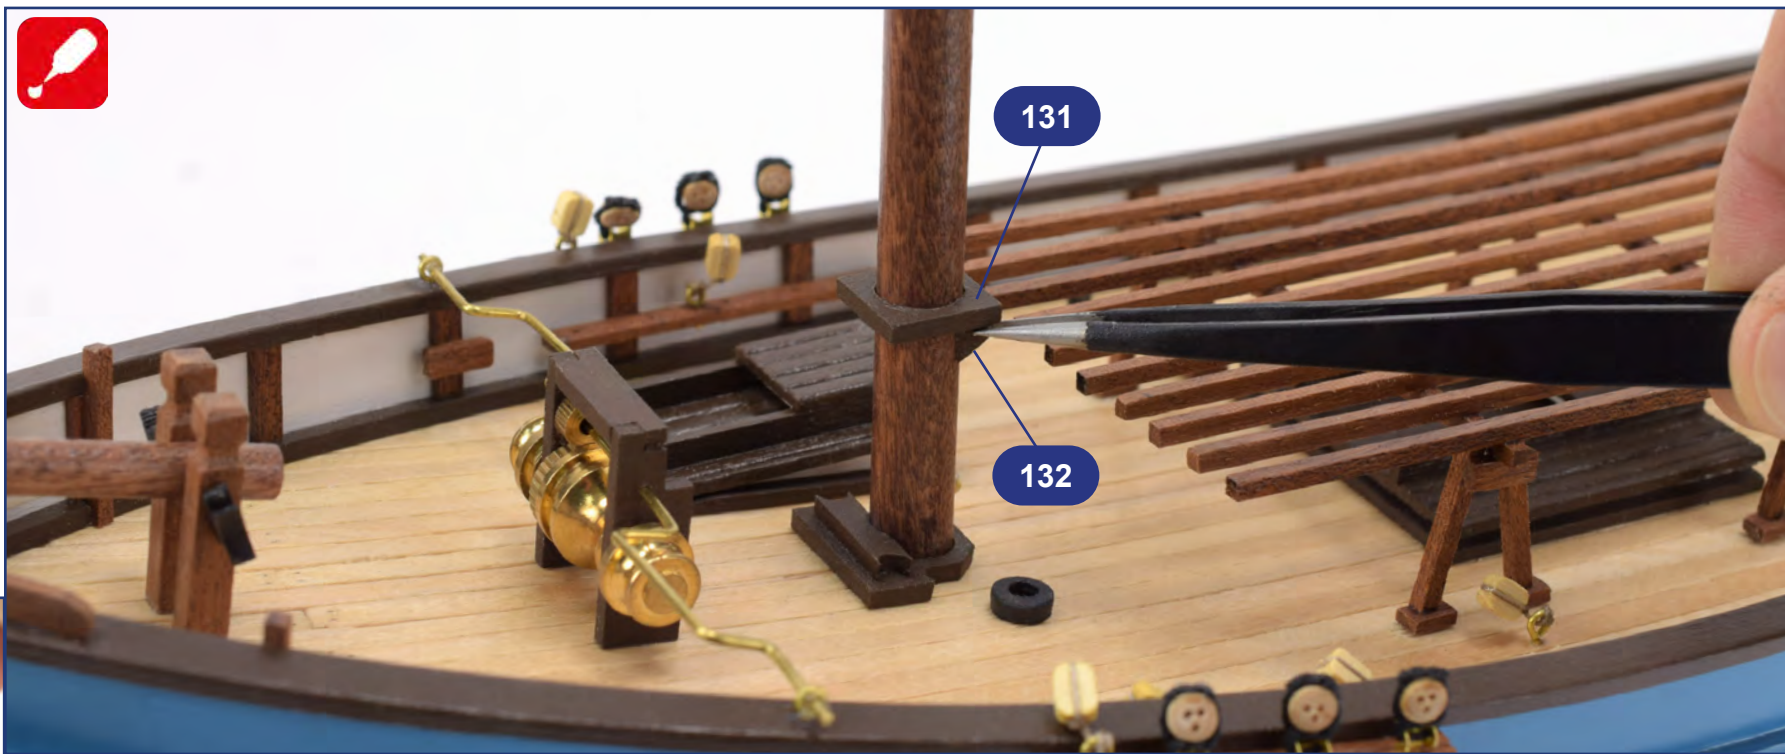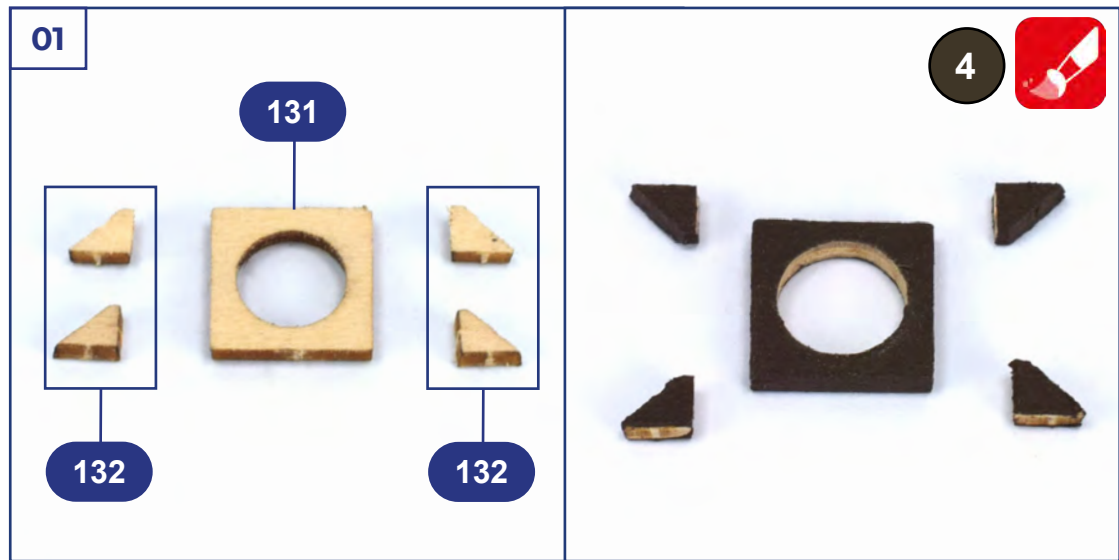

01

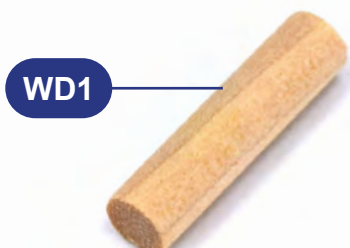

WD1

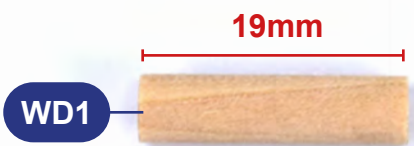

WD1

19mm

02



90




WD1


03



WD1

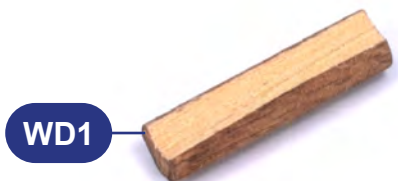

WD1

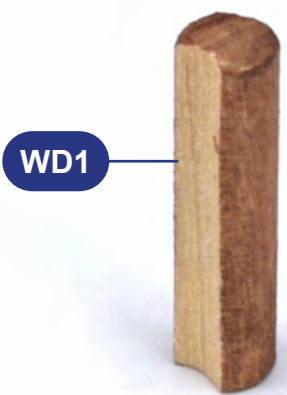

WD1

04



WD1



WD1 = MiM

Ø5mm

225mm

60mm

Ø3,5mm



90

2

05

05



MiM



MiM




06







WD1




Ø0,5mm

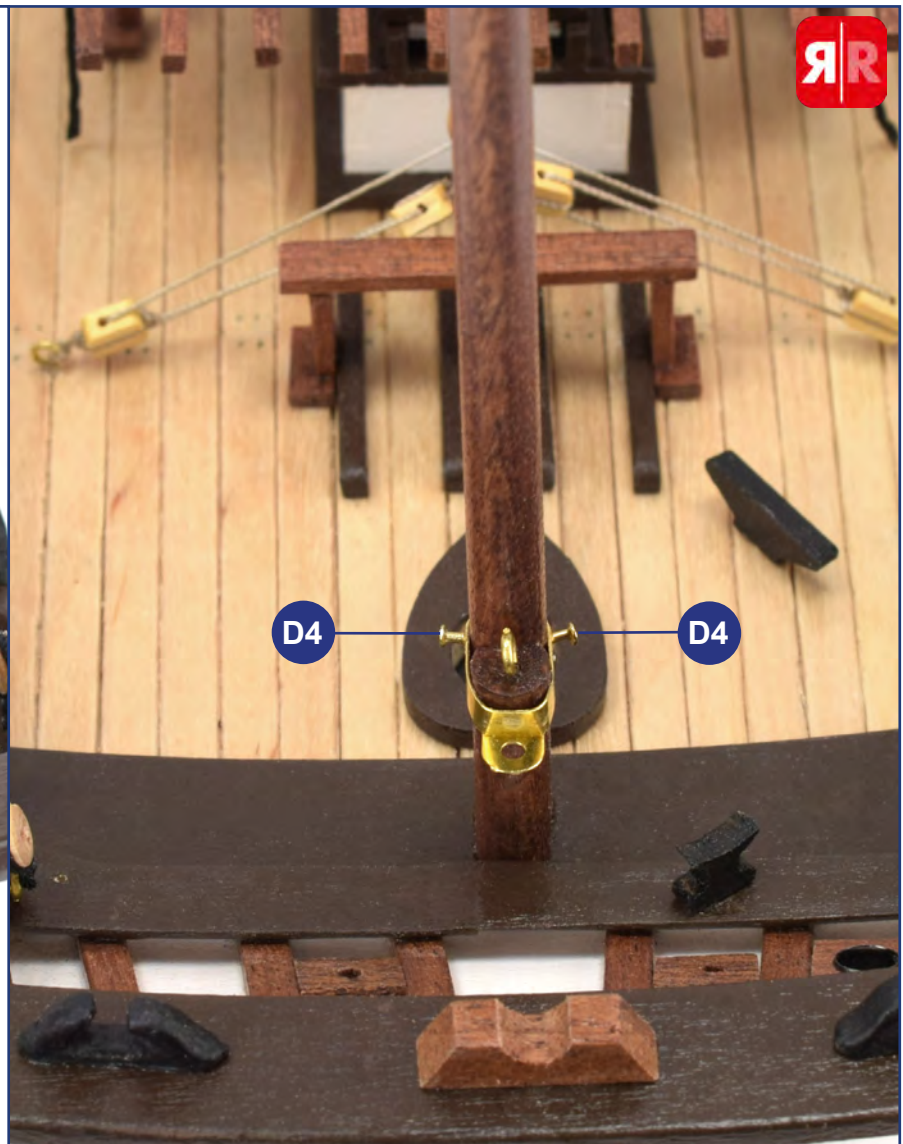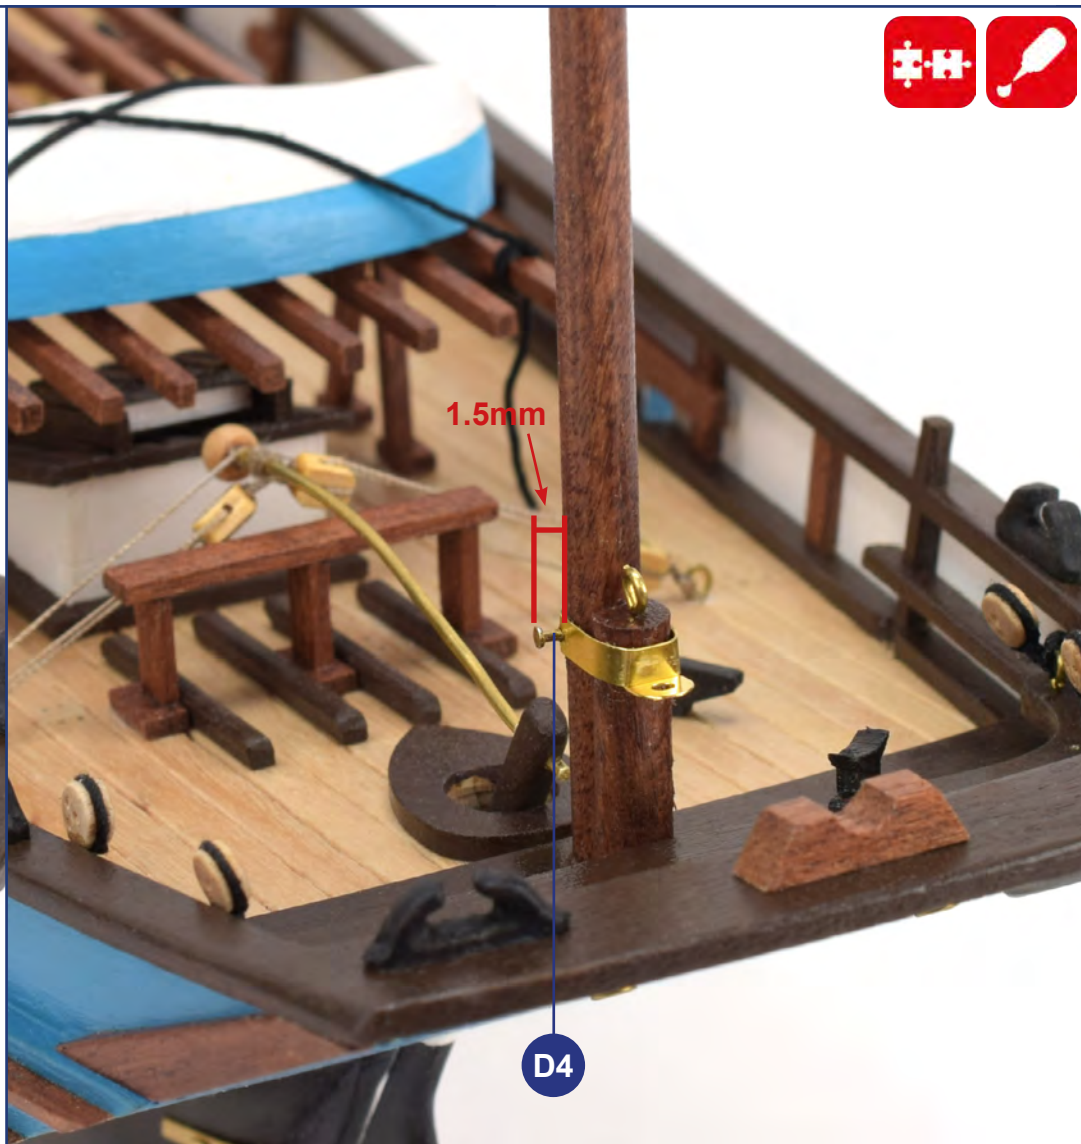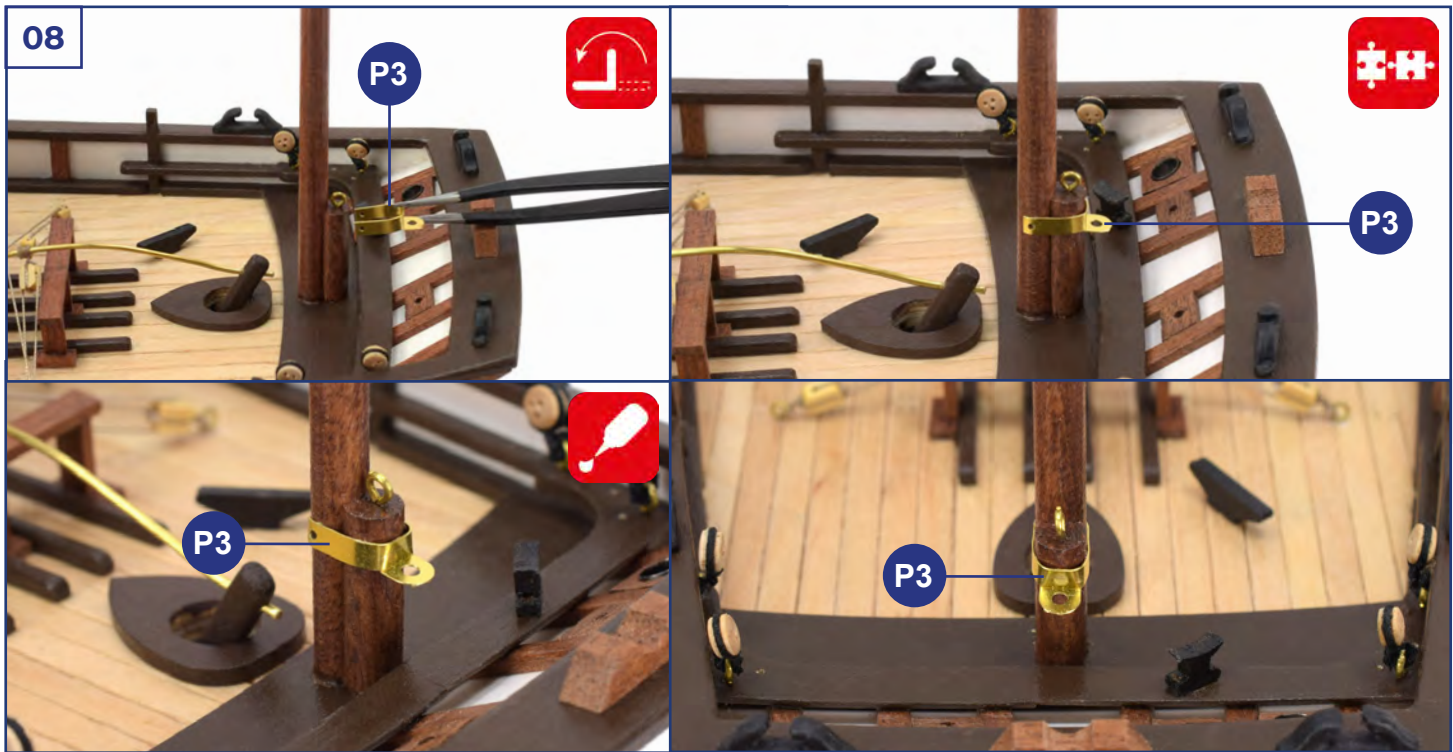


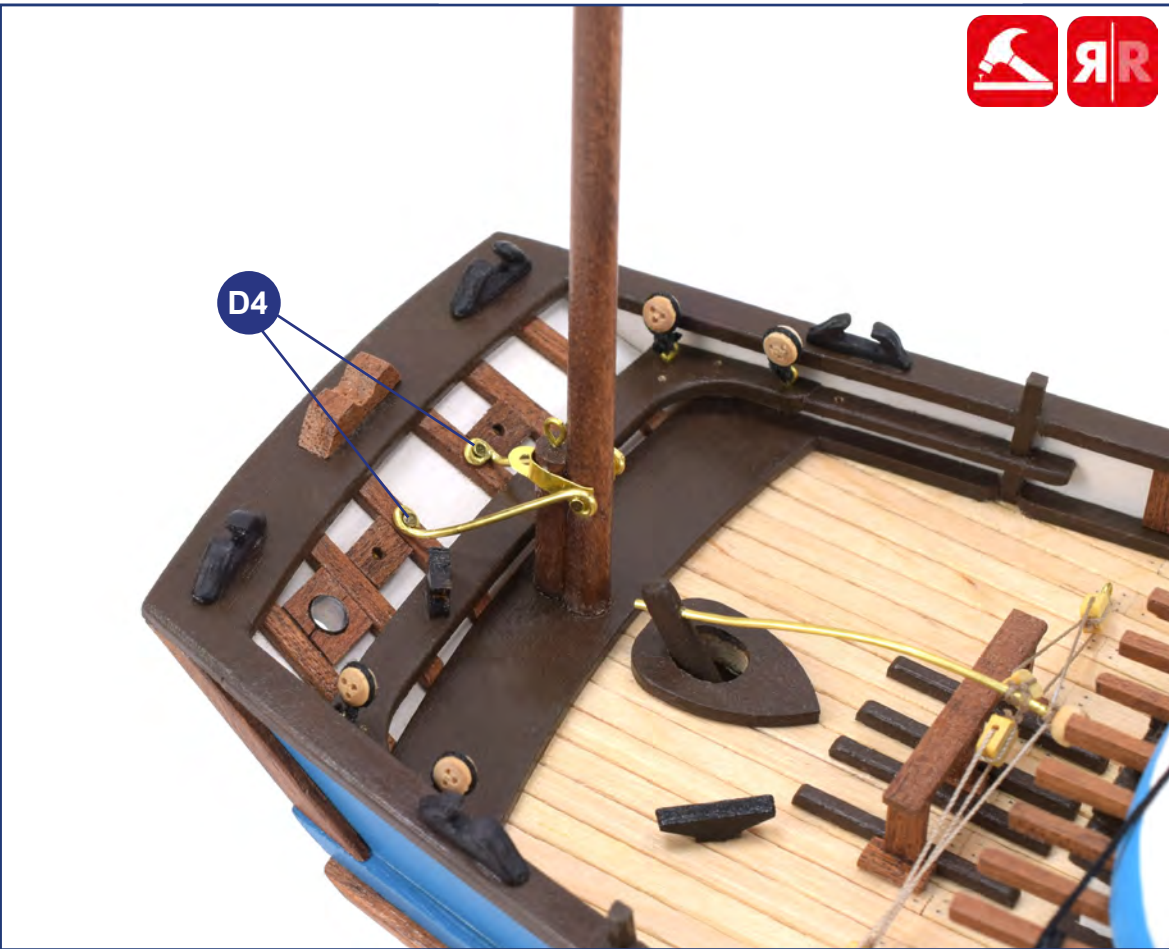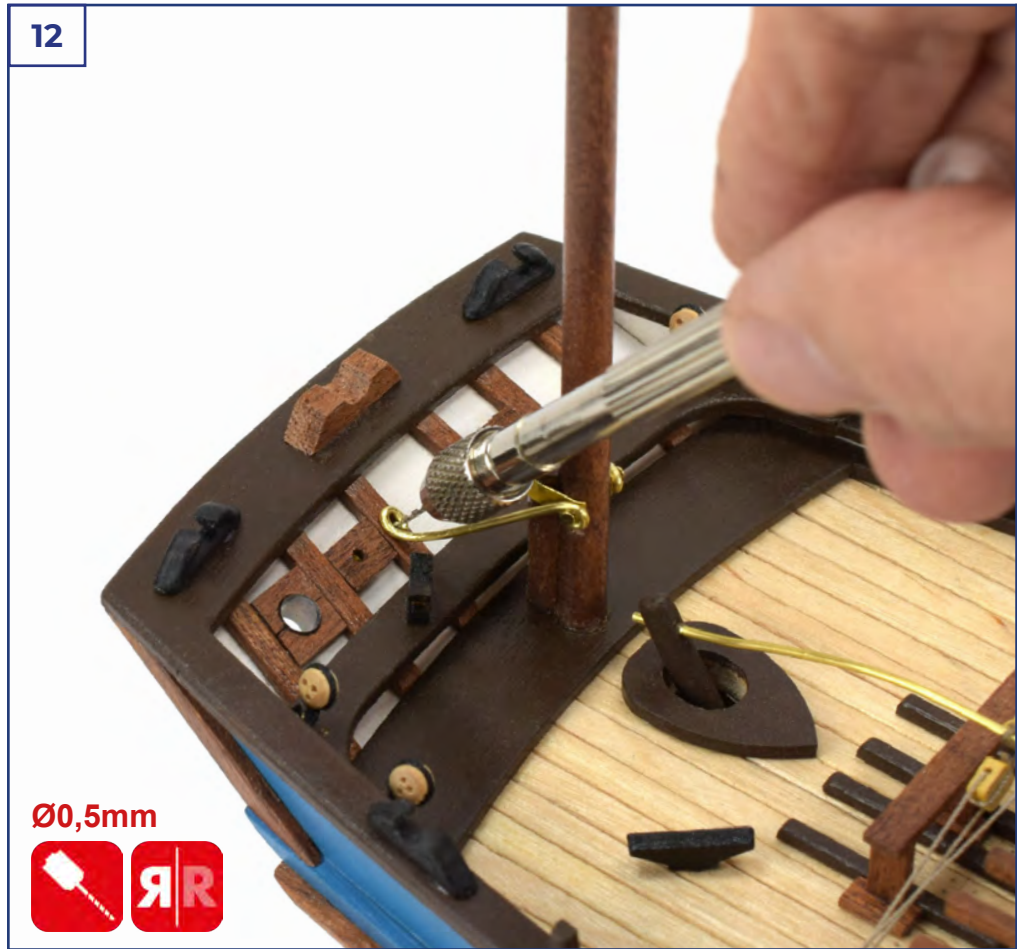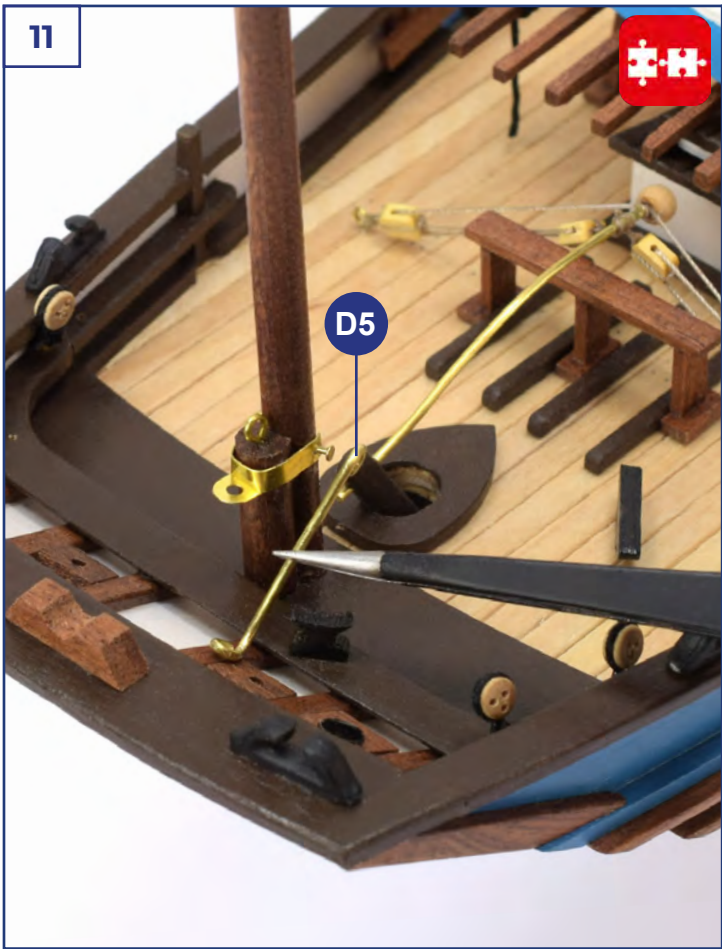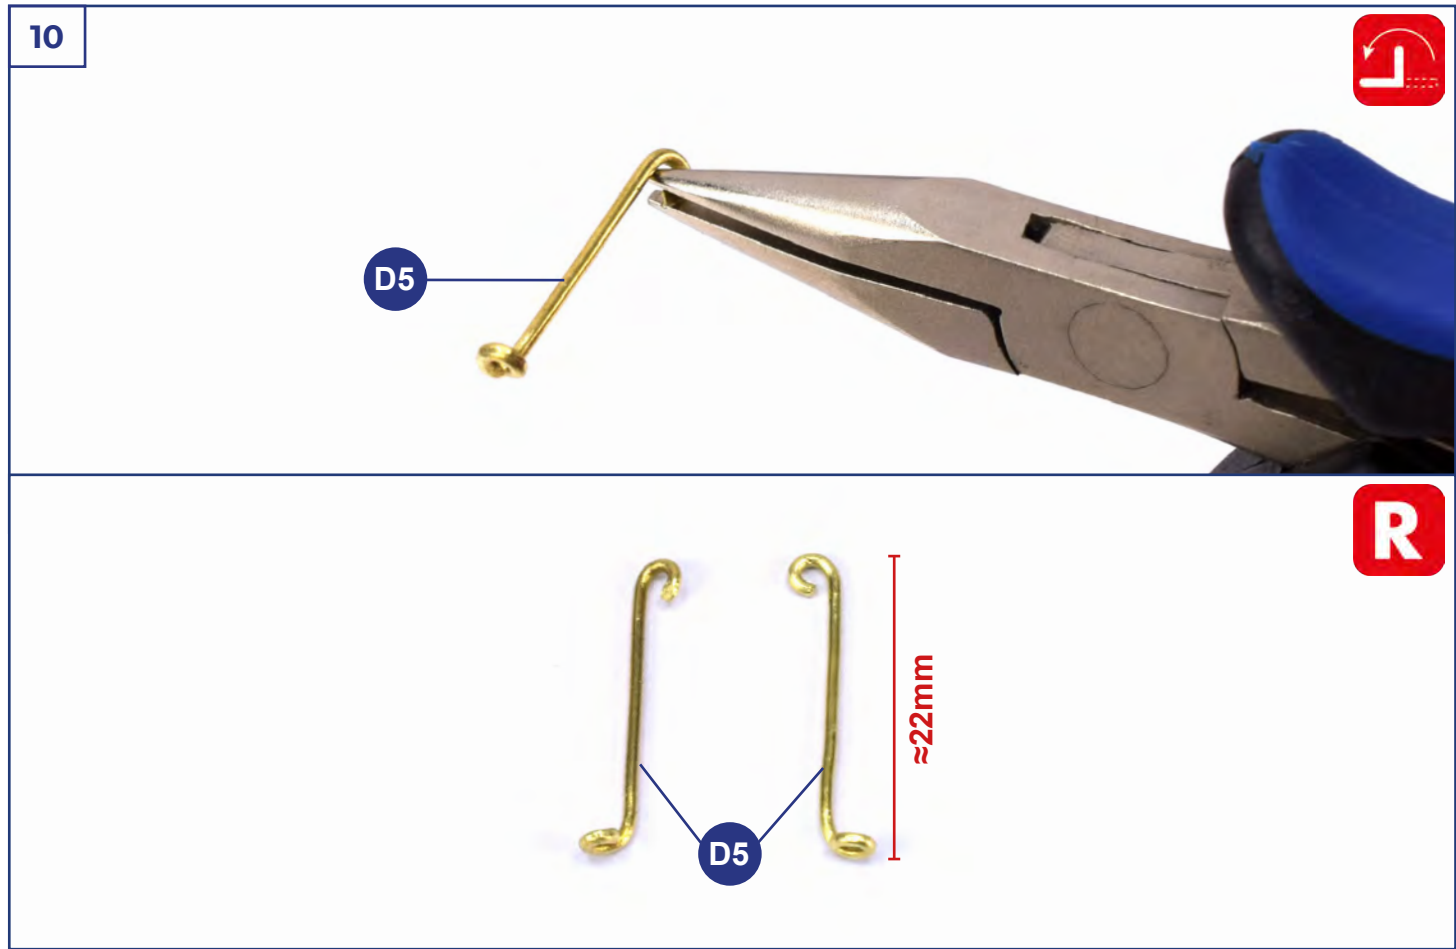

01

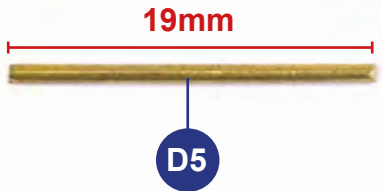




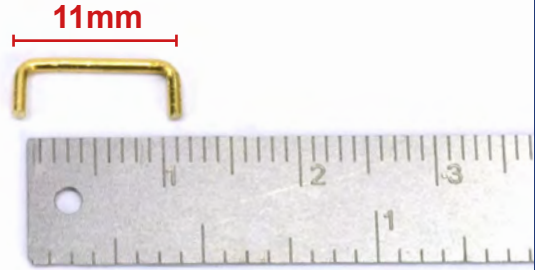




02

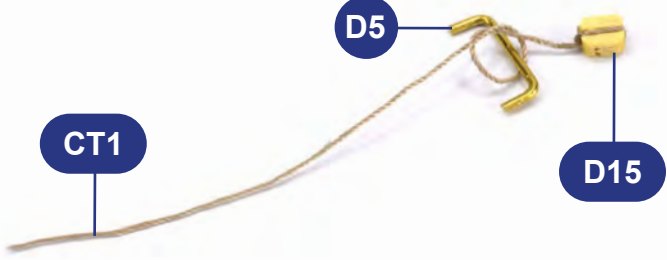





03





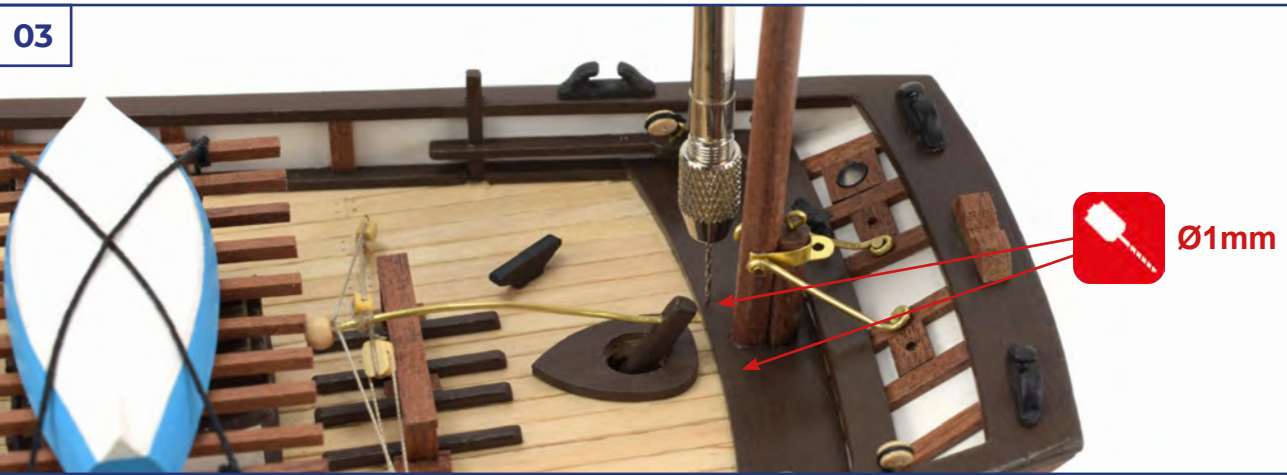










04










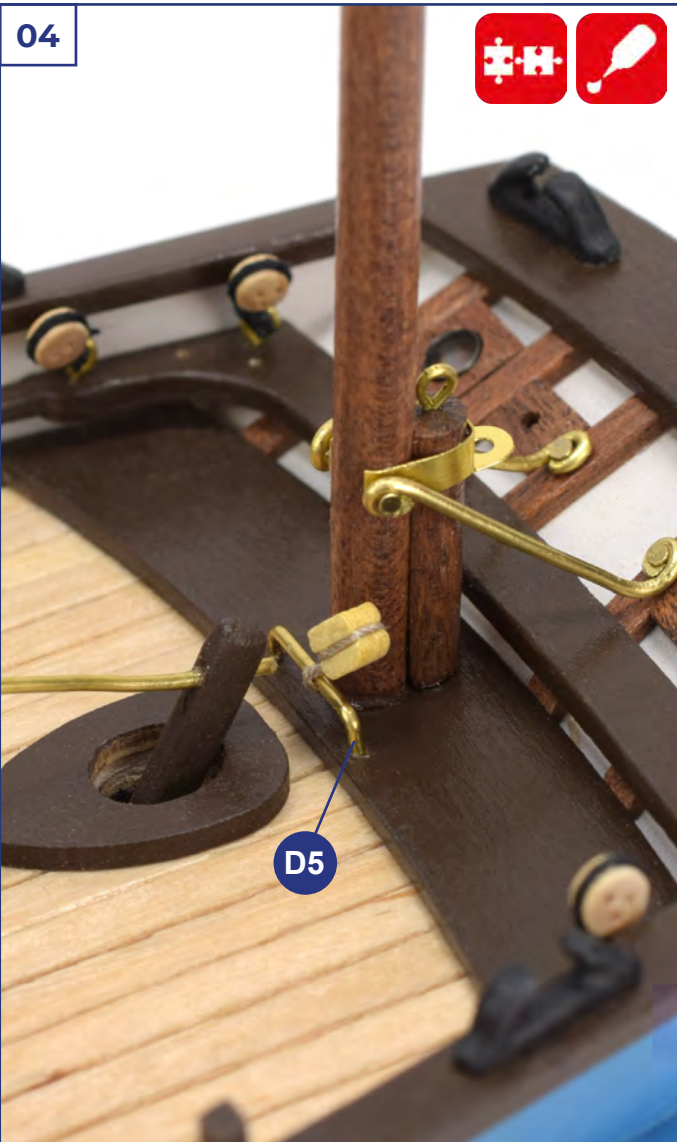




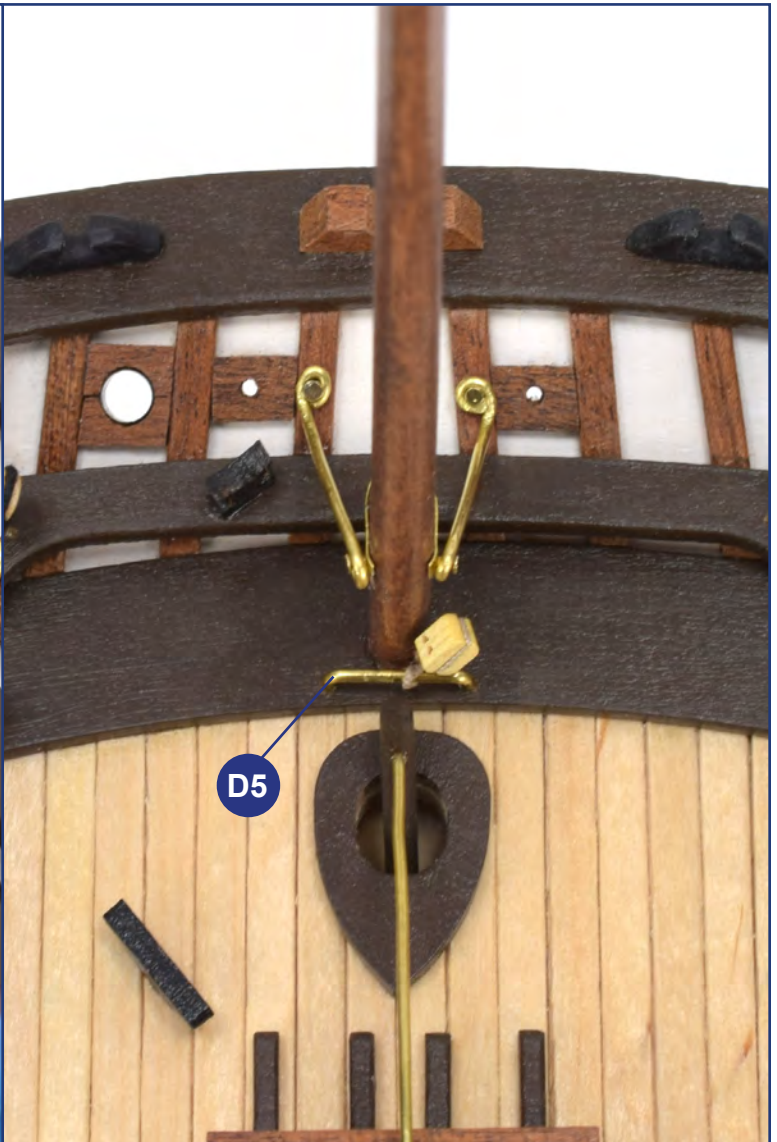


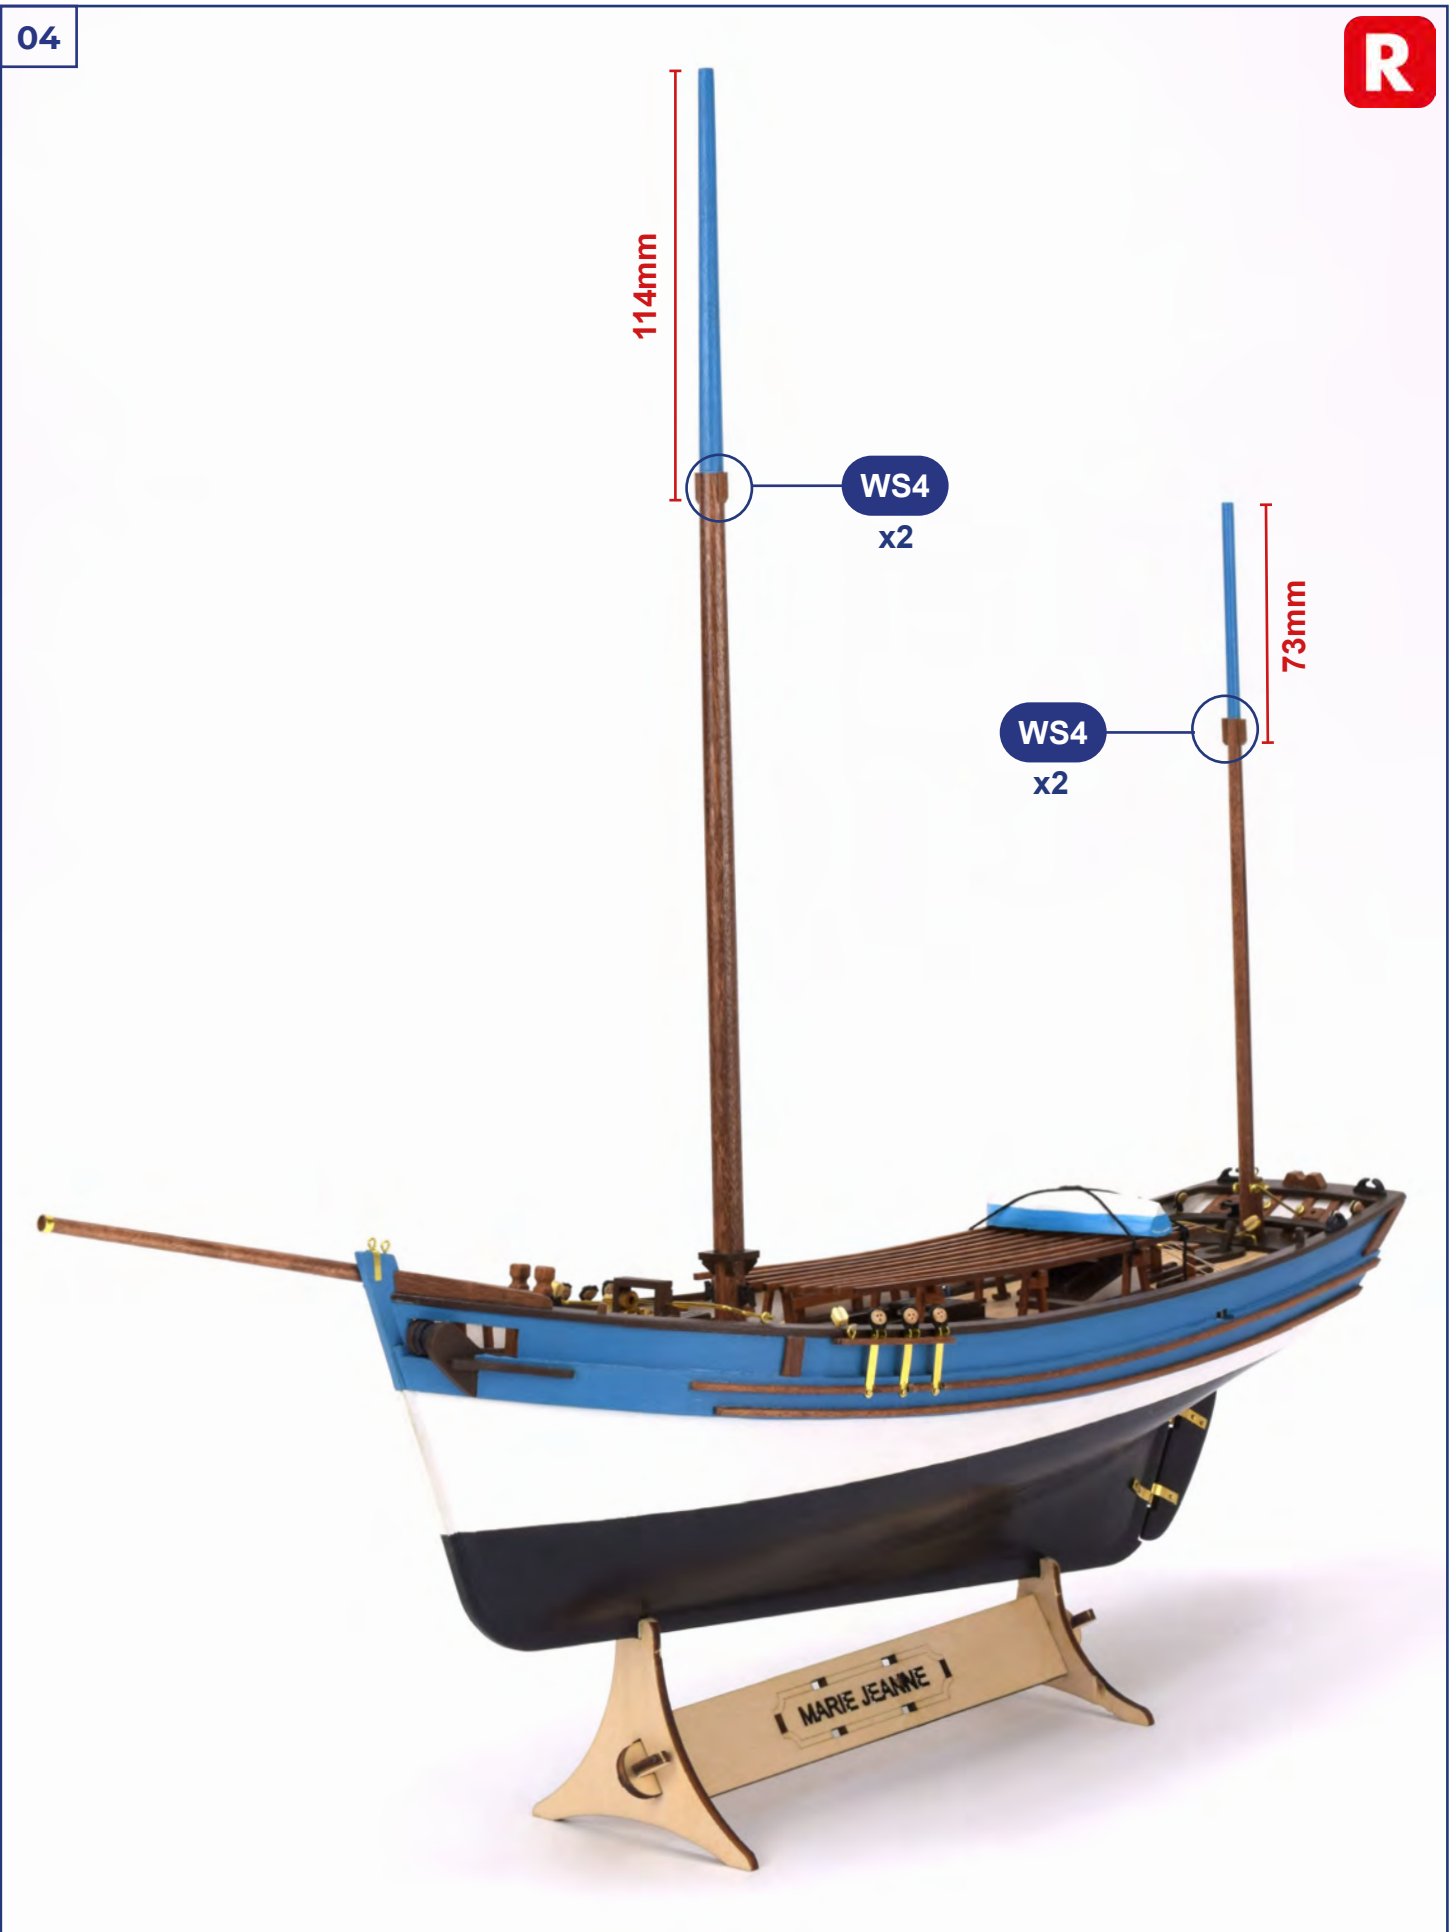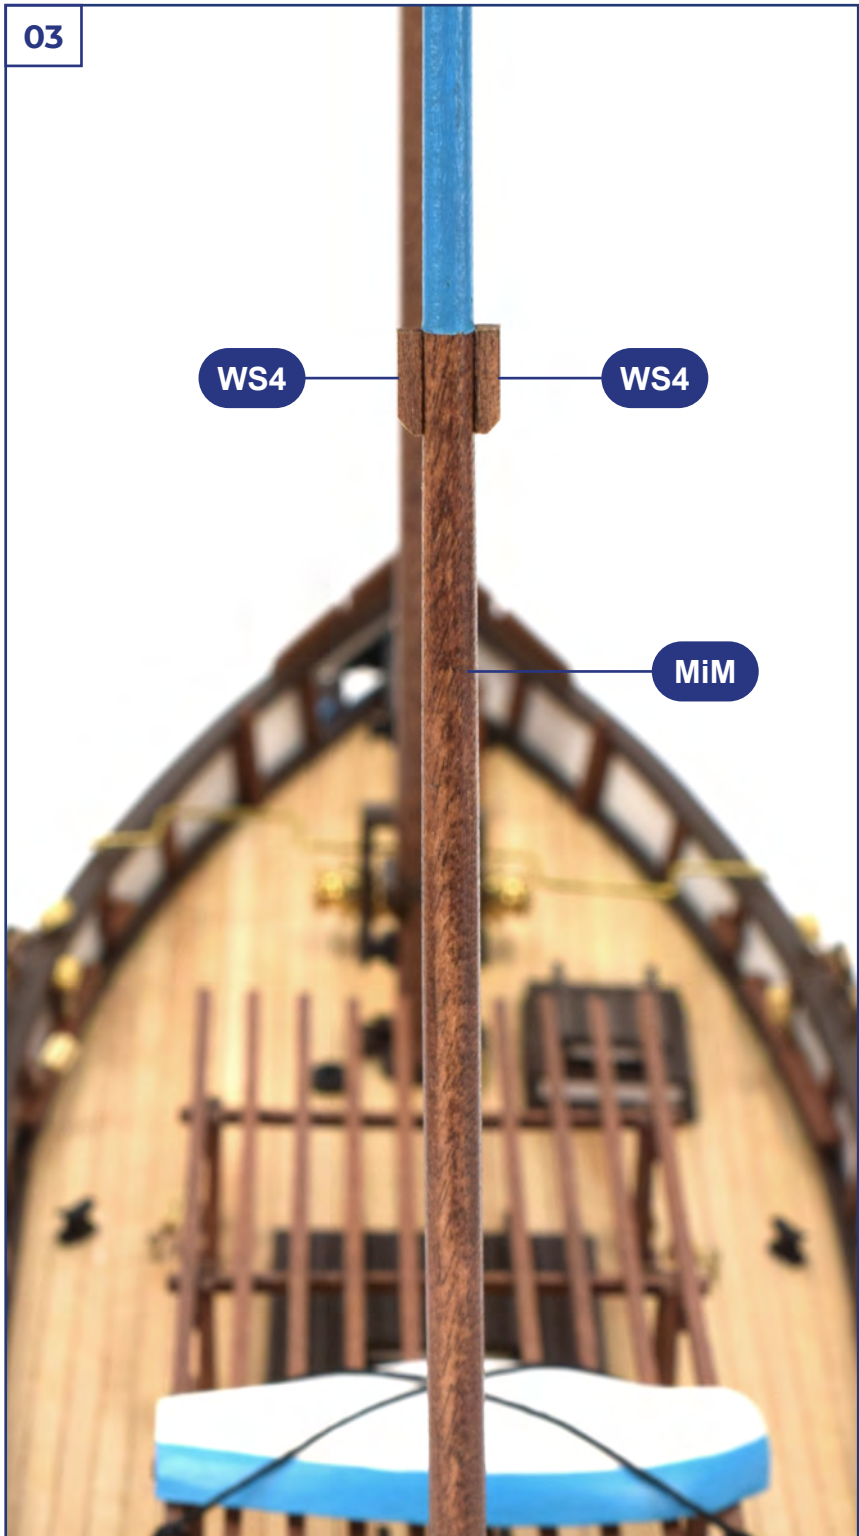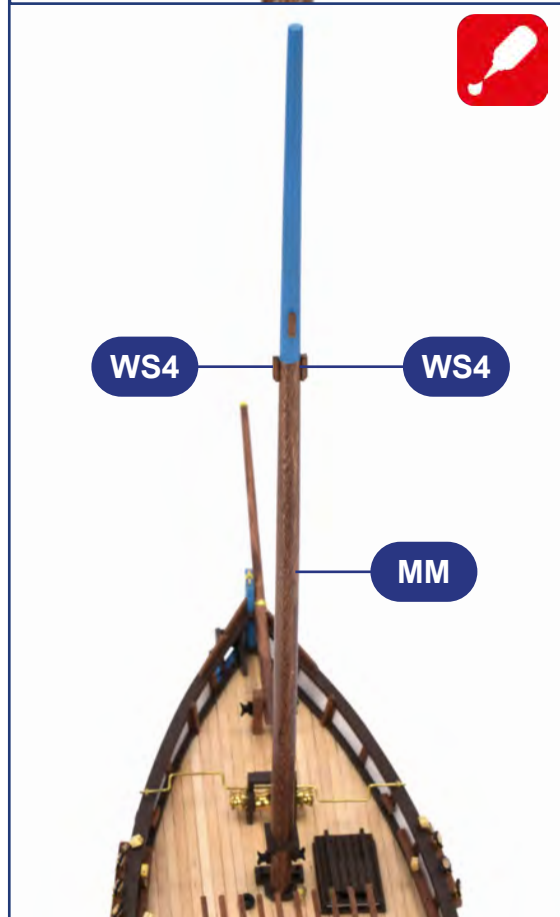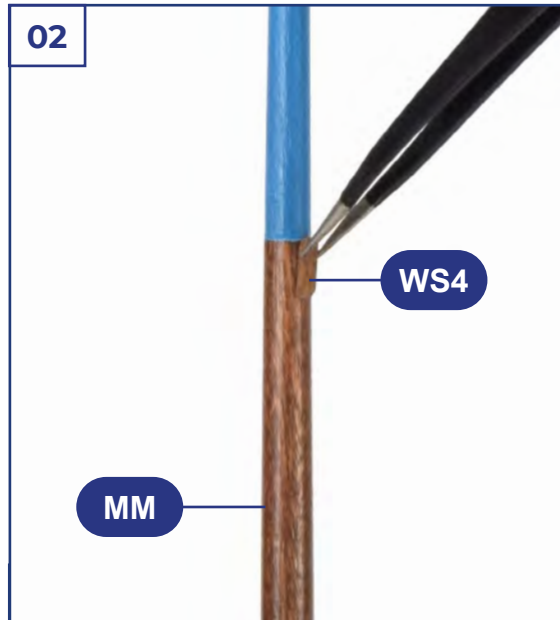
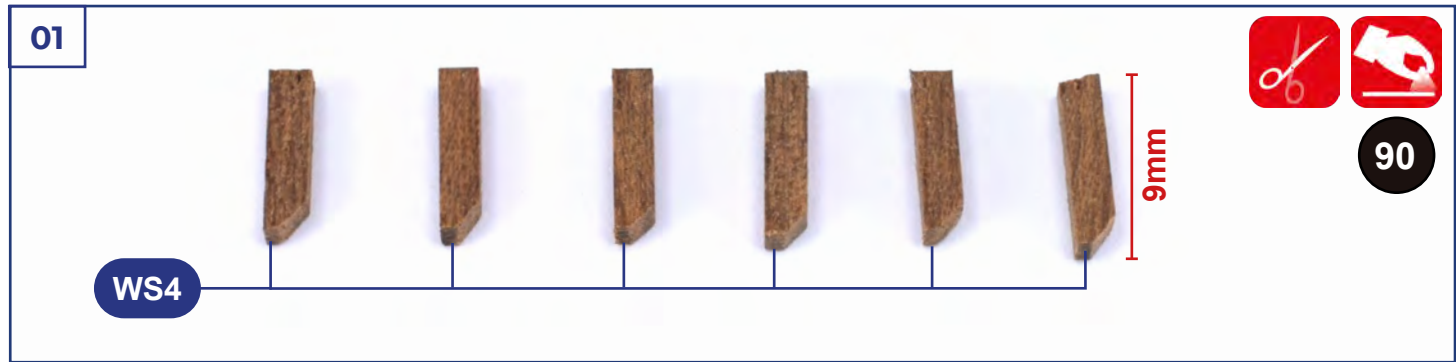


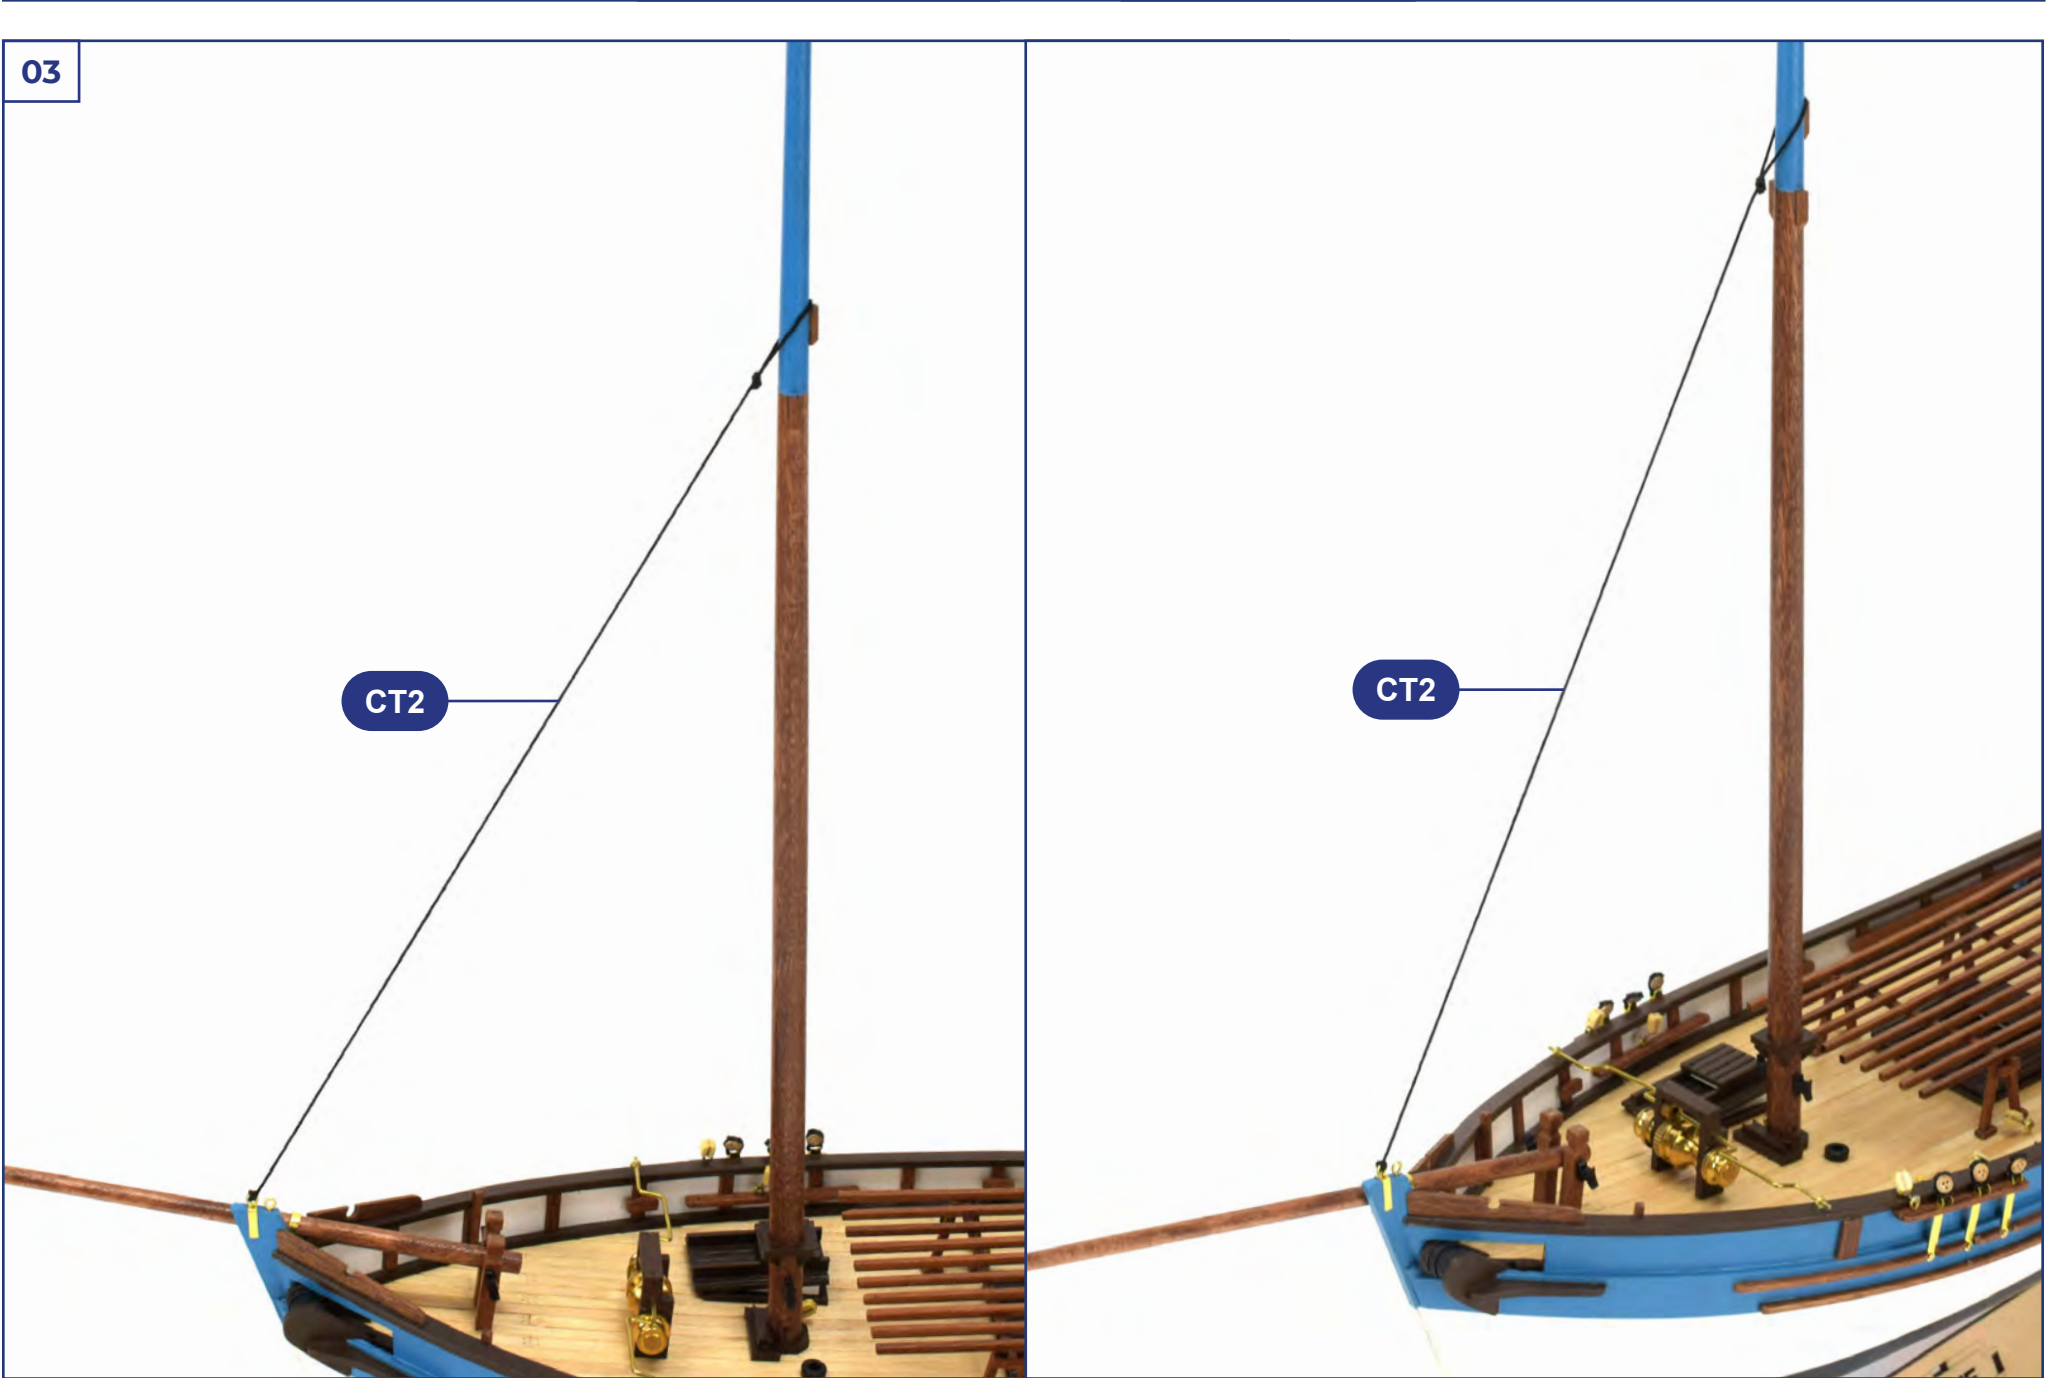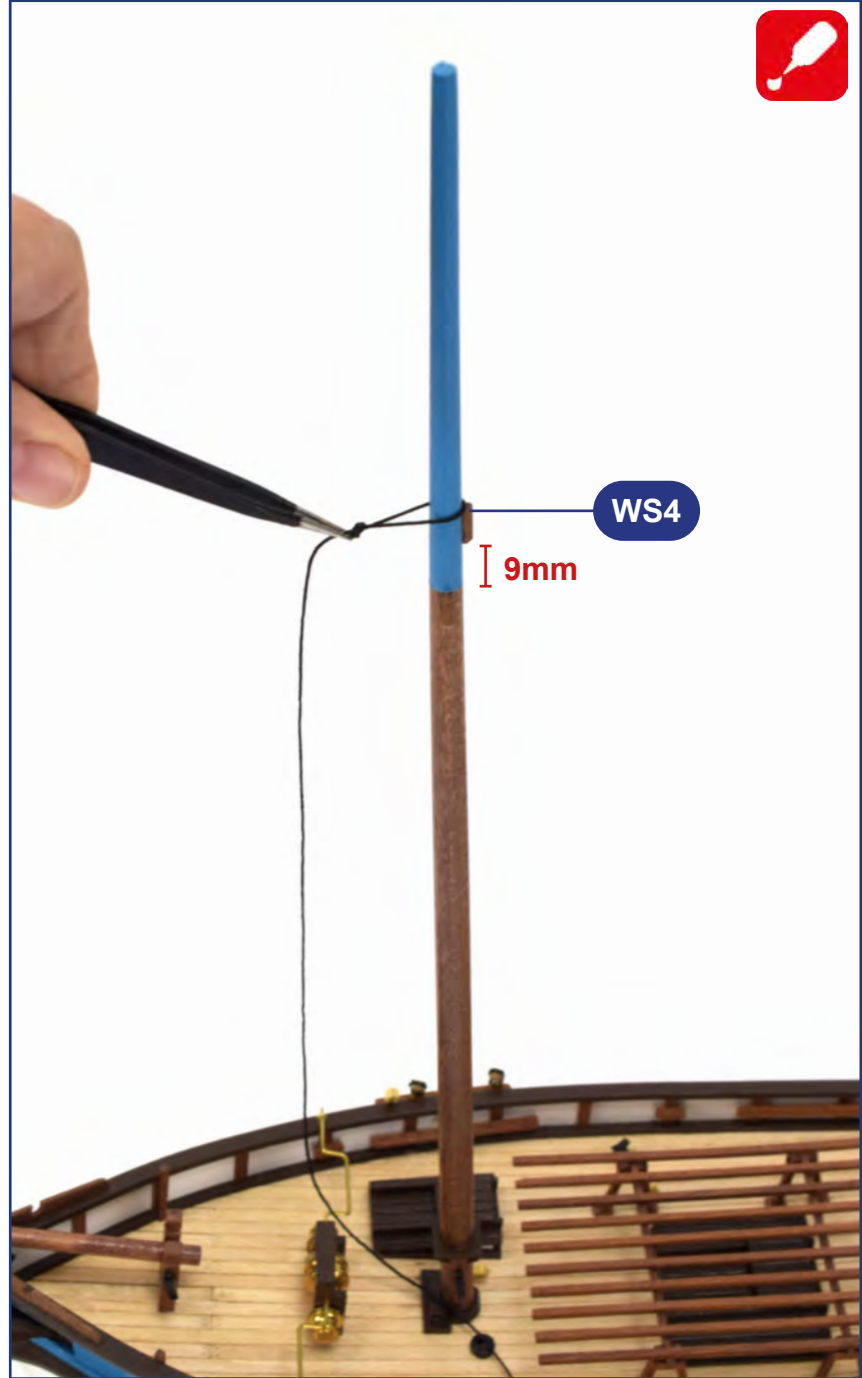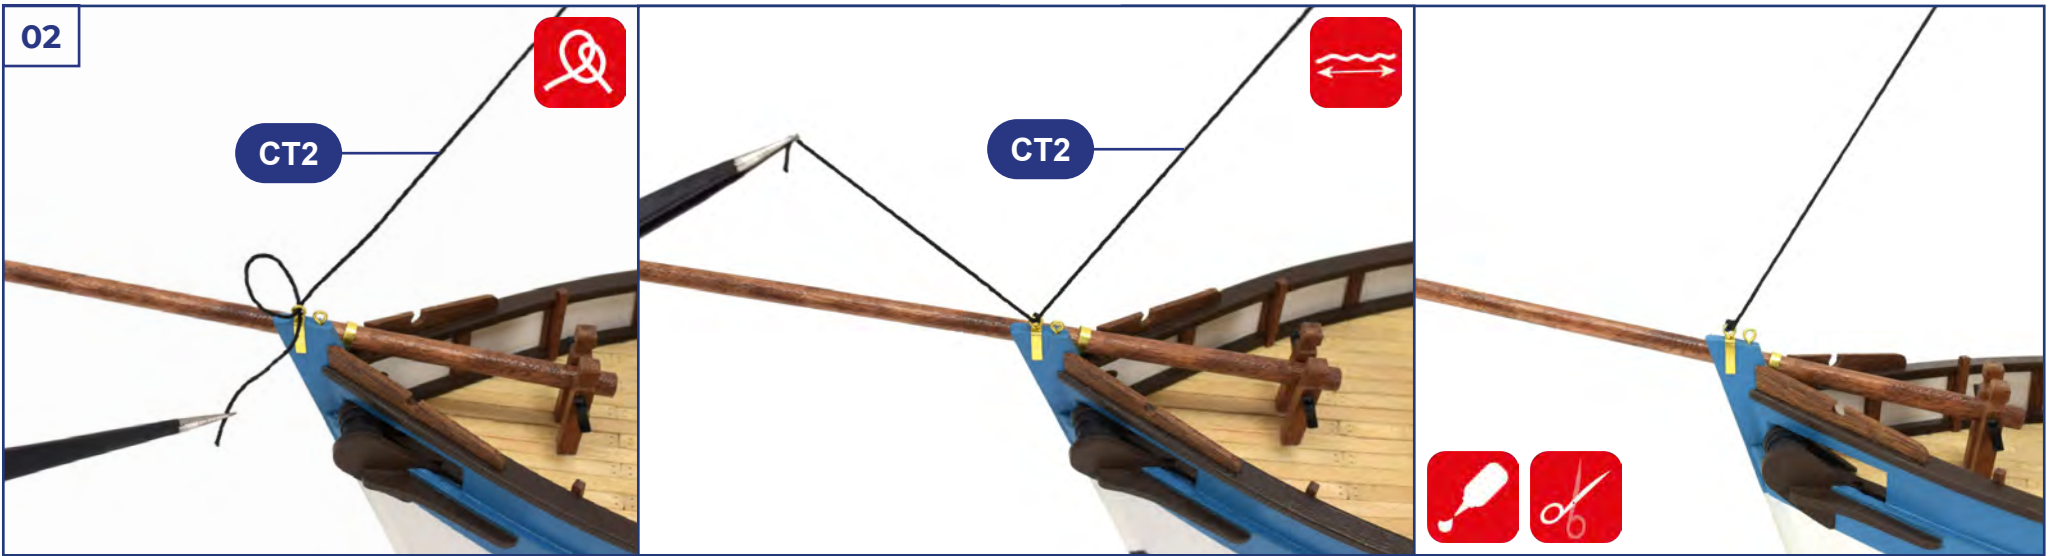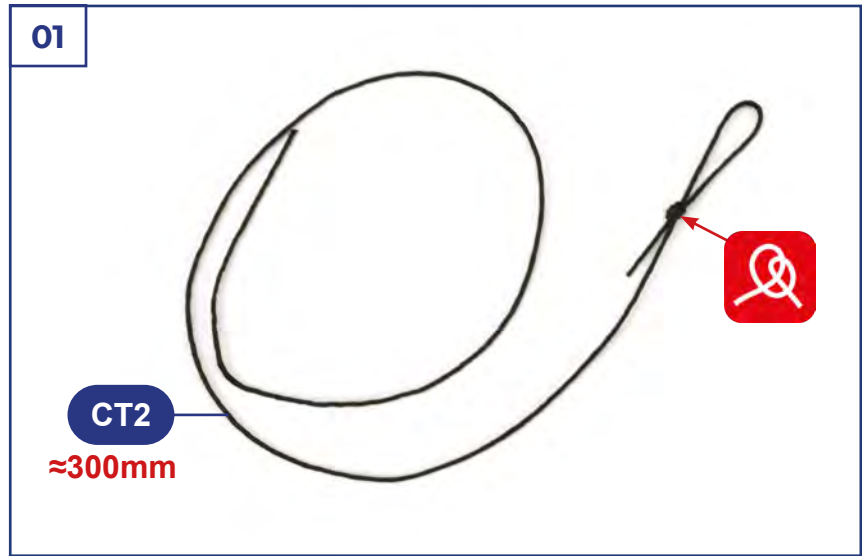

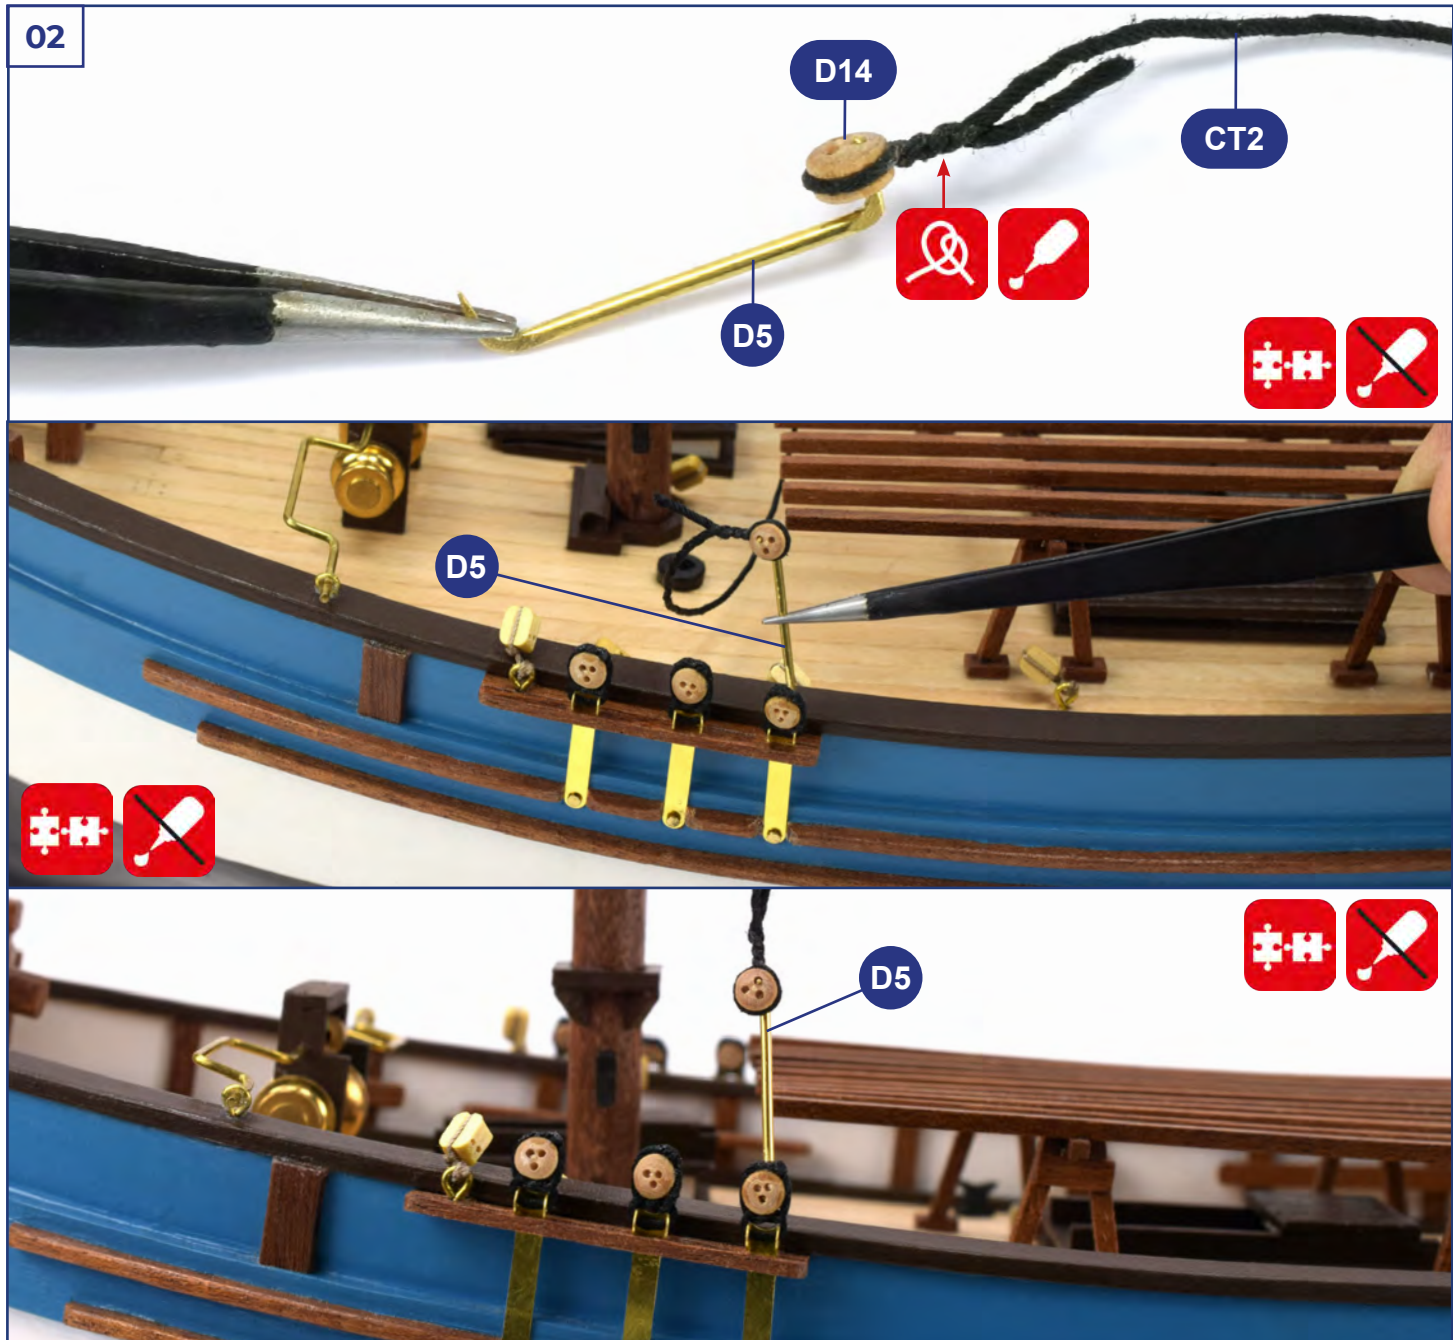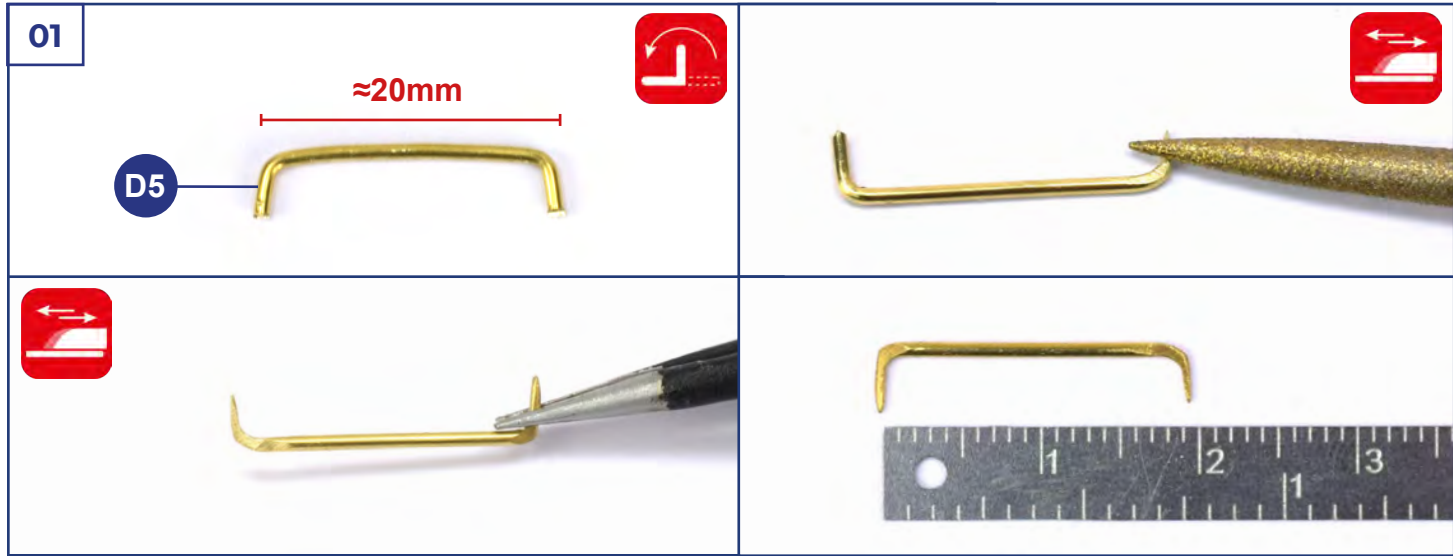

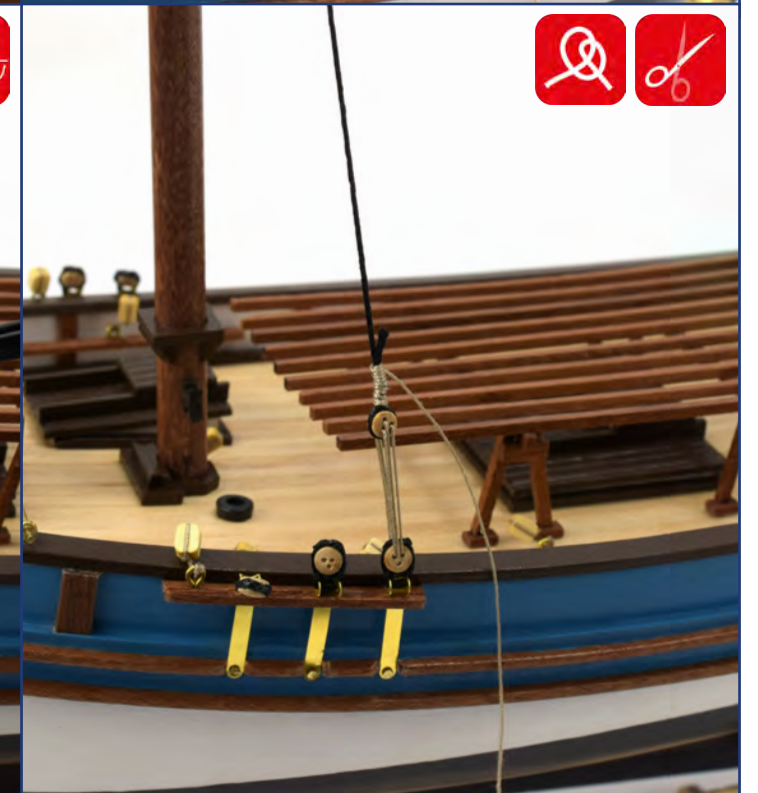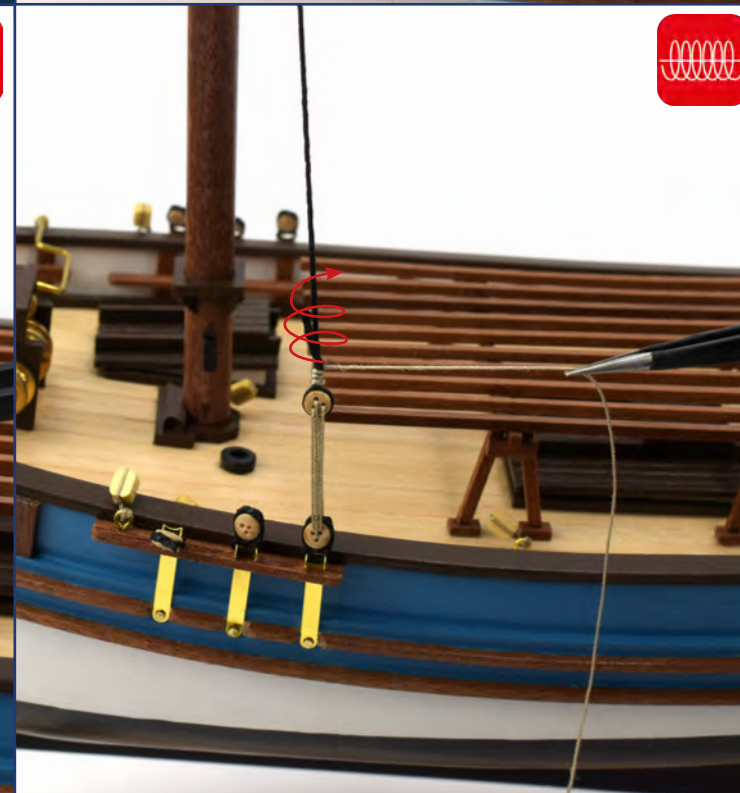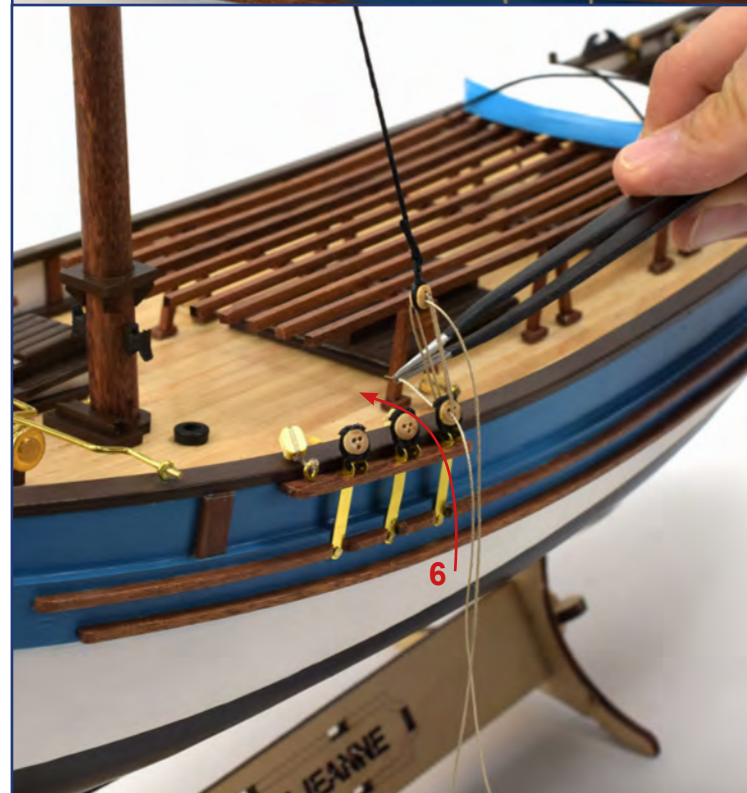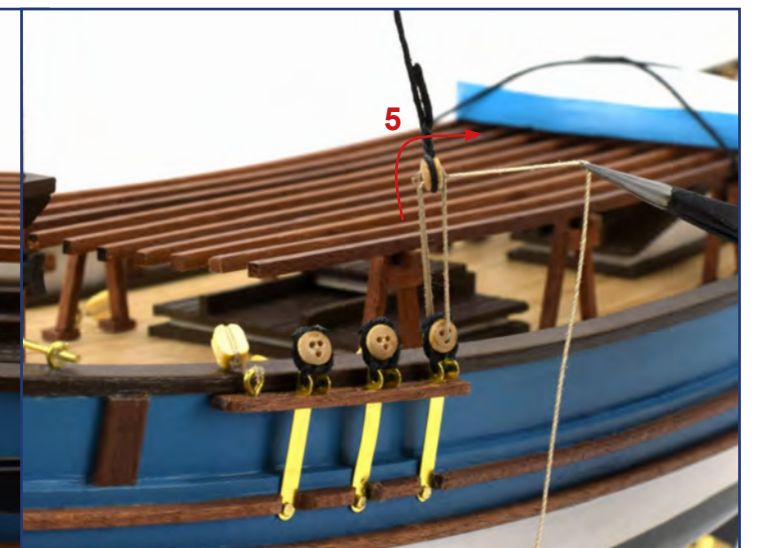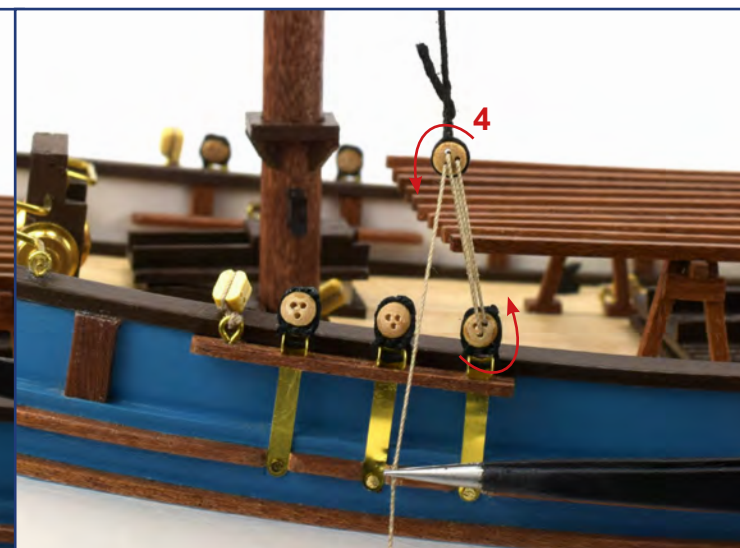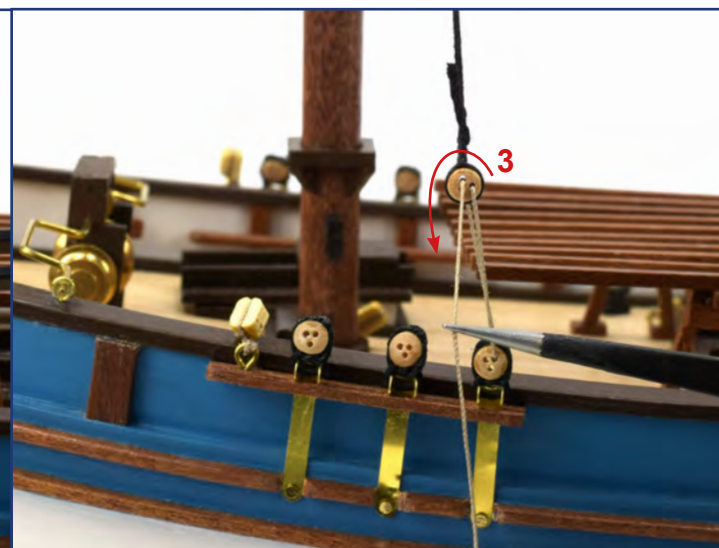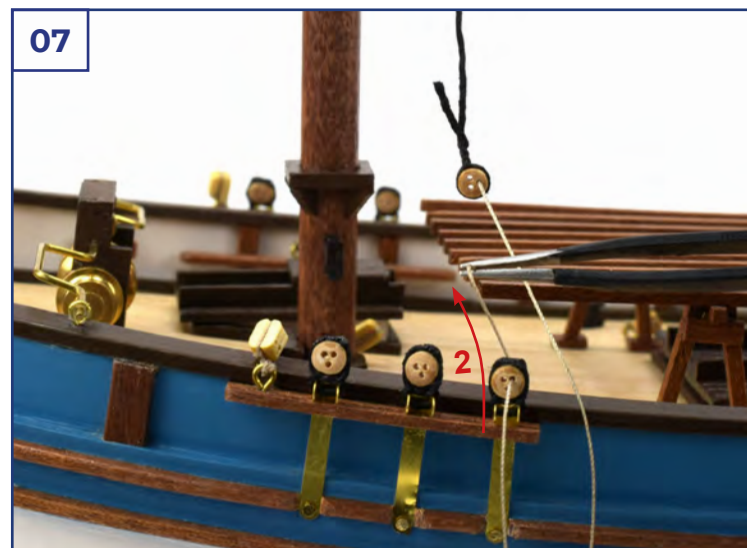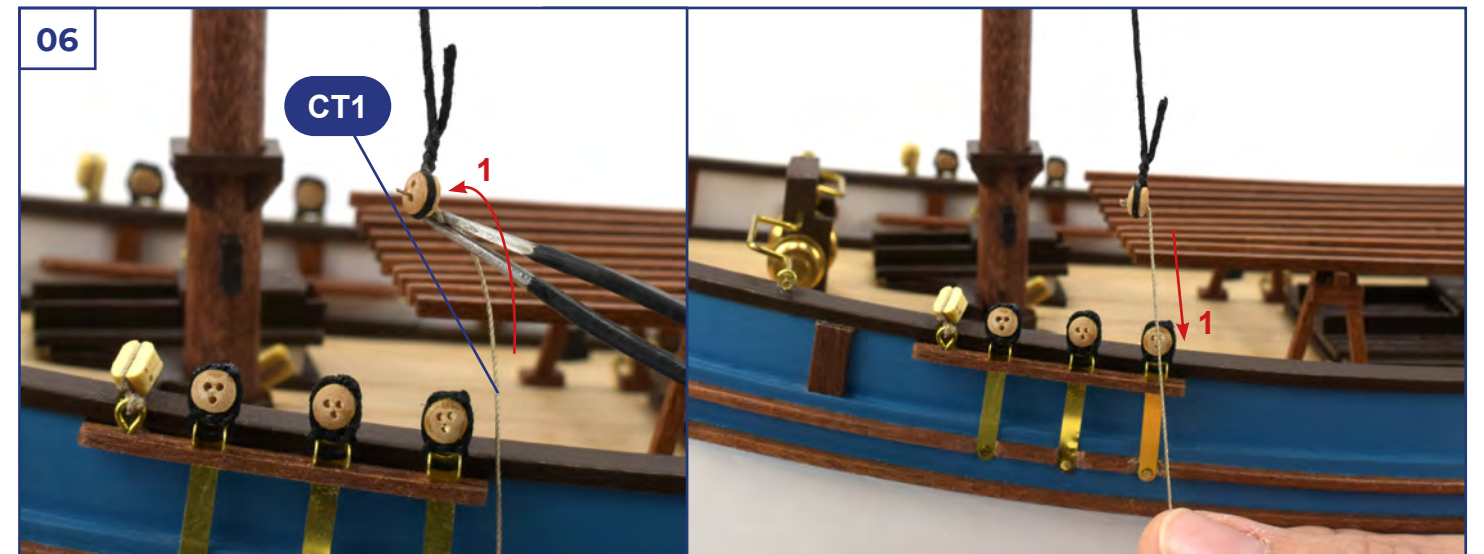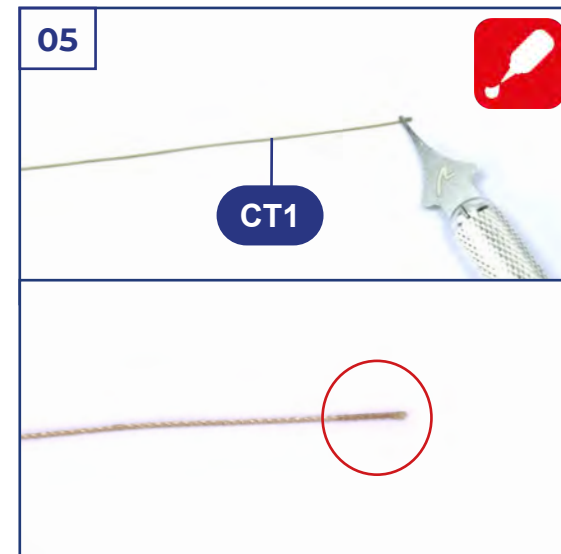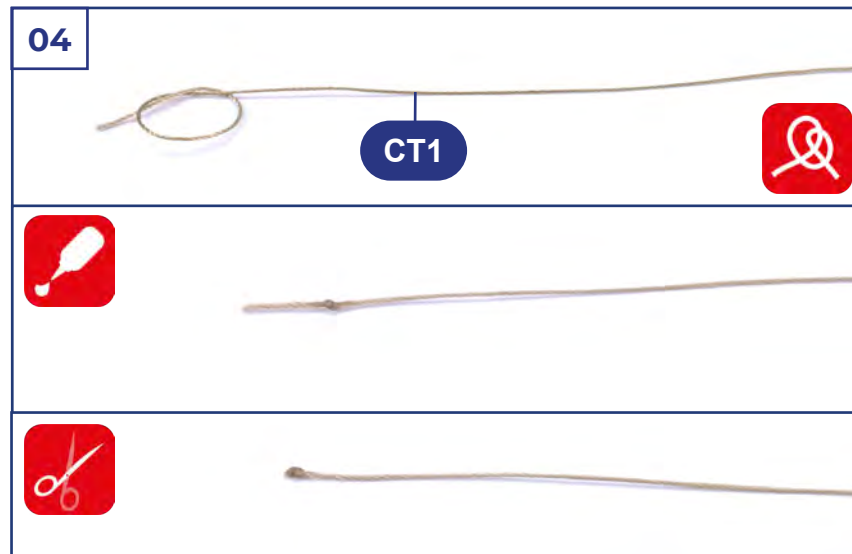

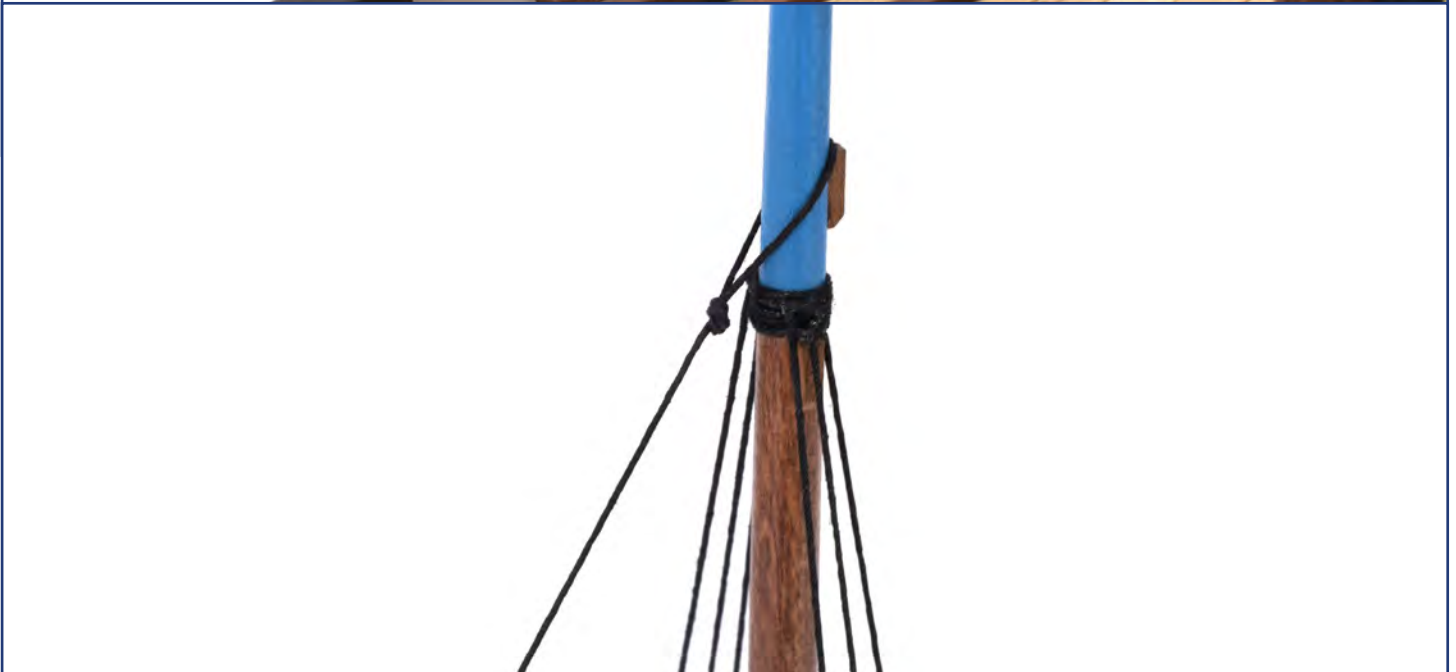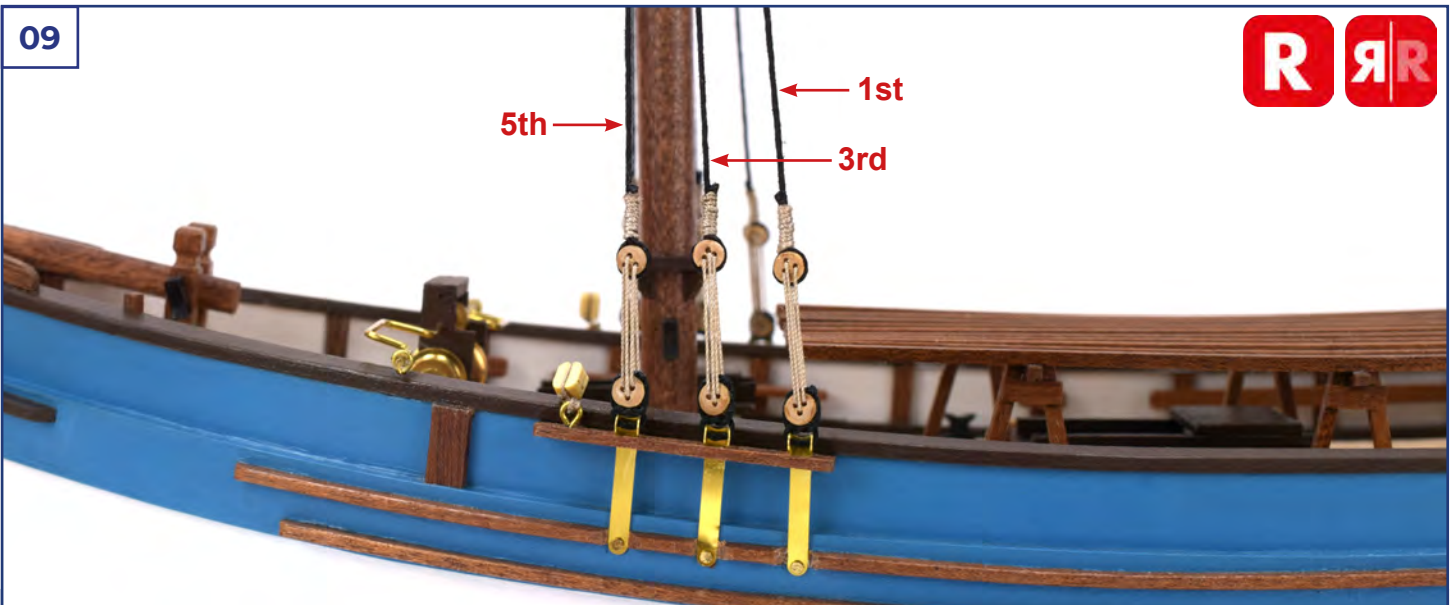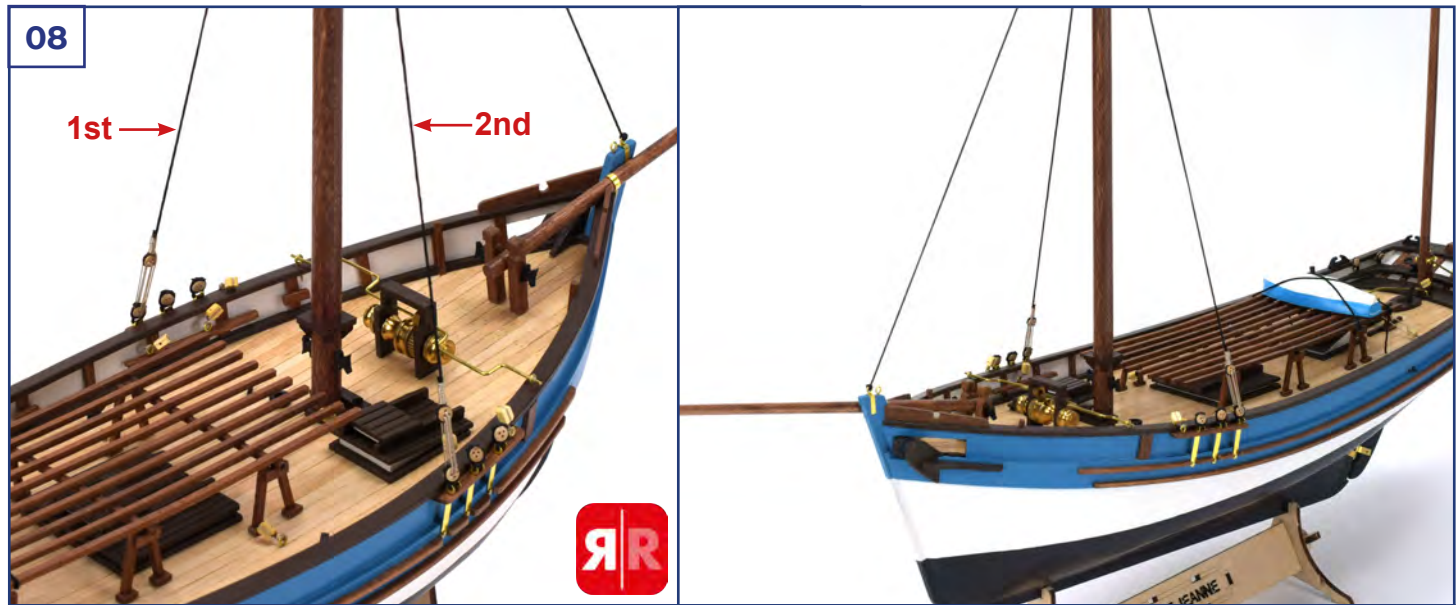

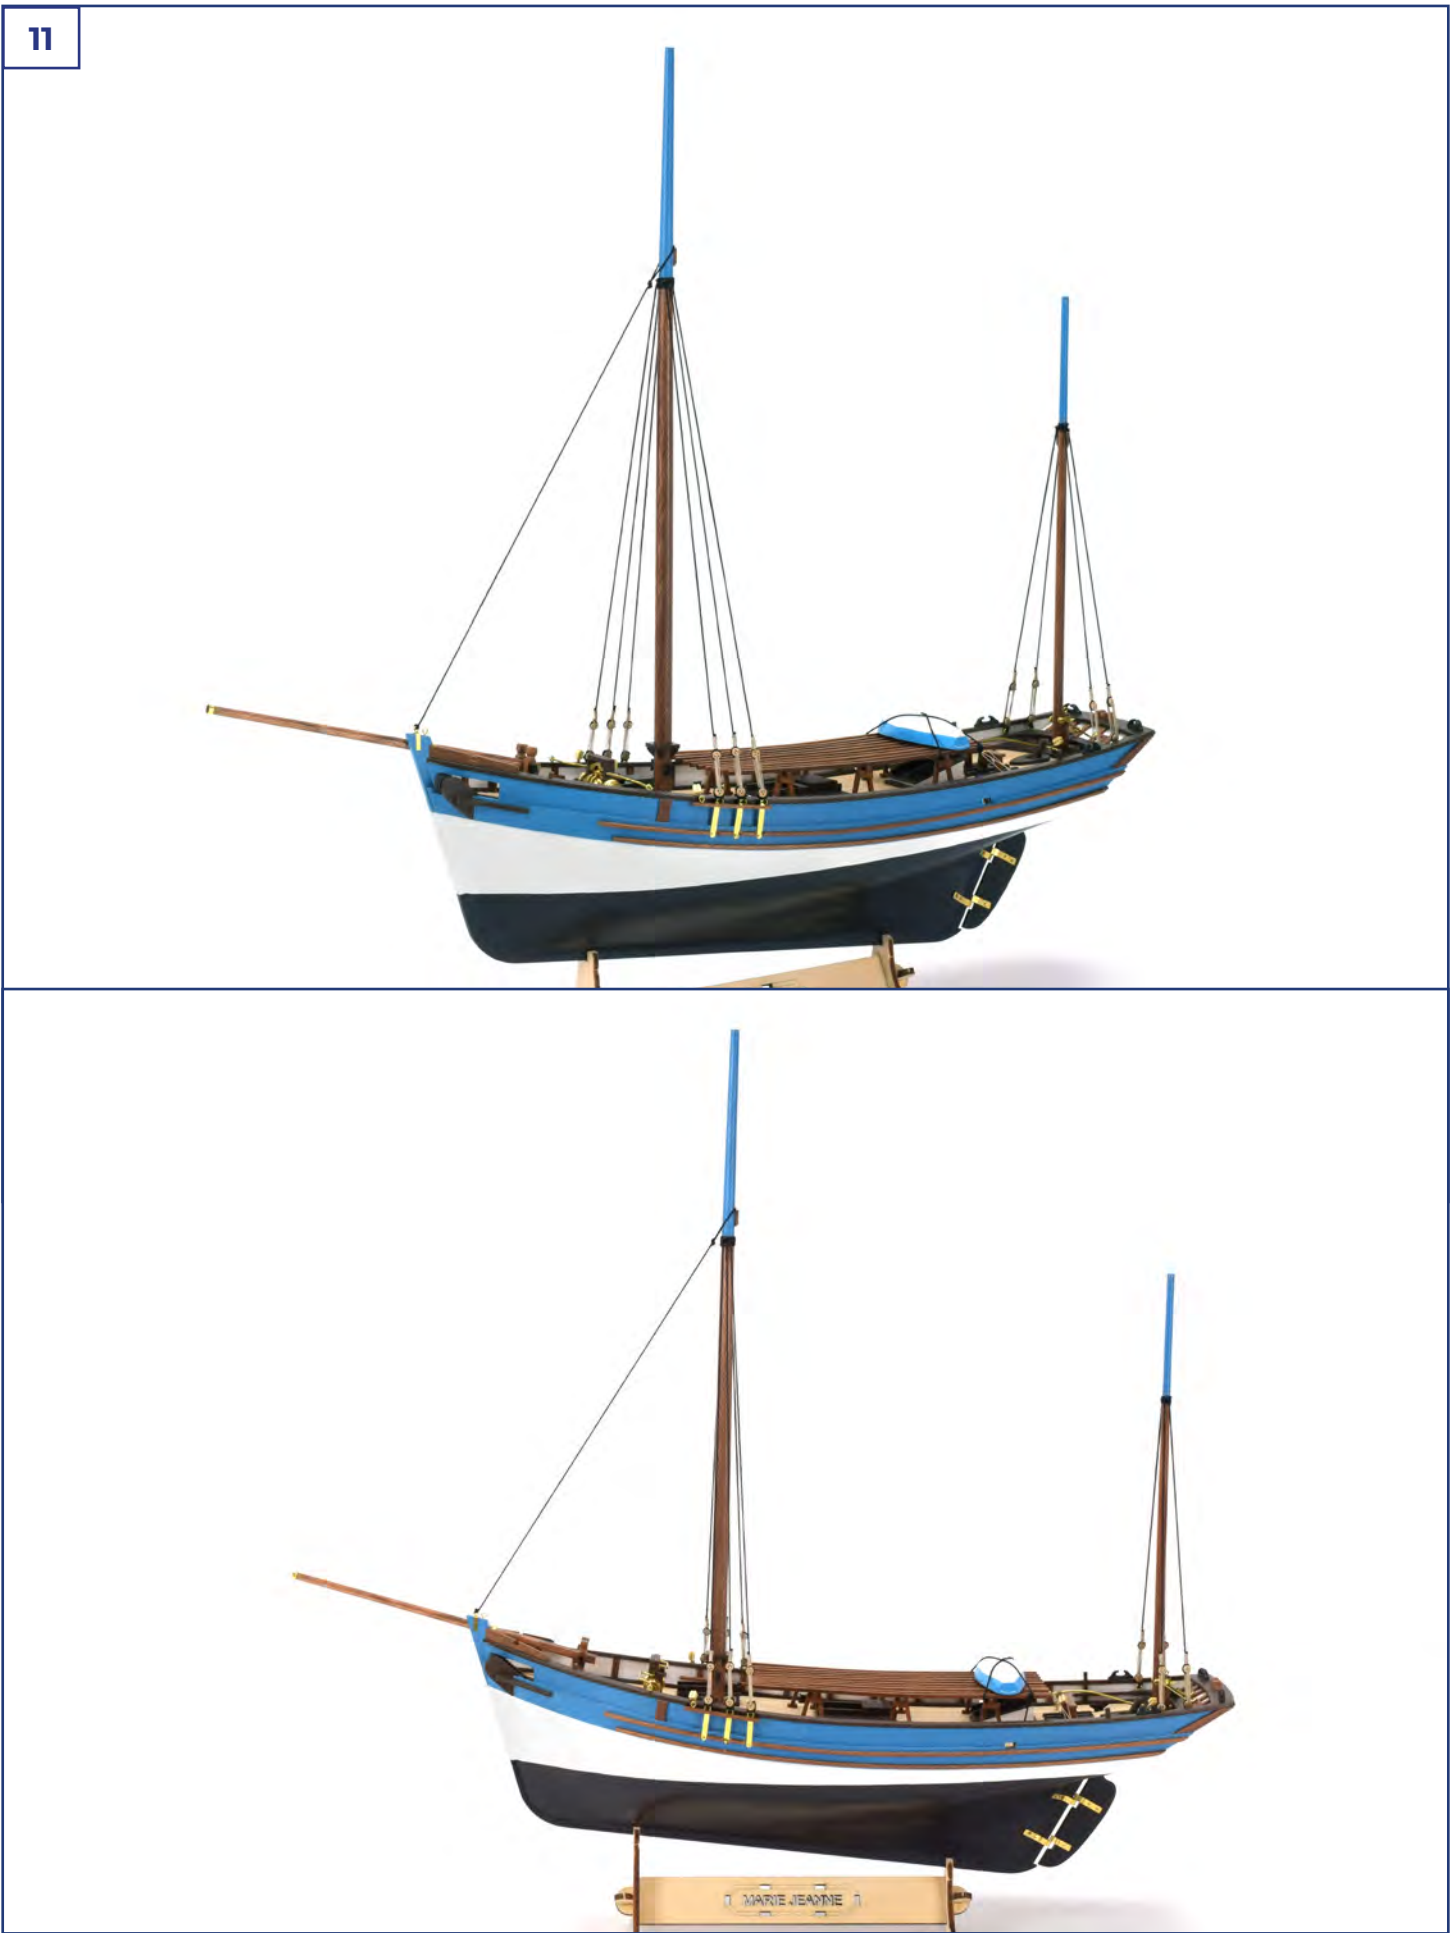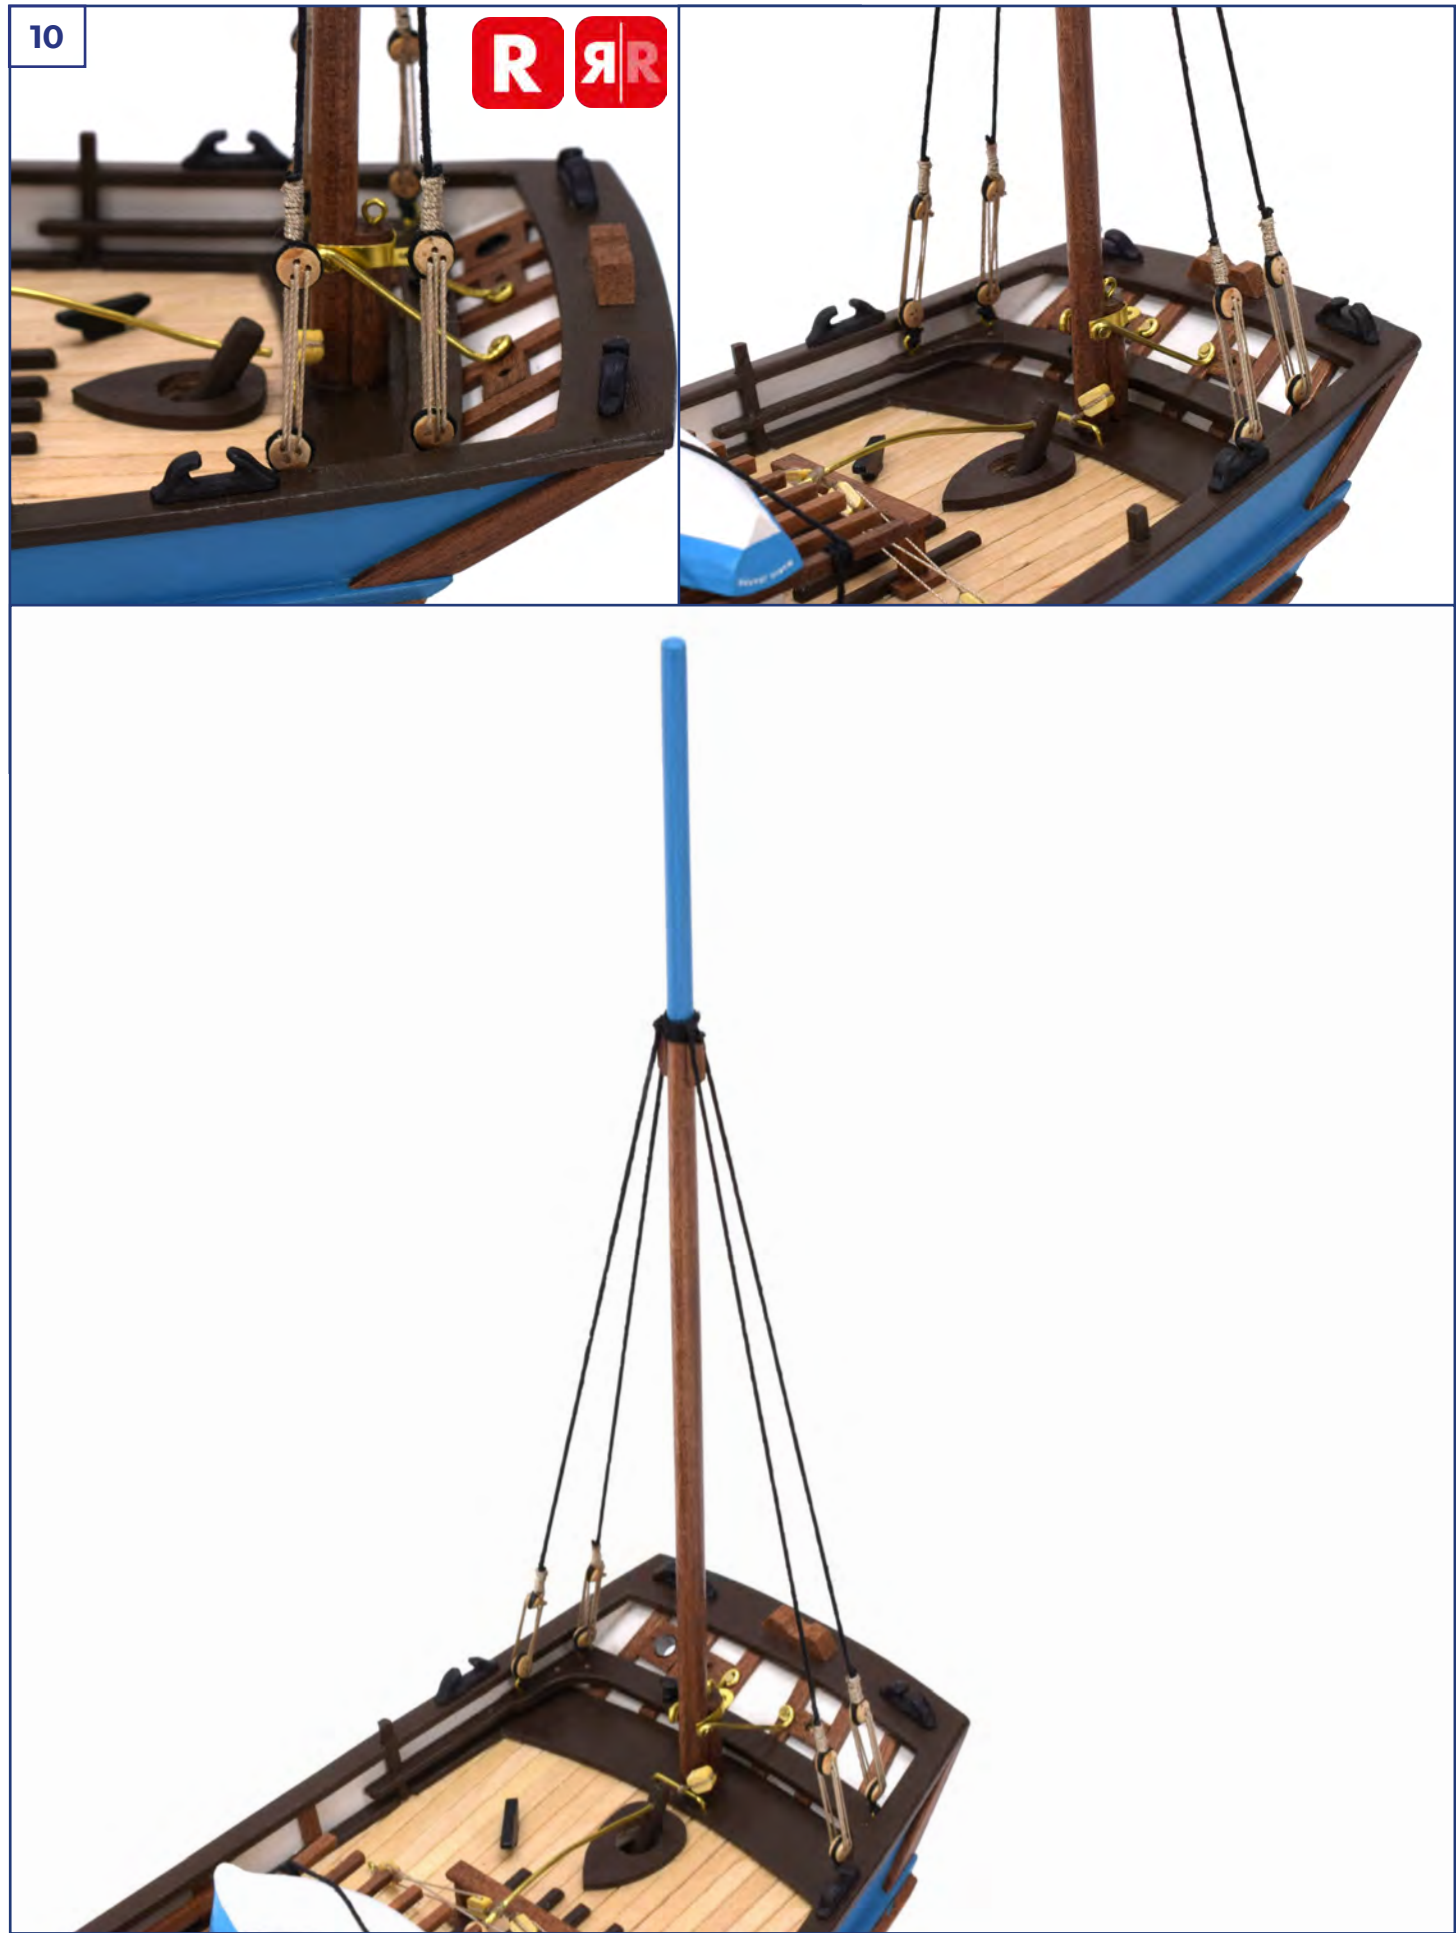

01

6
80%
+
20%
00

S1

7
50%
+
50%
00

S2

7
50%
+
50%
00


S3



8
80%
+
20%
00




S4






4
aprox.
40%
+
60%
00


S5

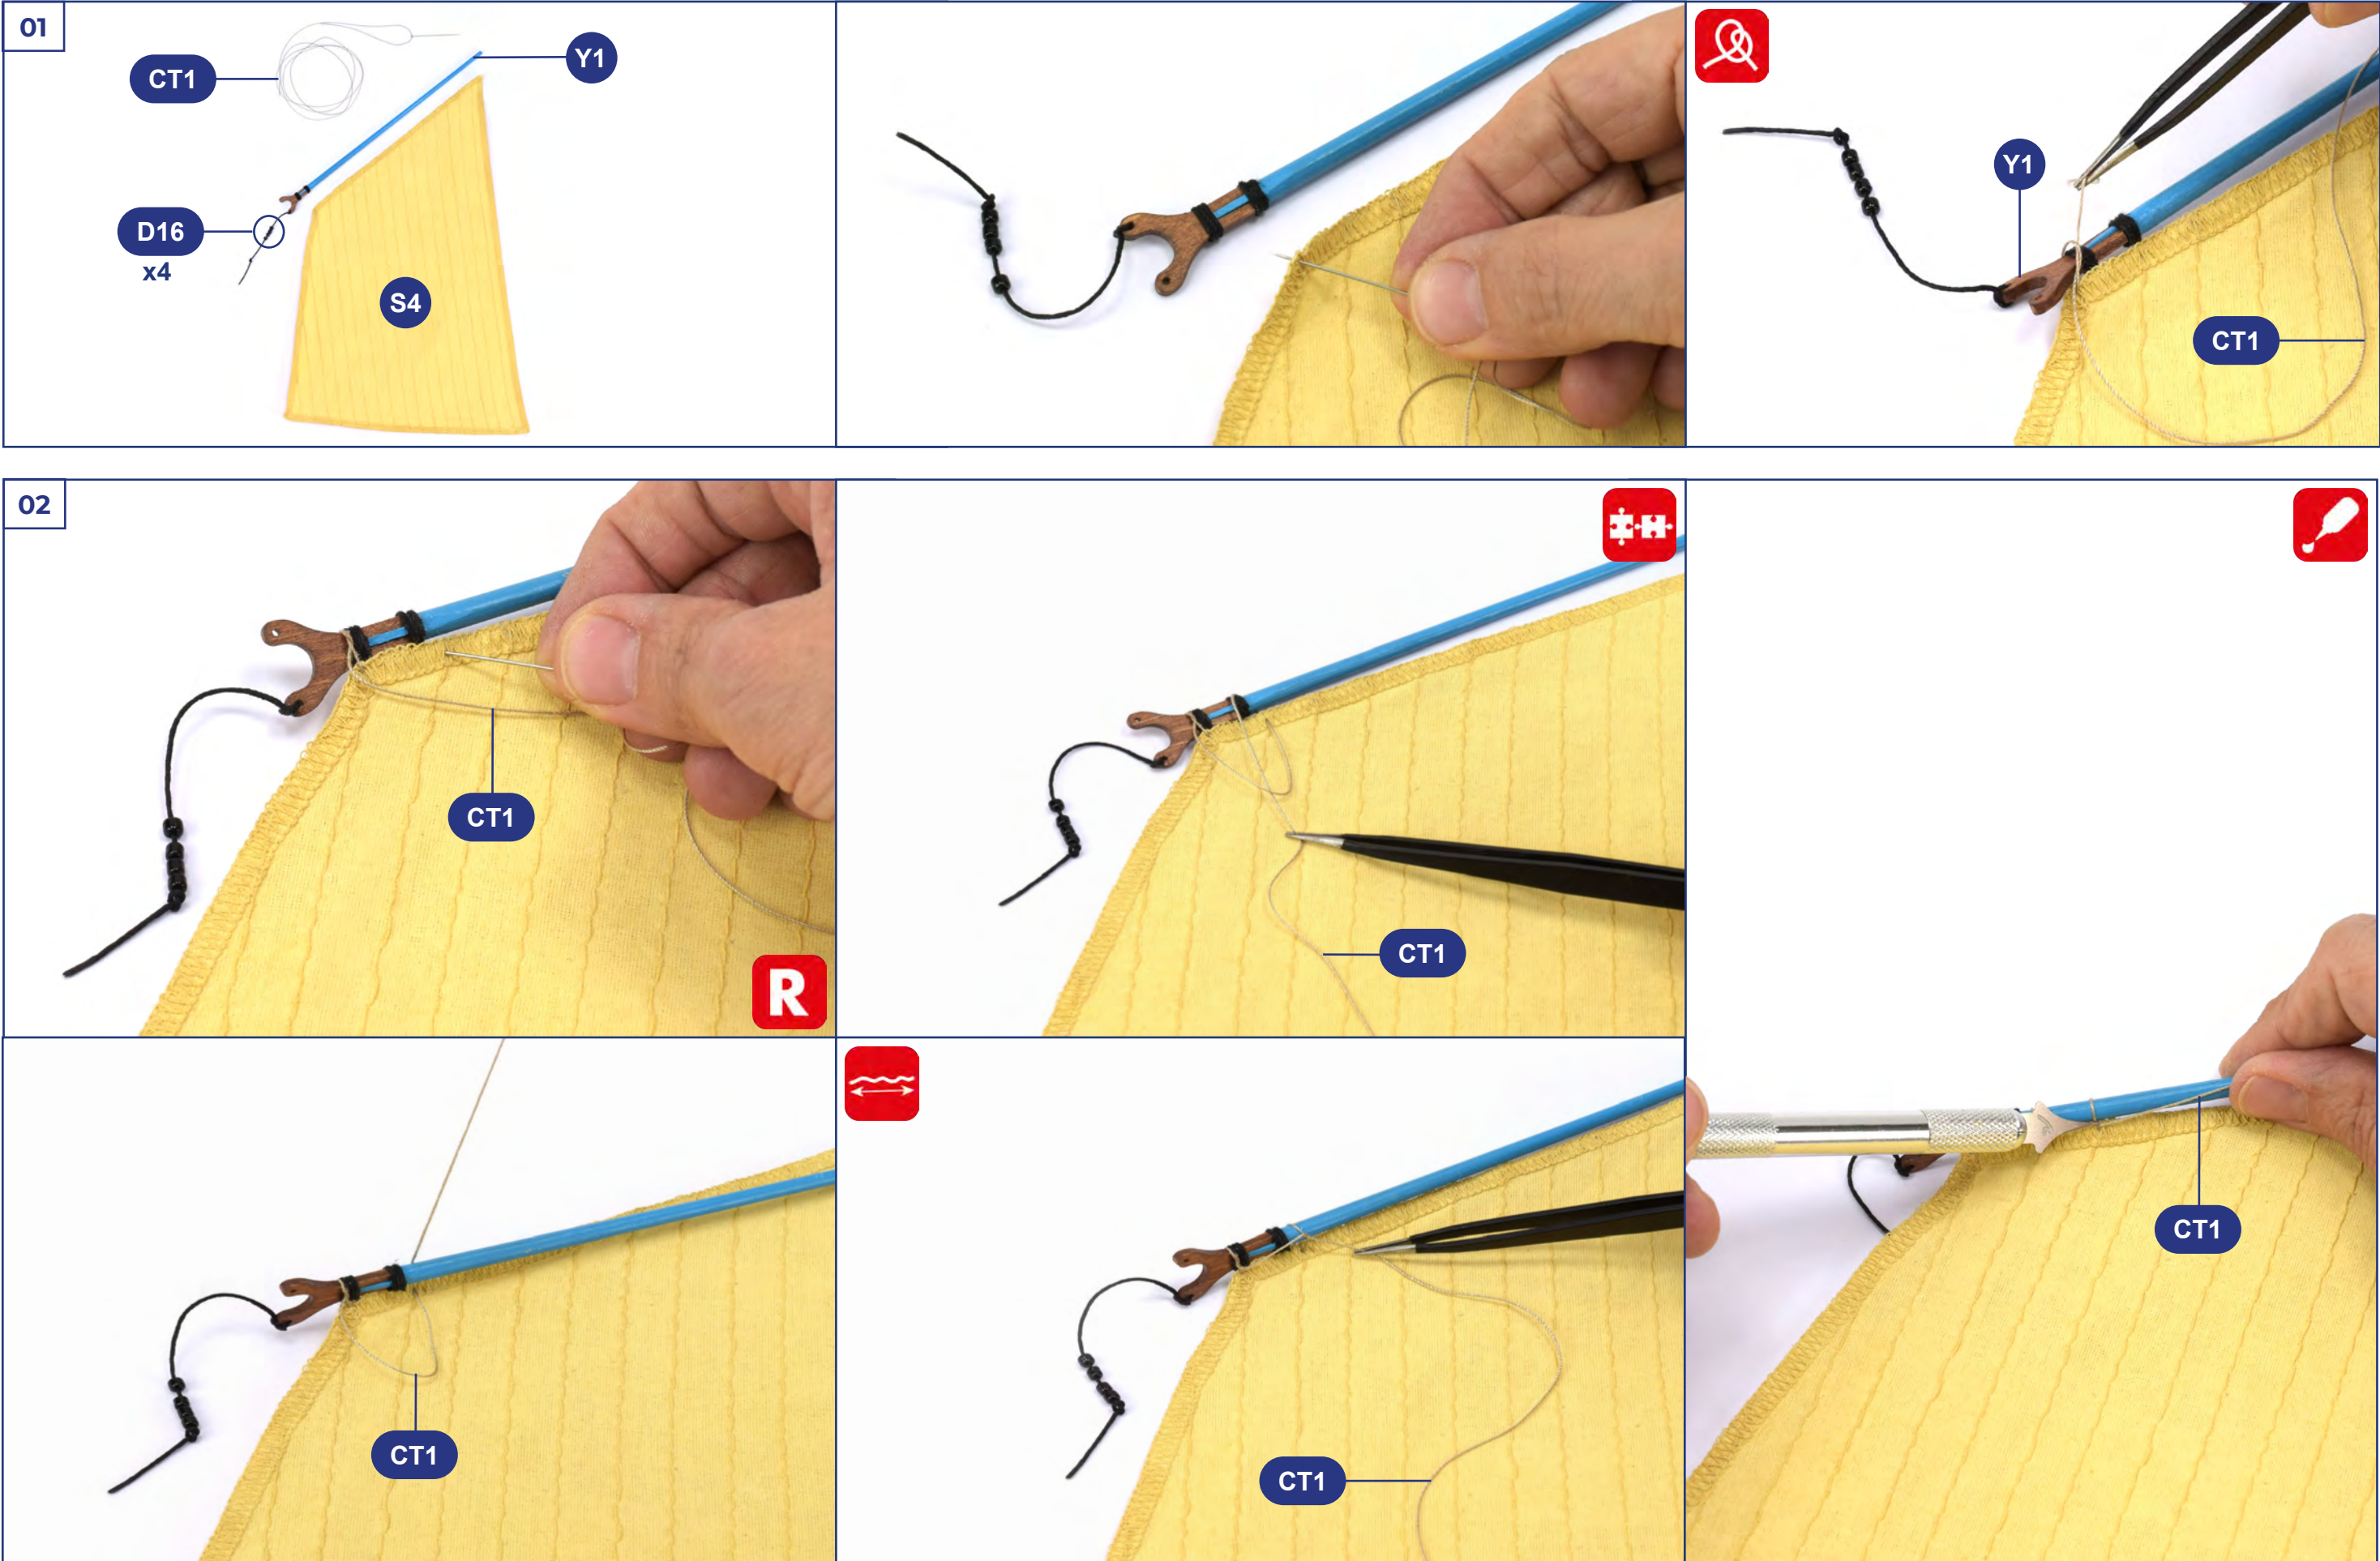




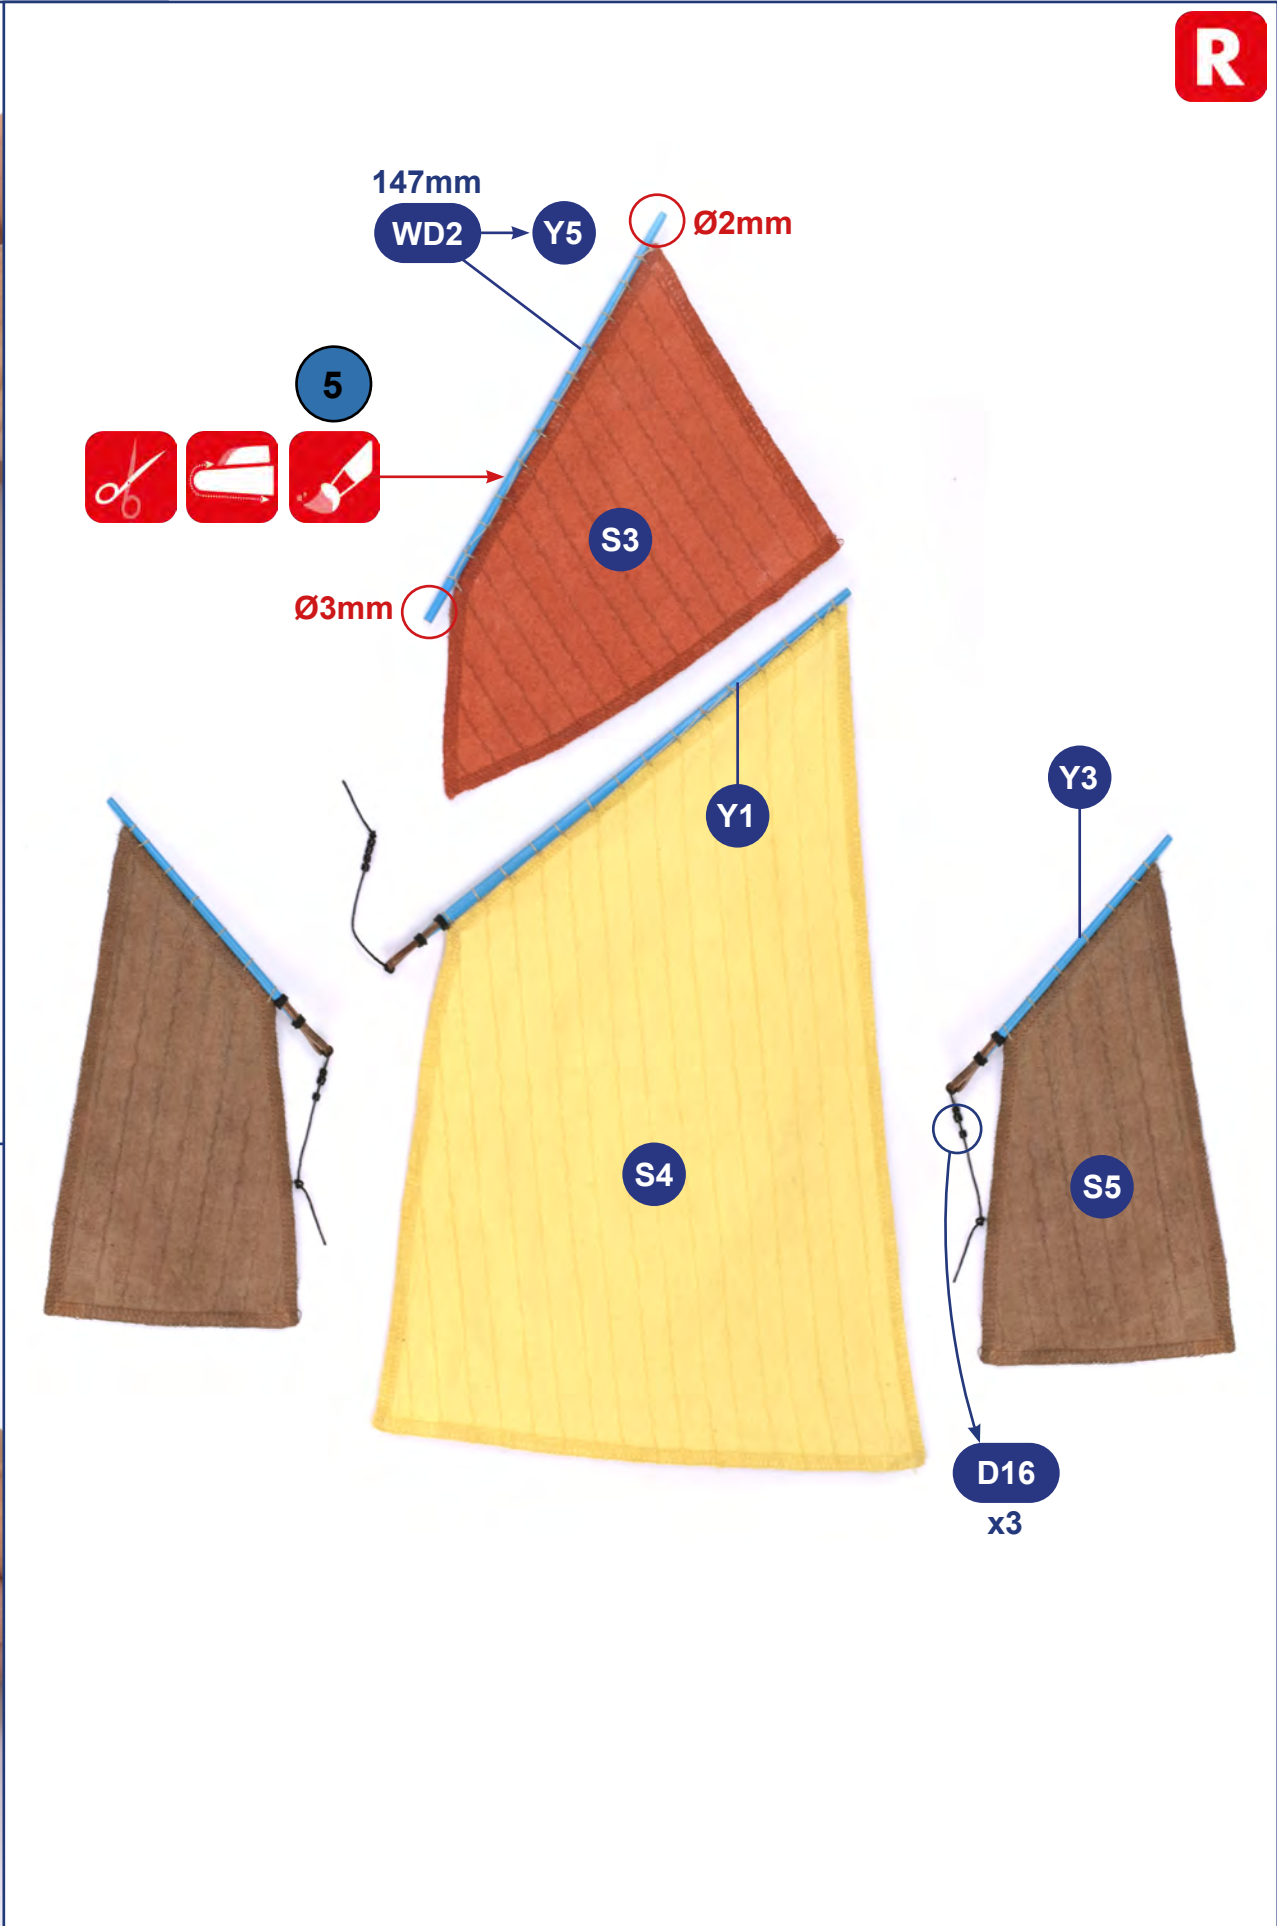
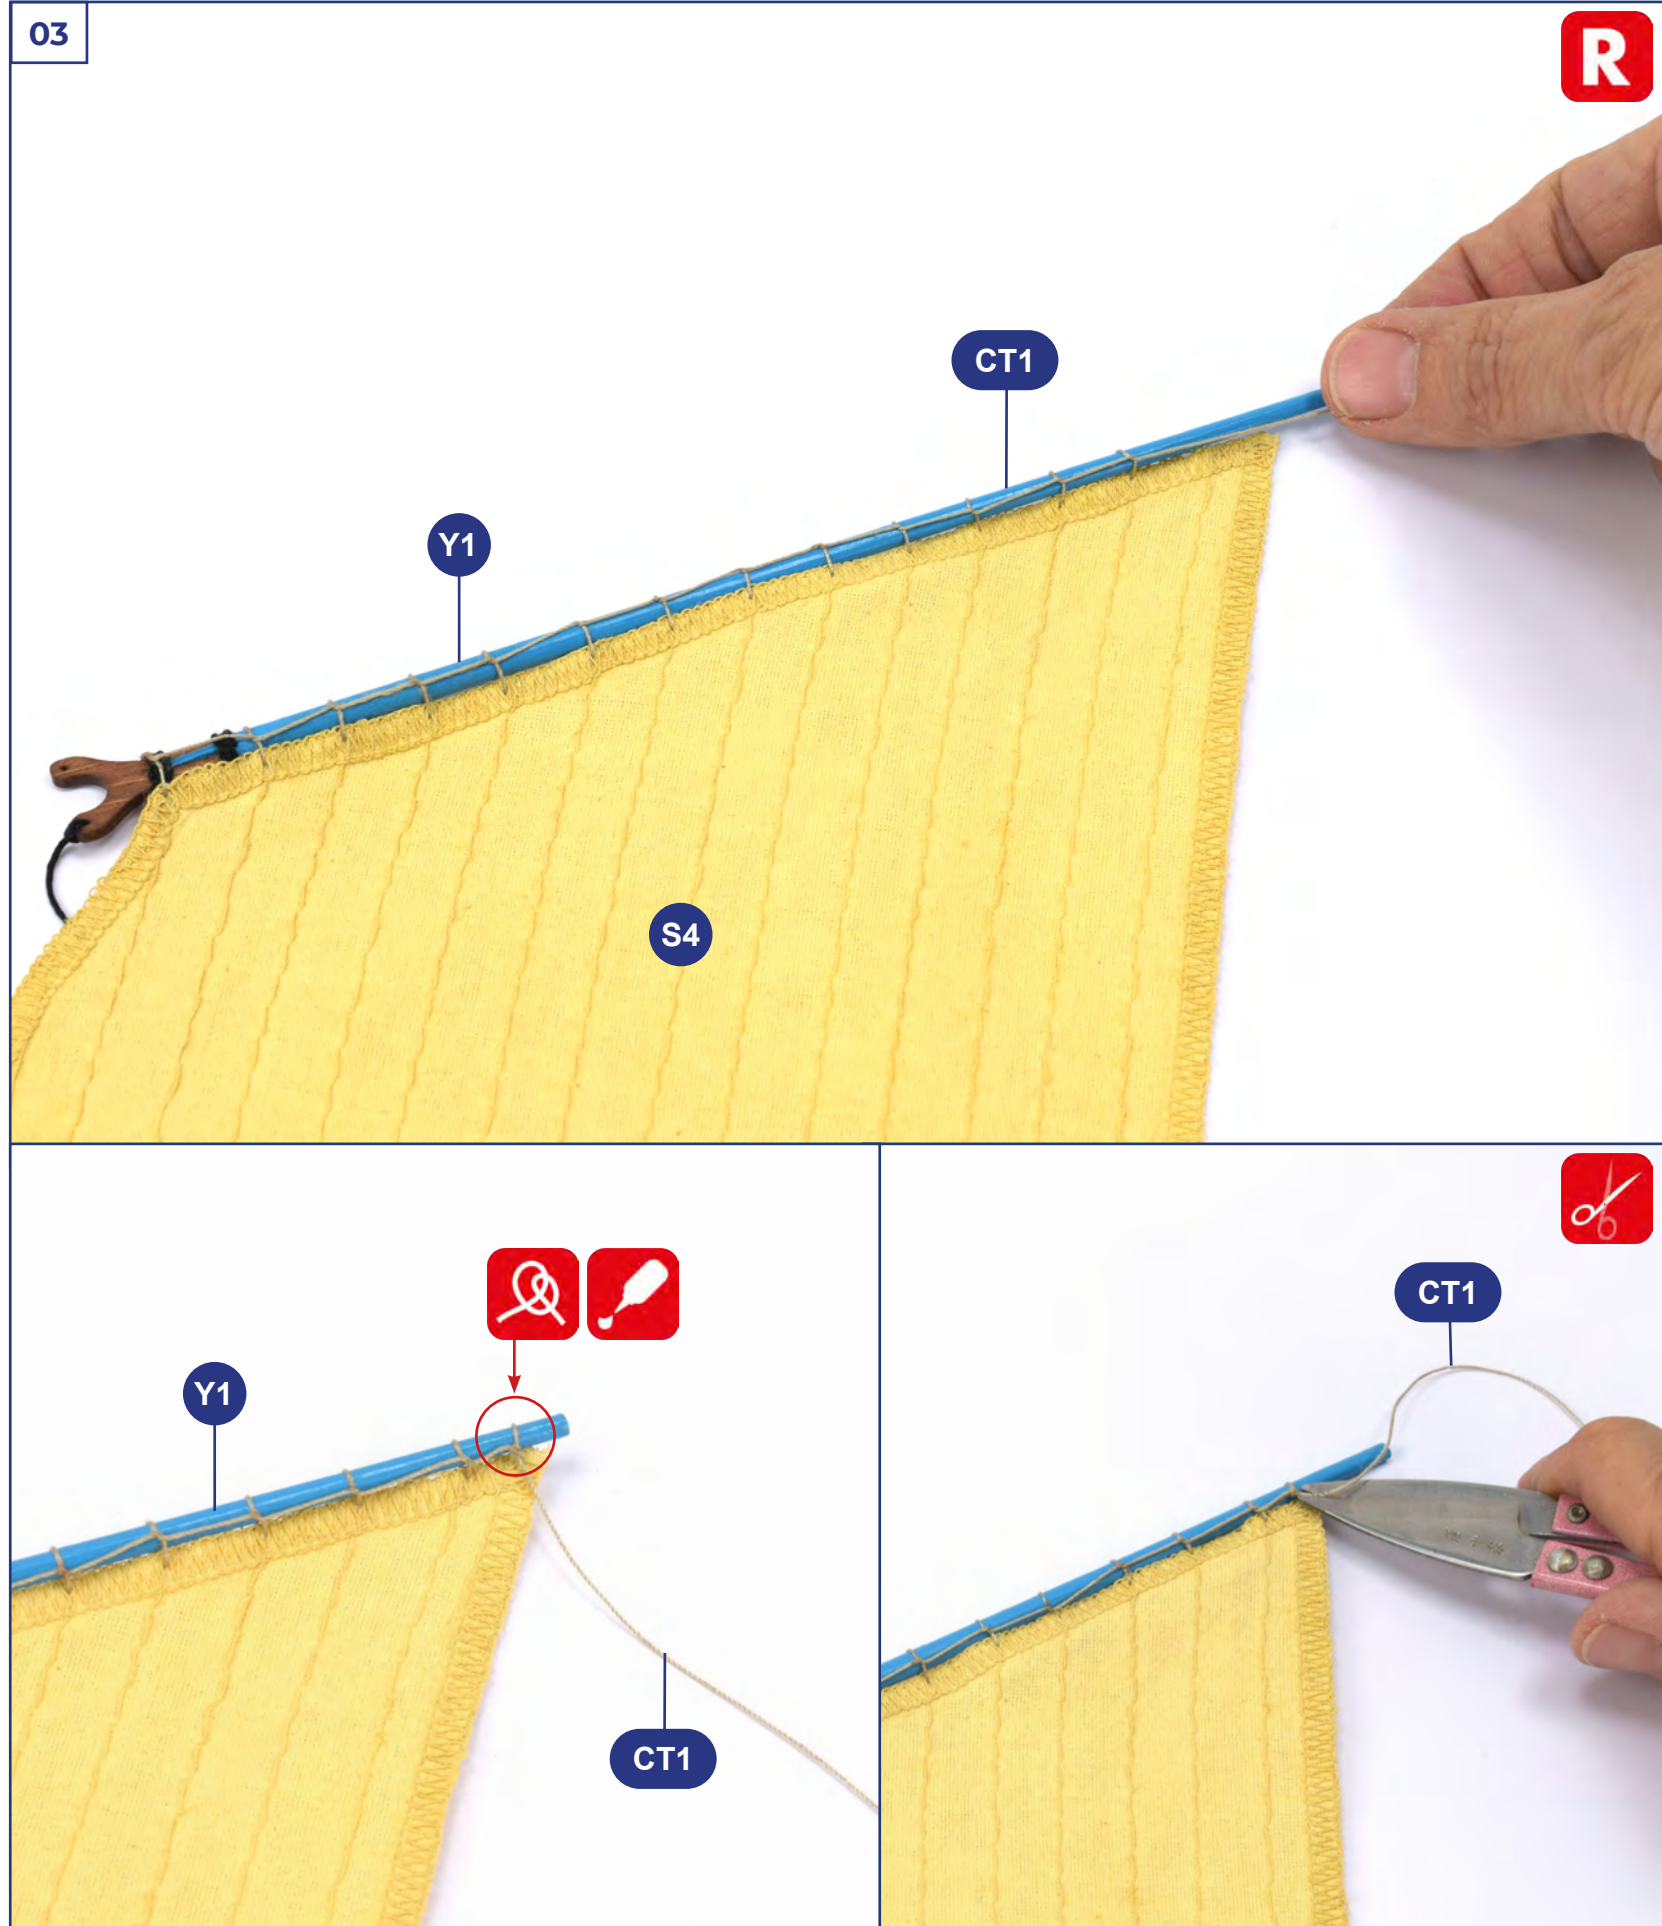


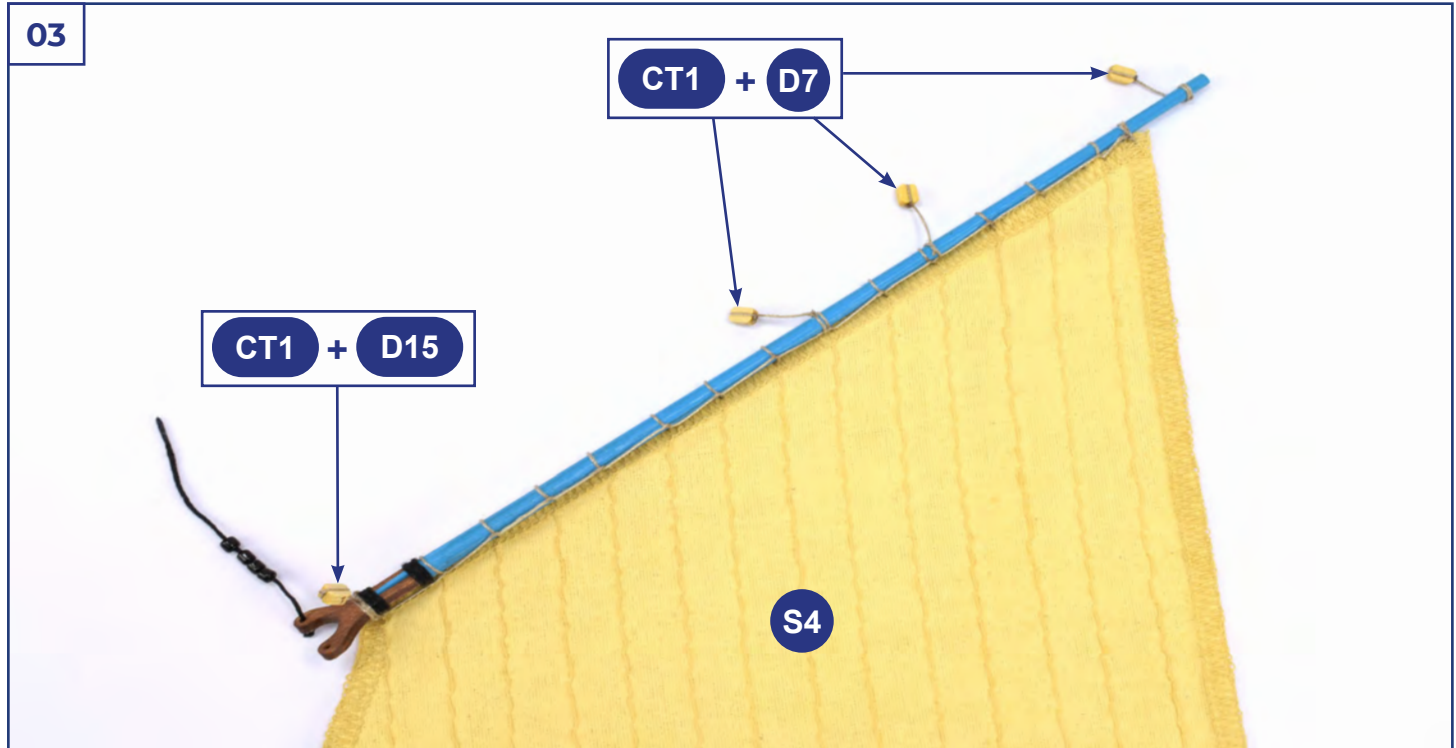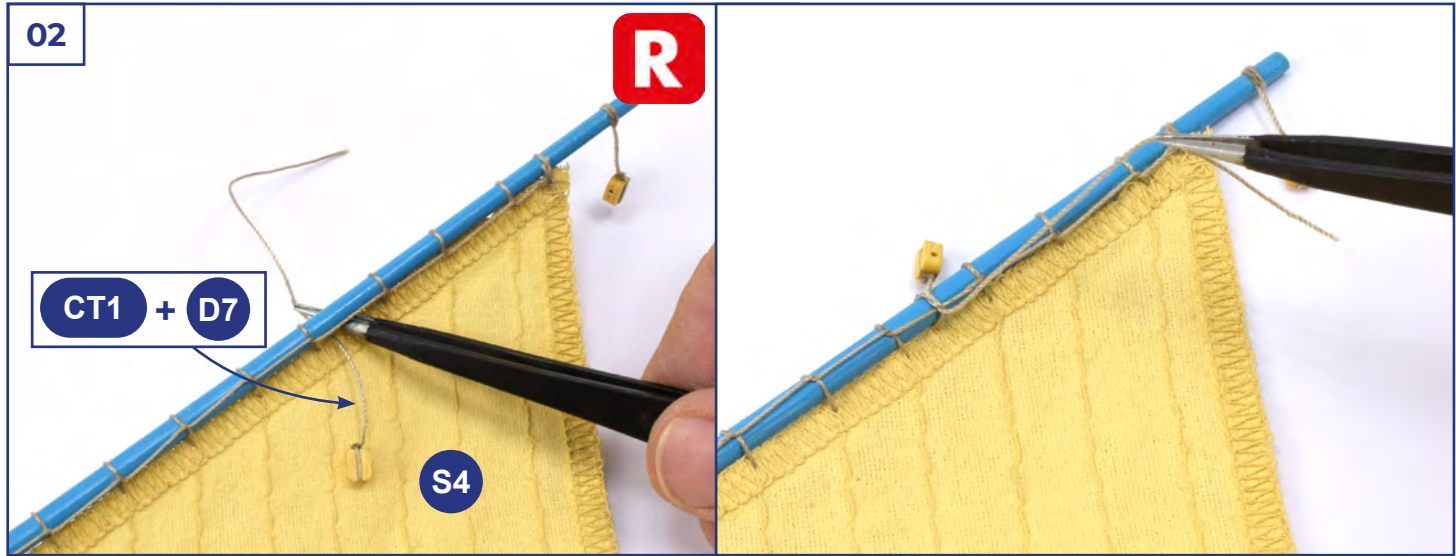
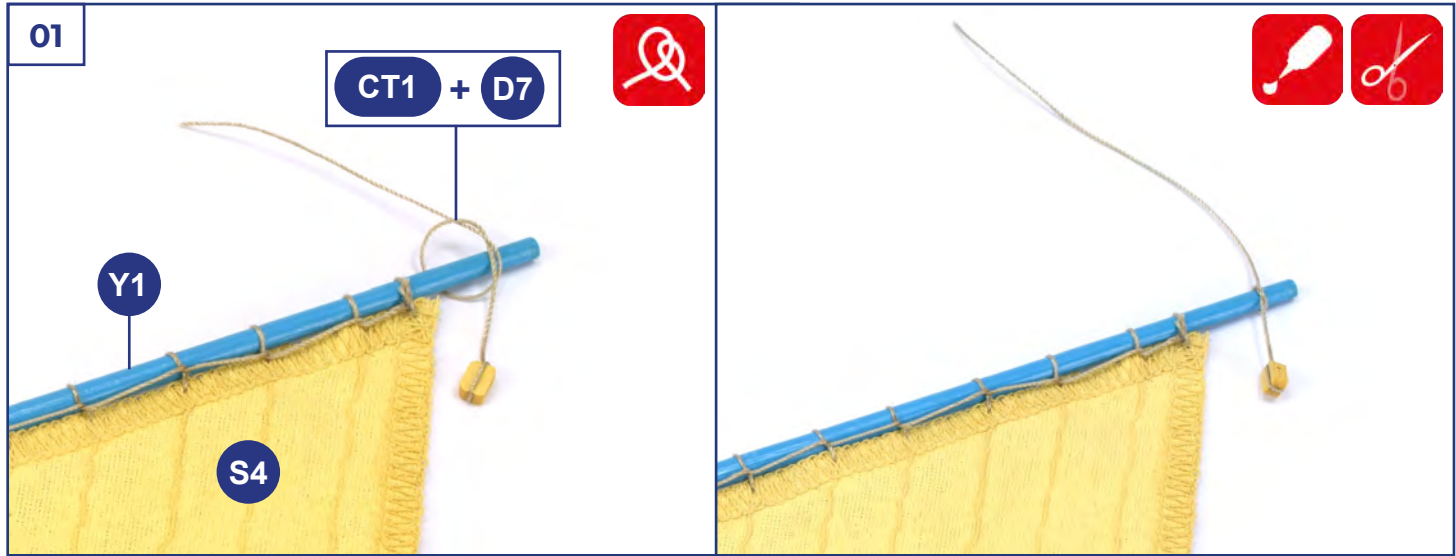


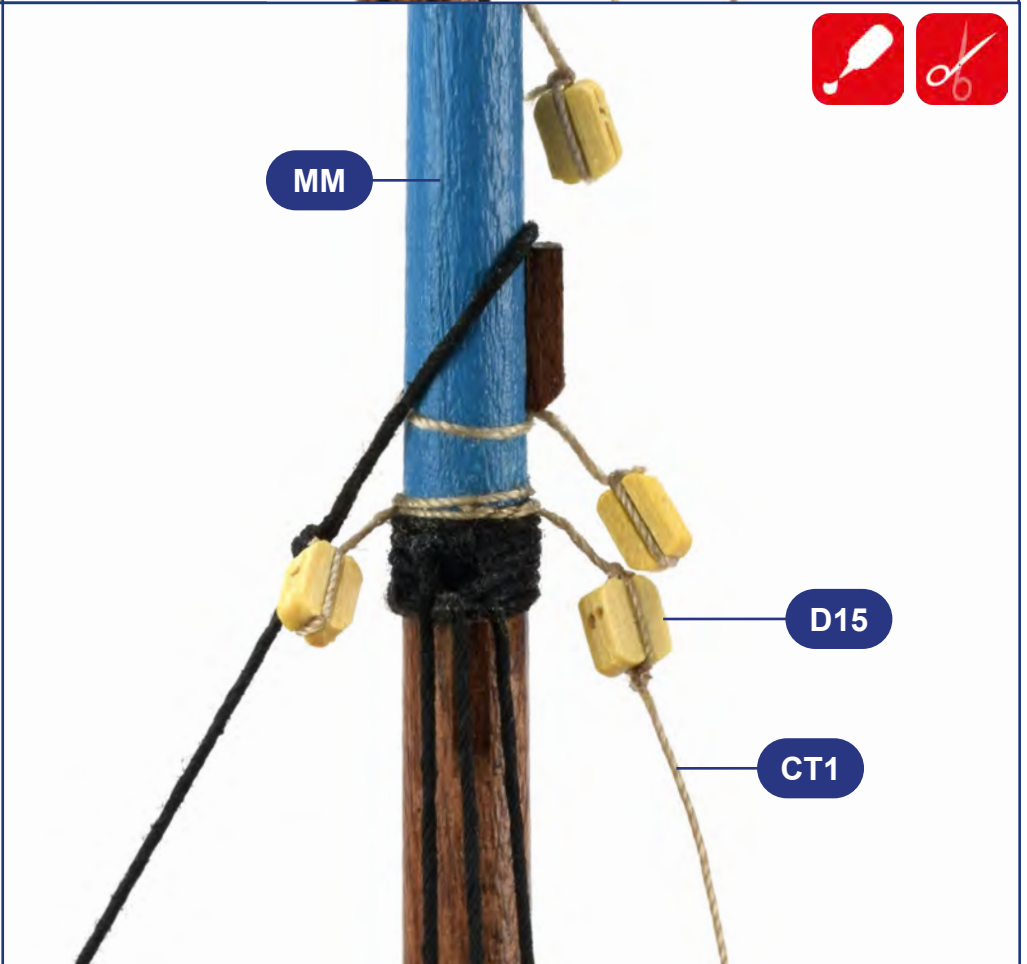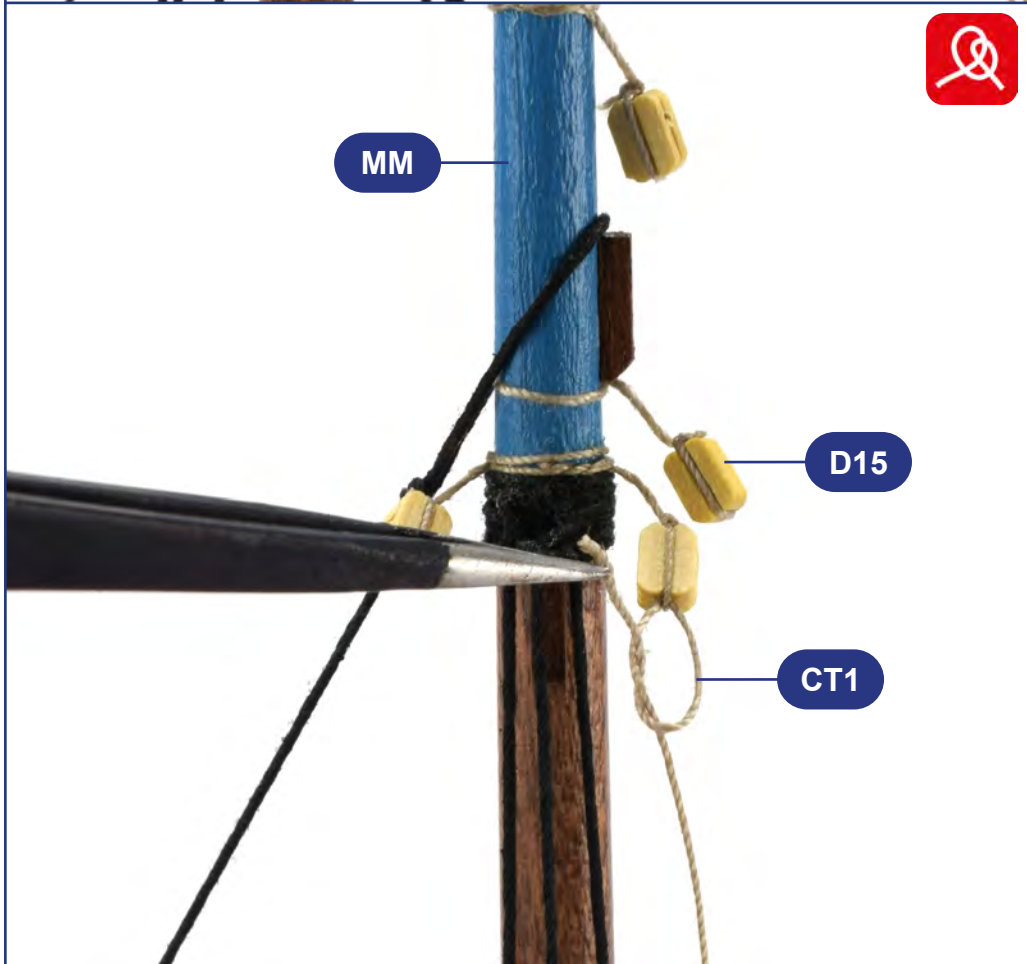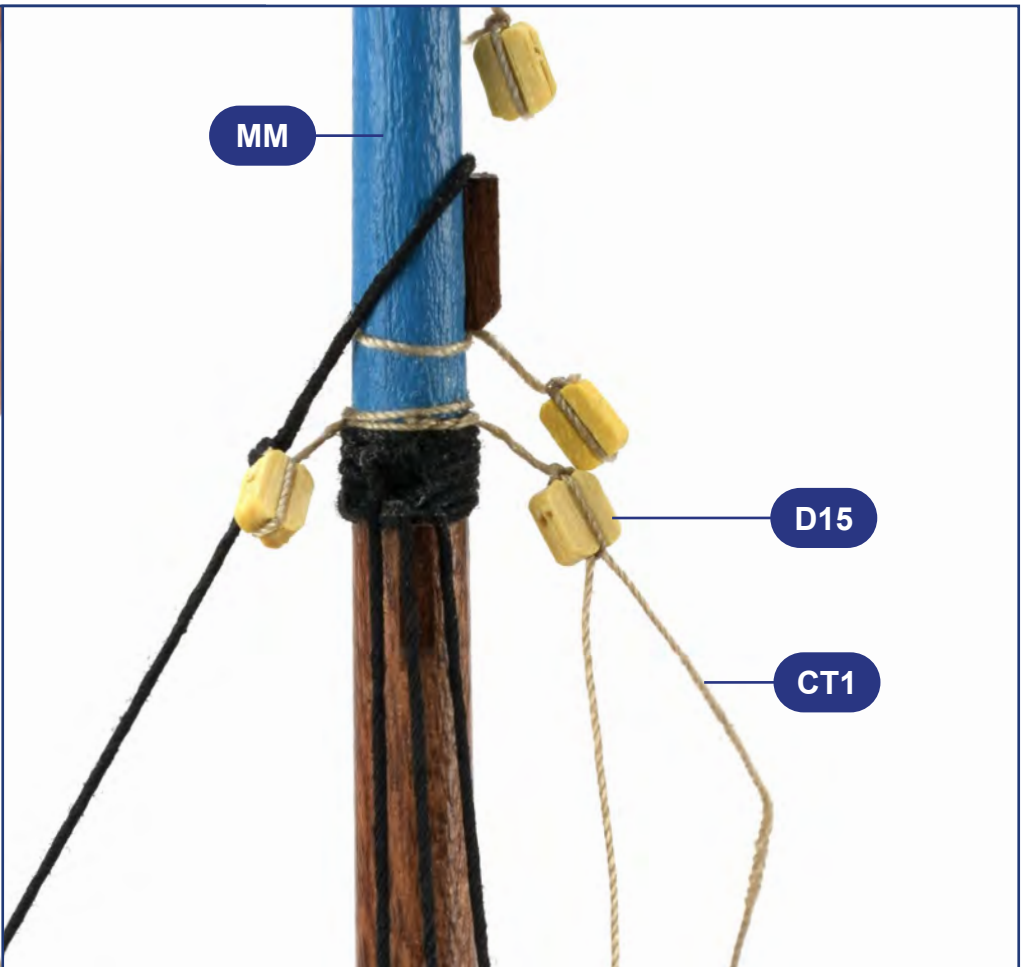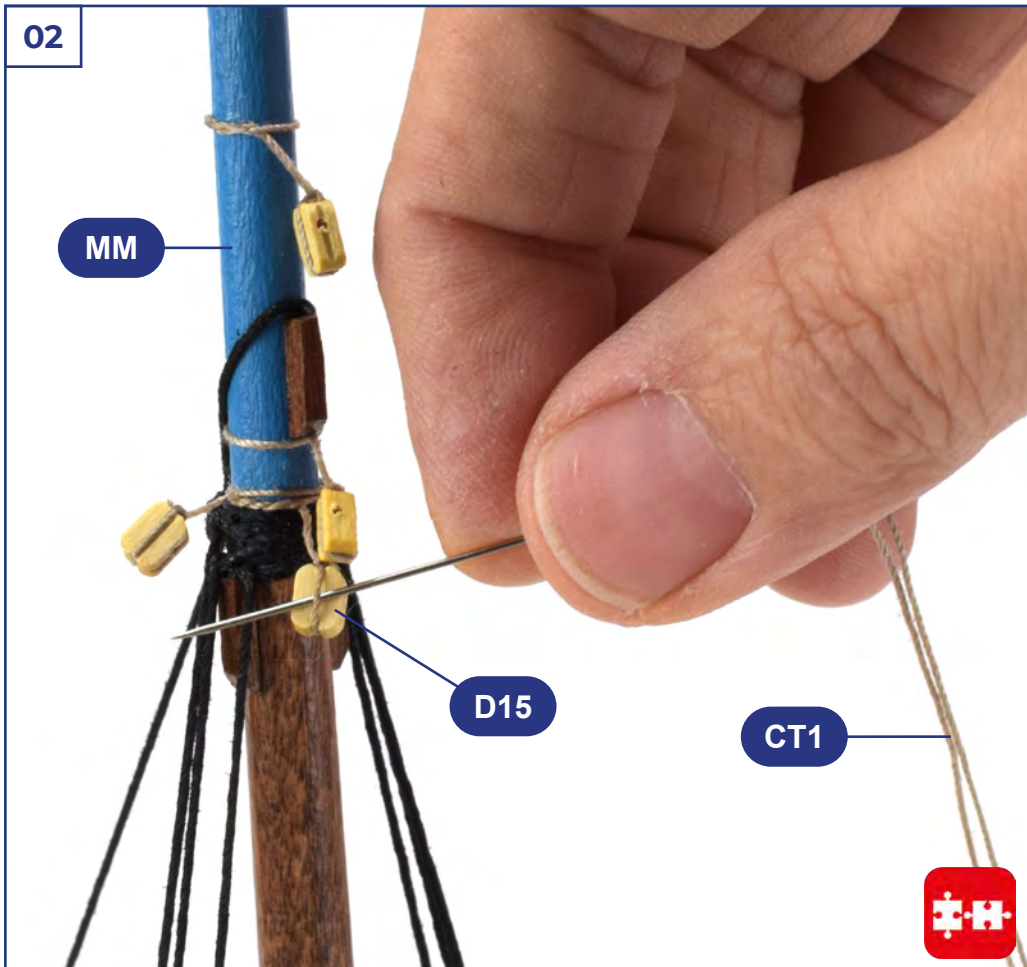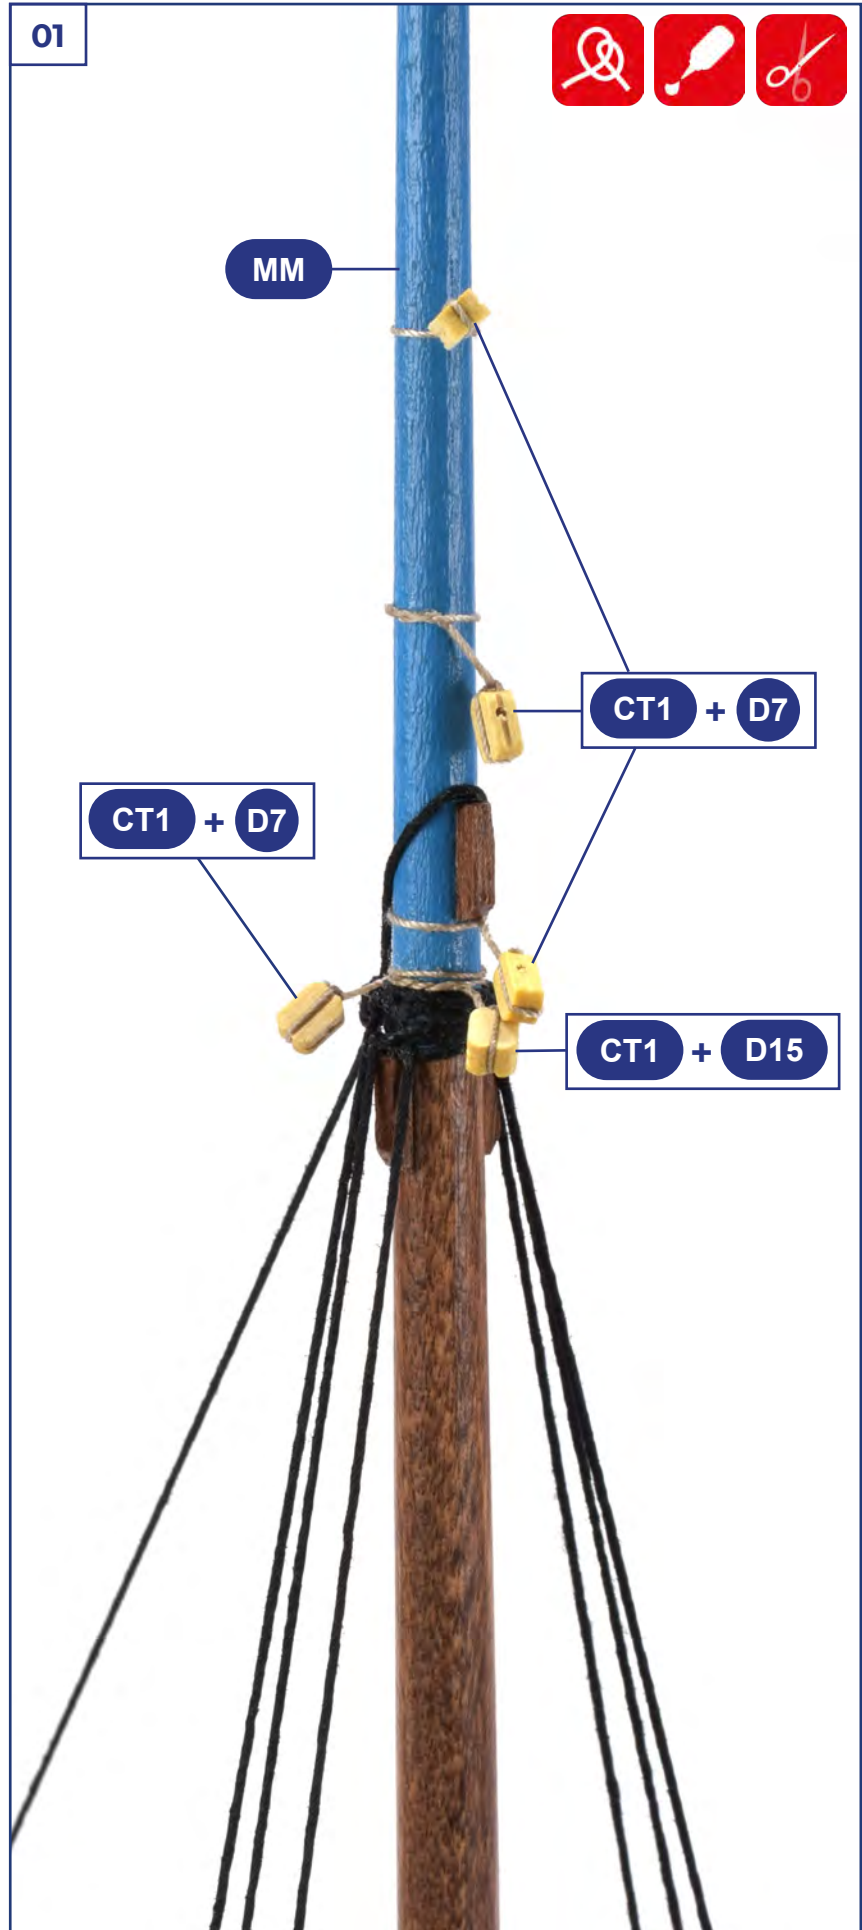











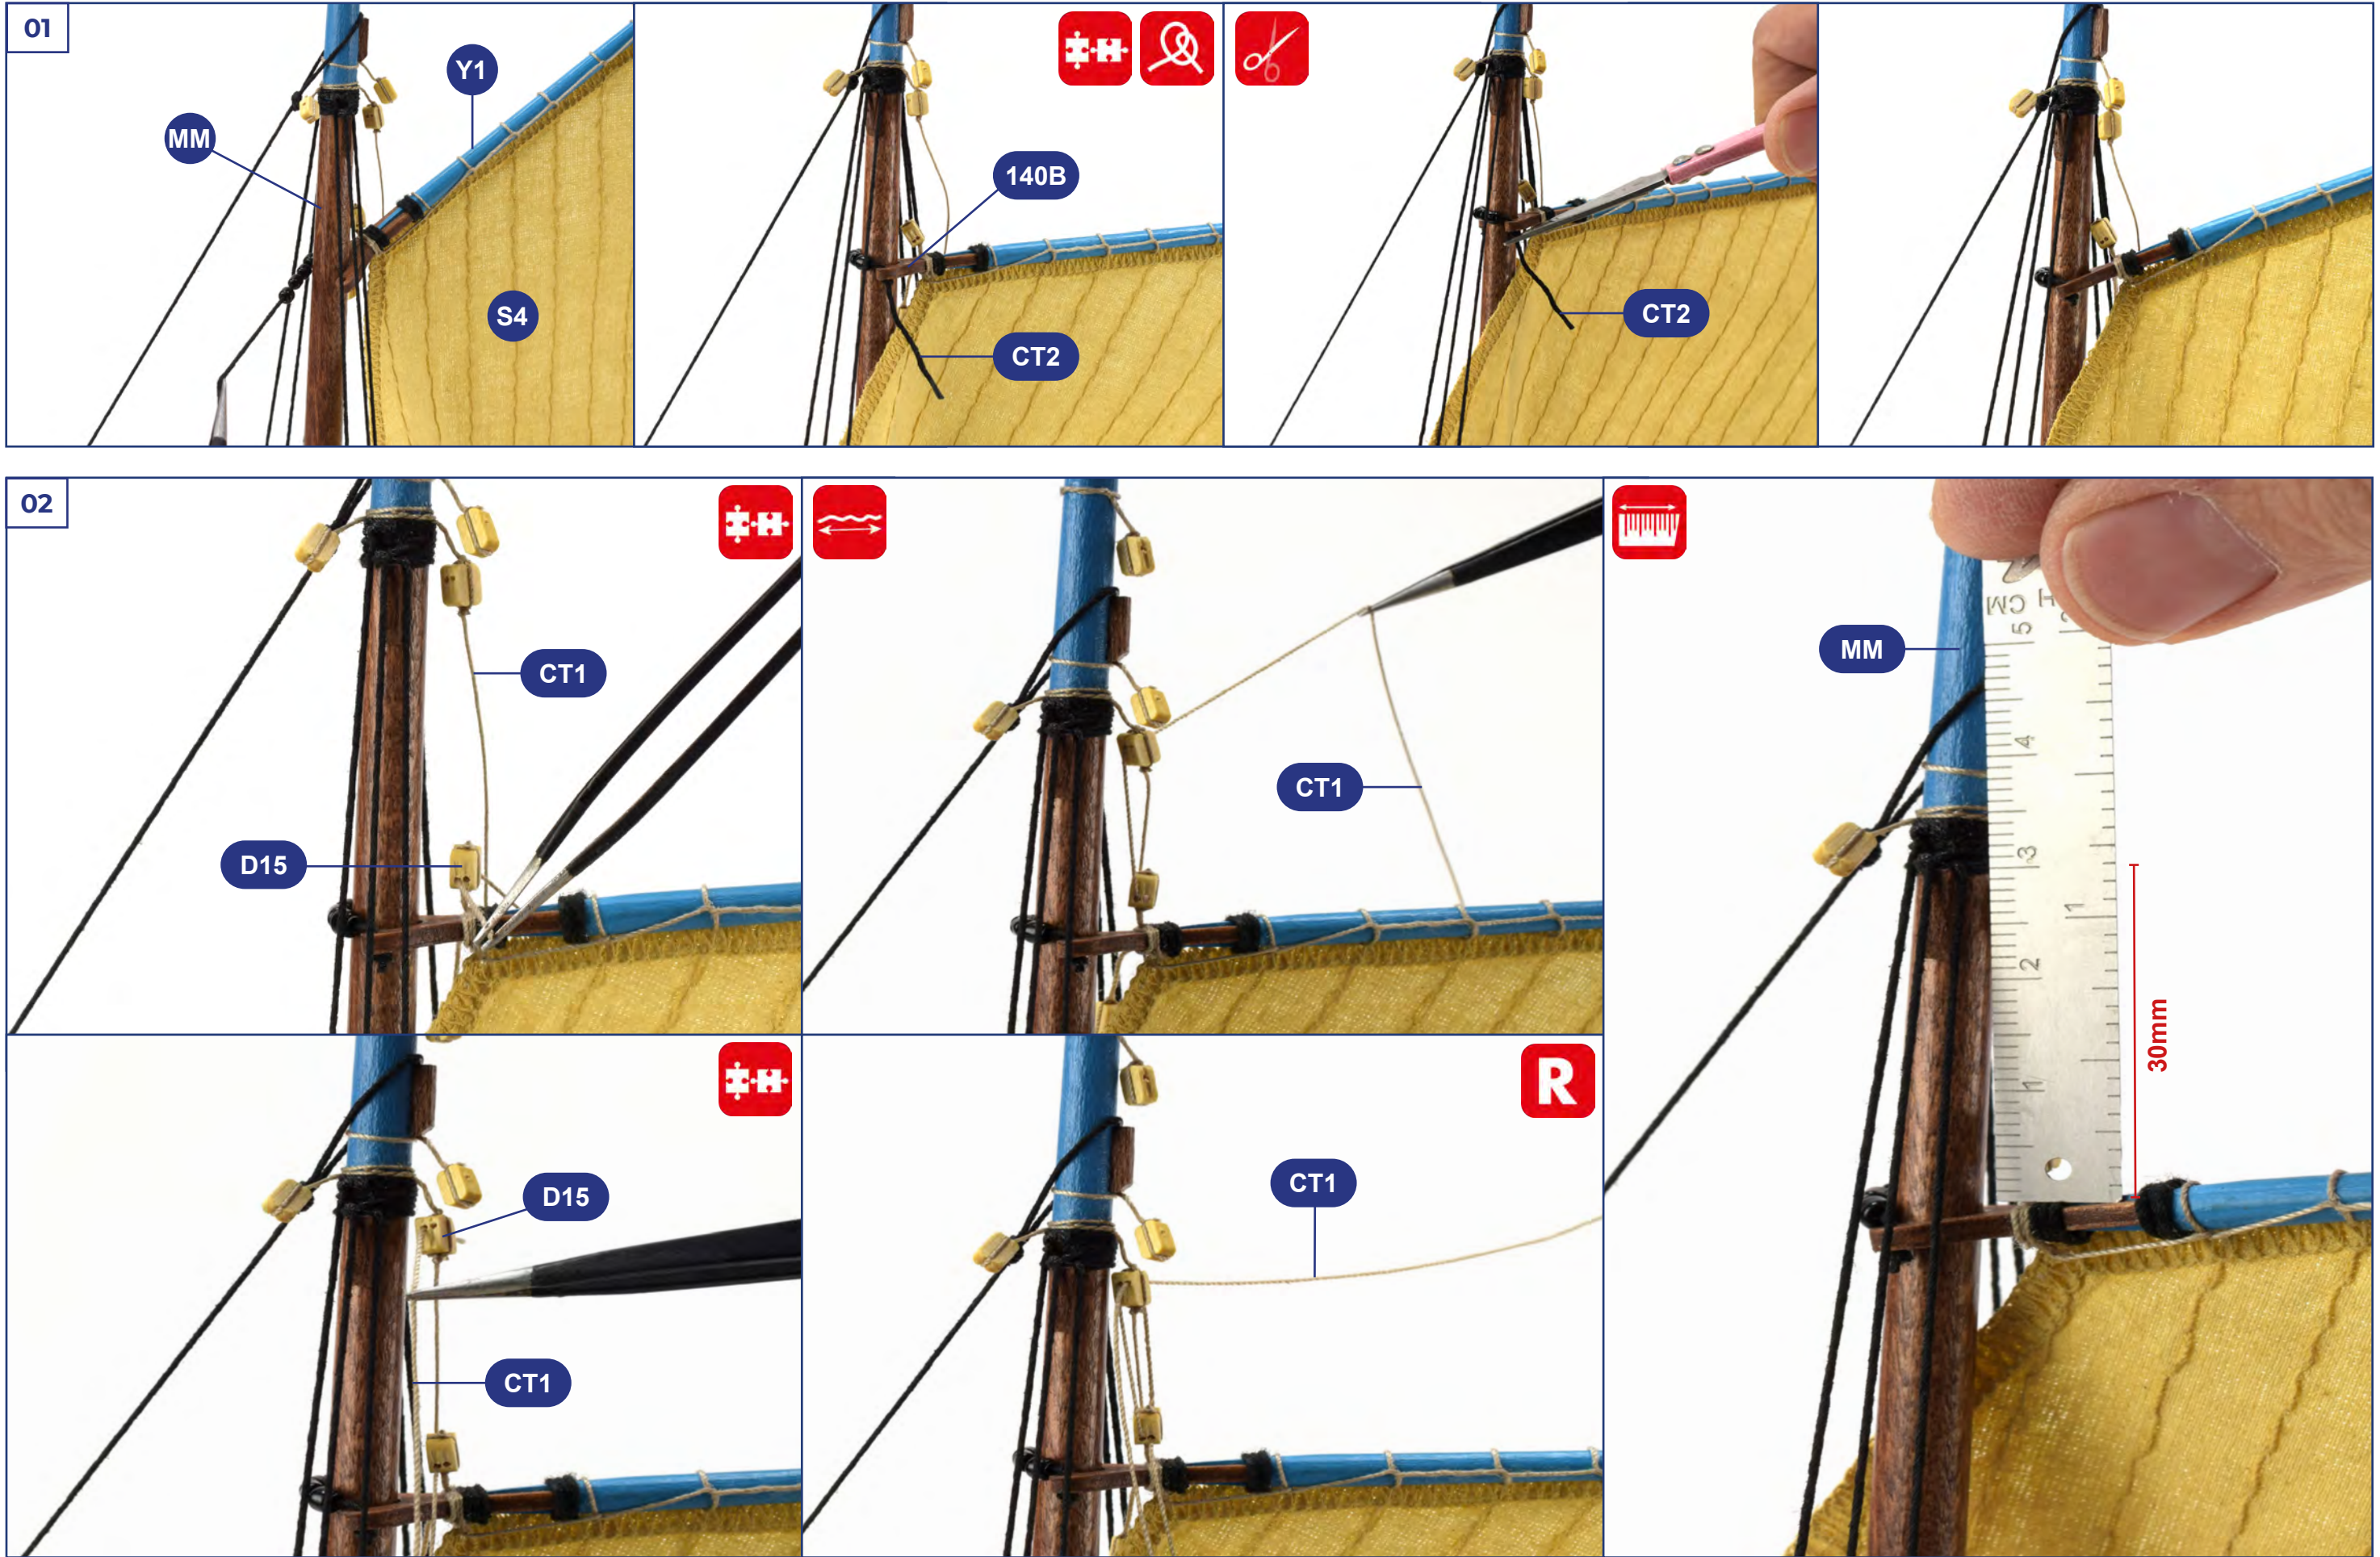


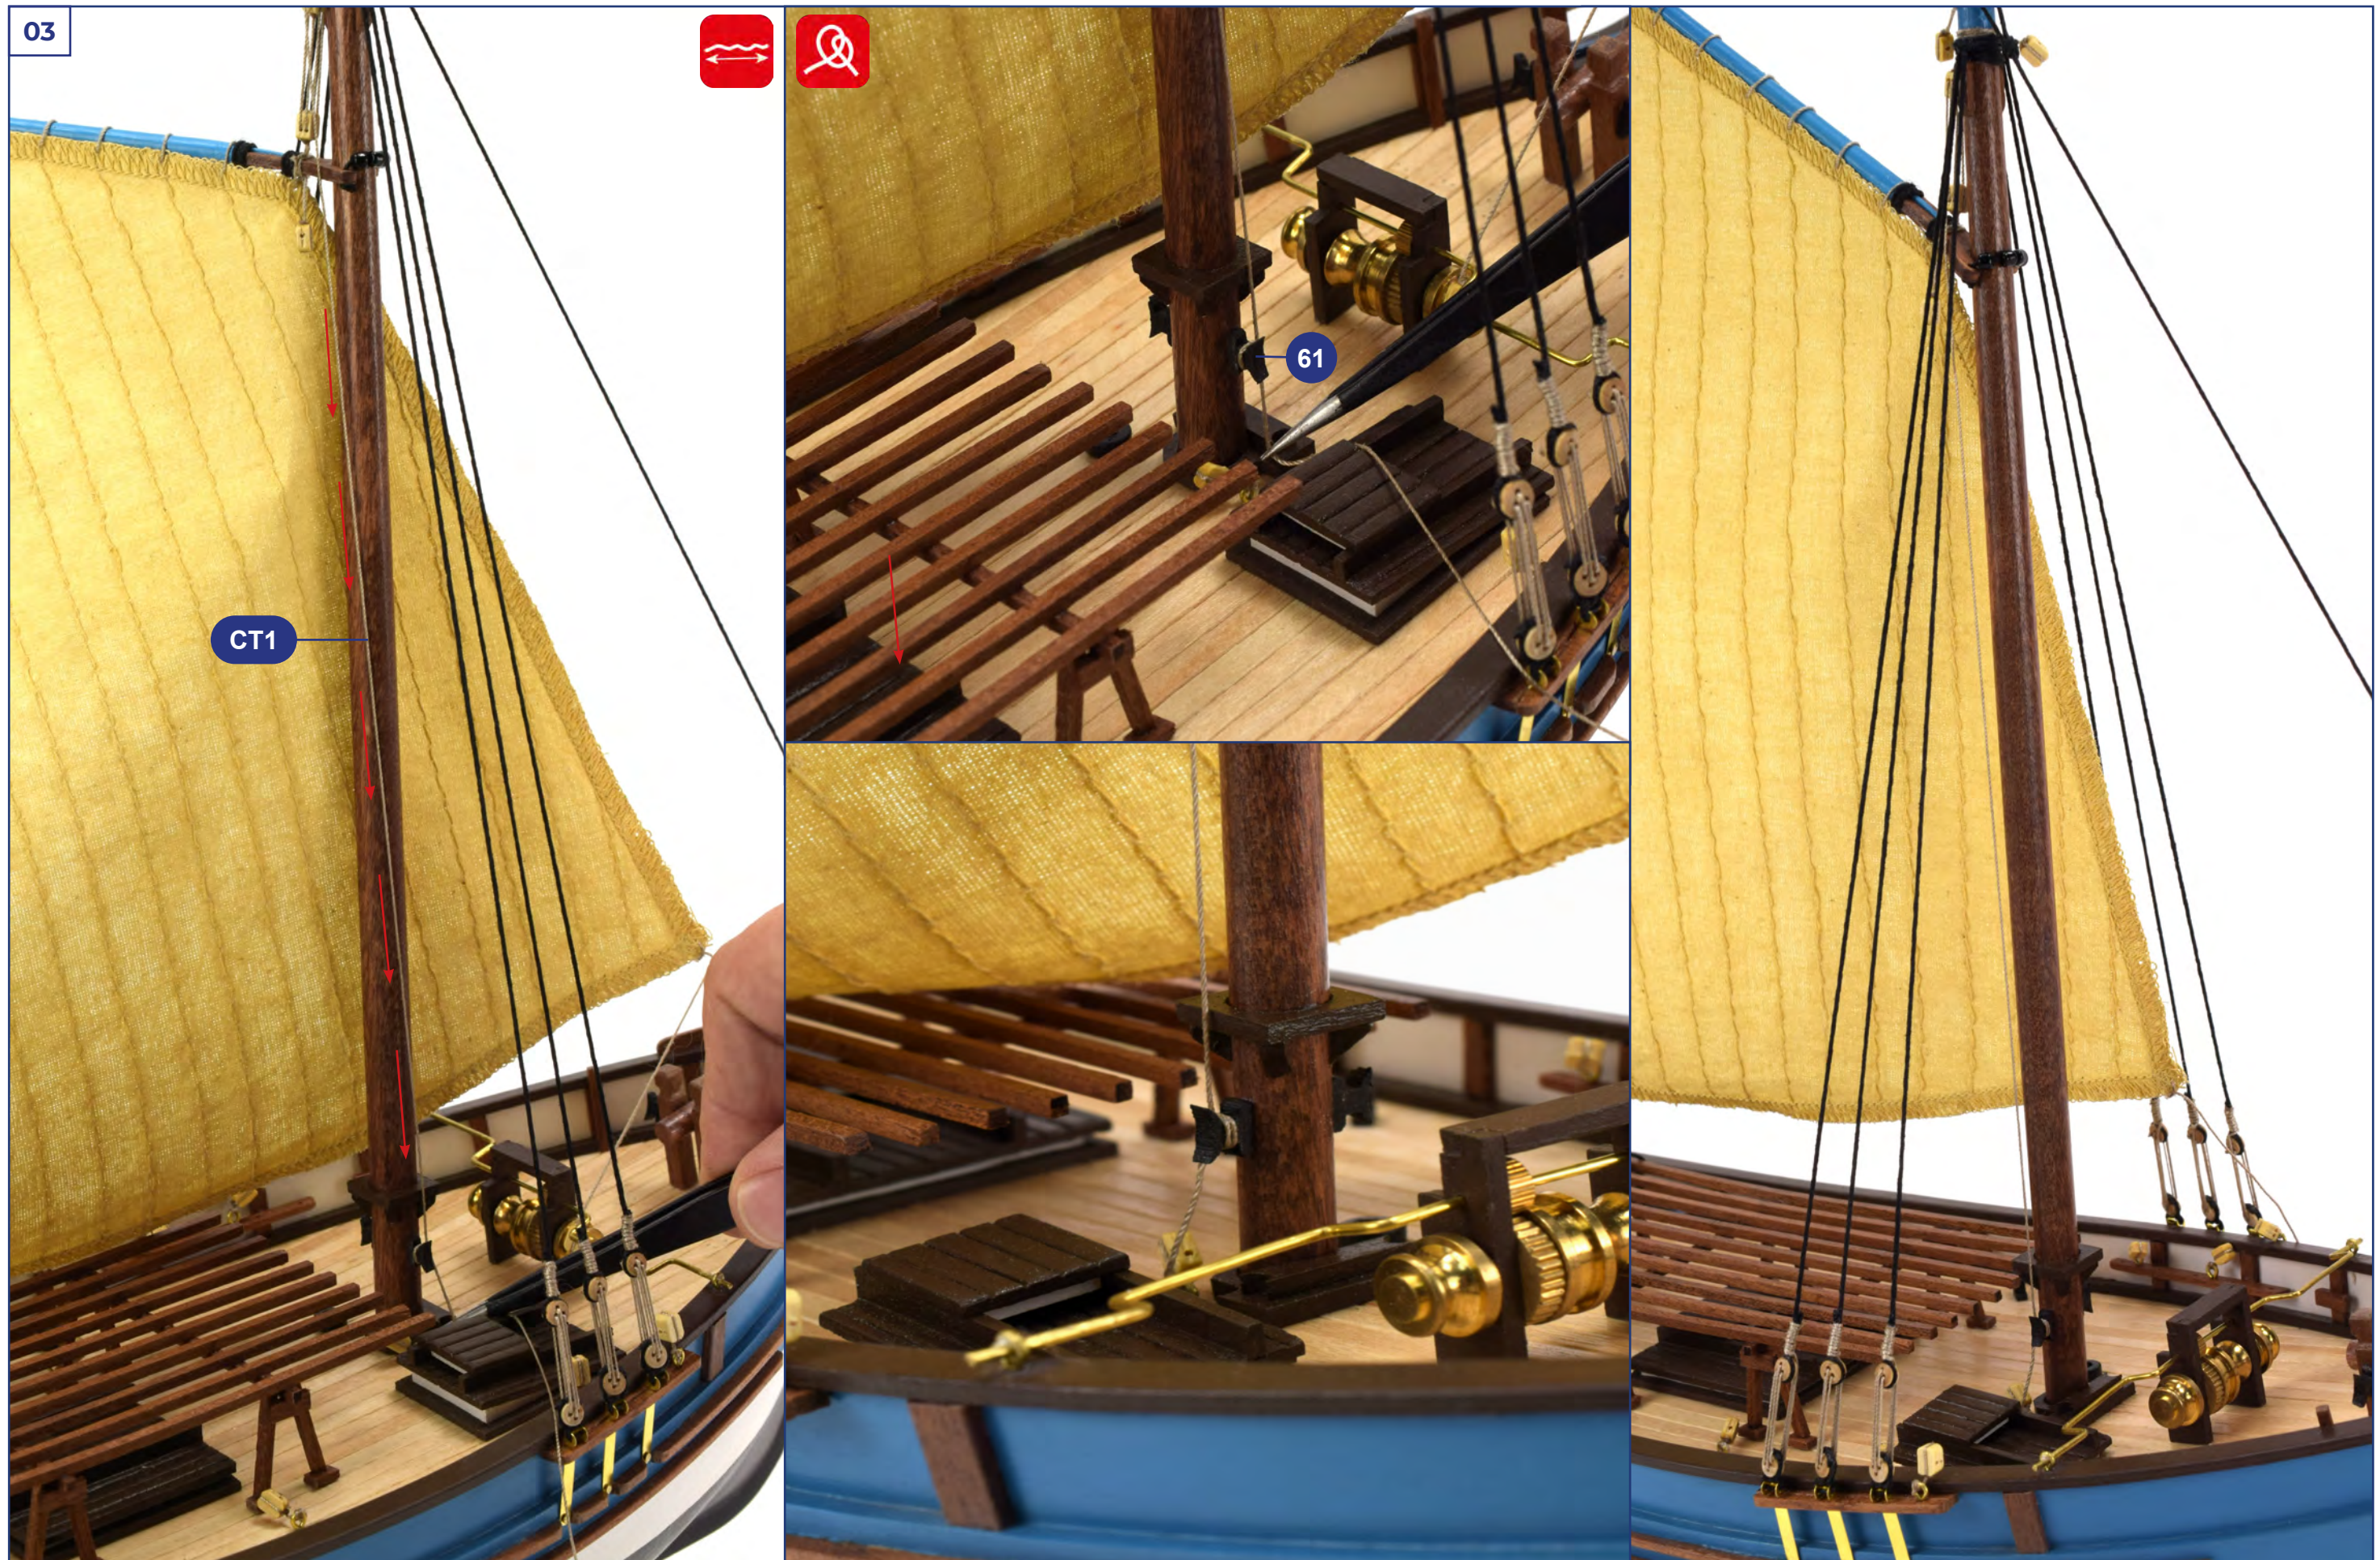


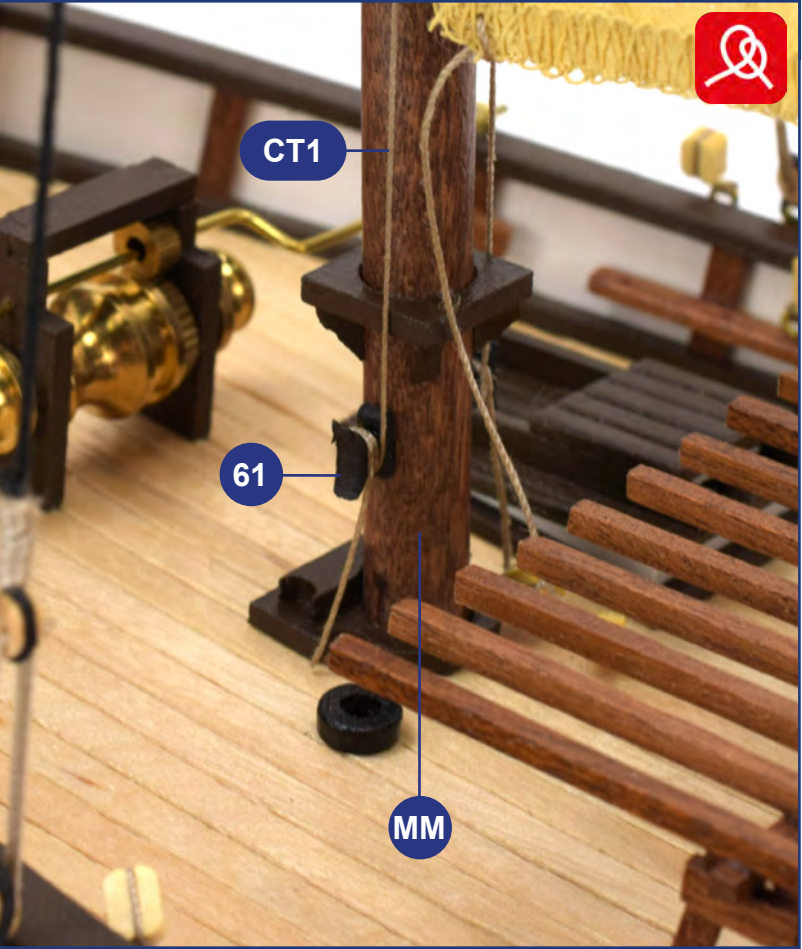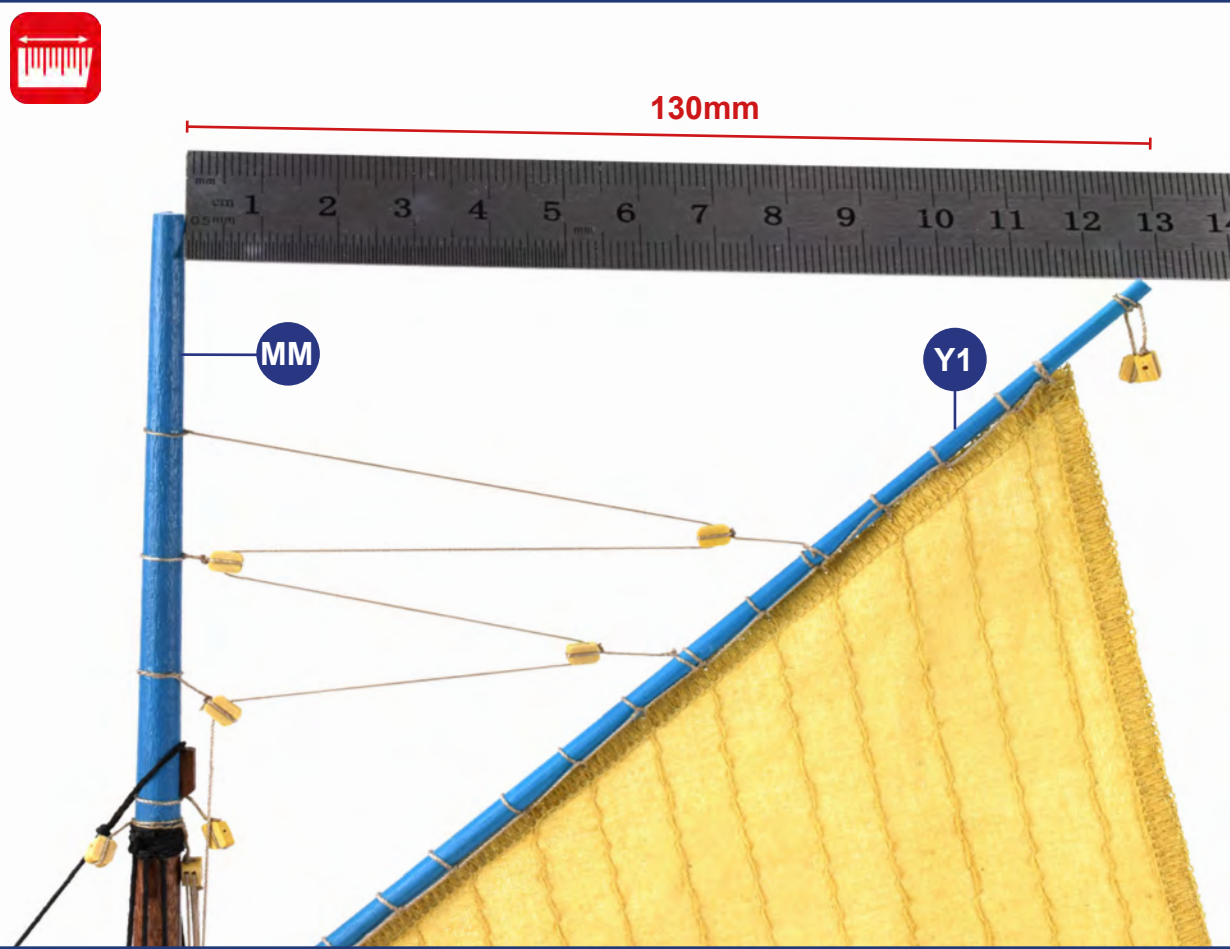
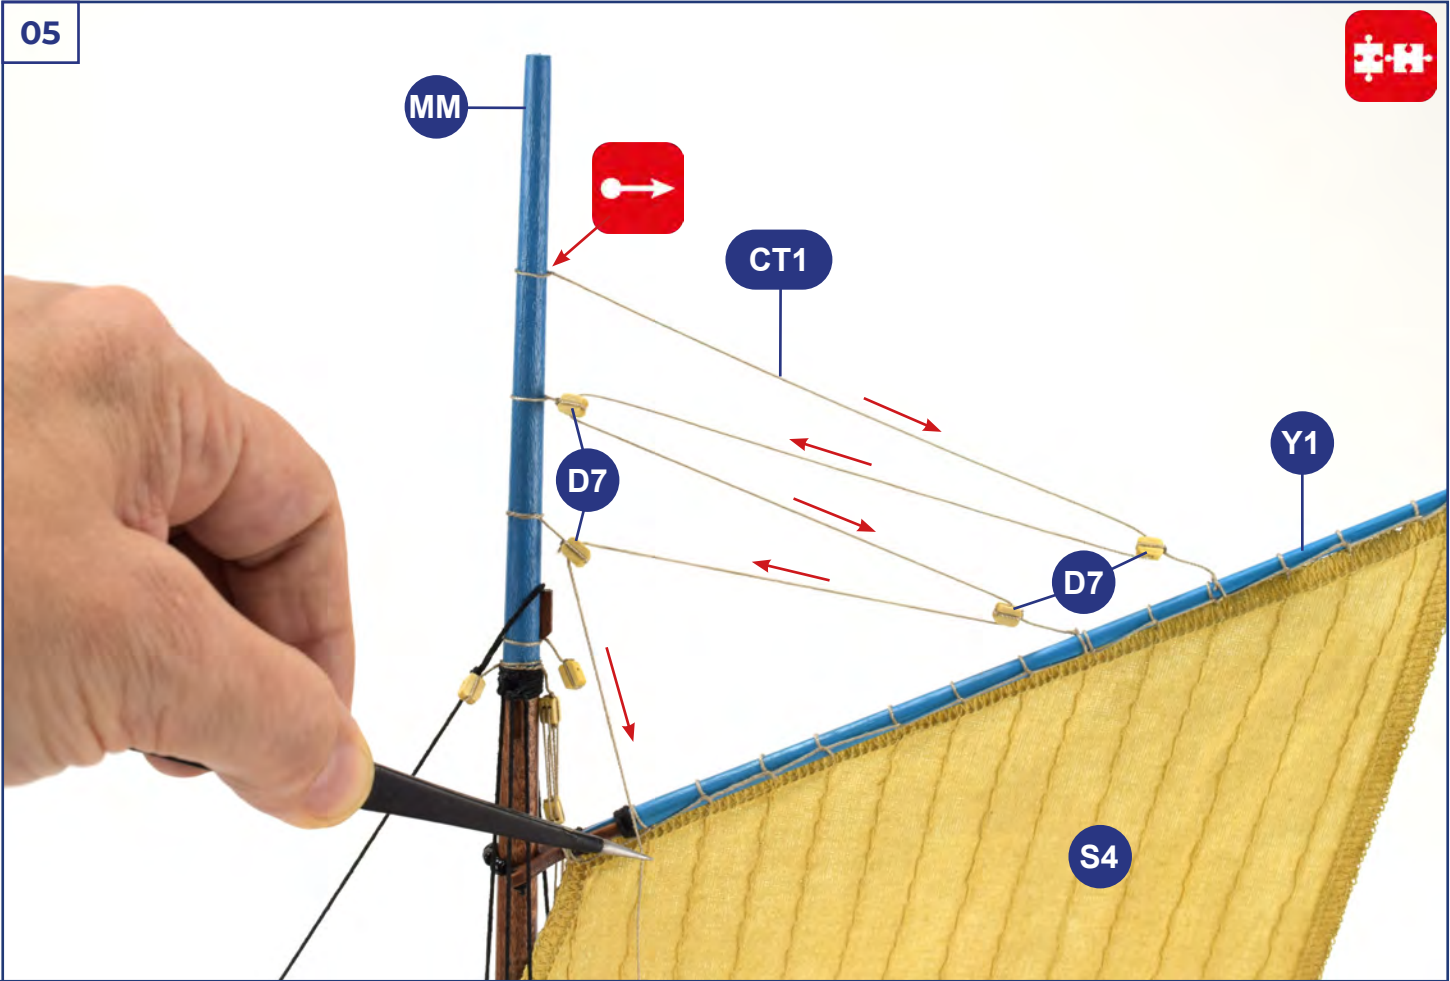
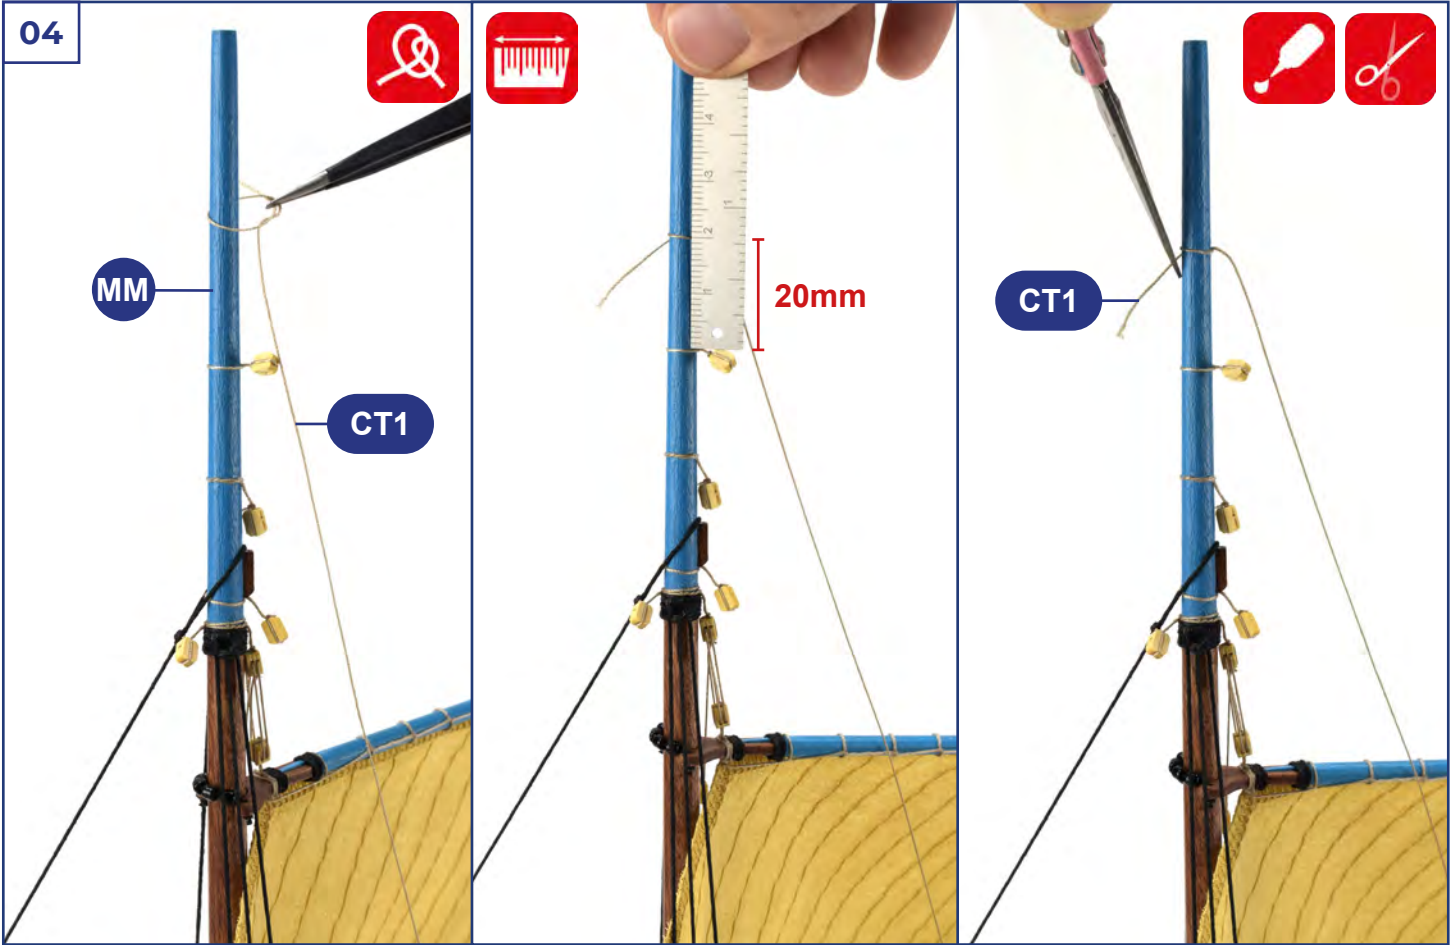


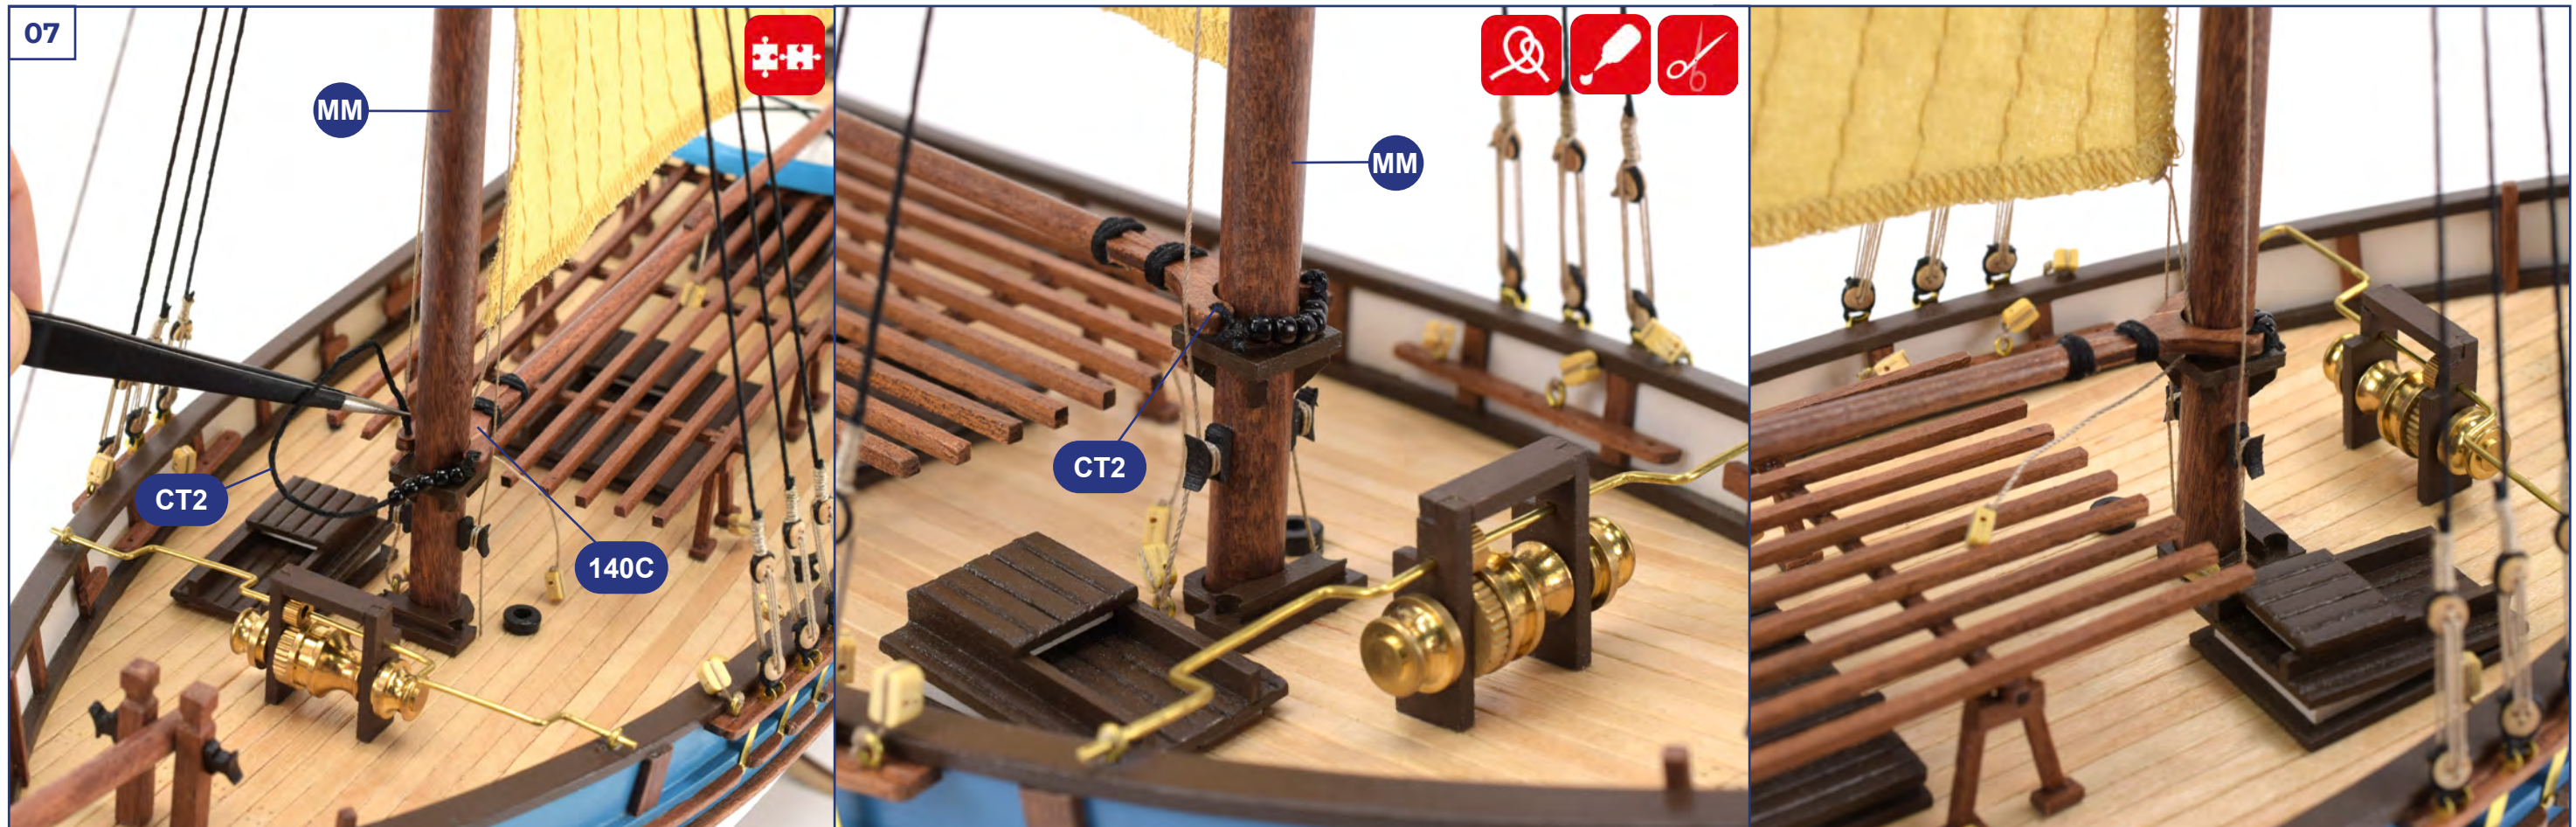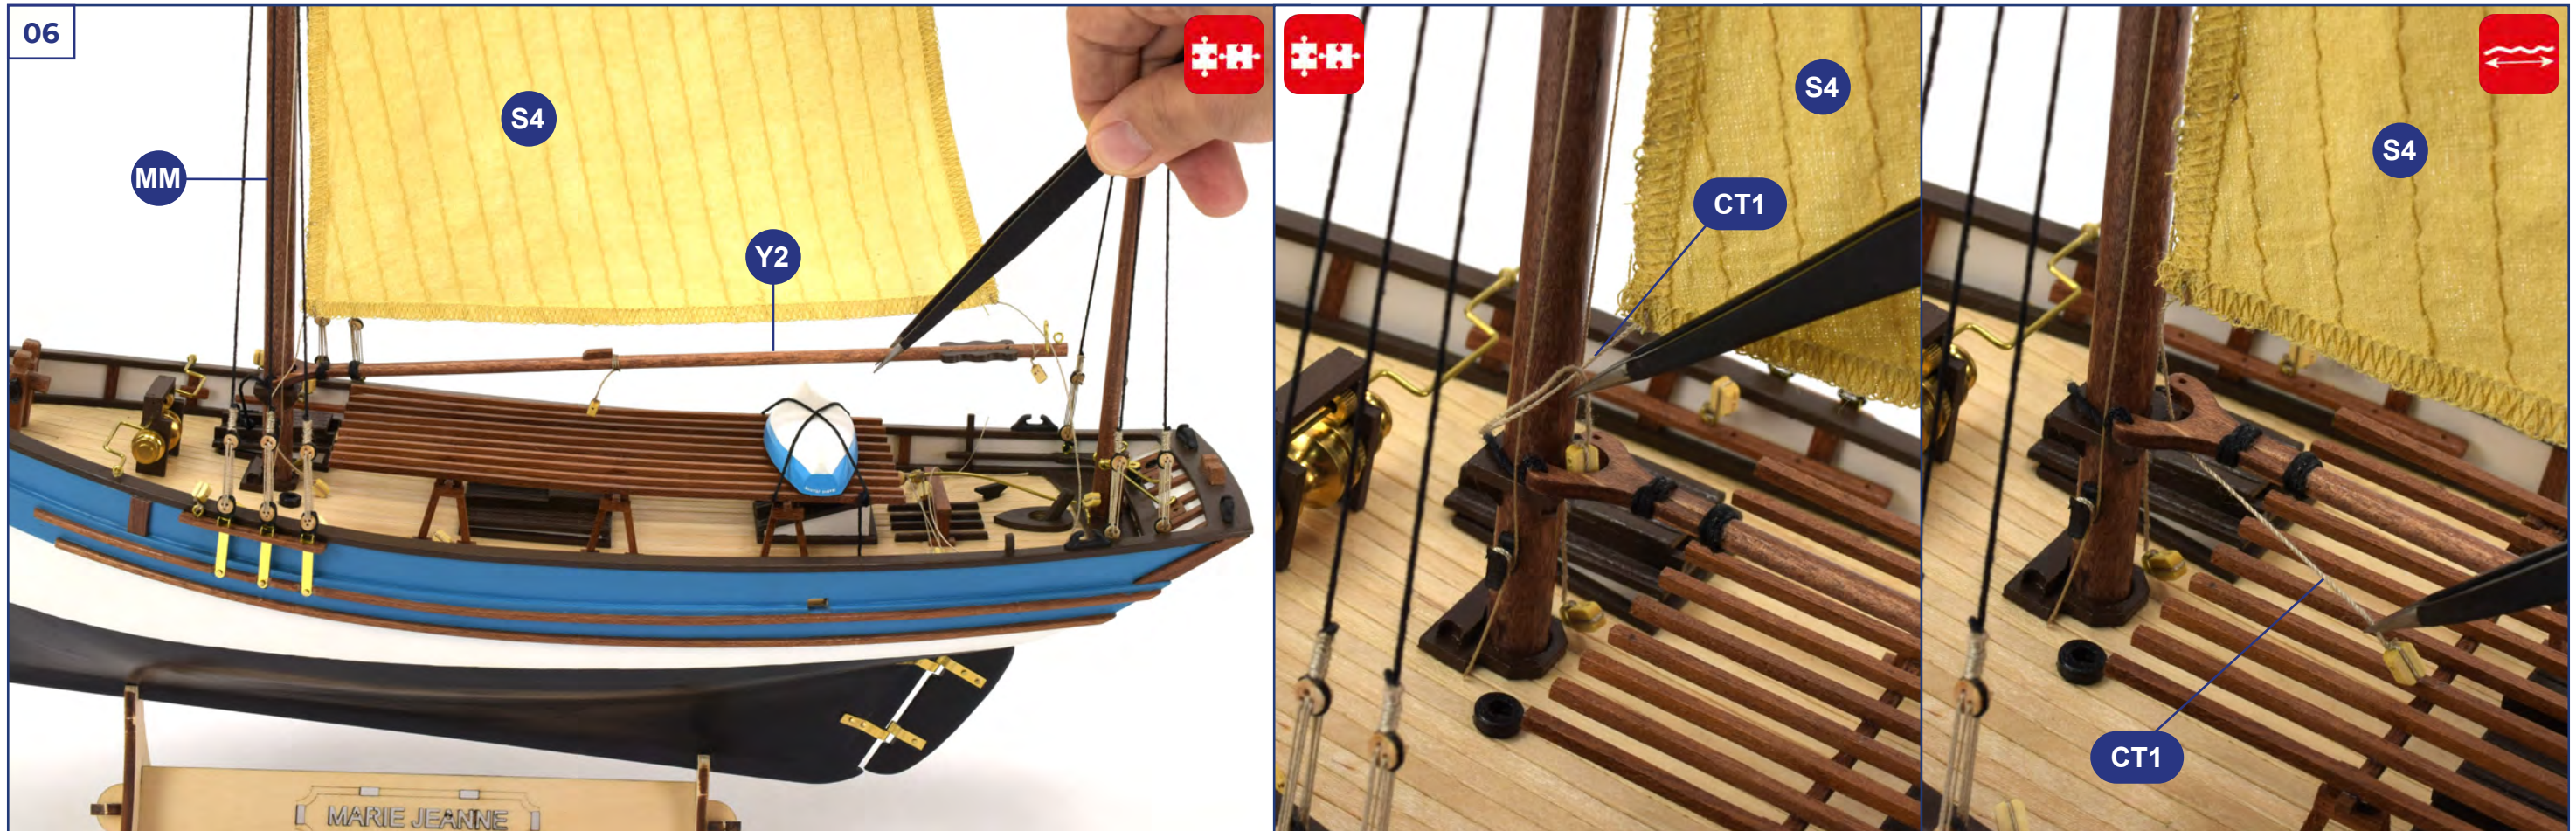


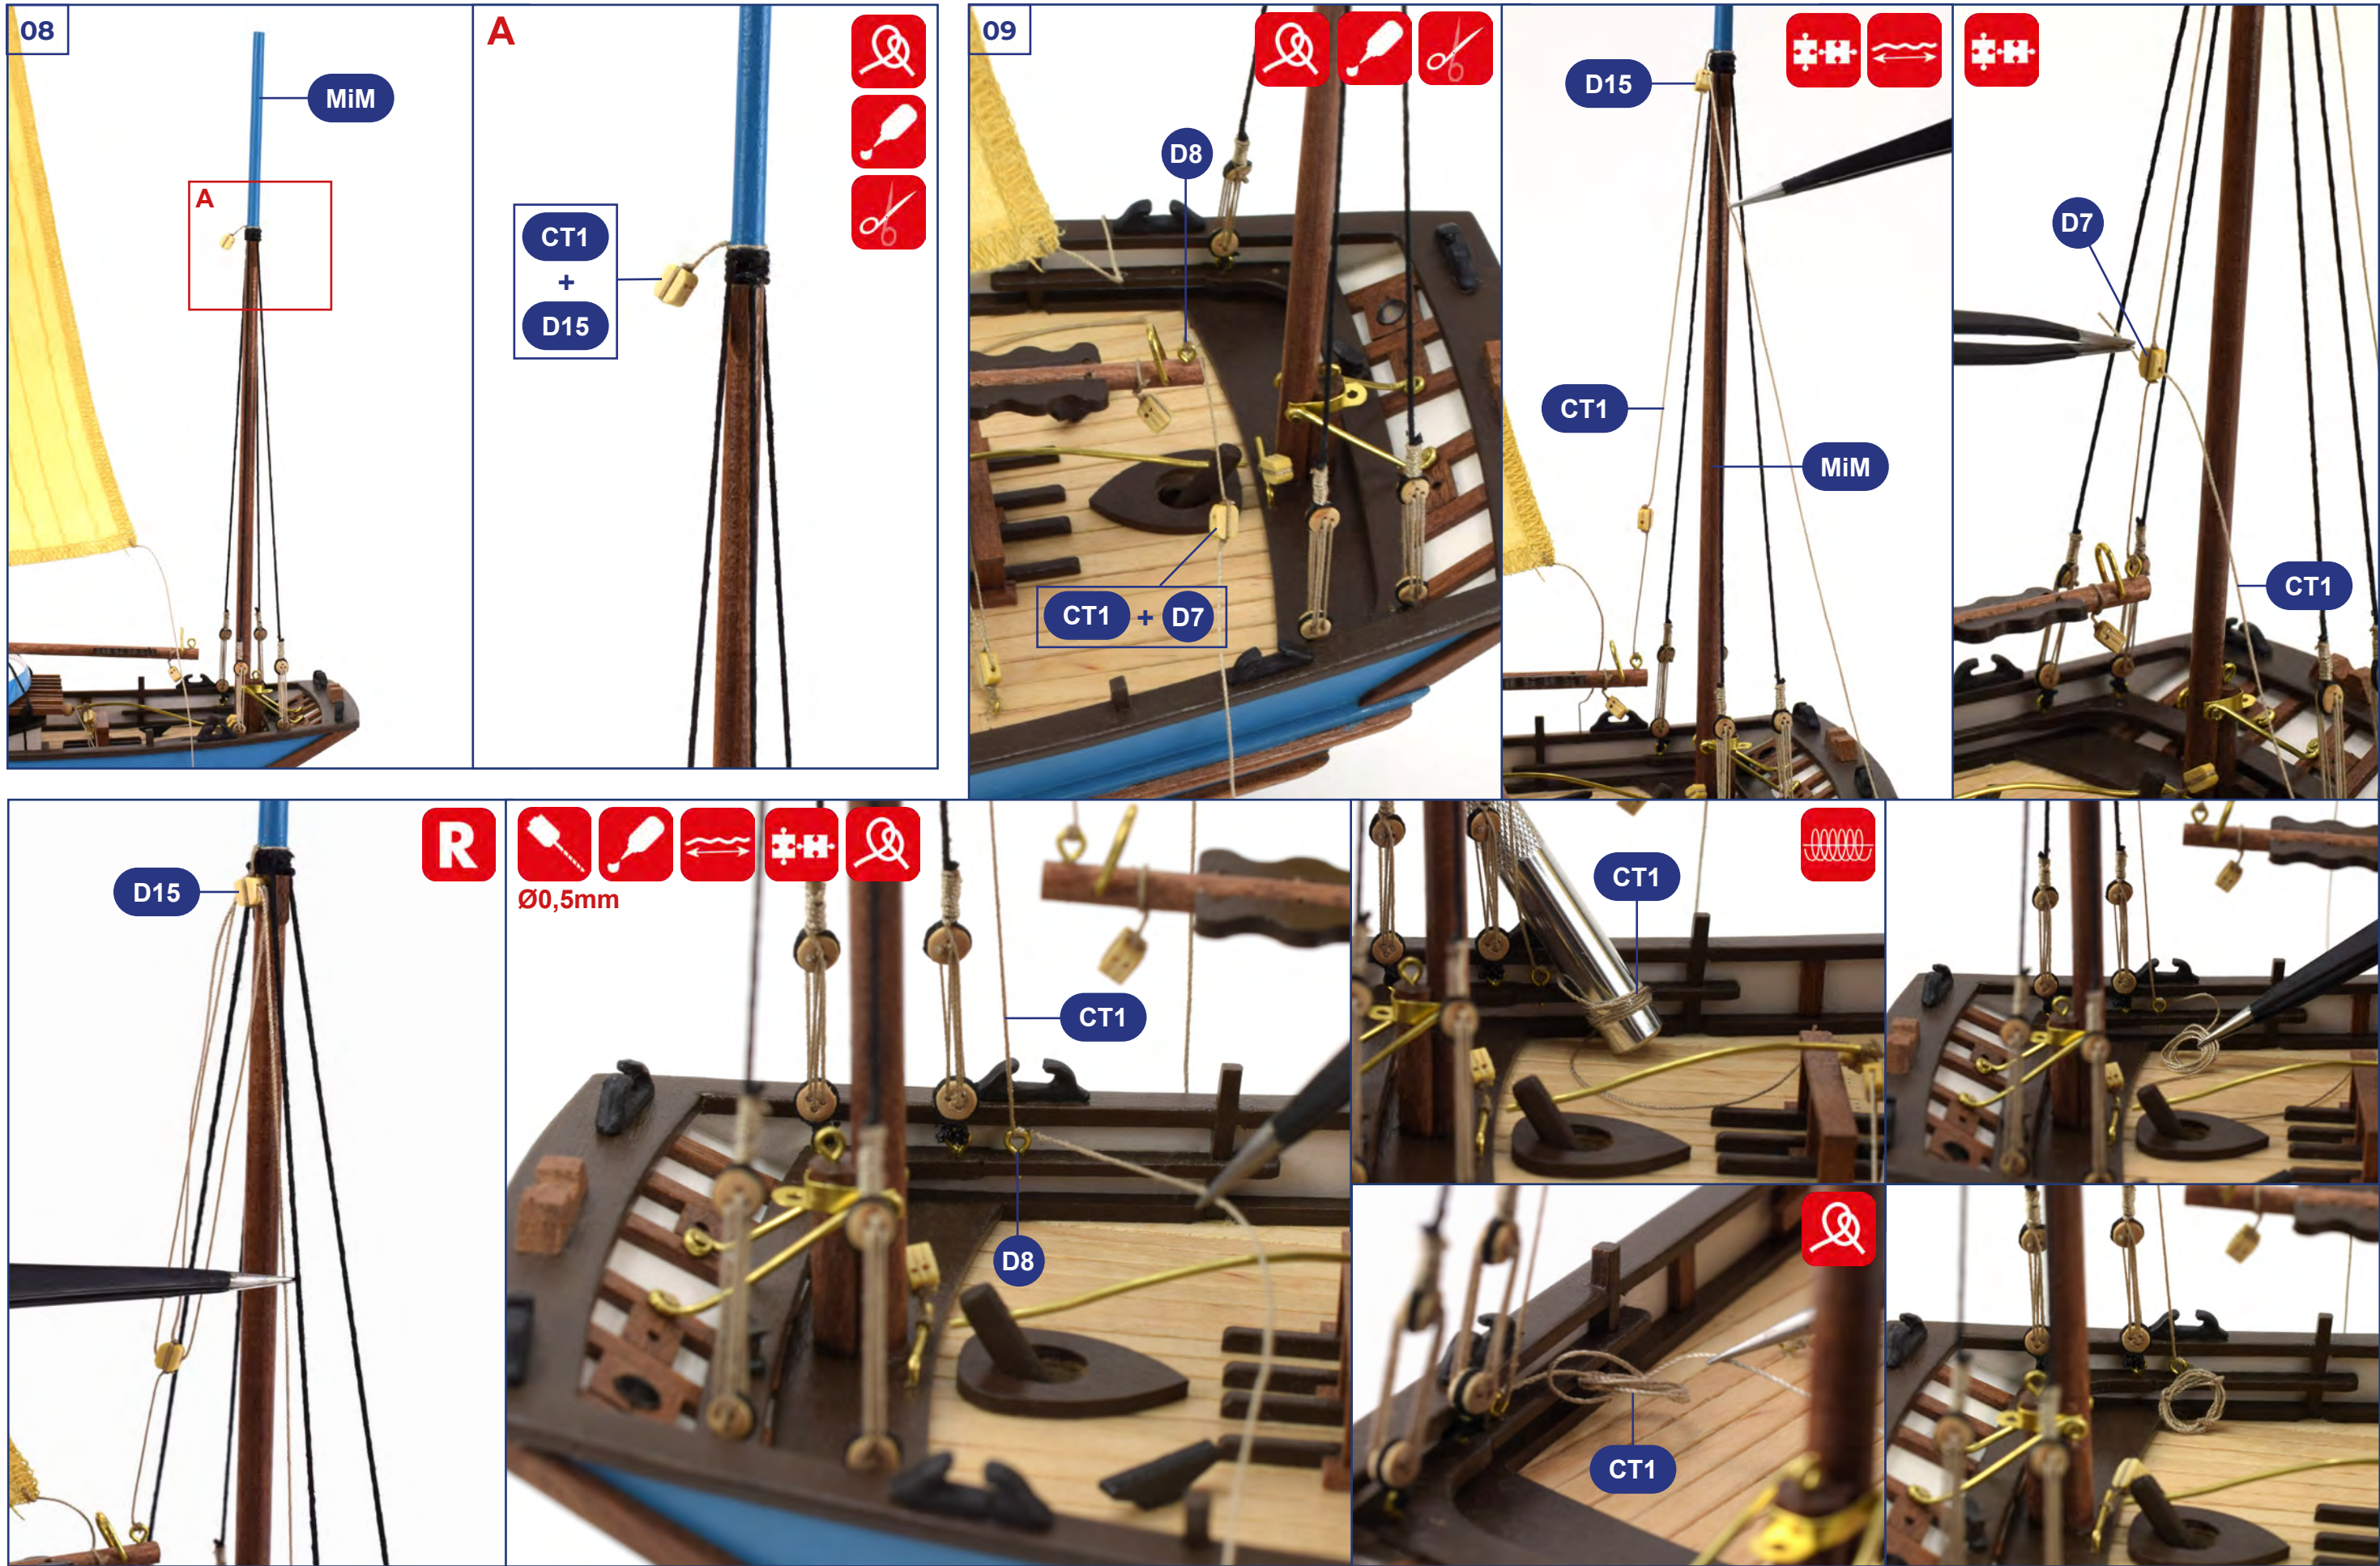


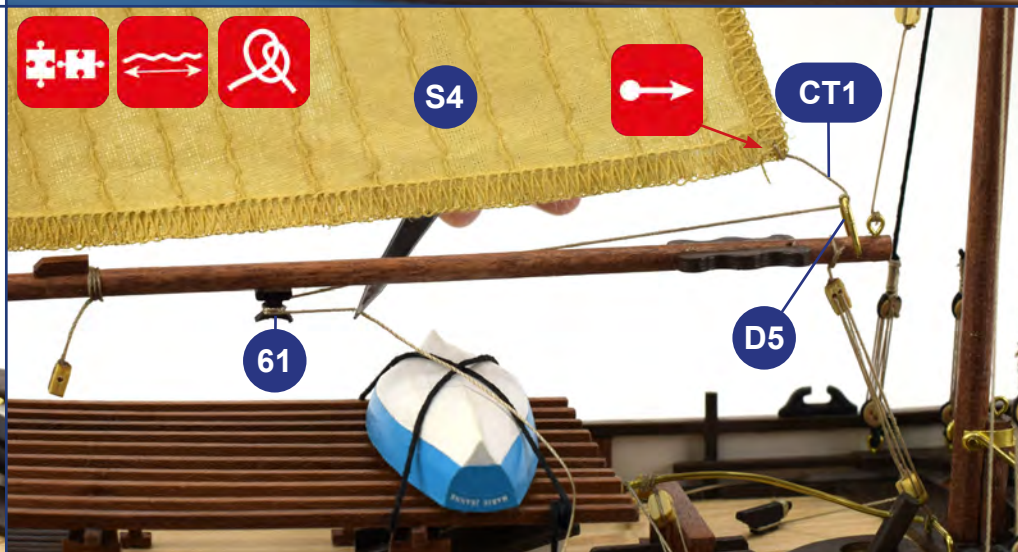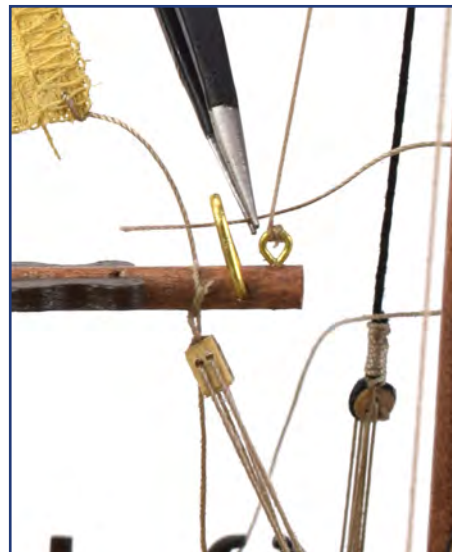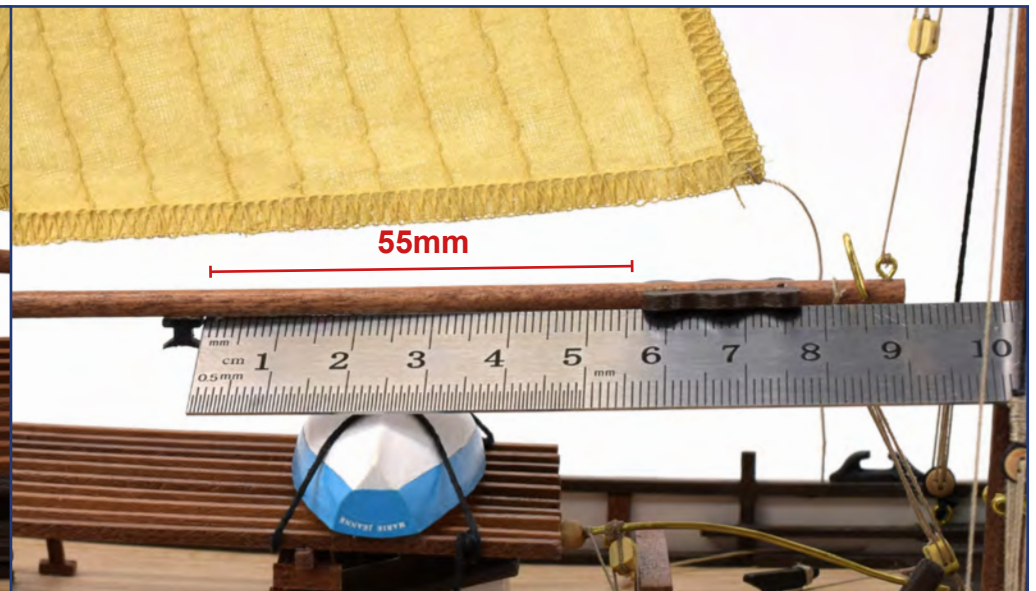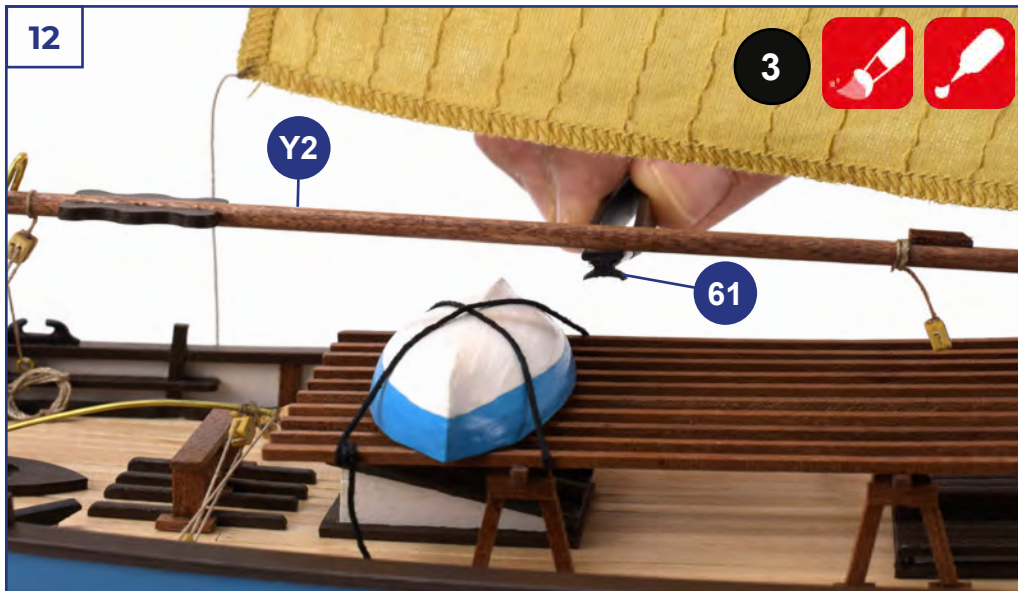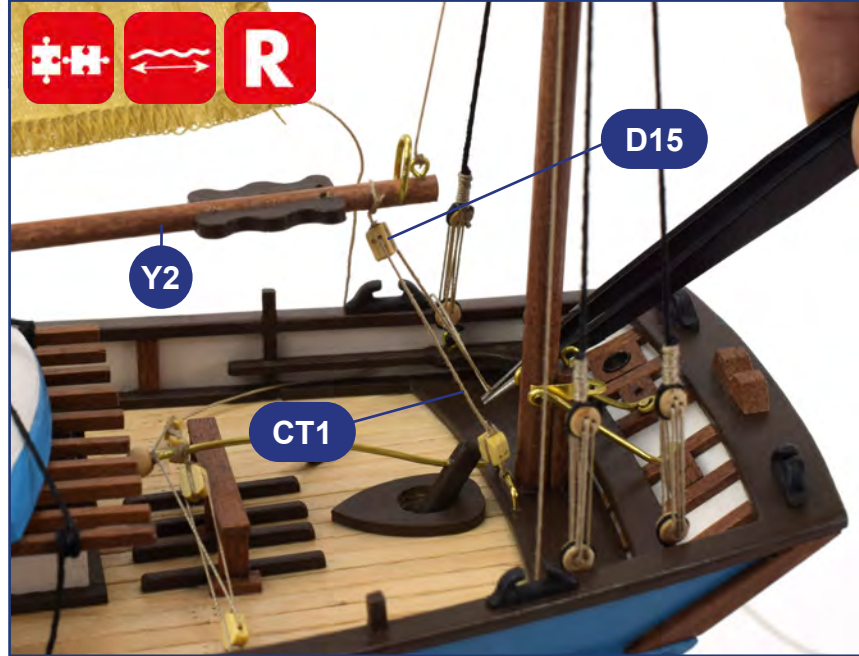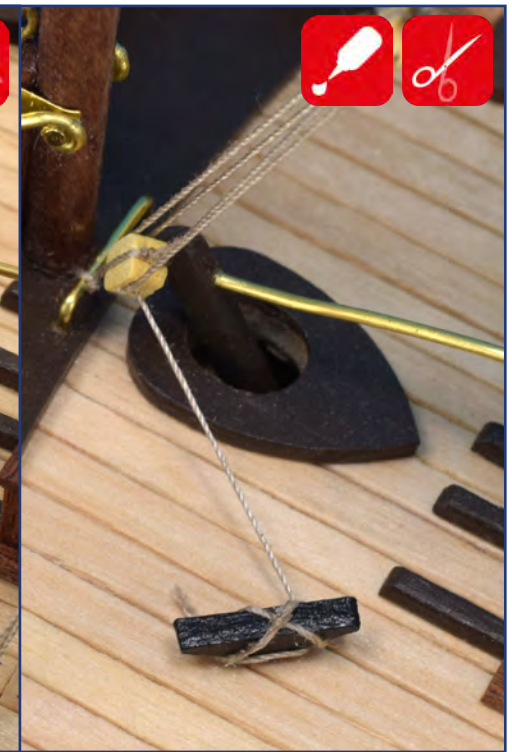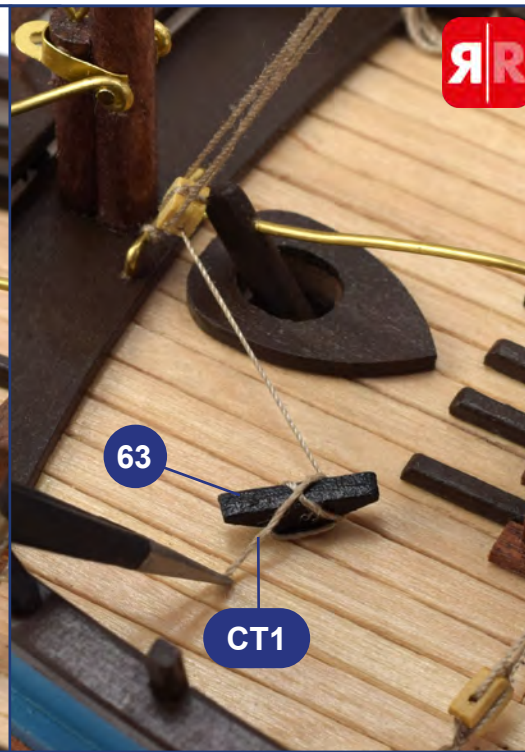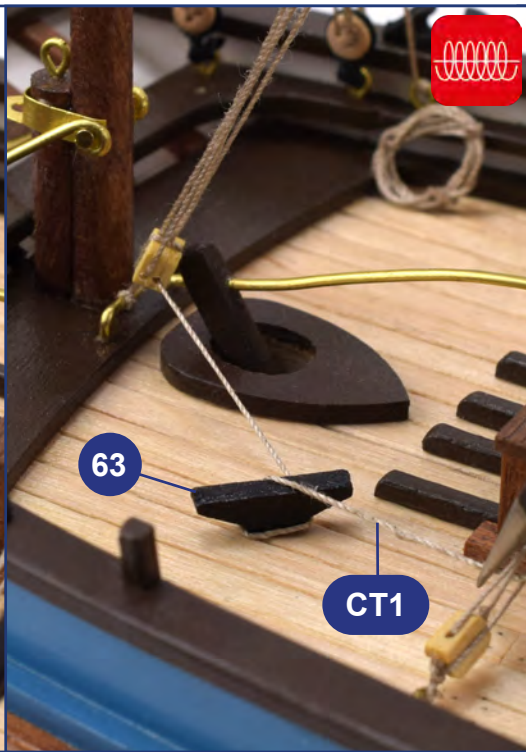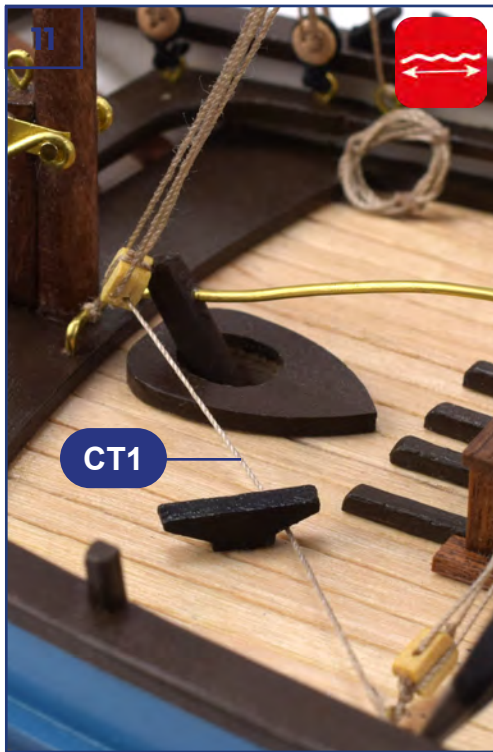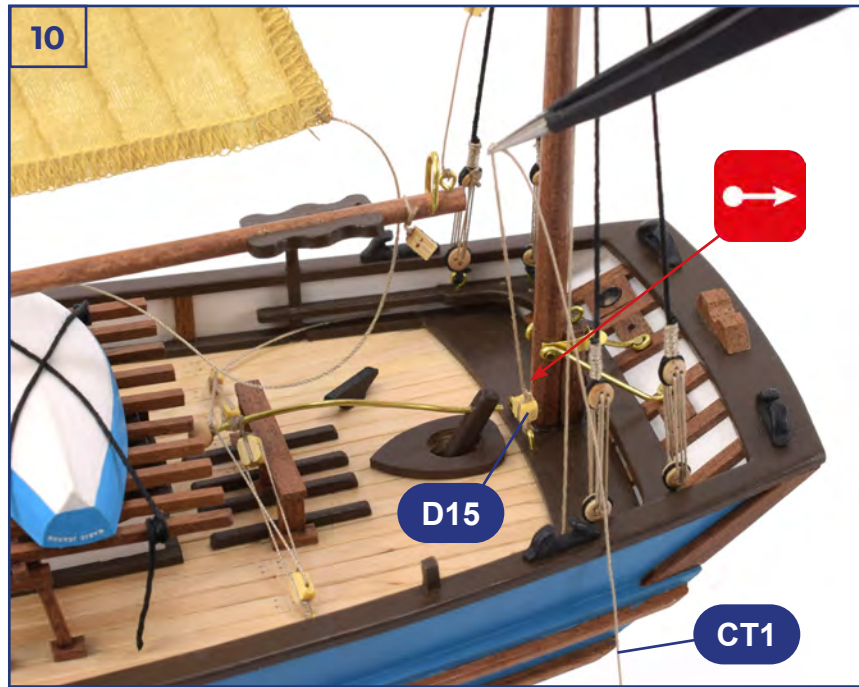


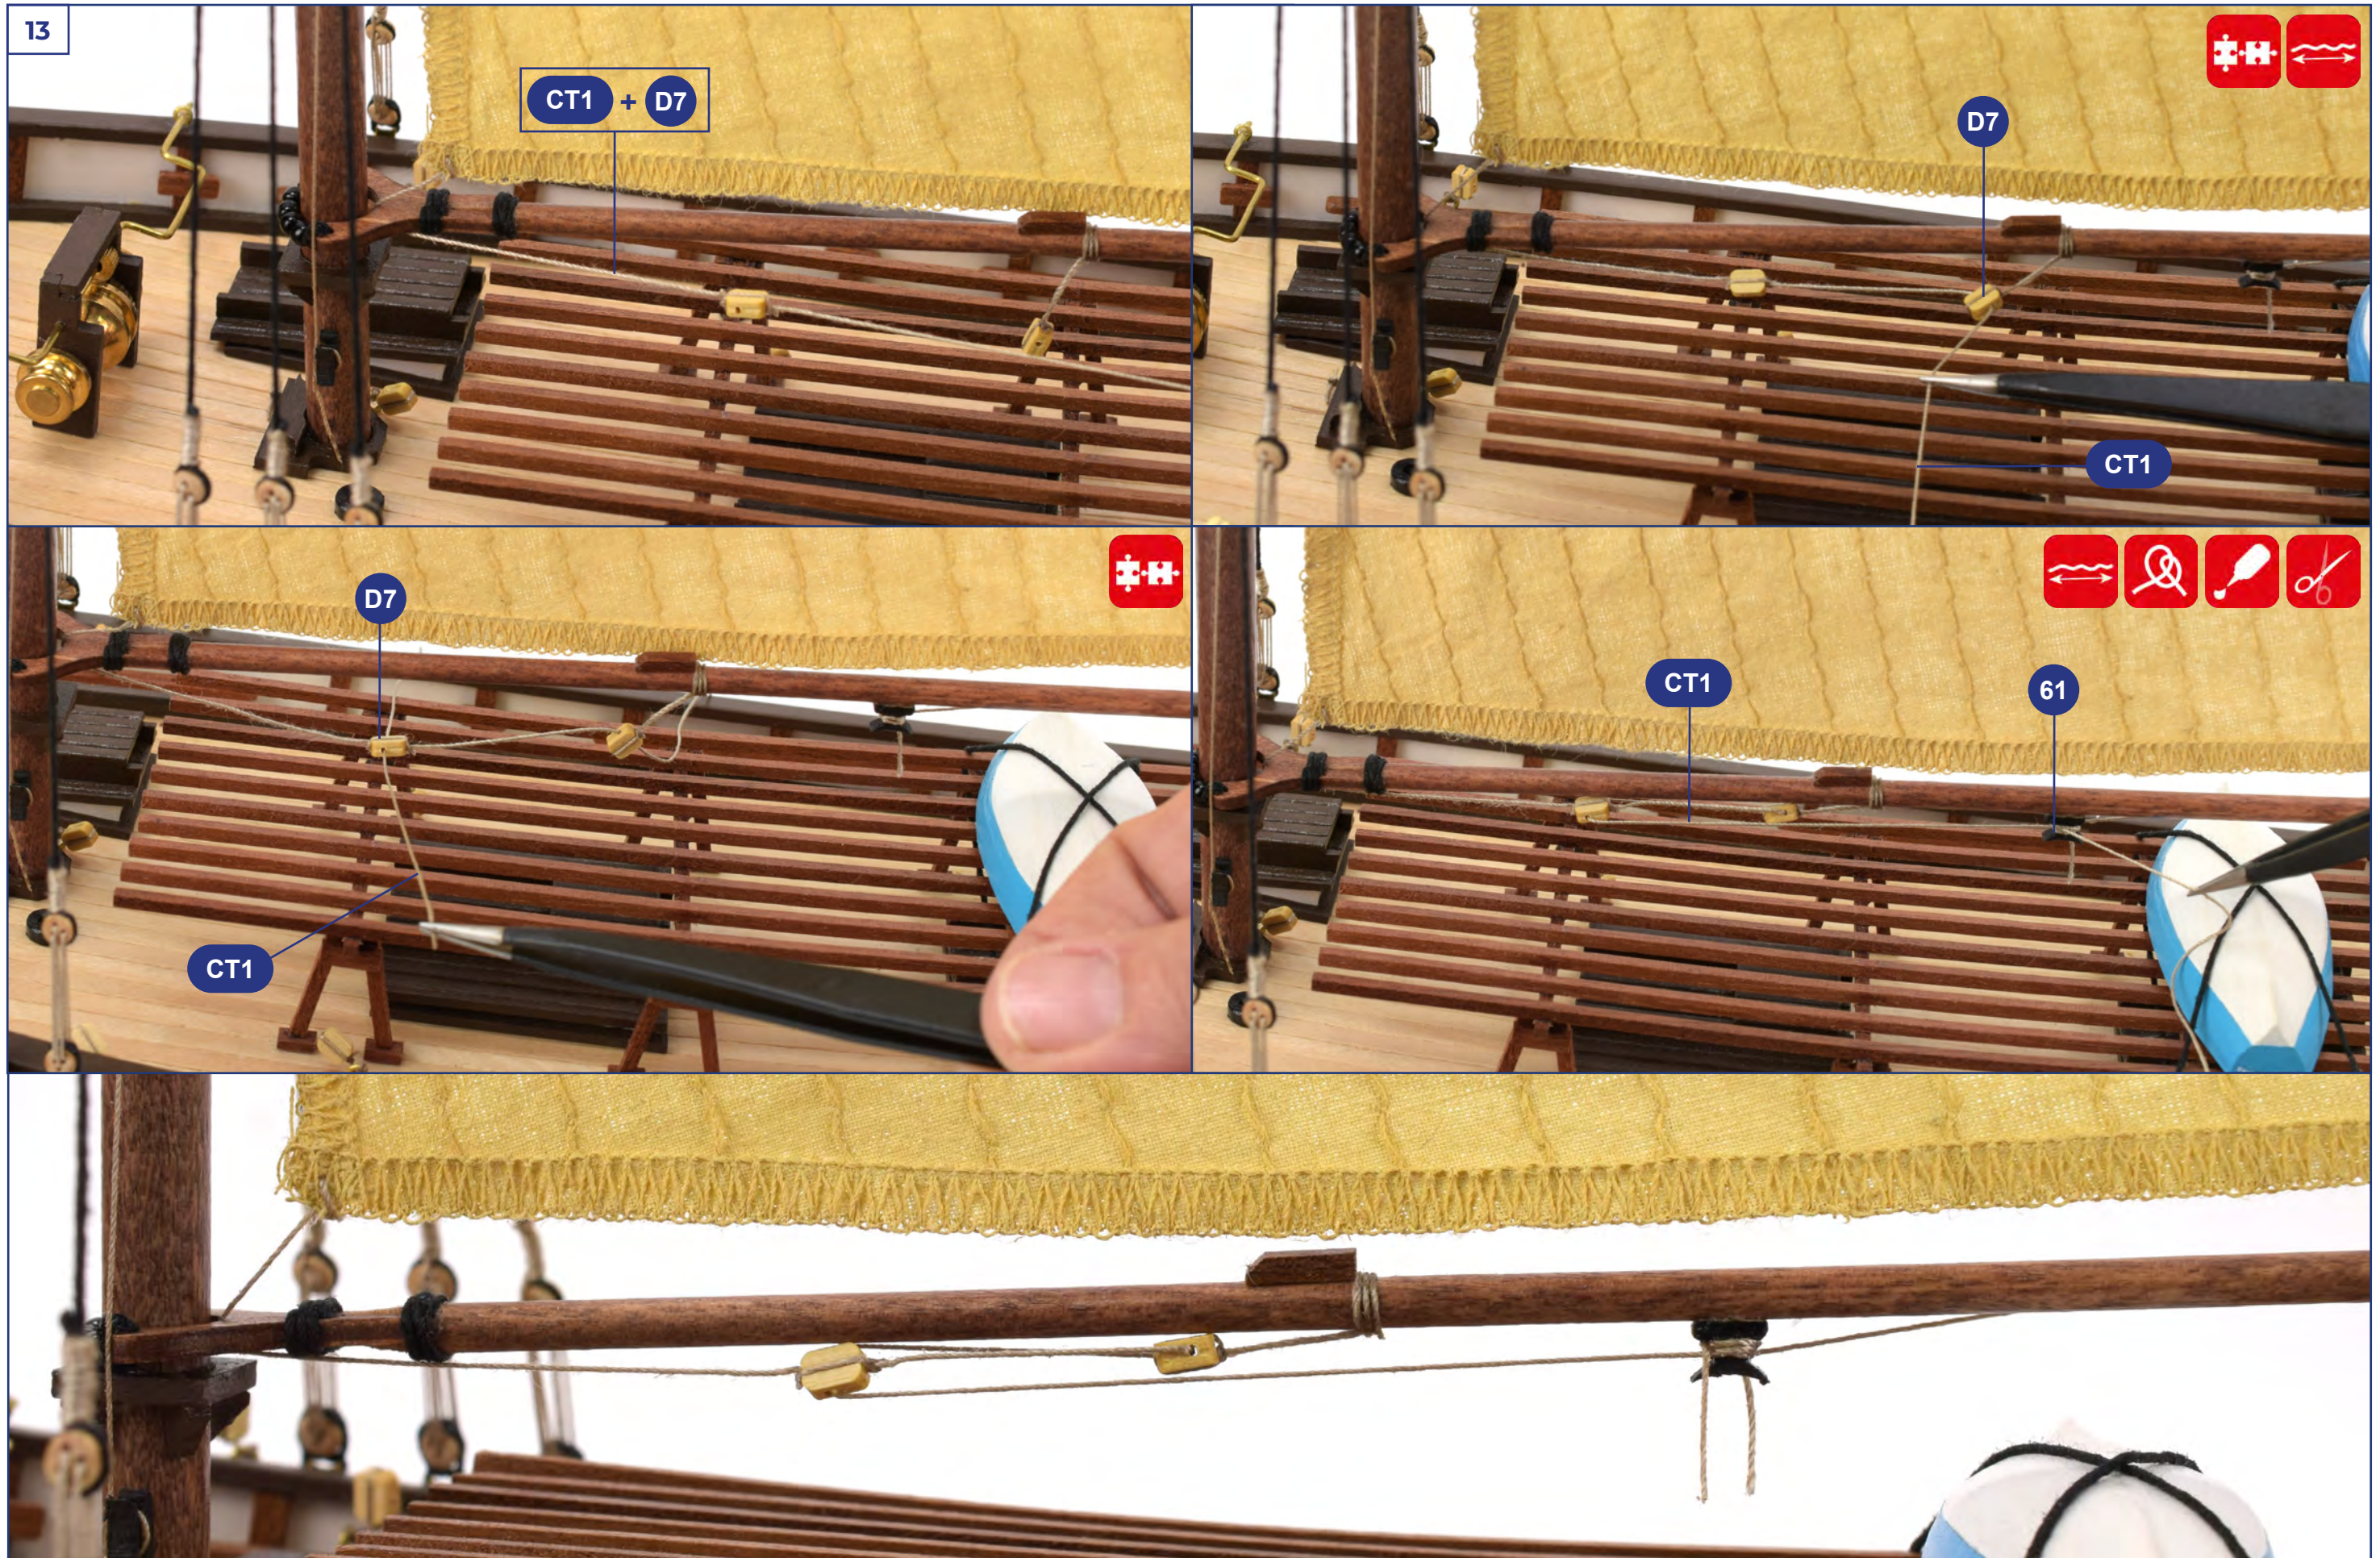


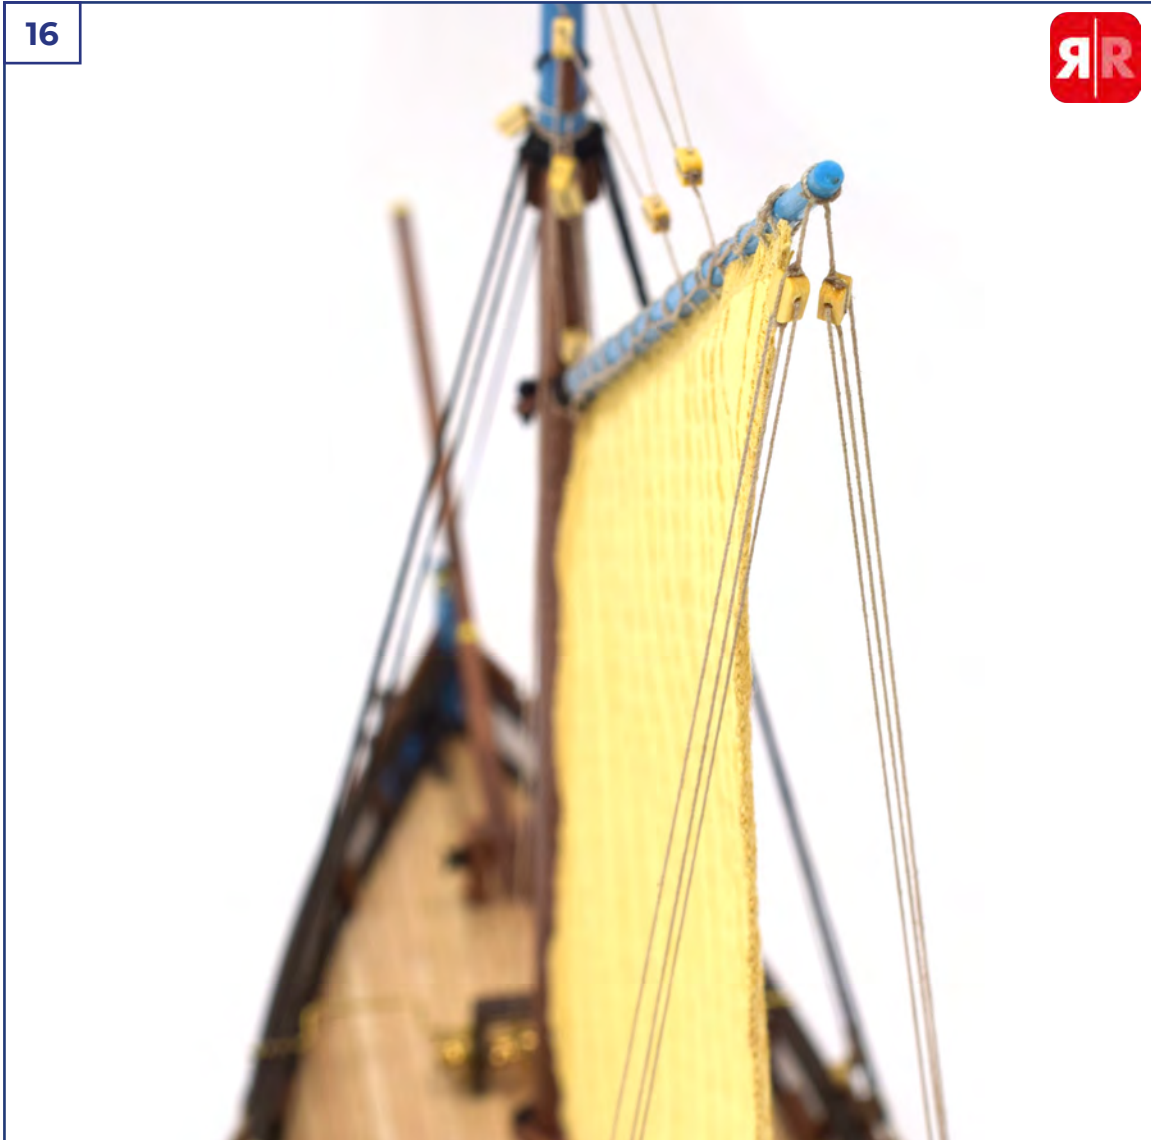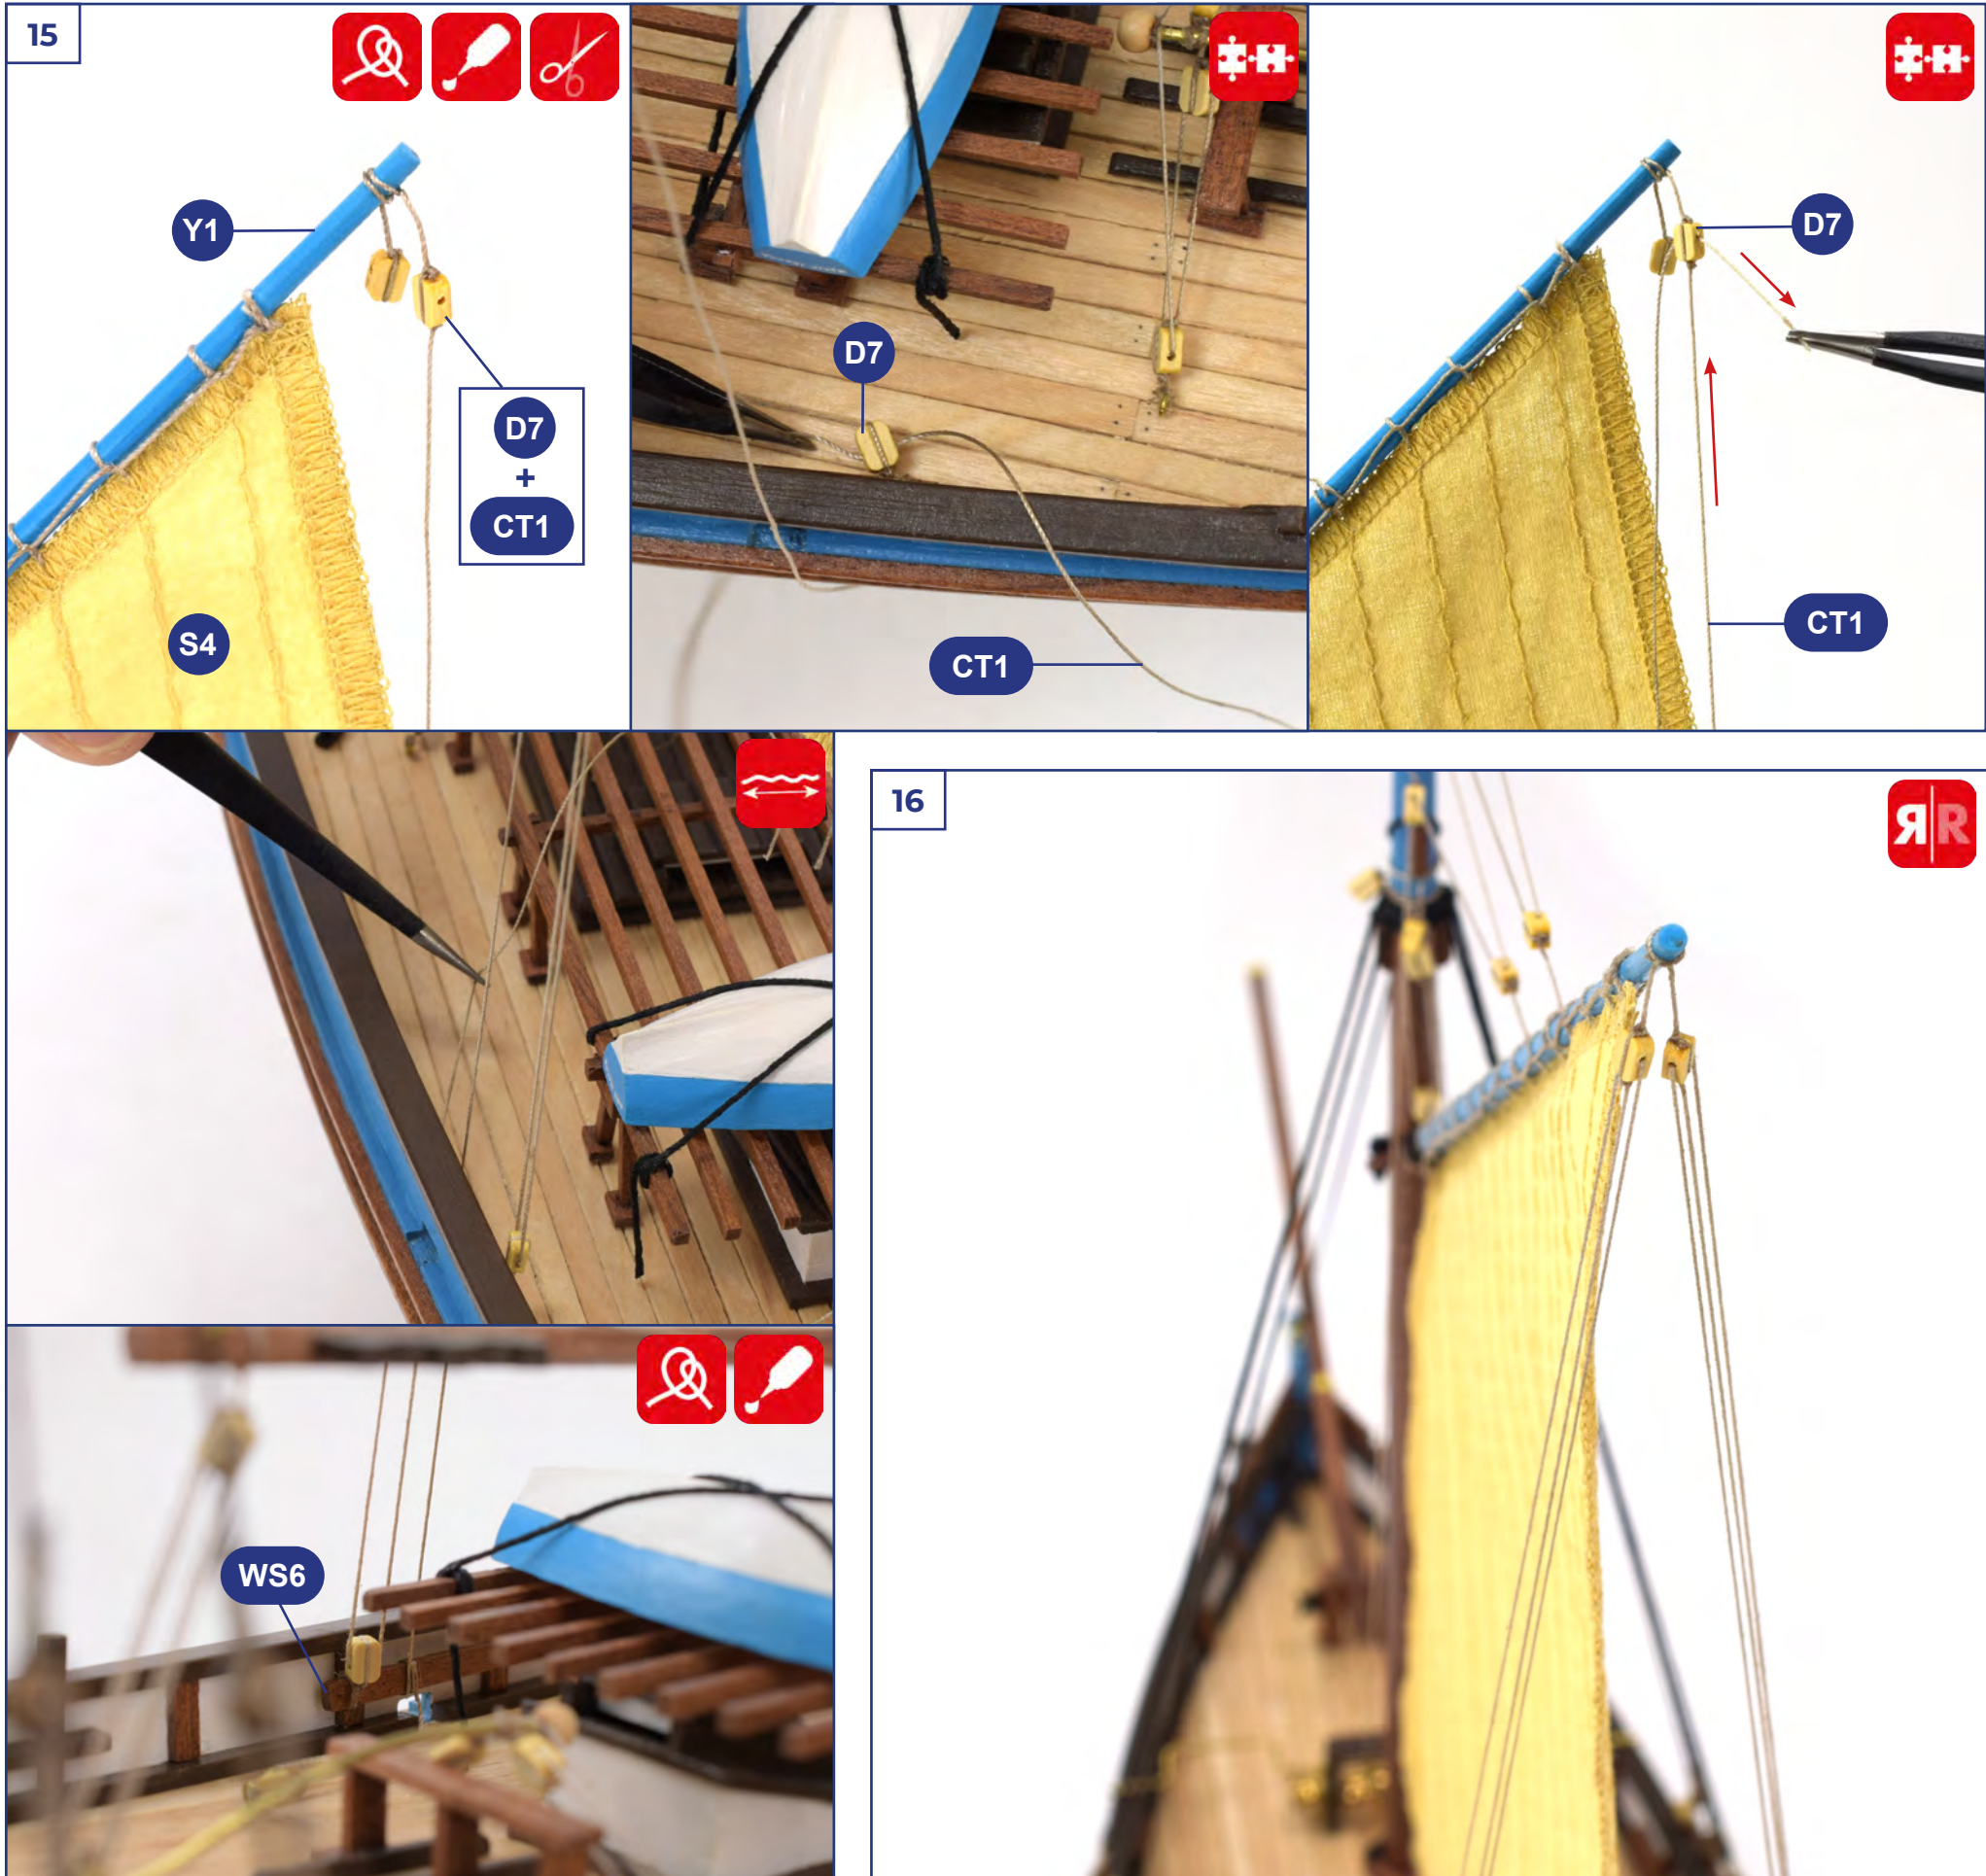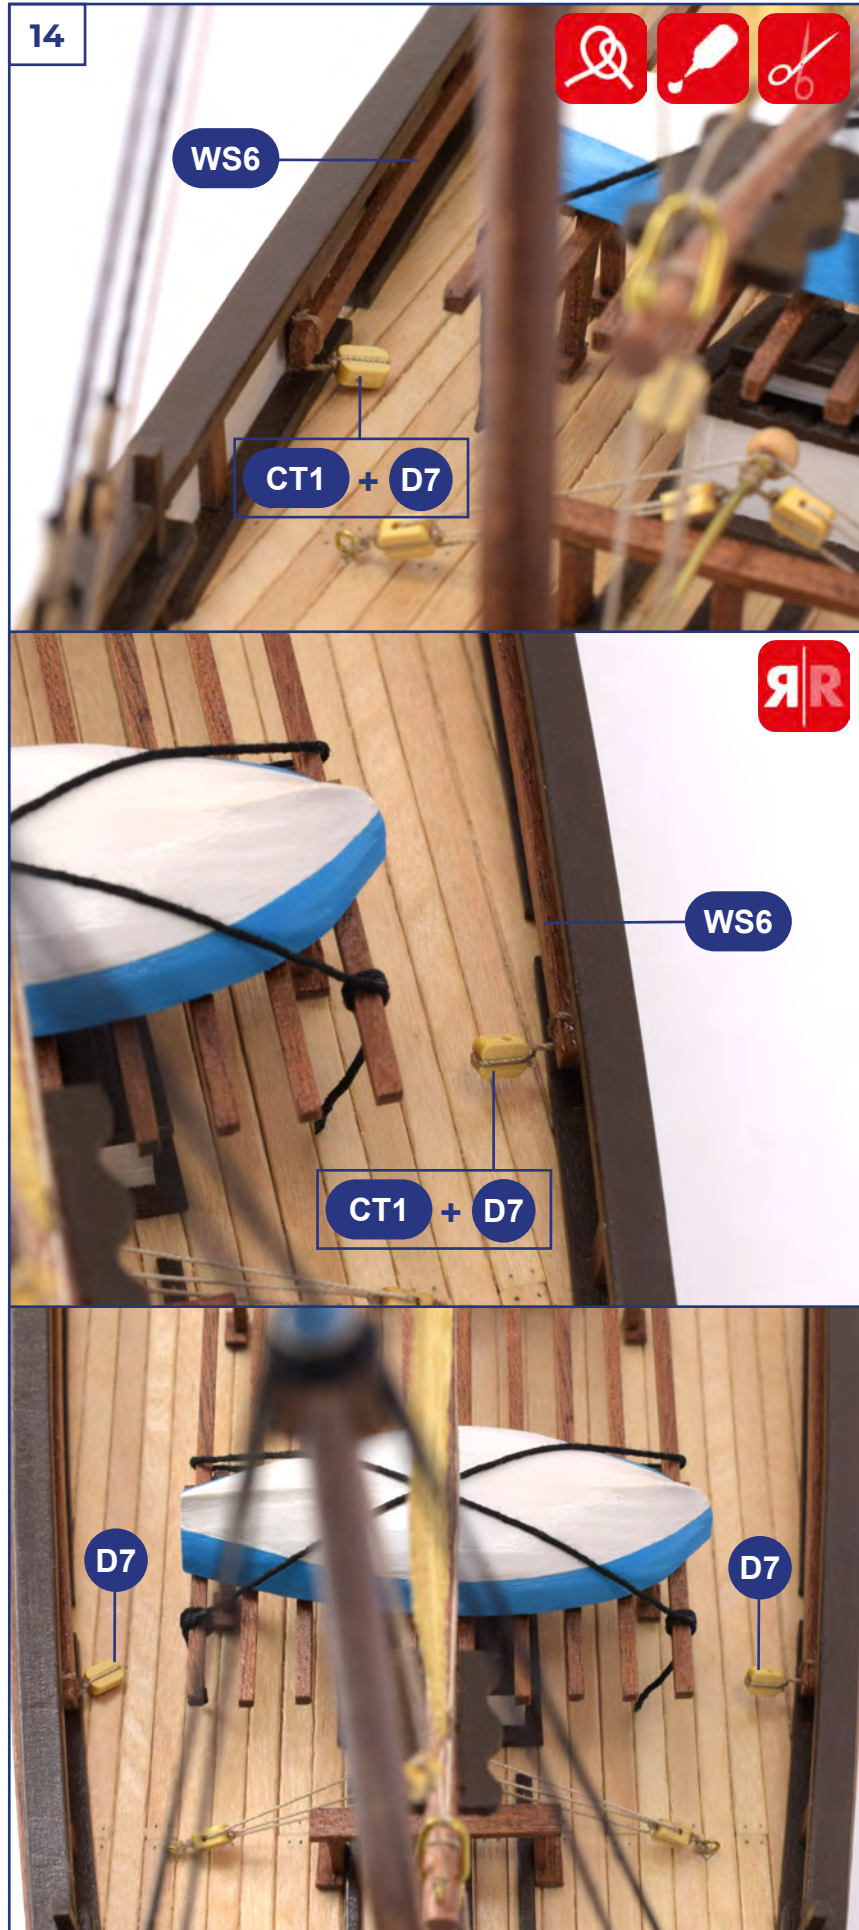



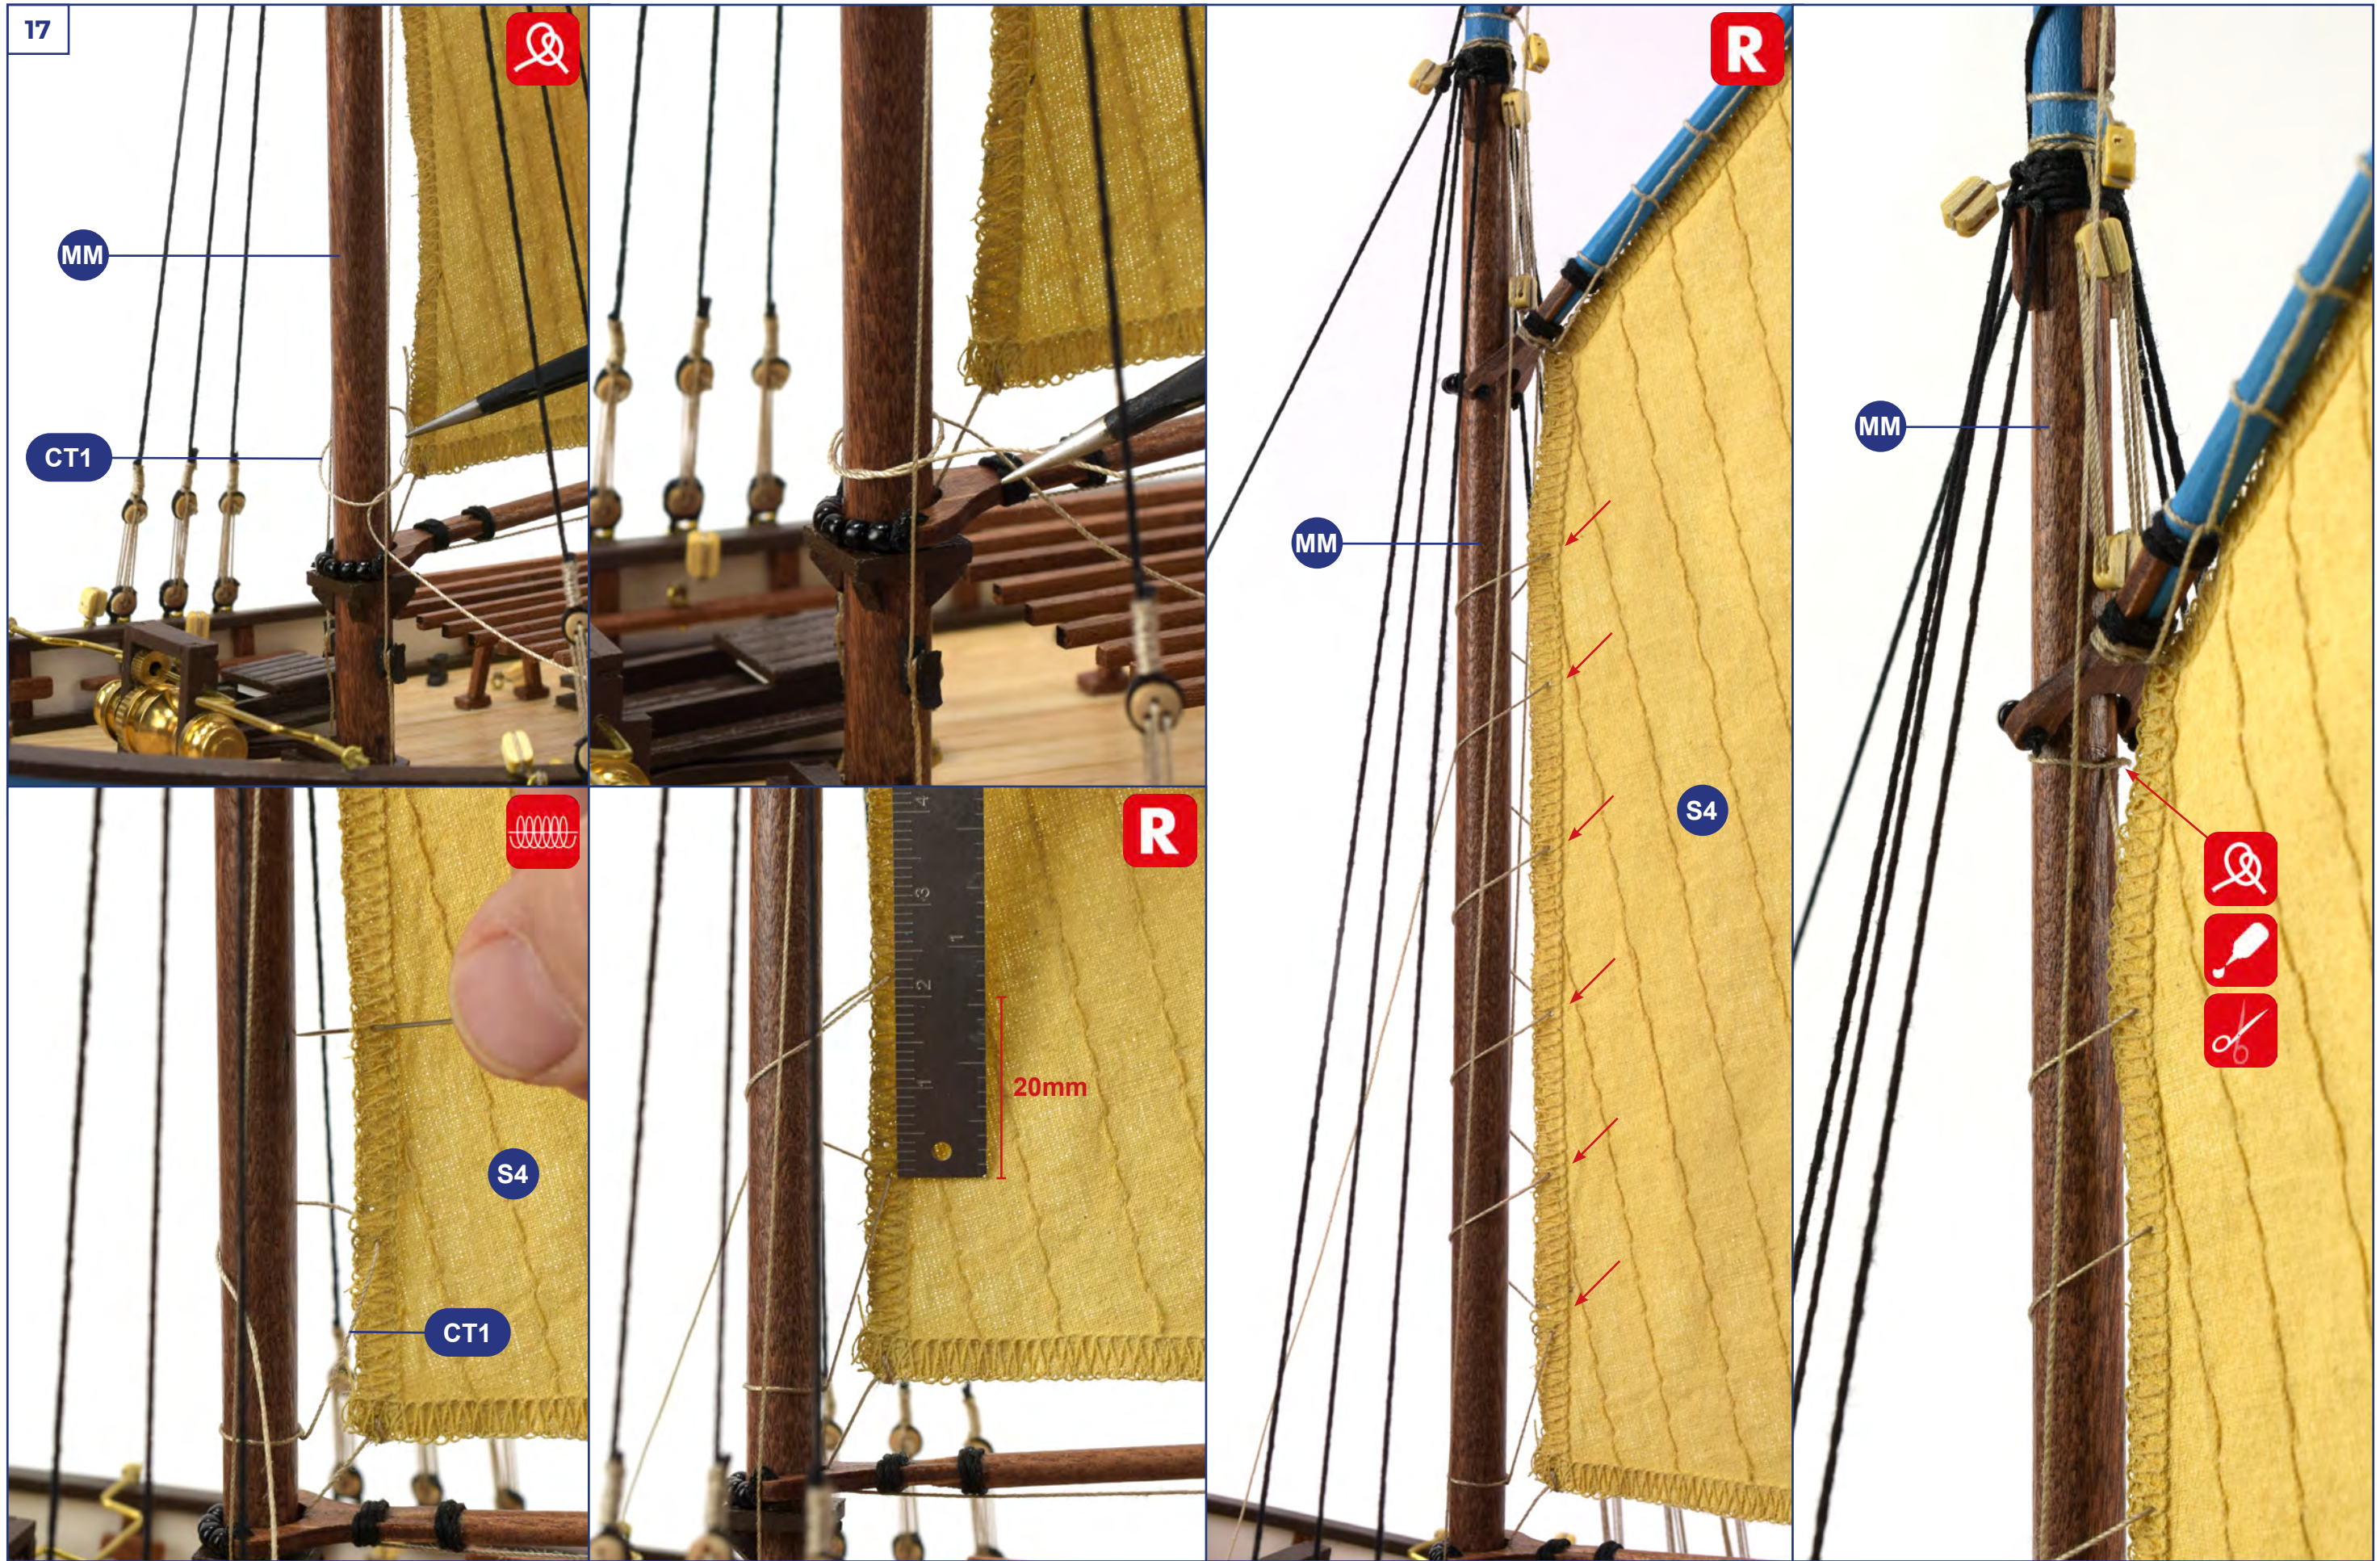


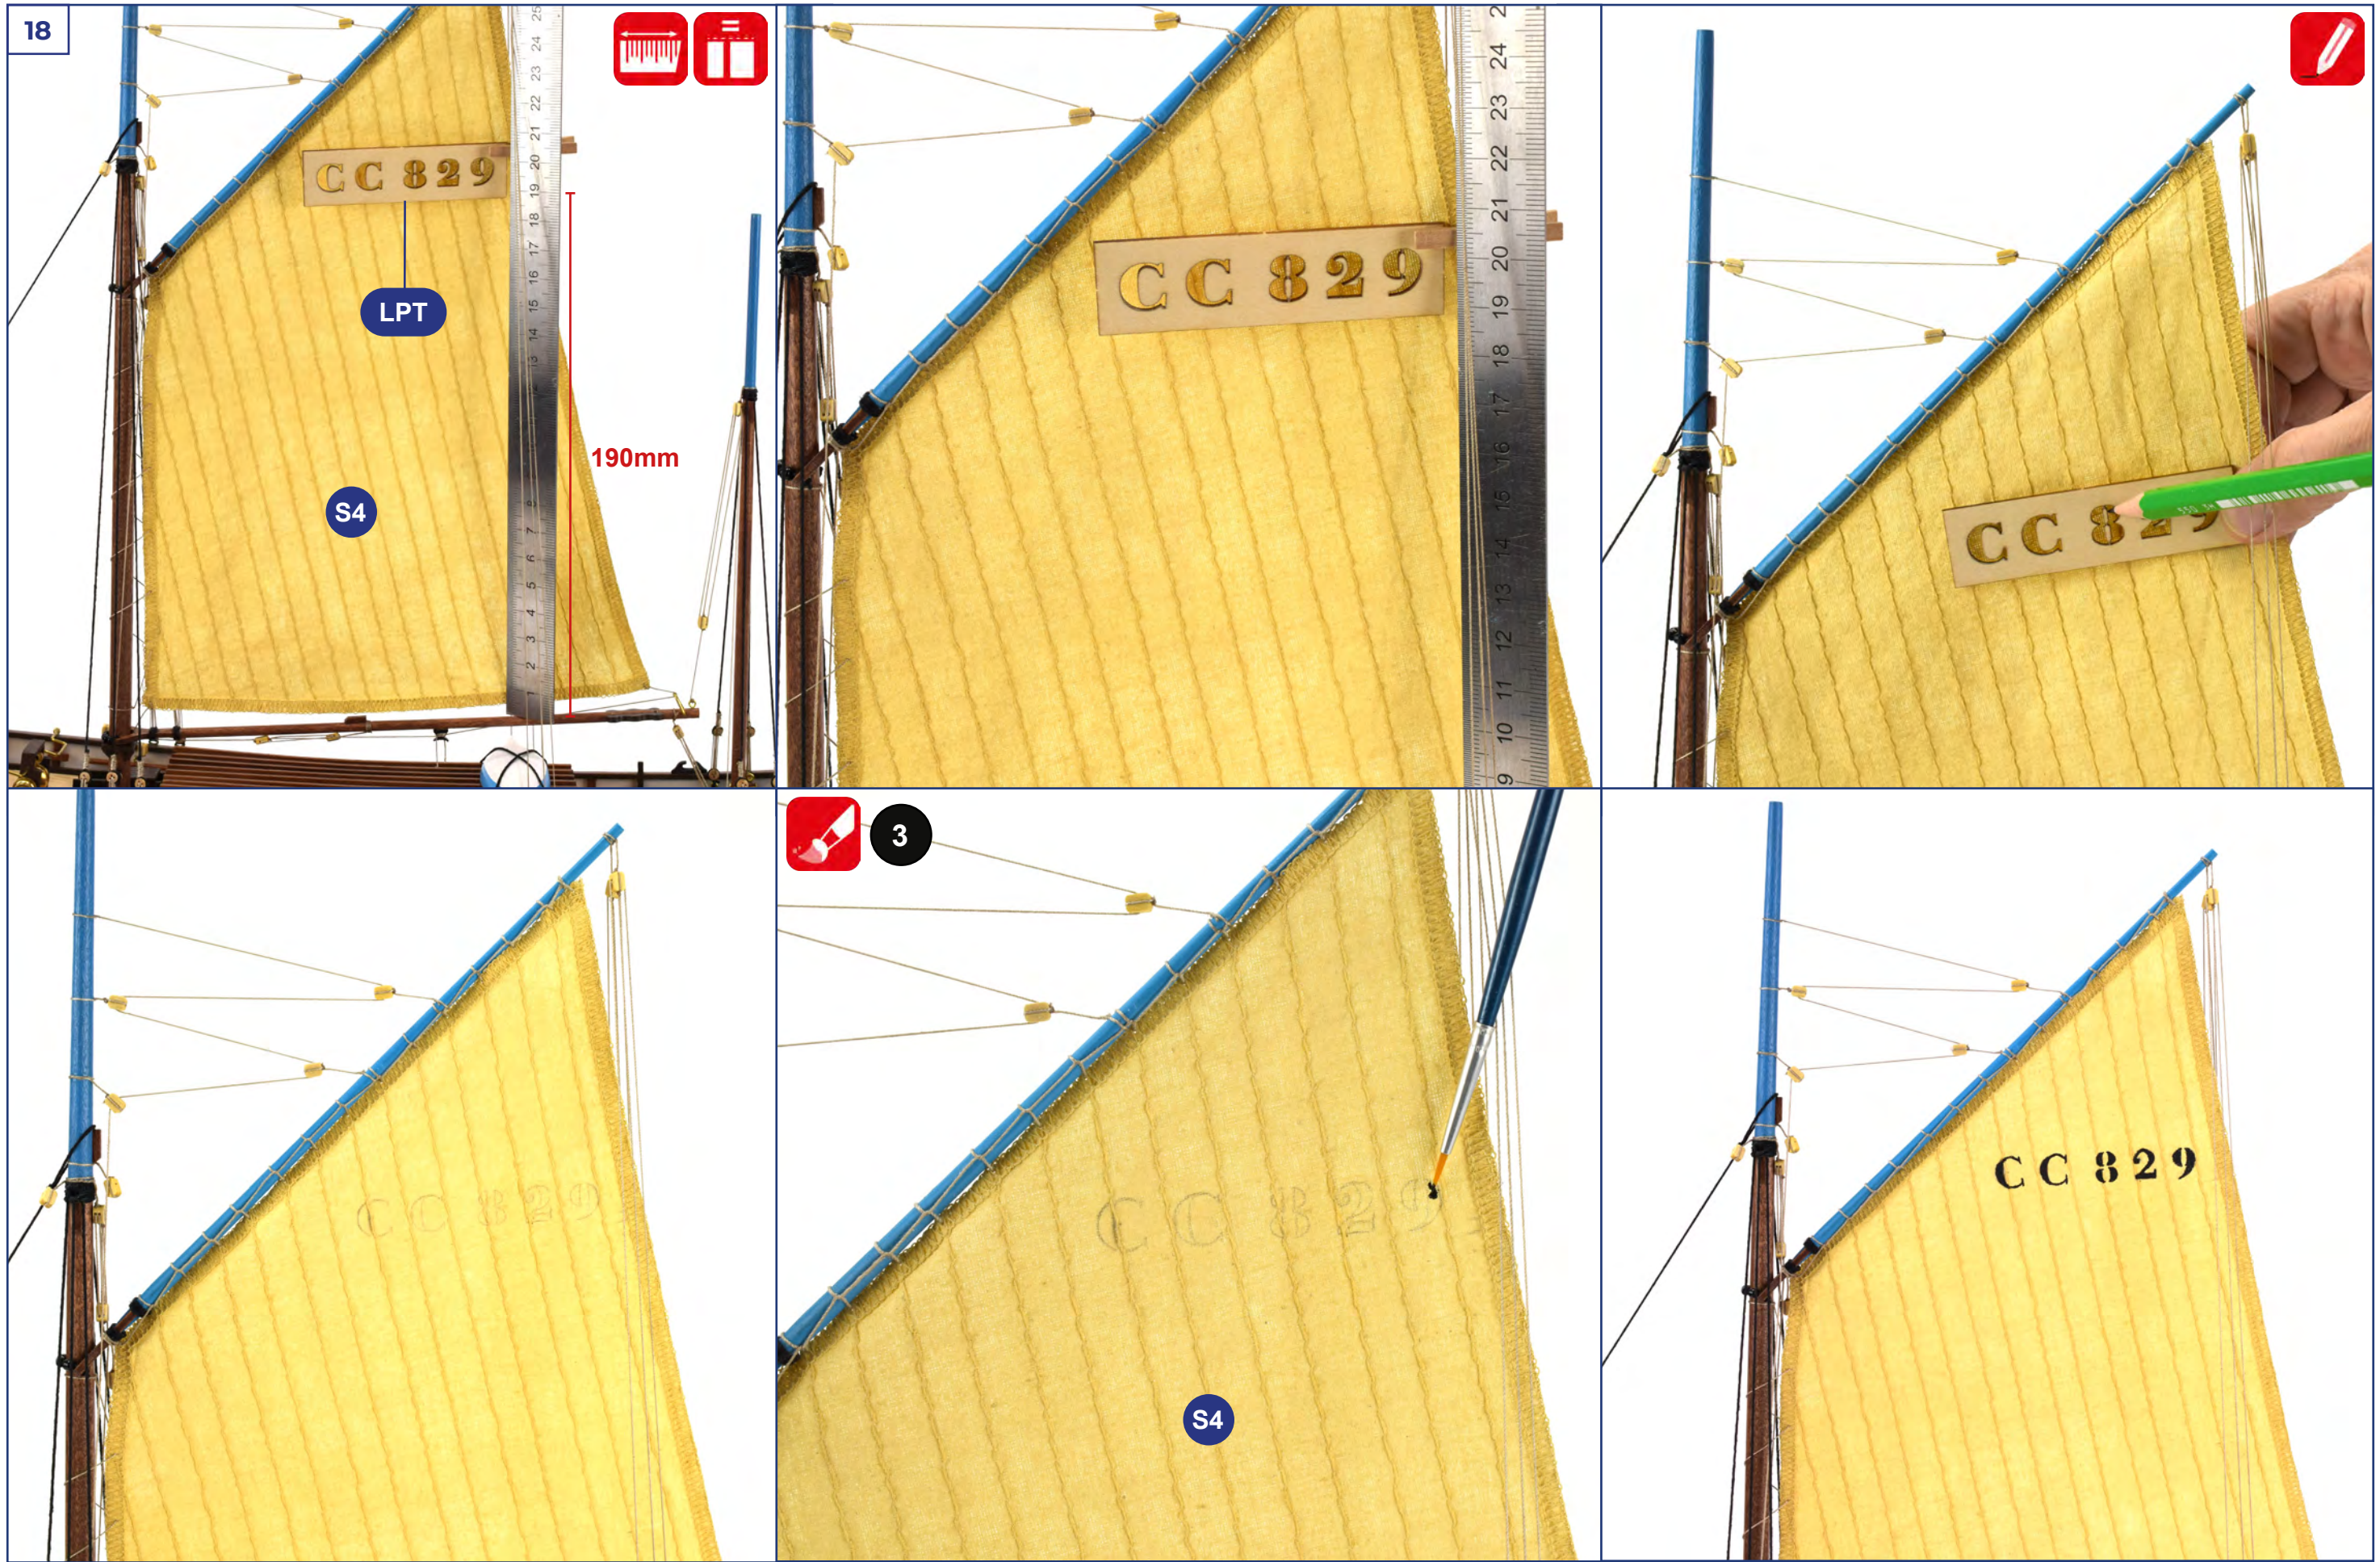



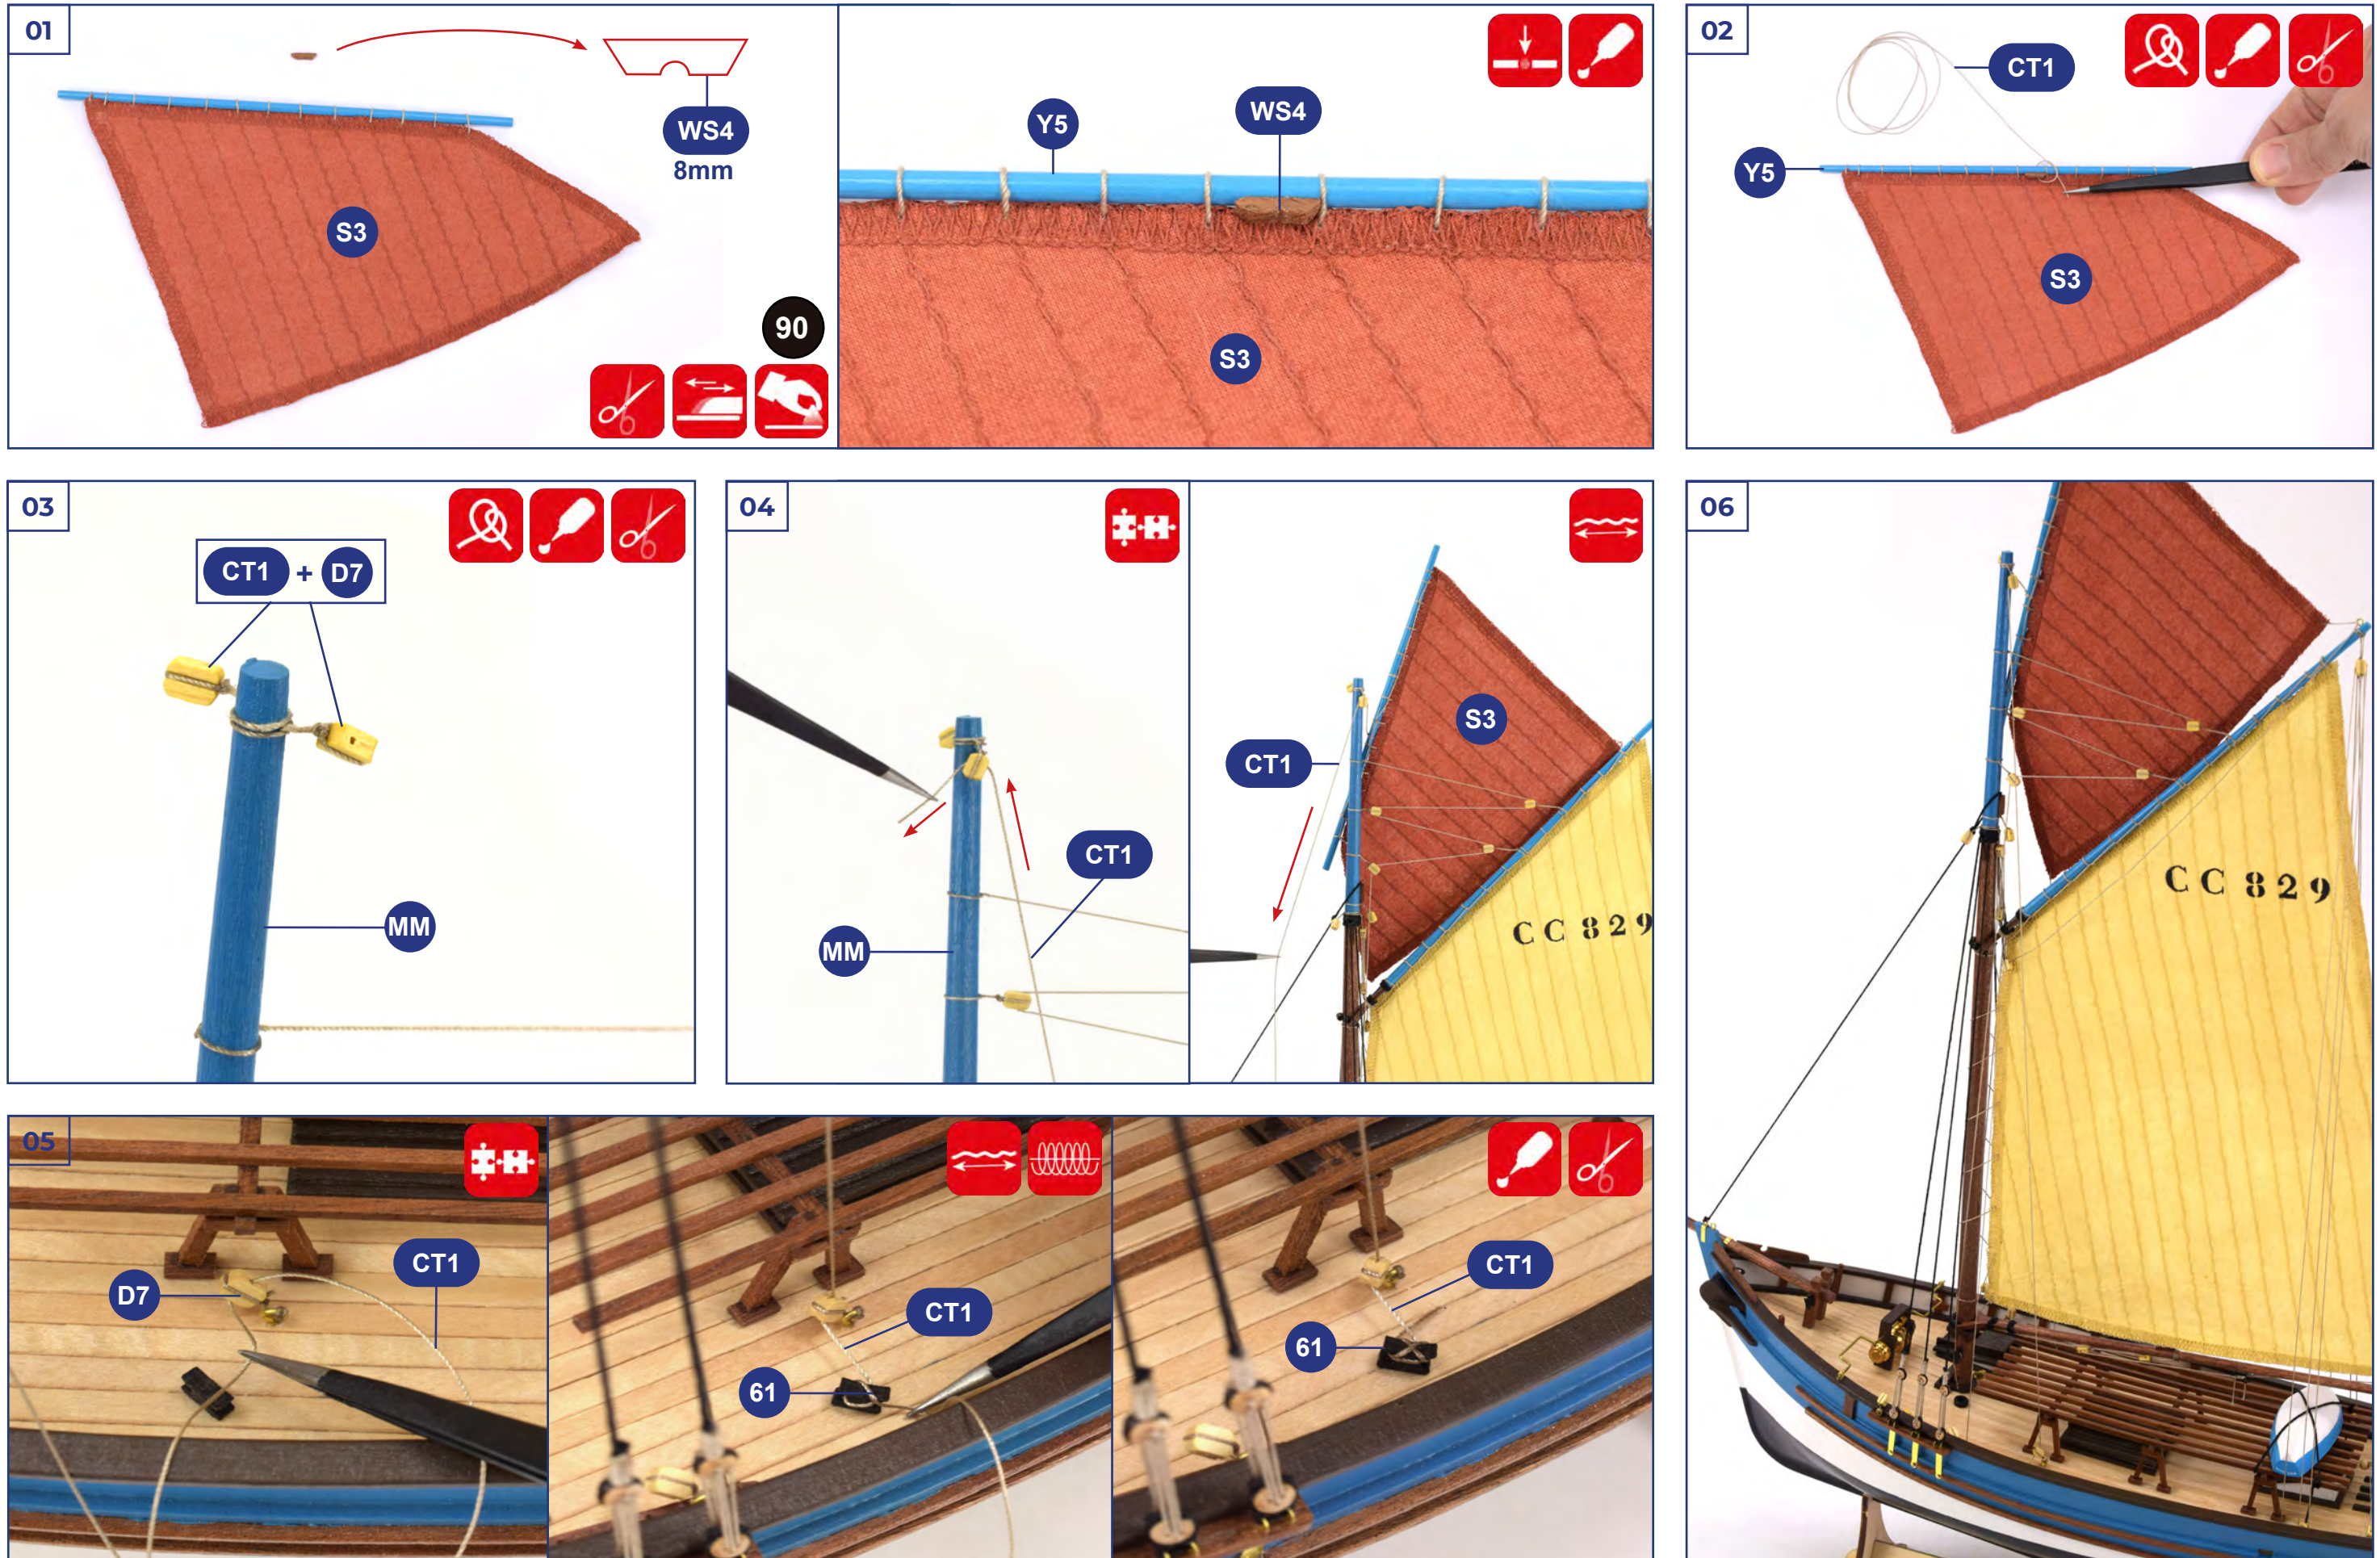



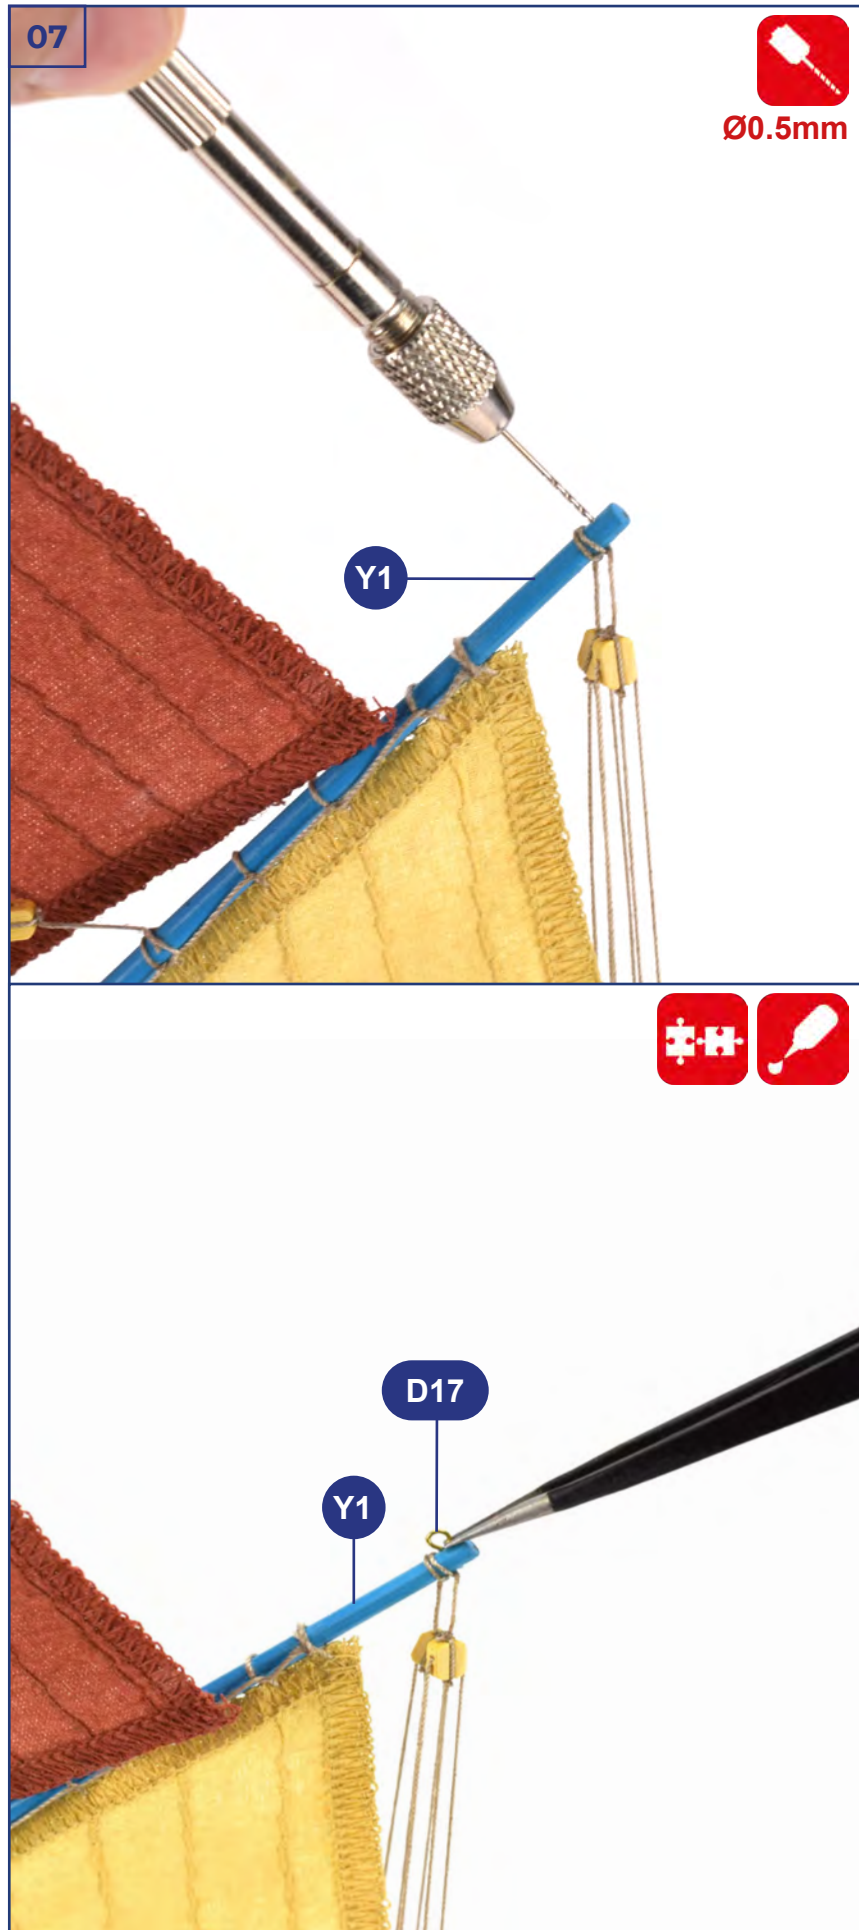




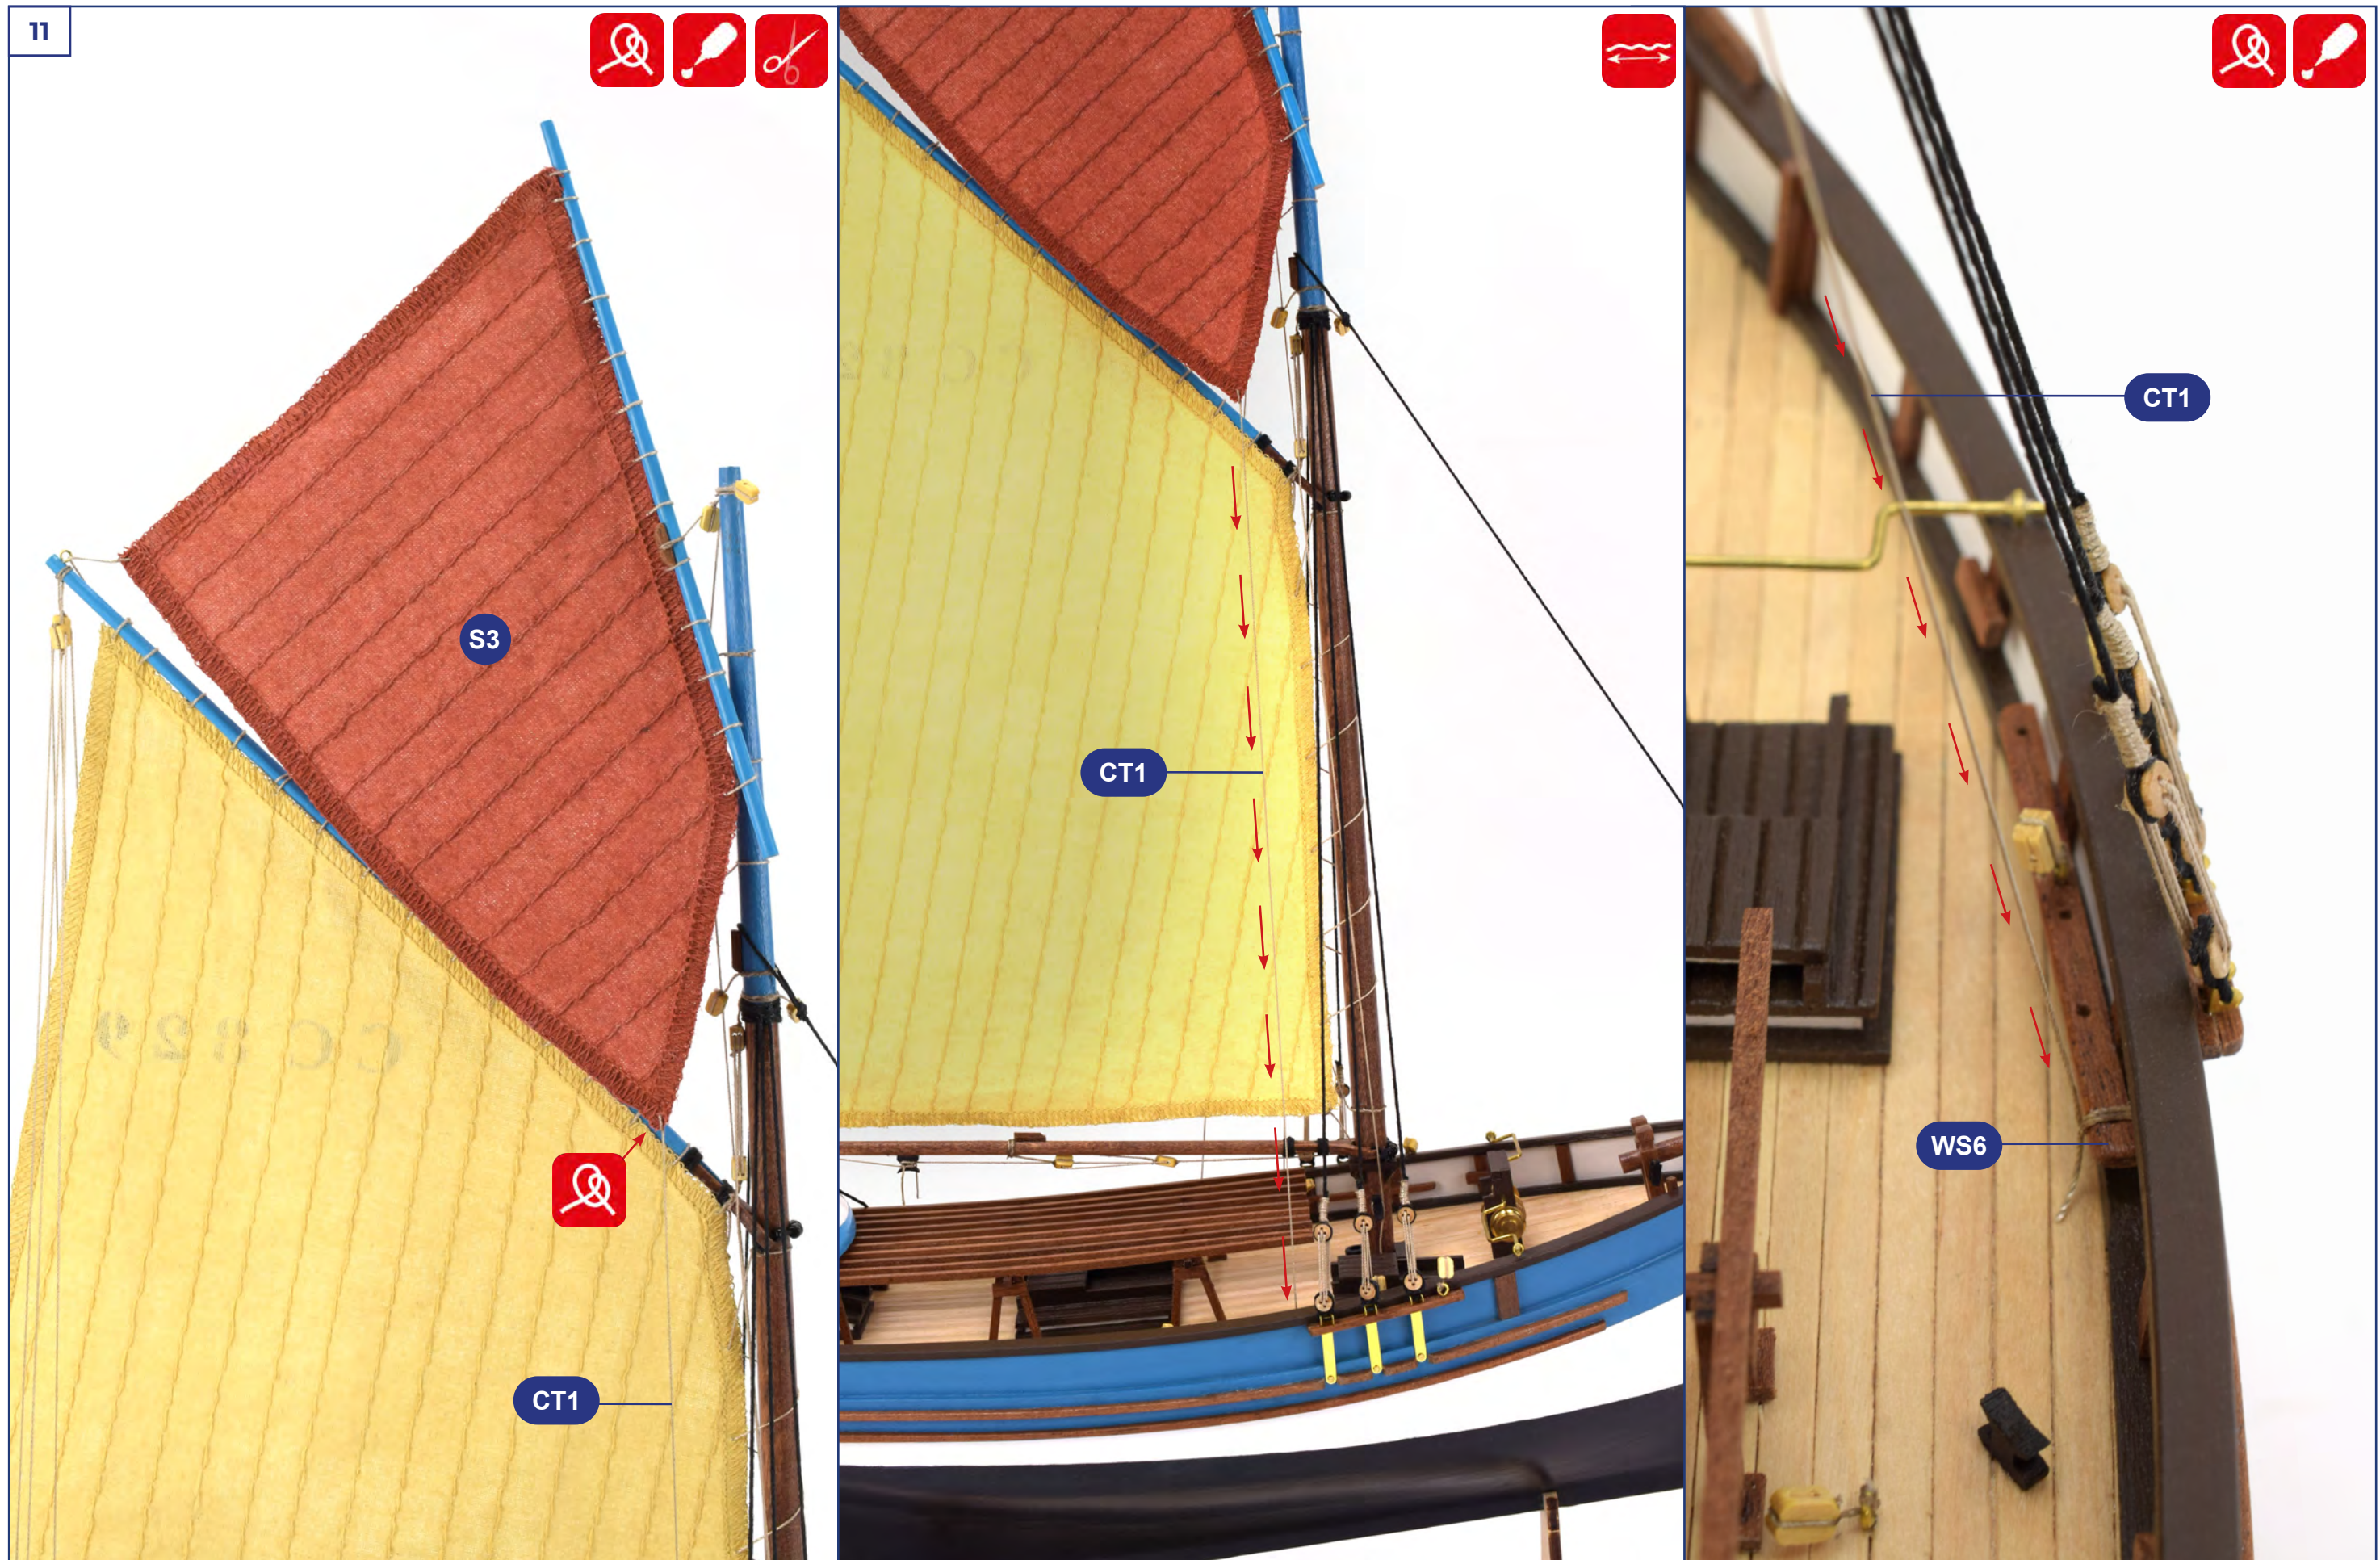




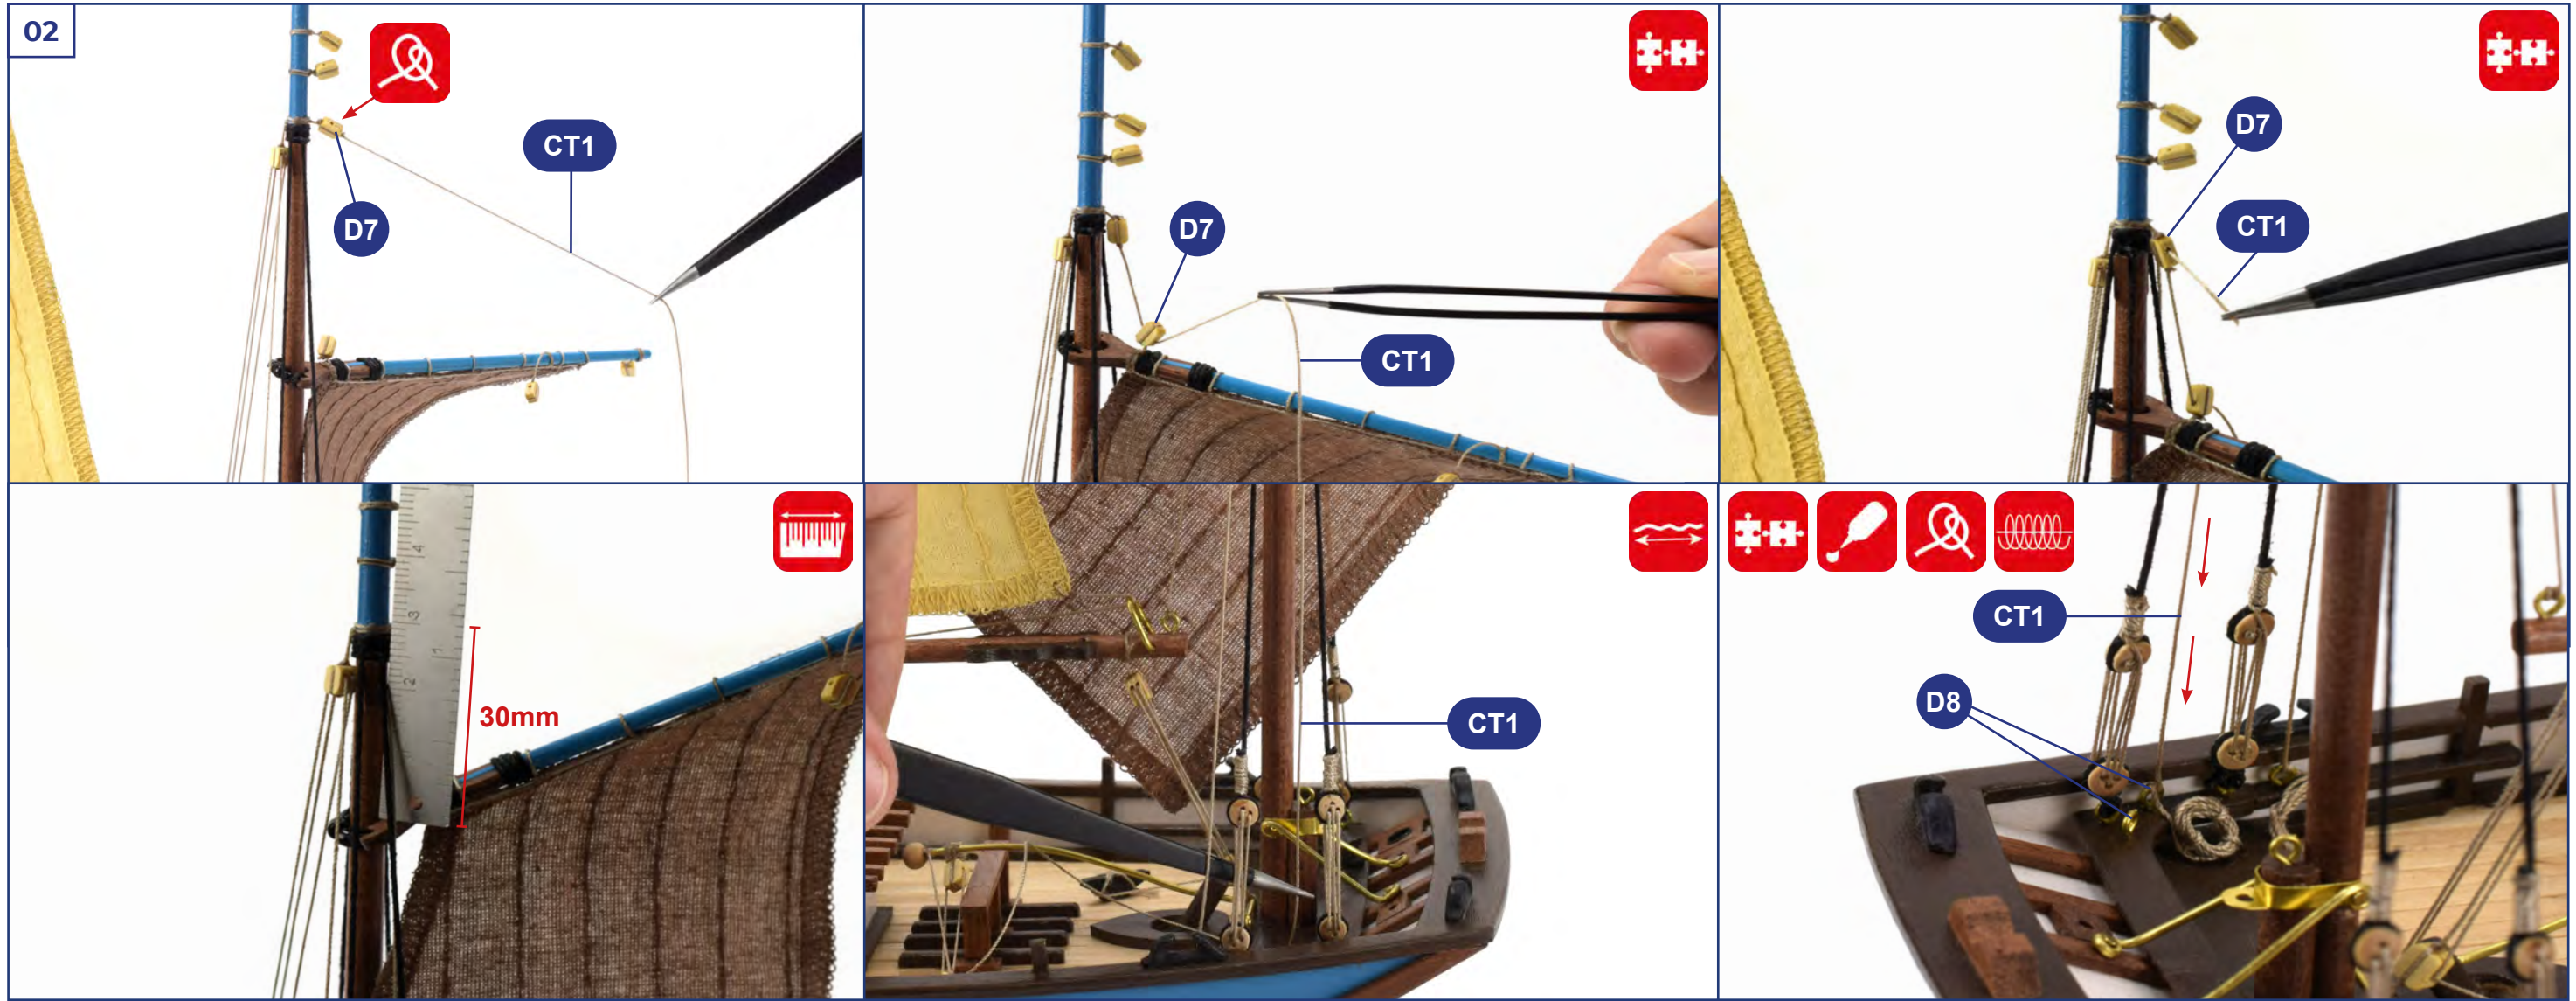
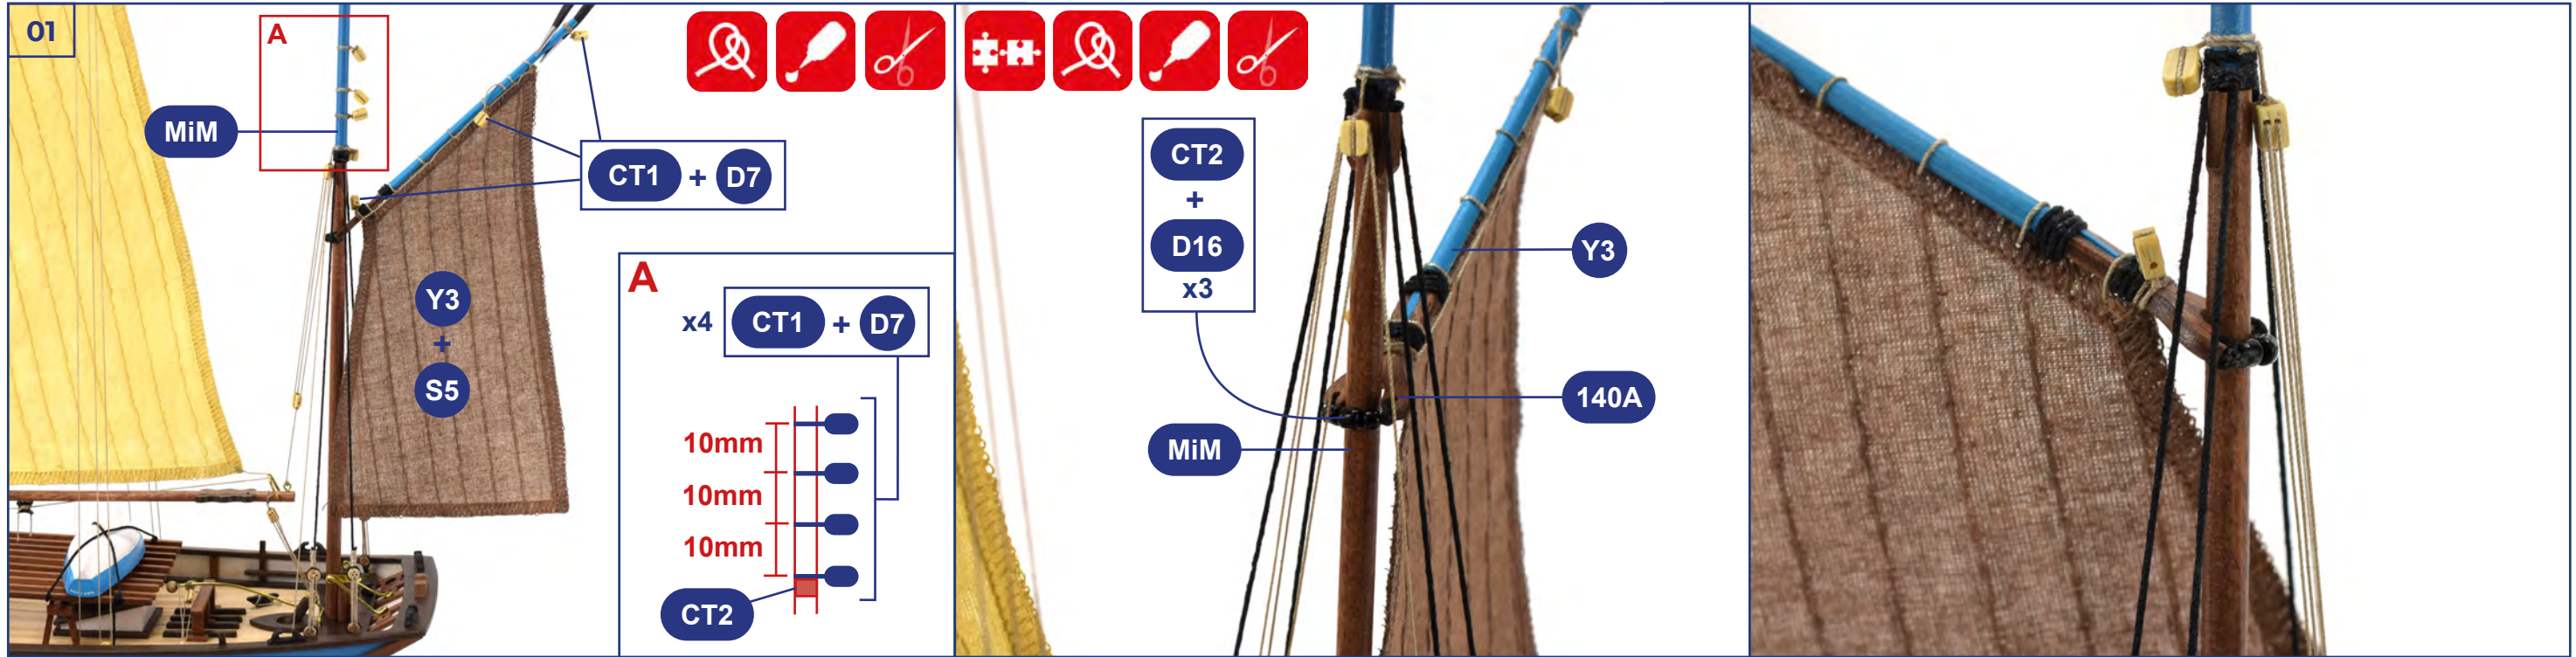



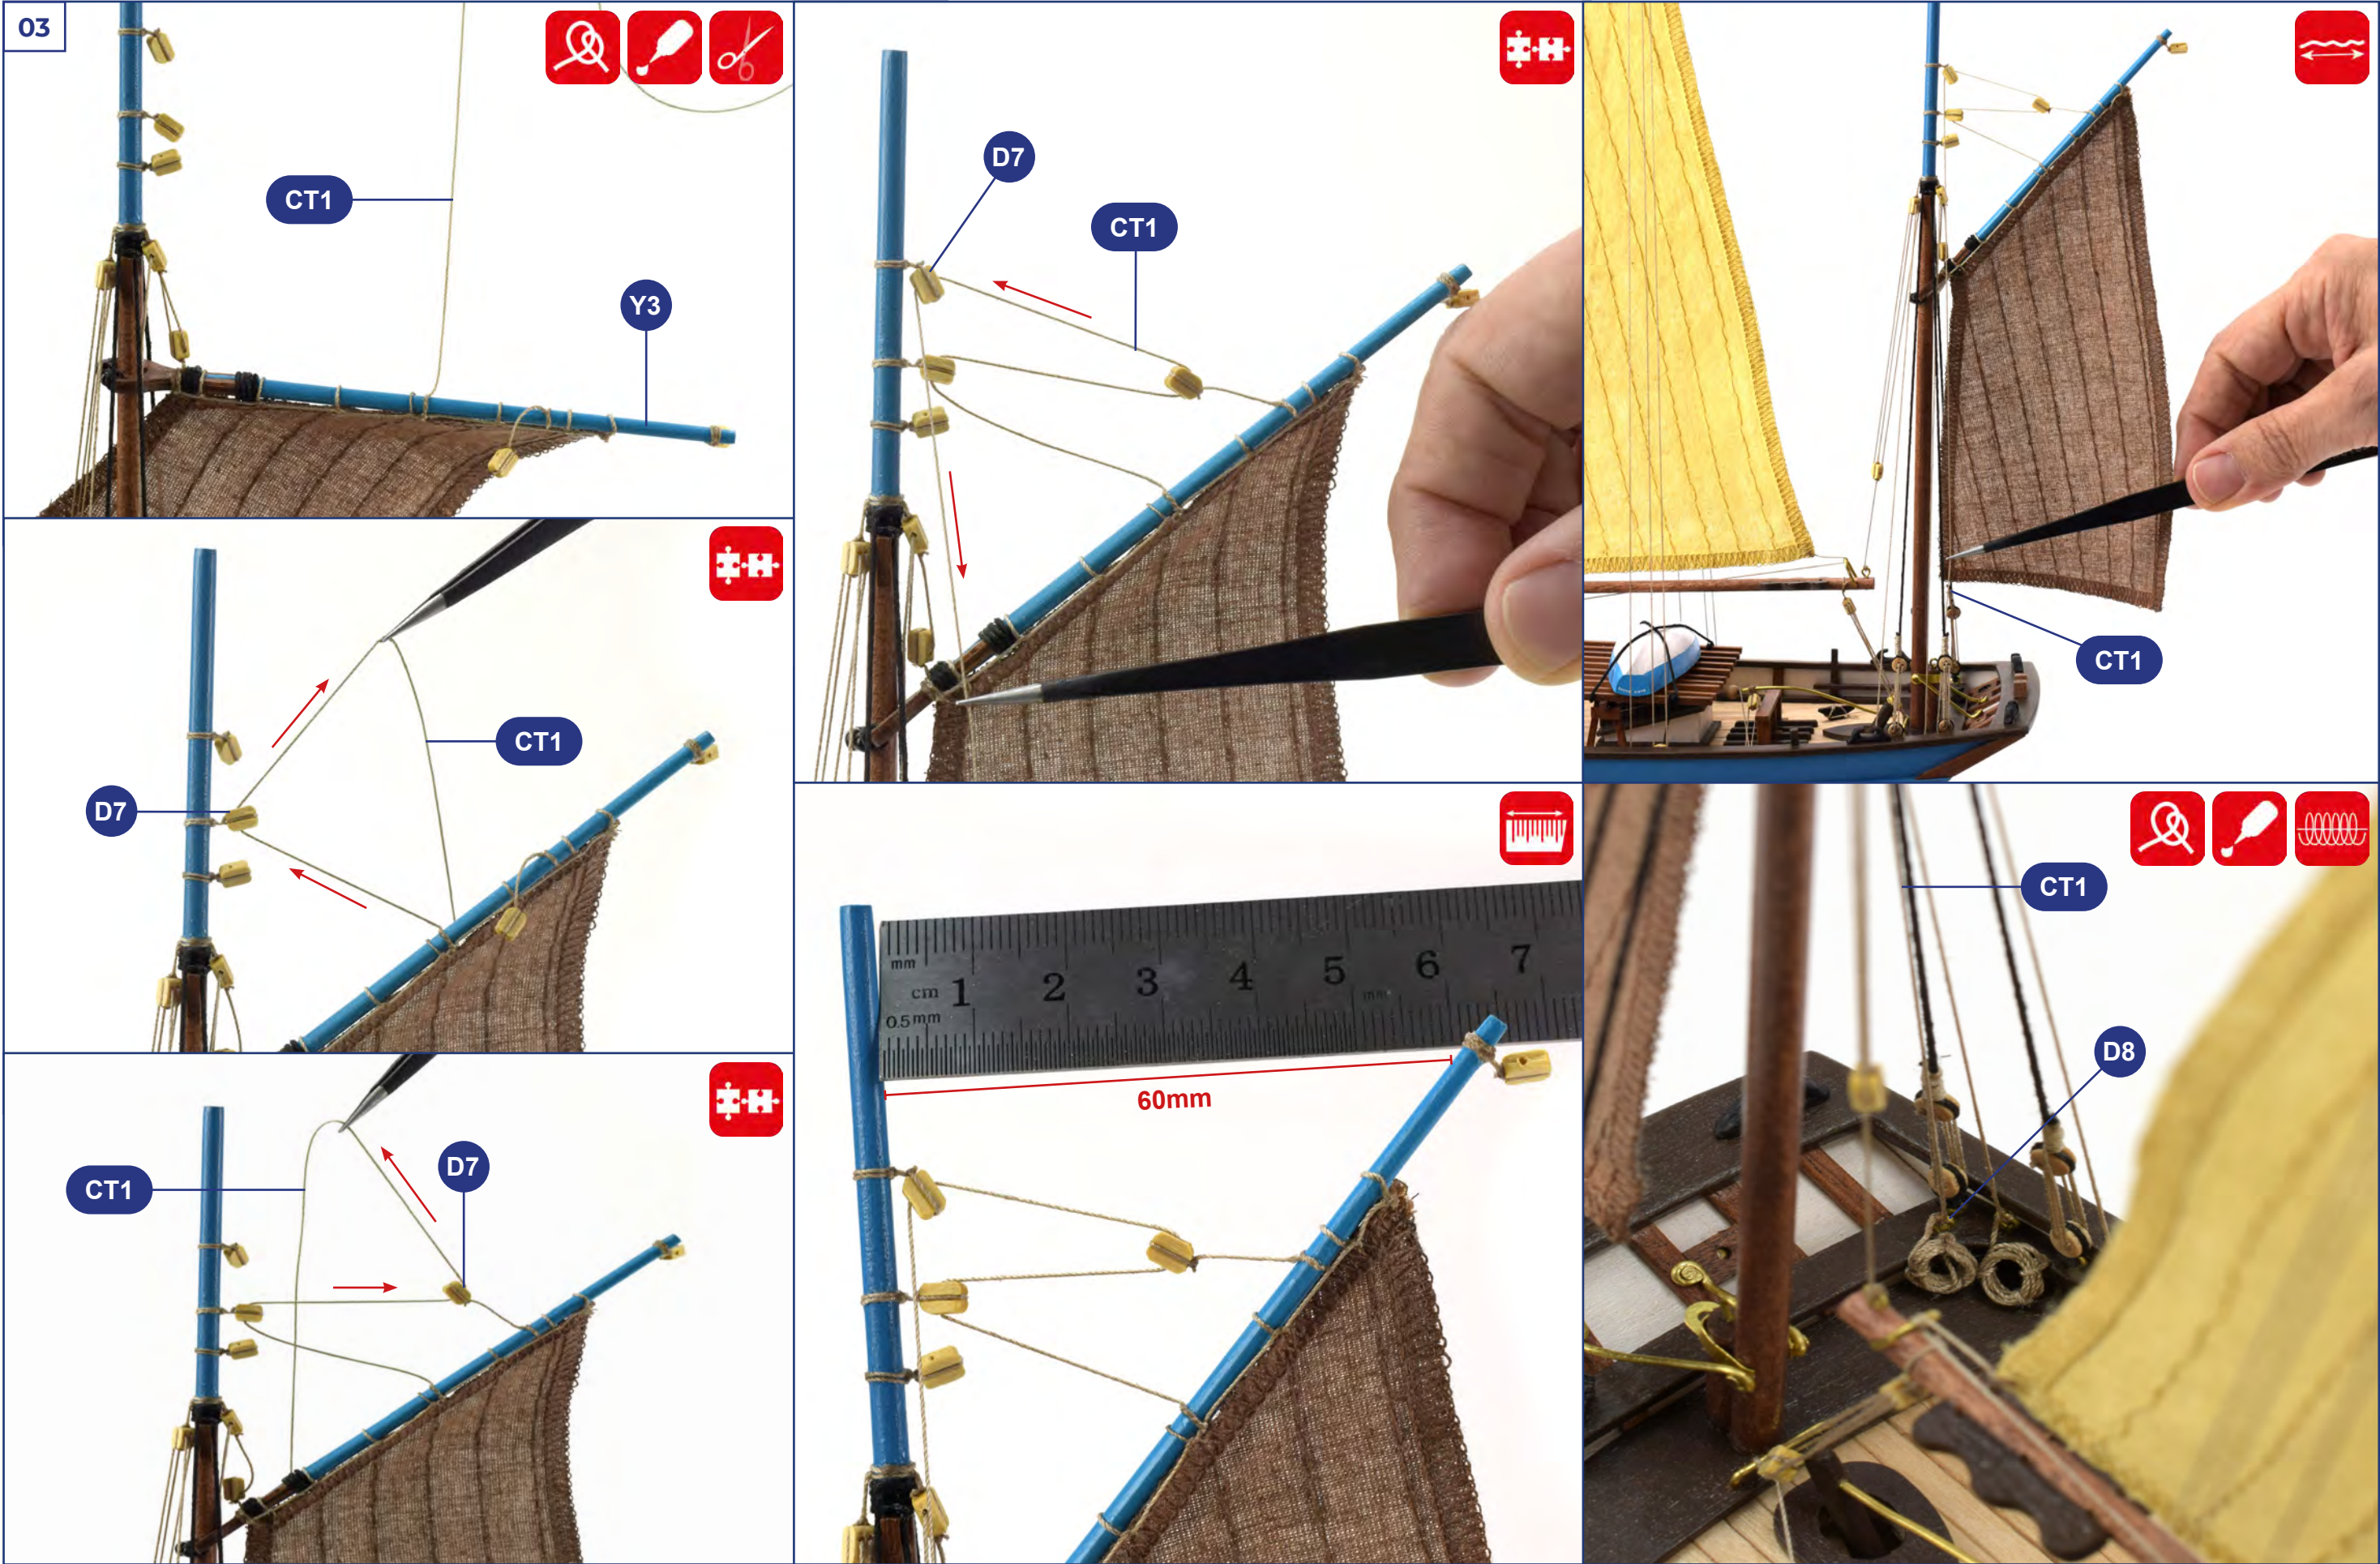





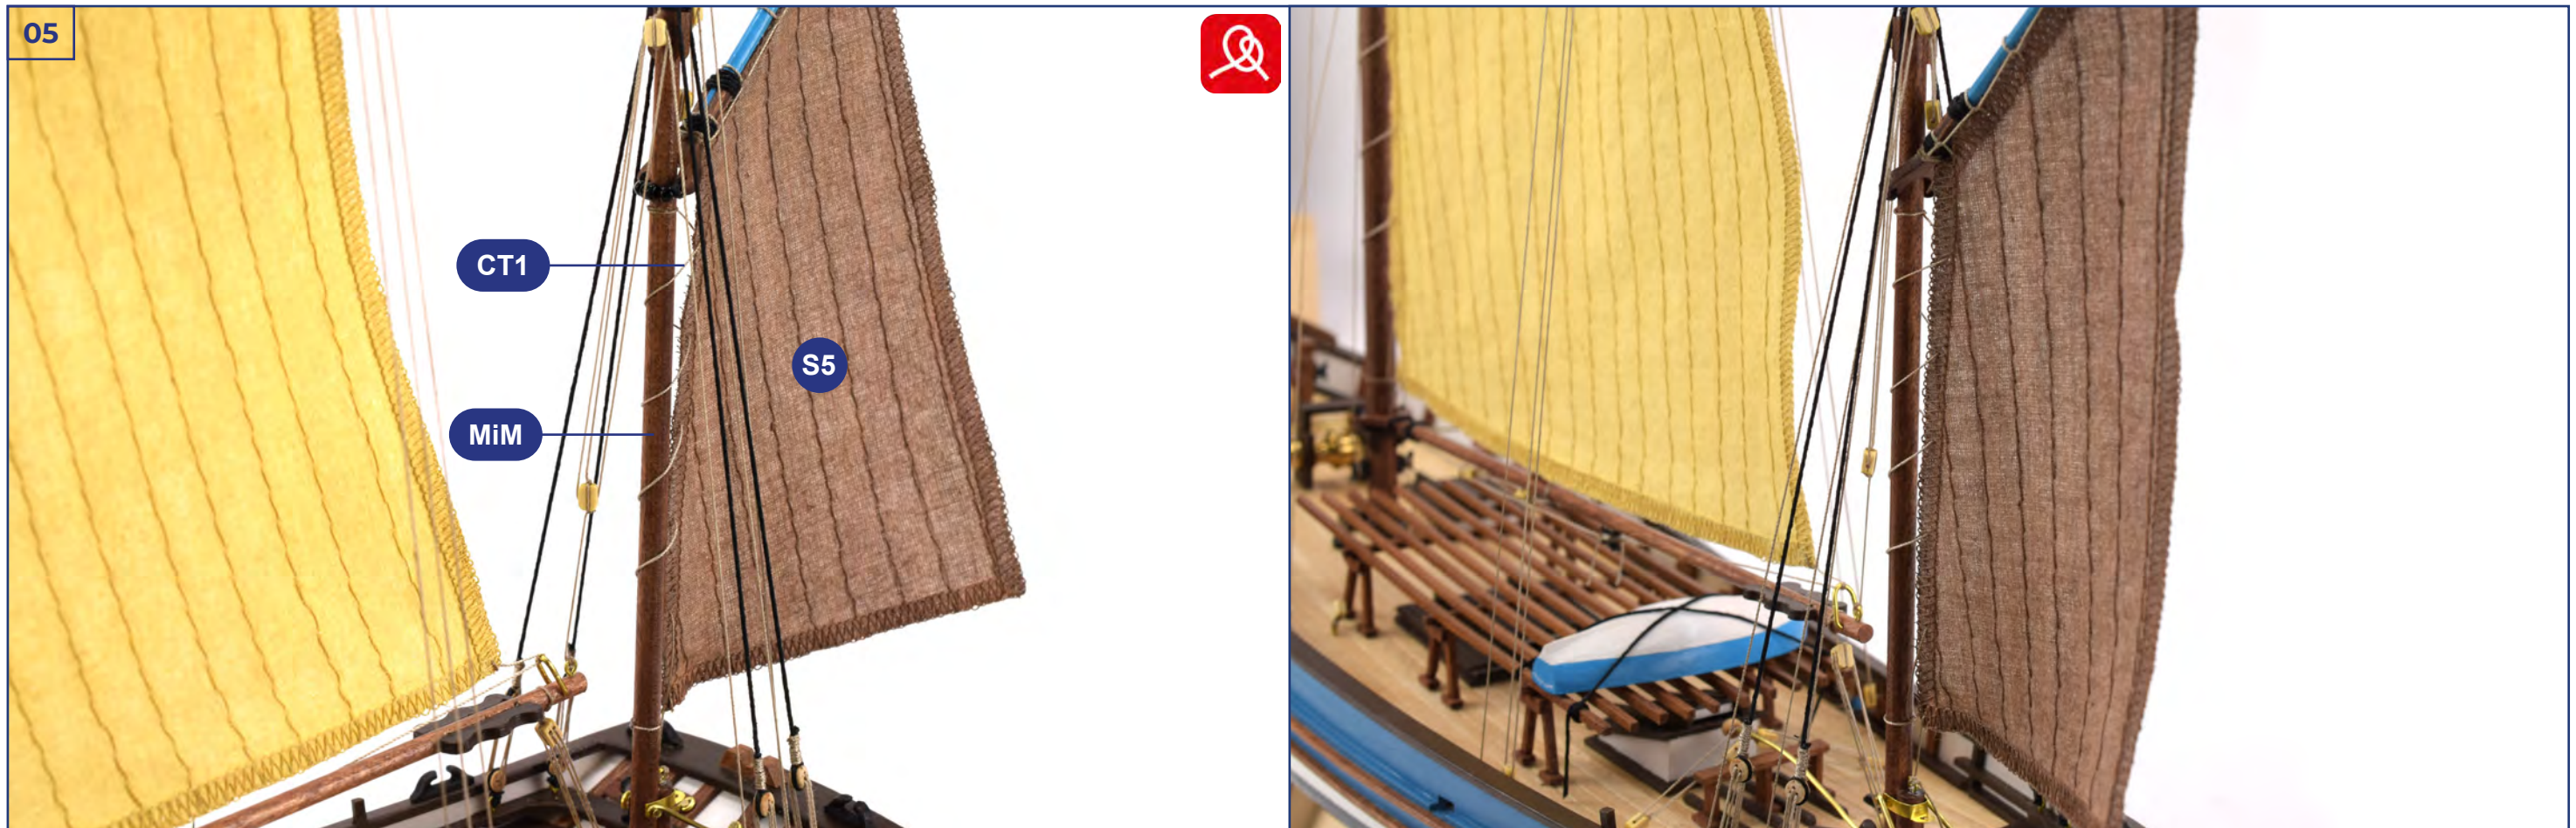
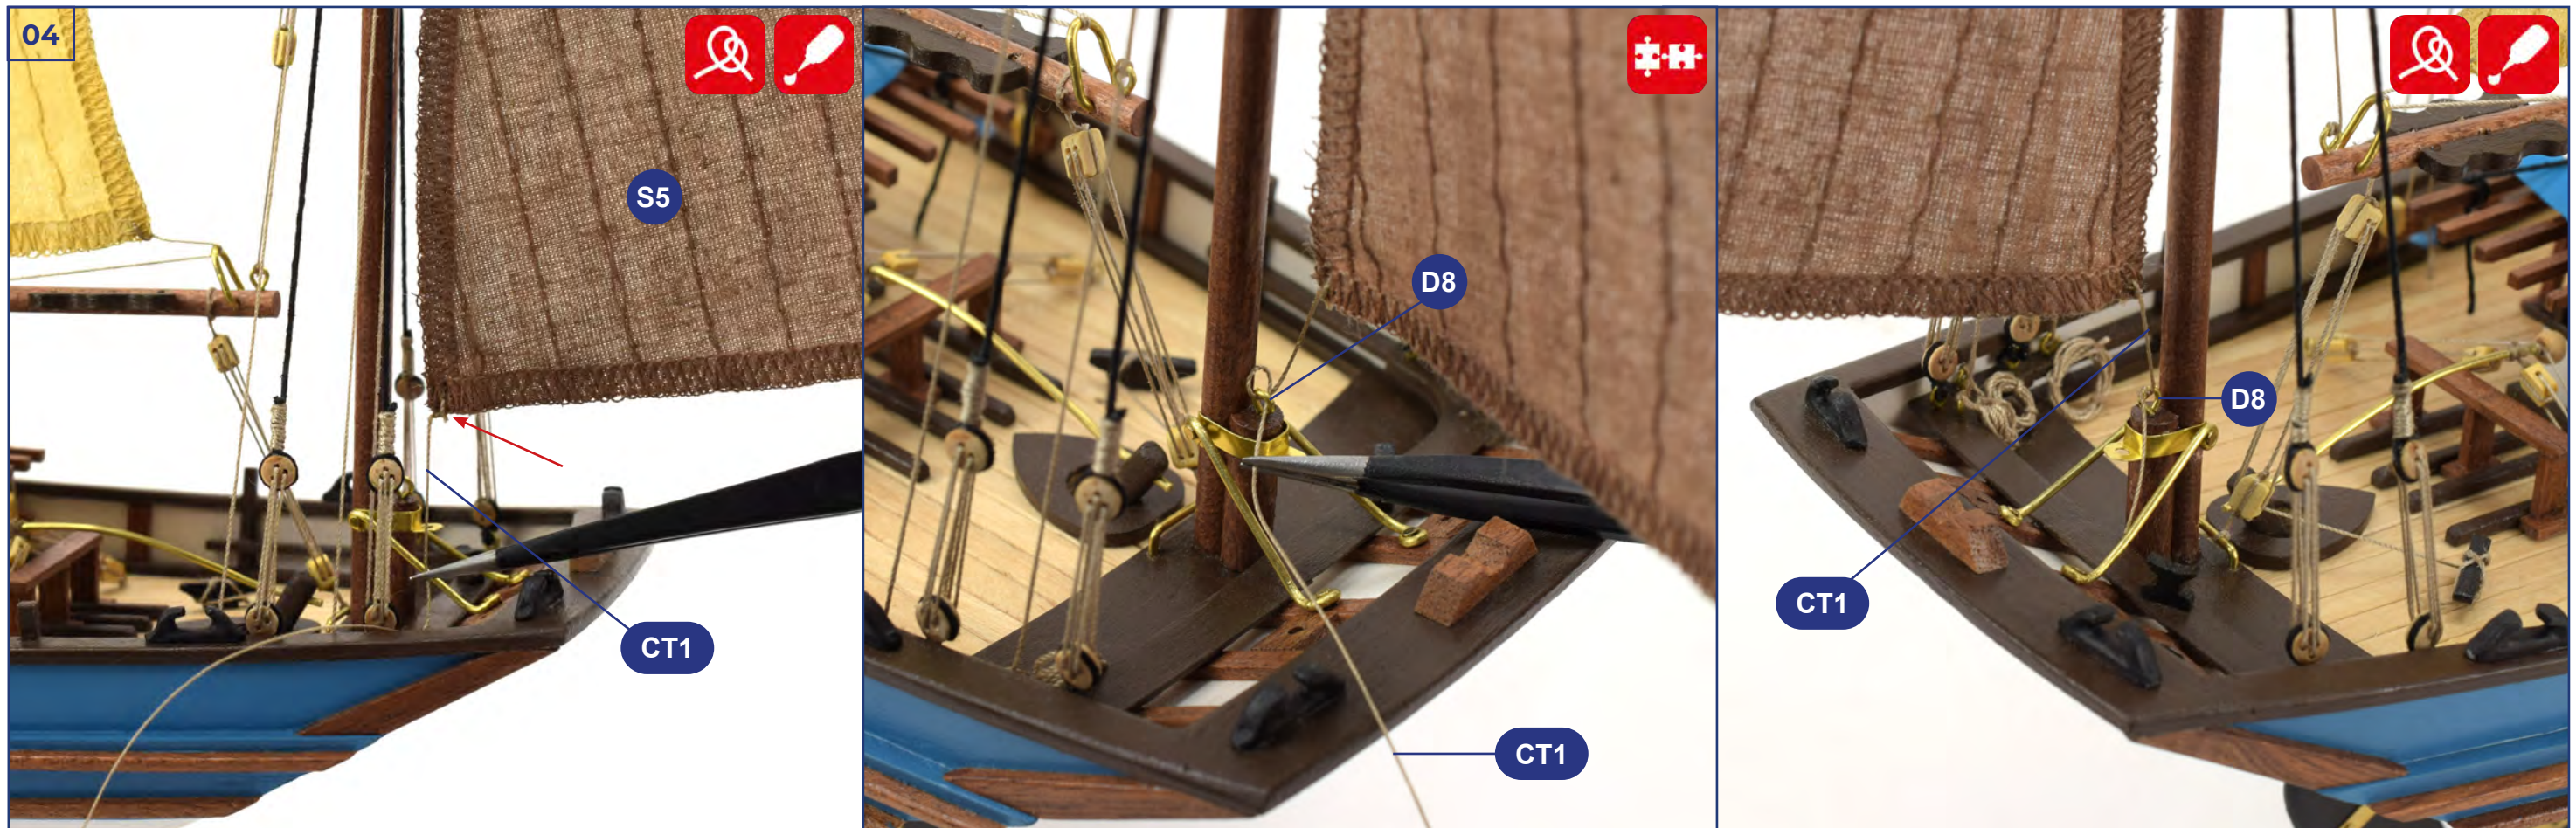


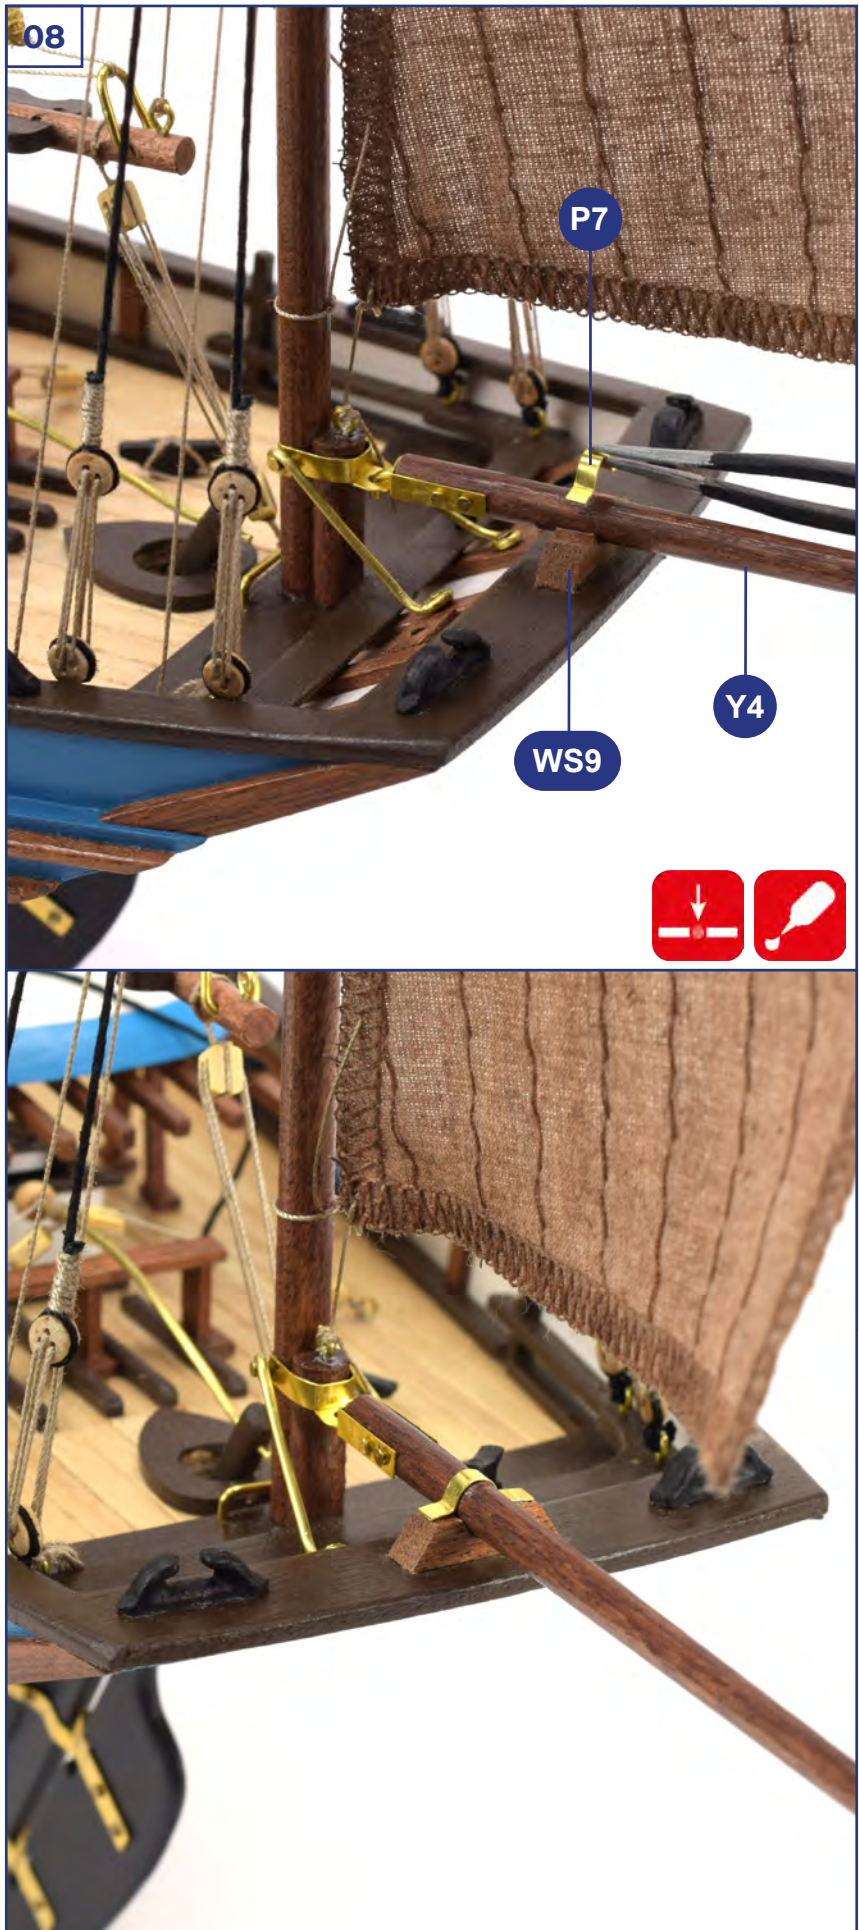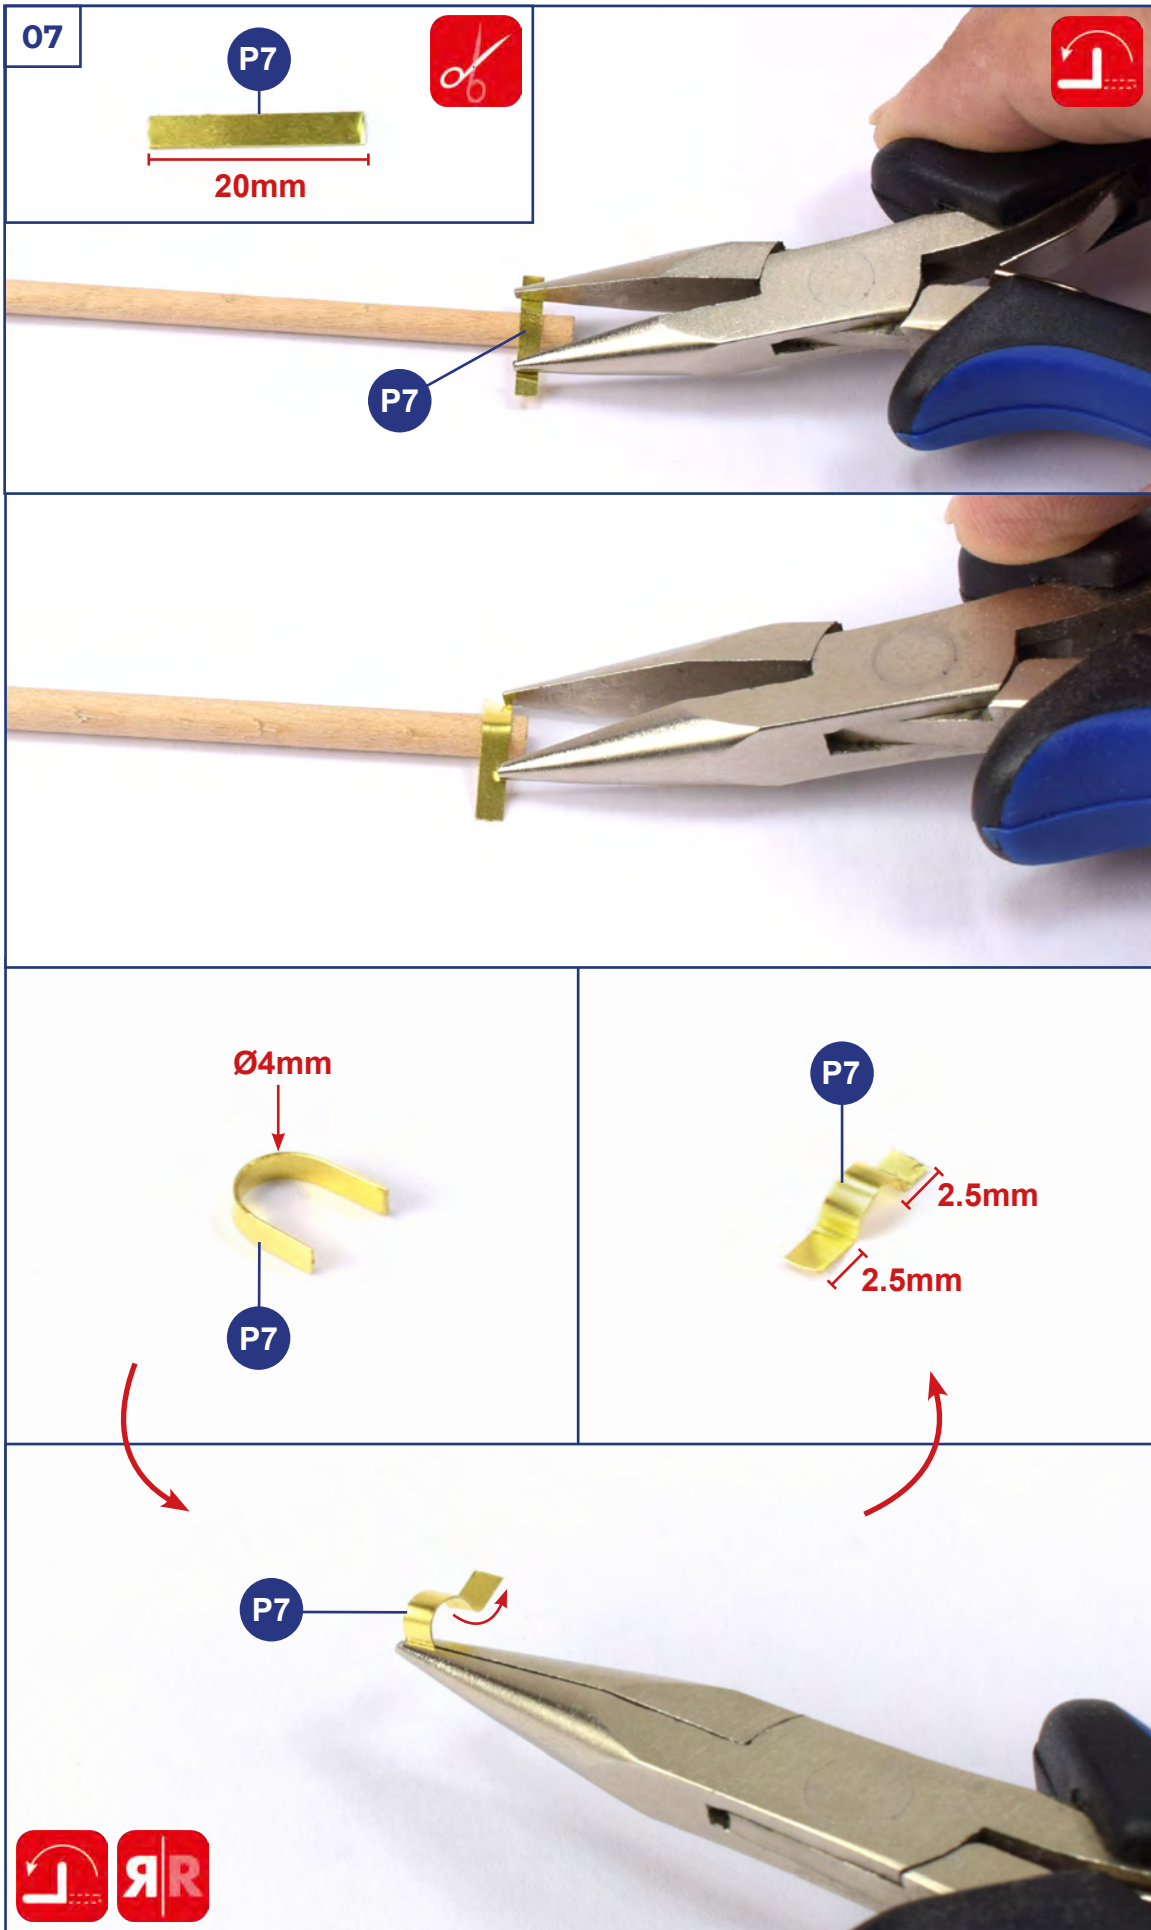




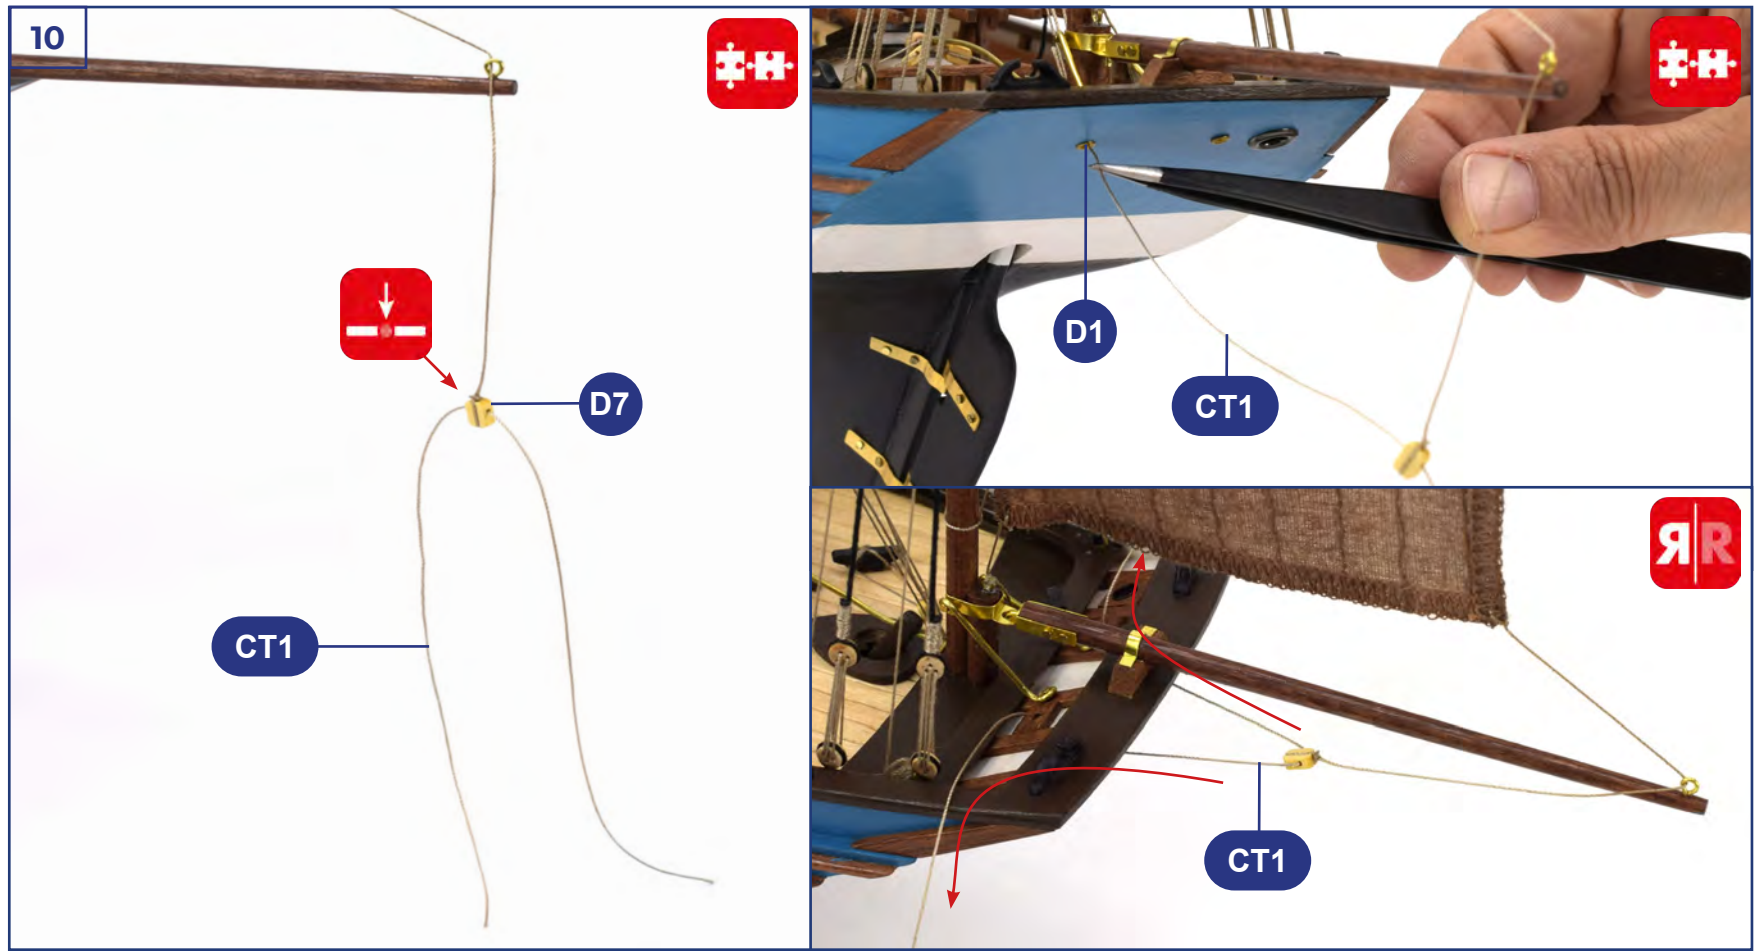
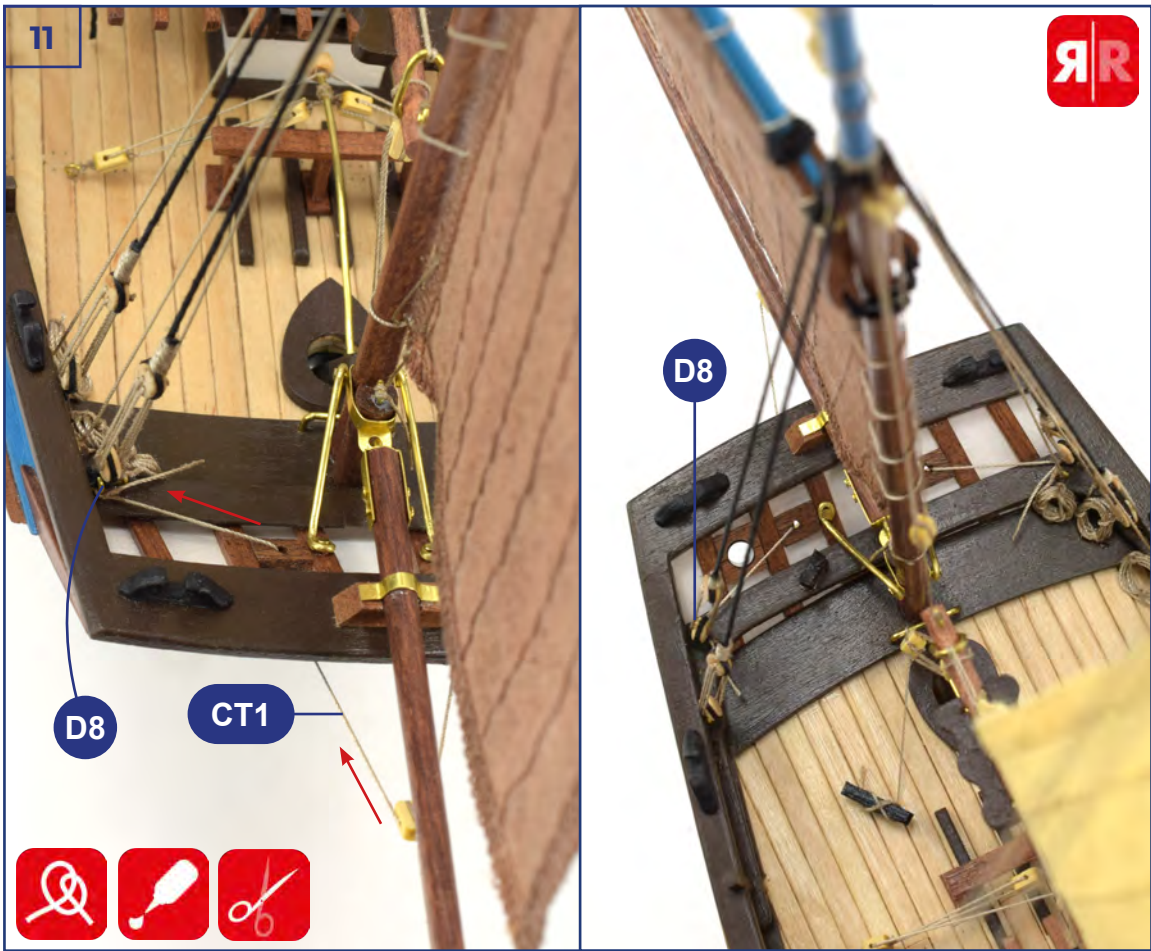
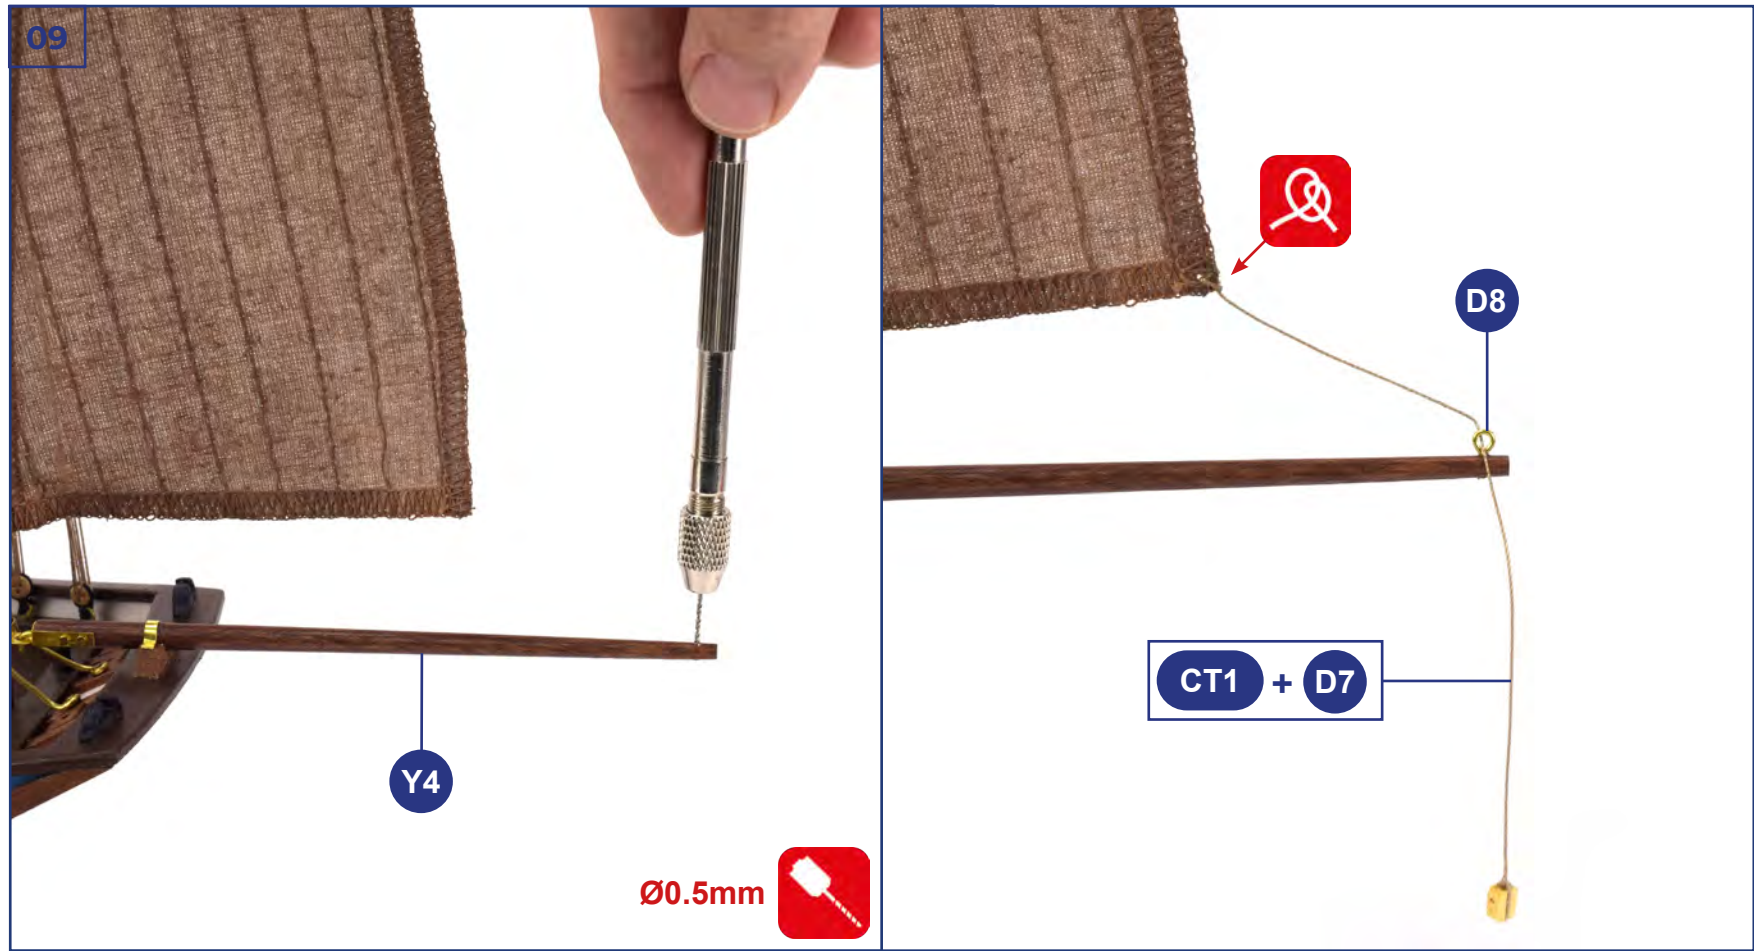


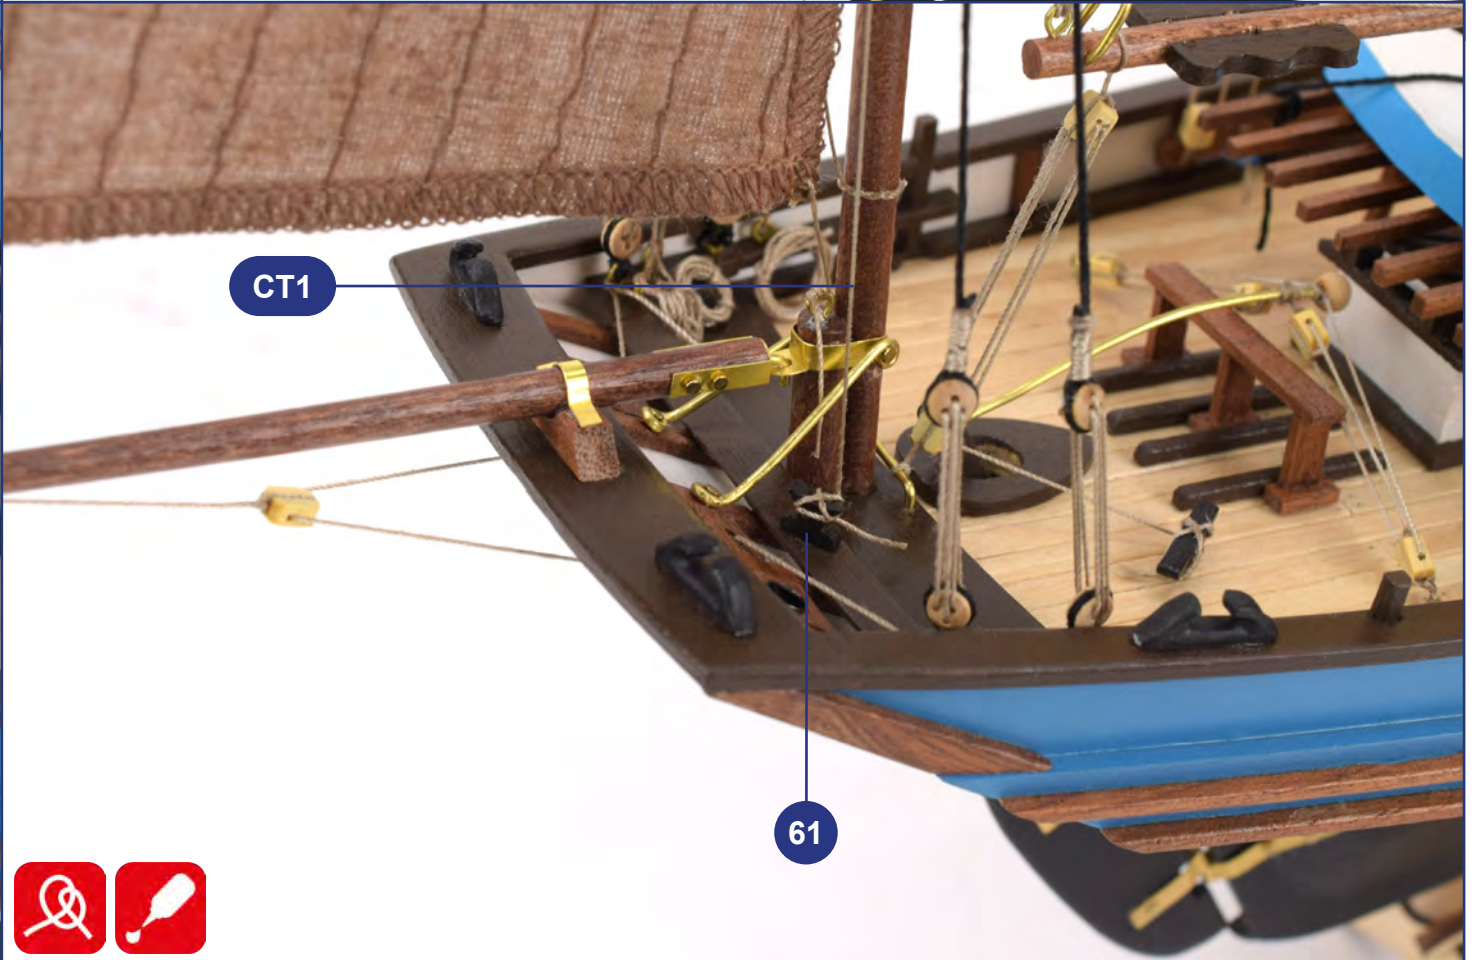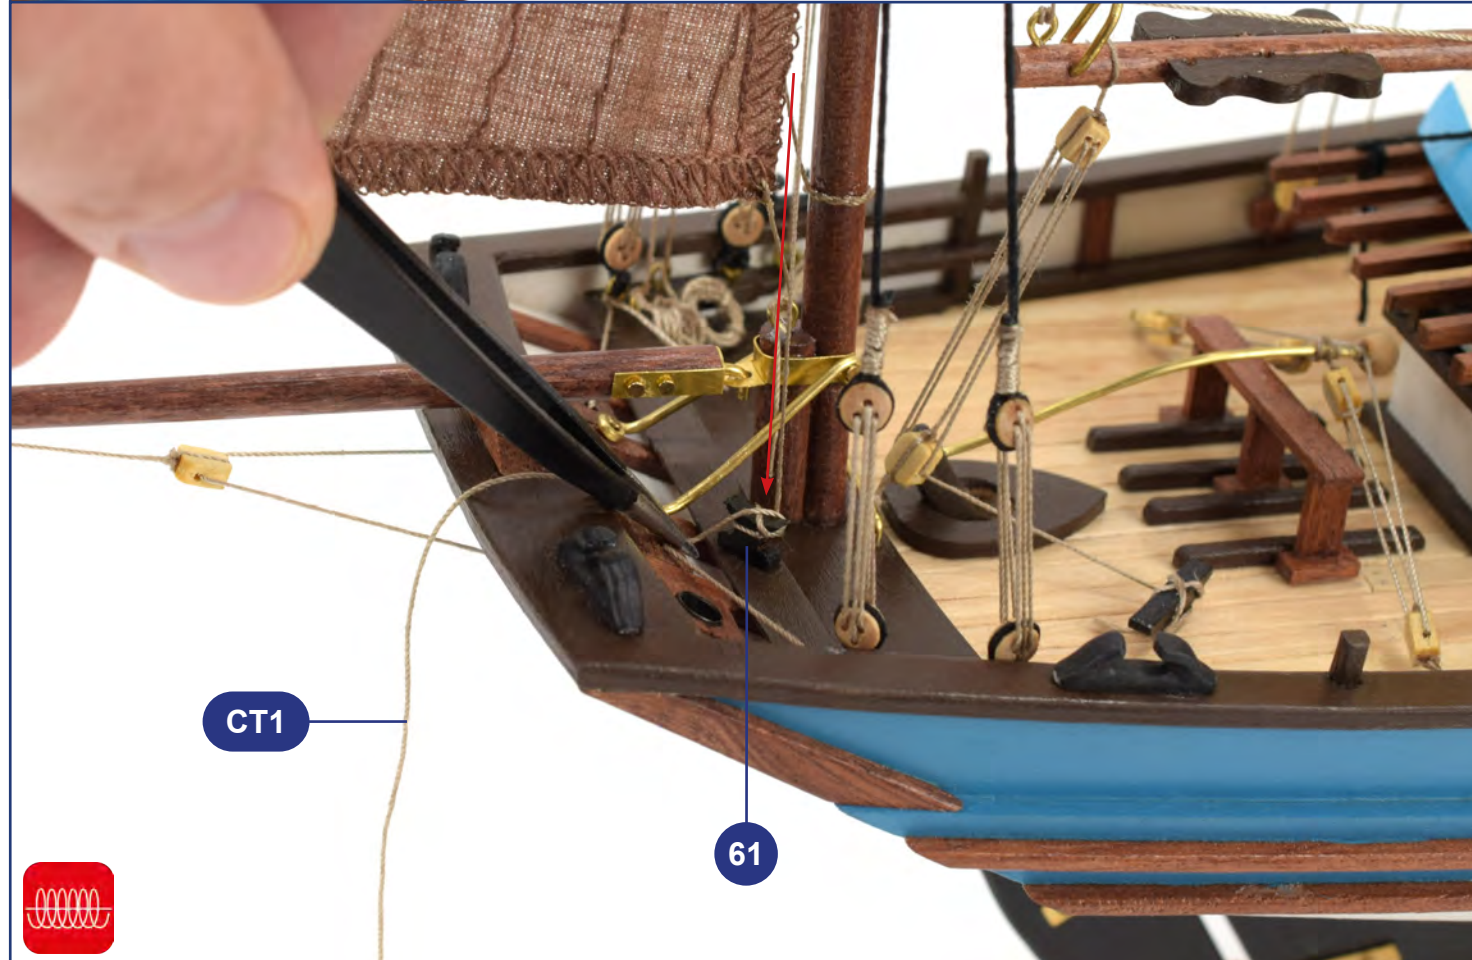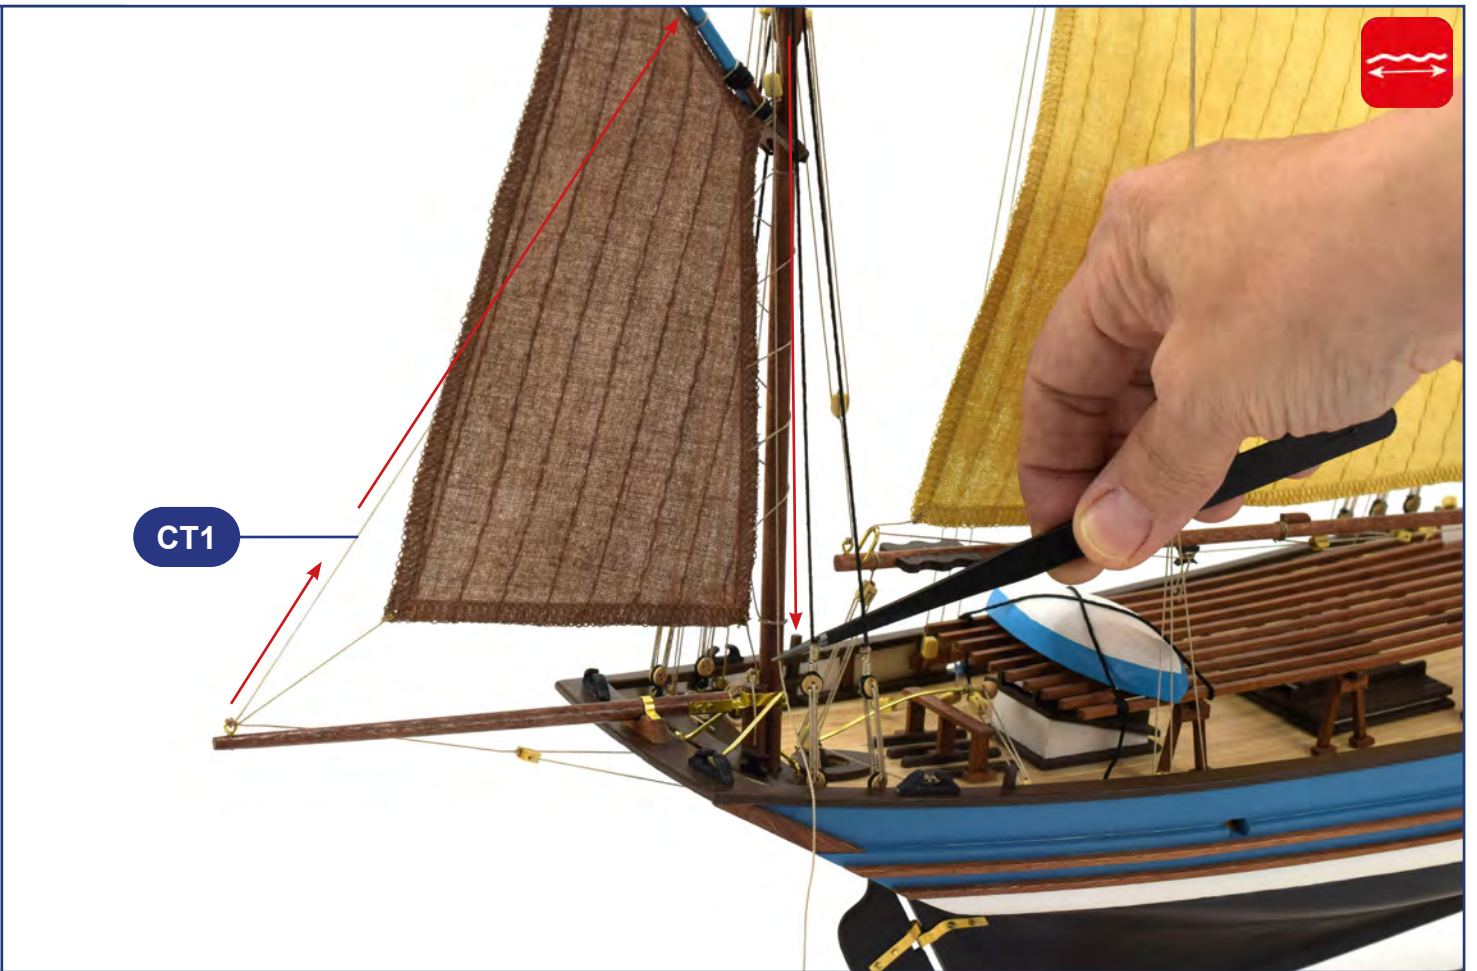
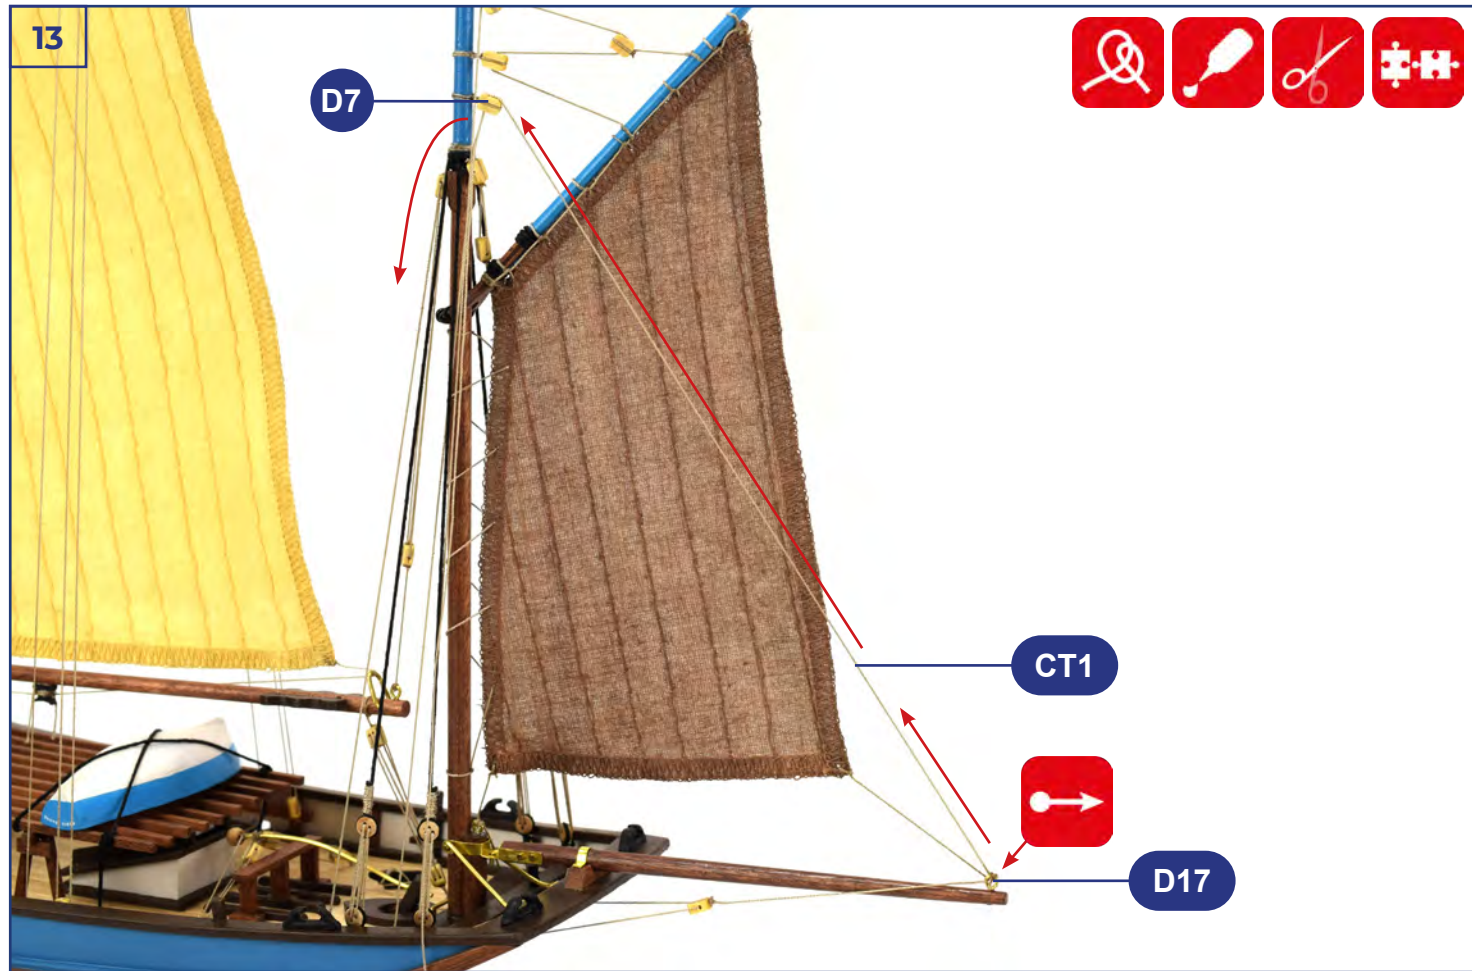


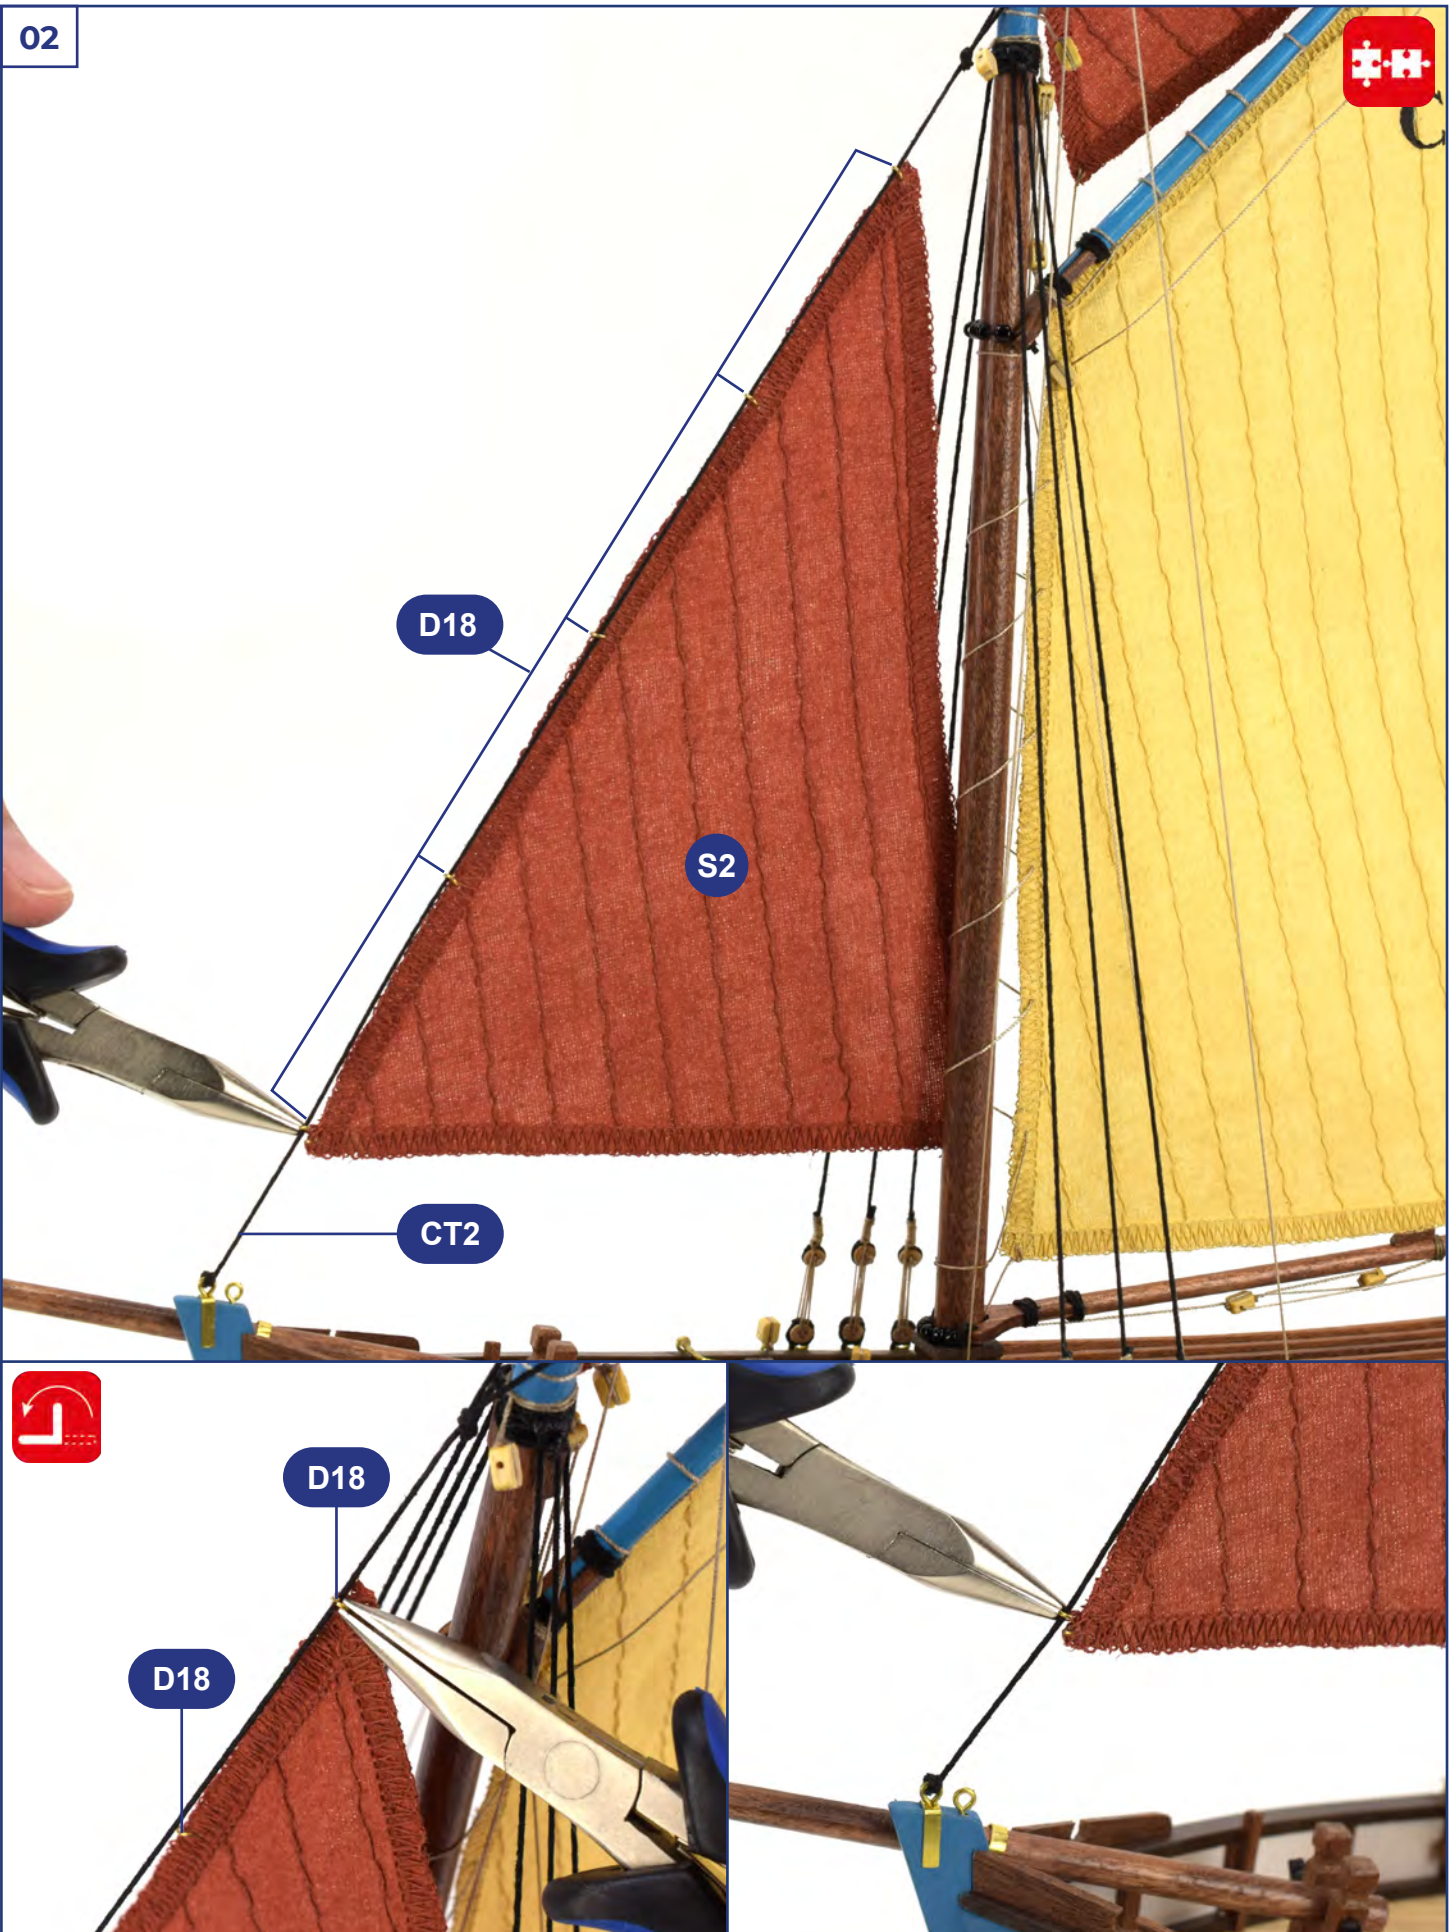
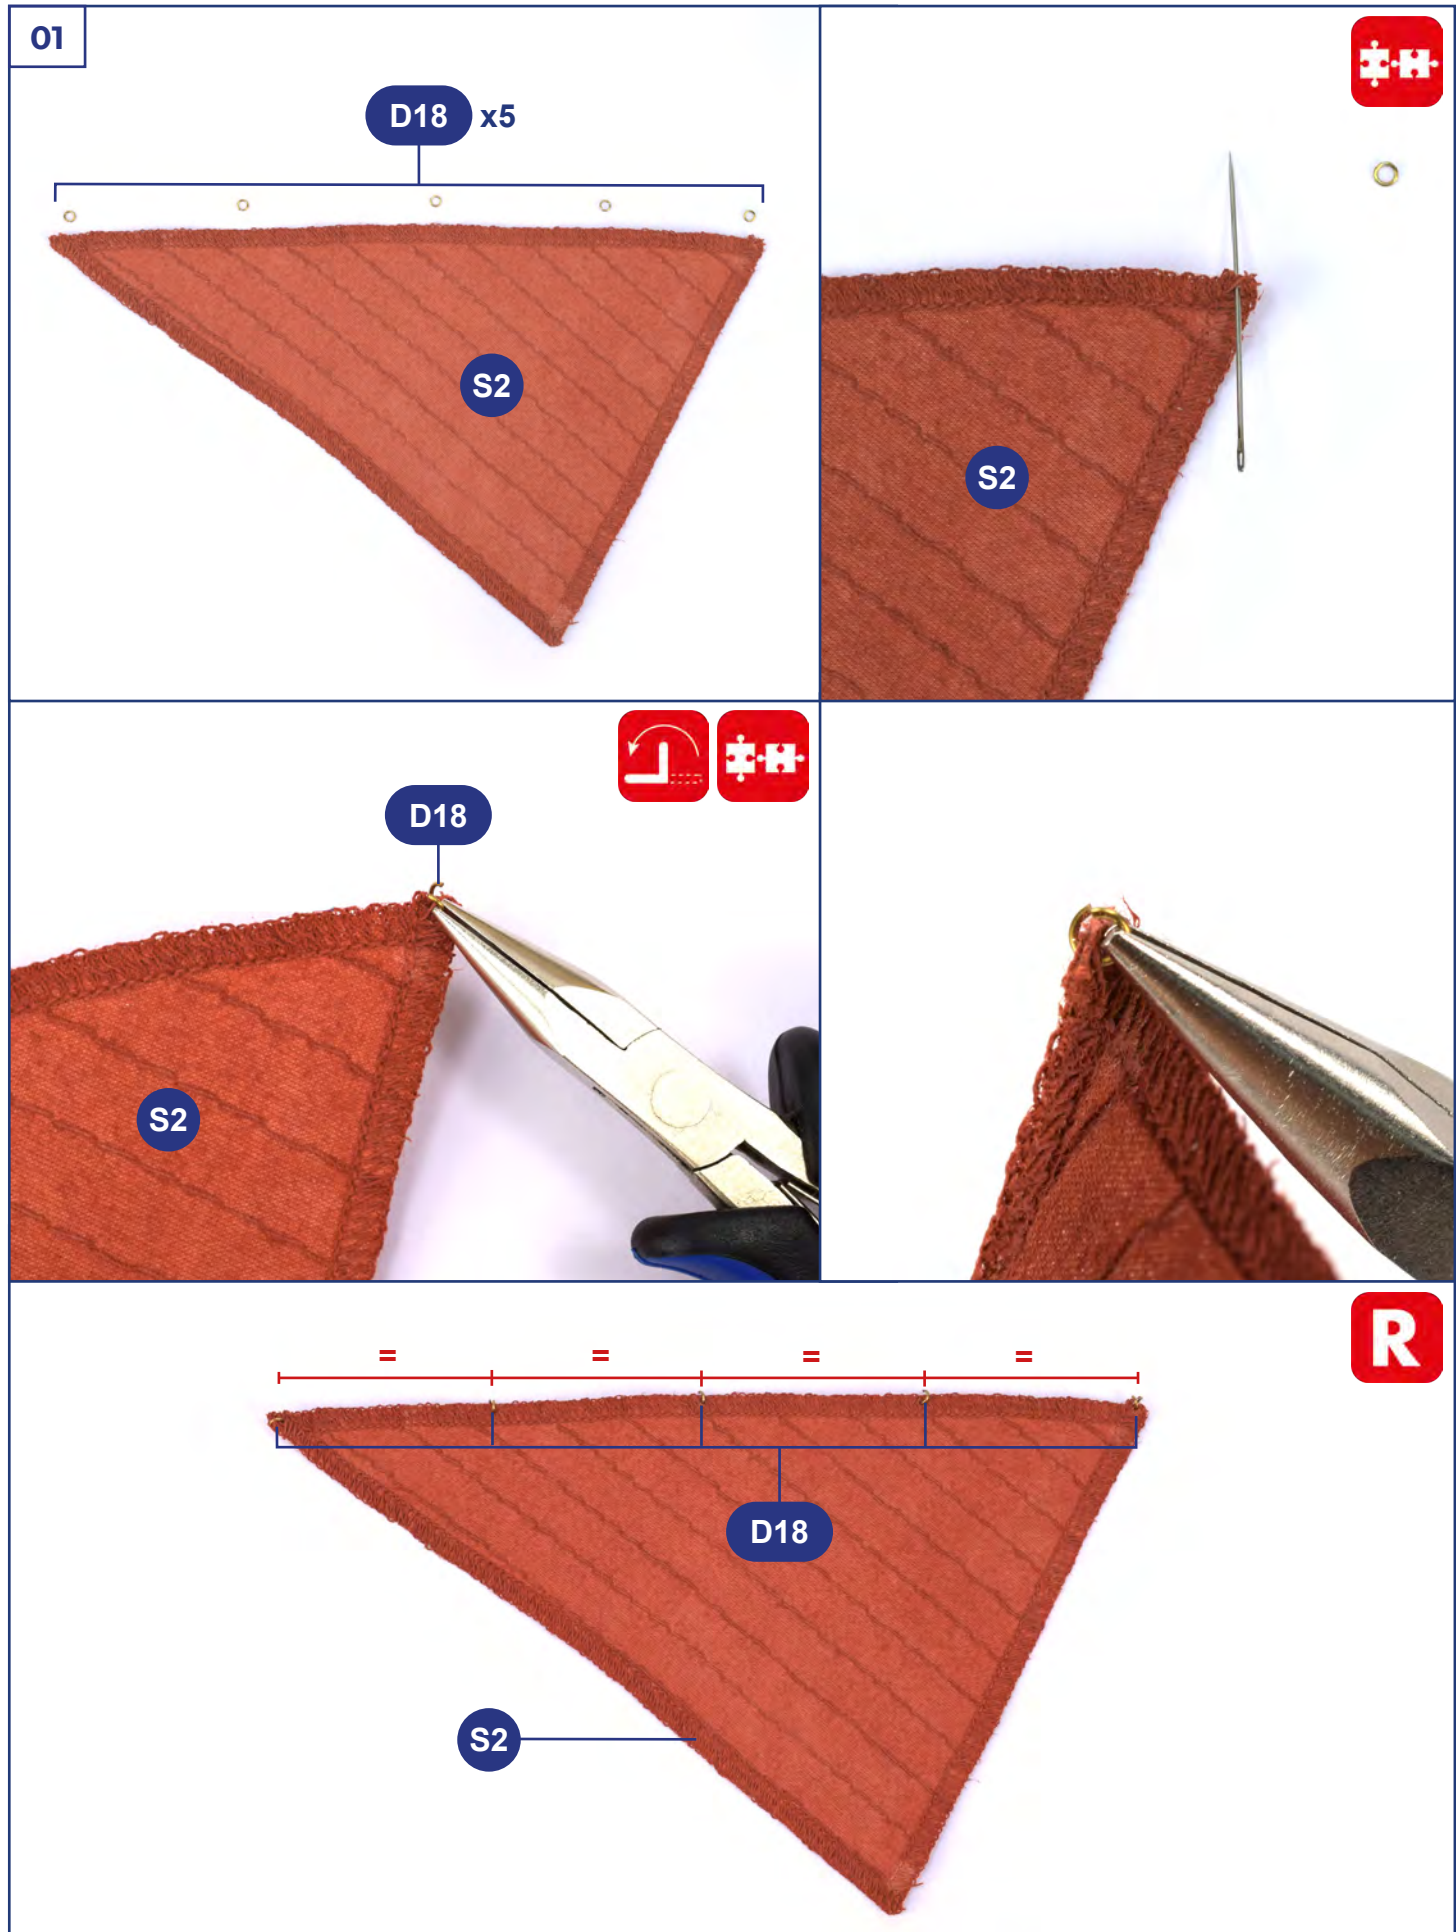


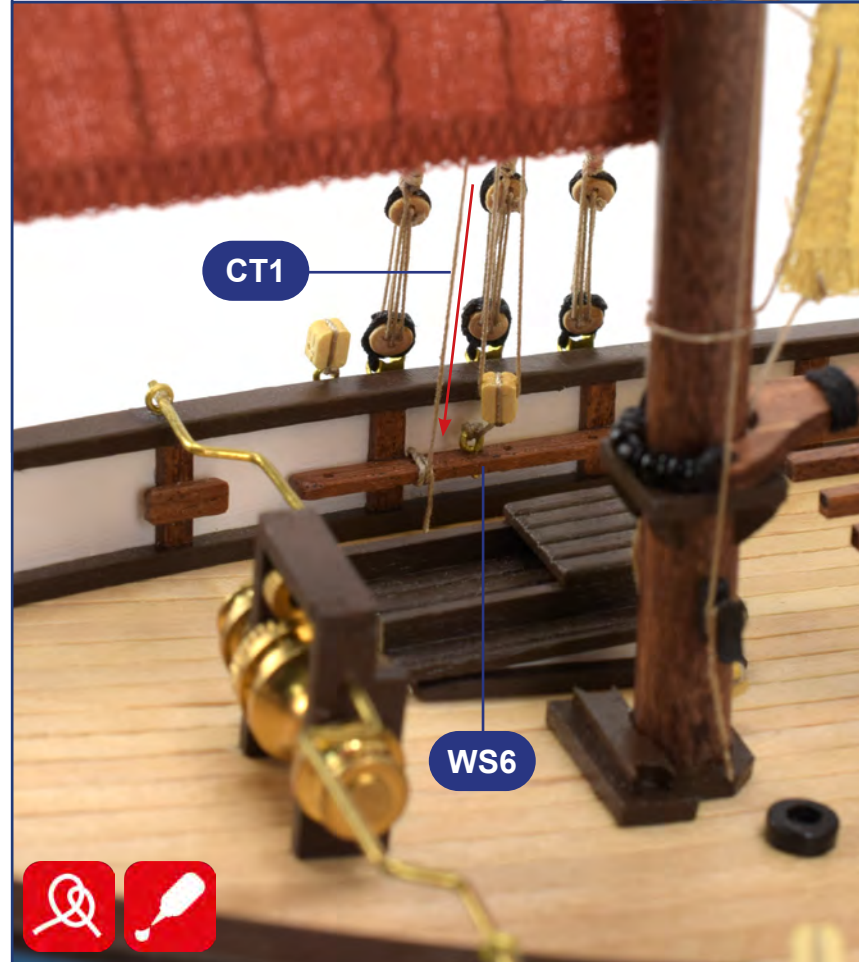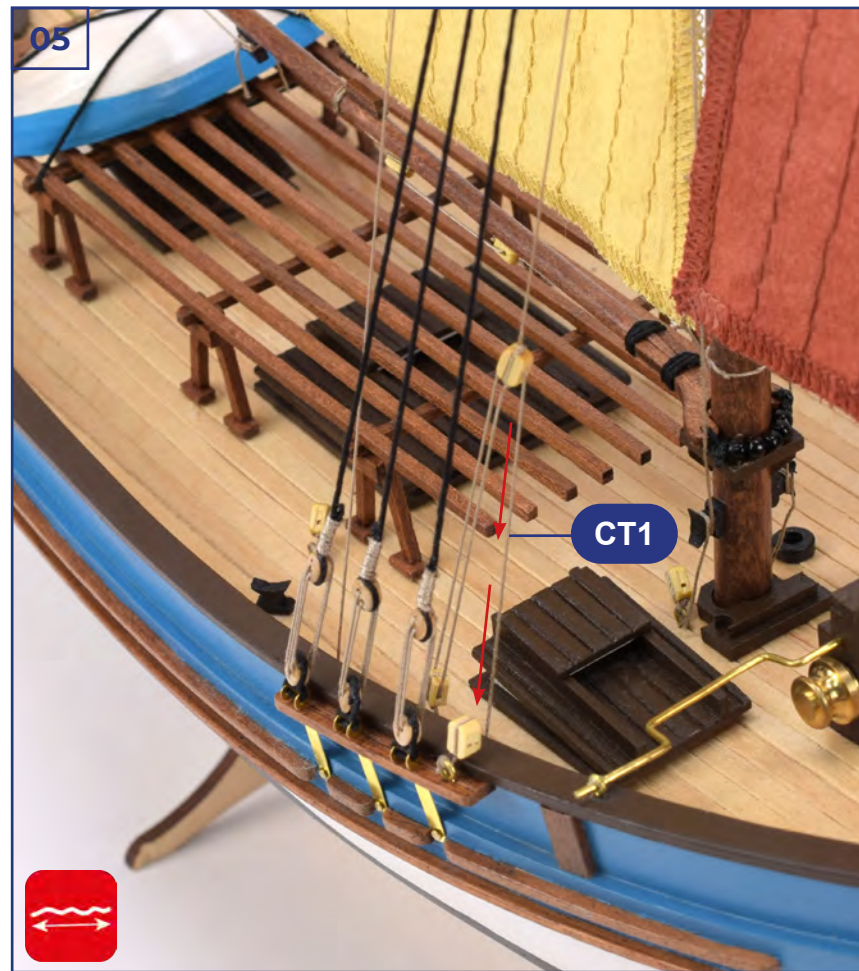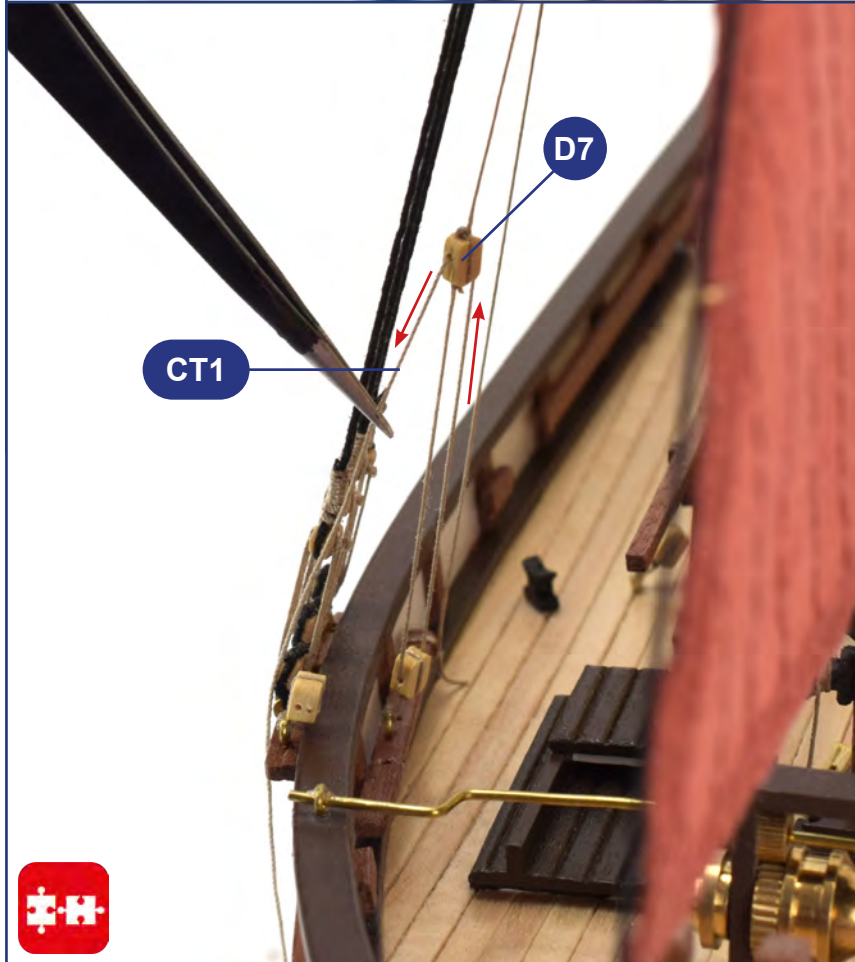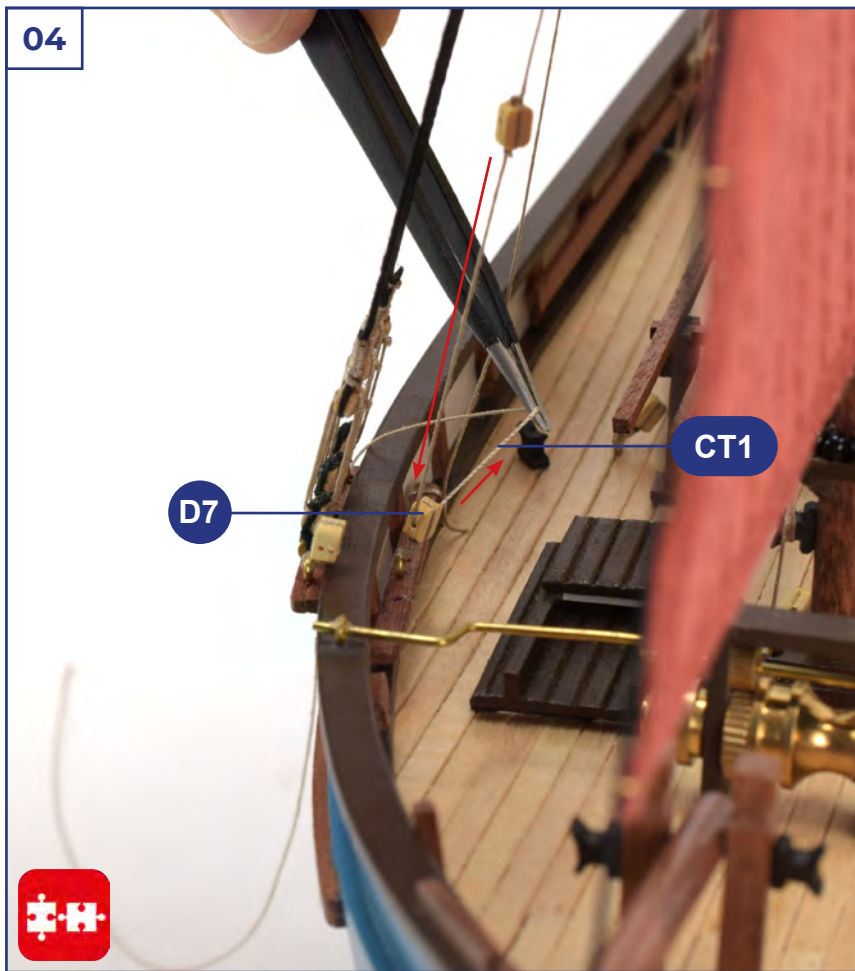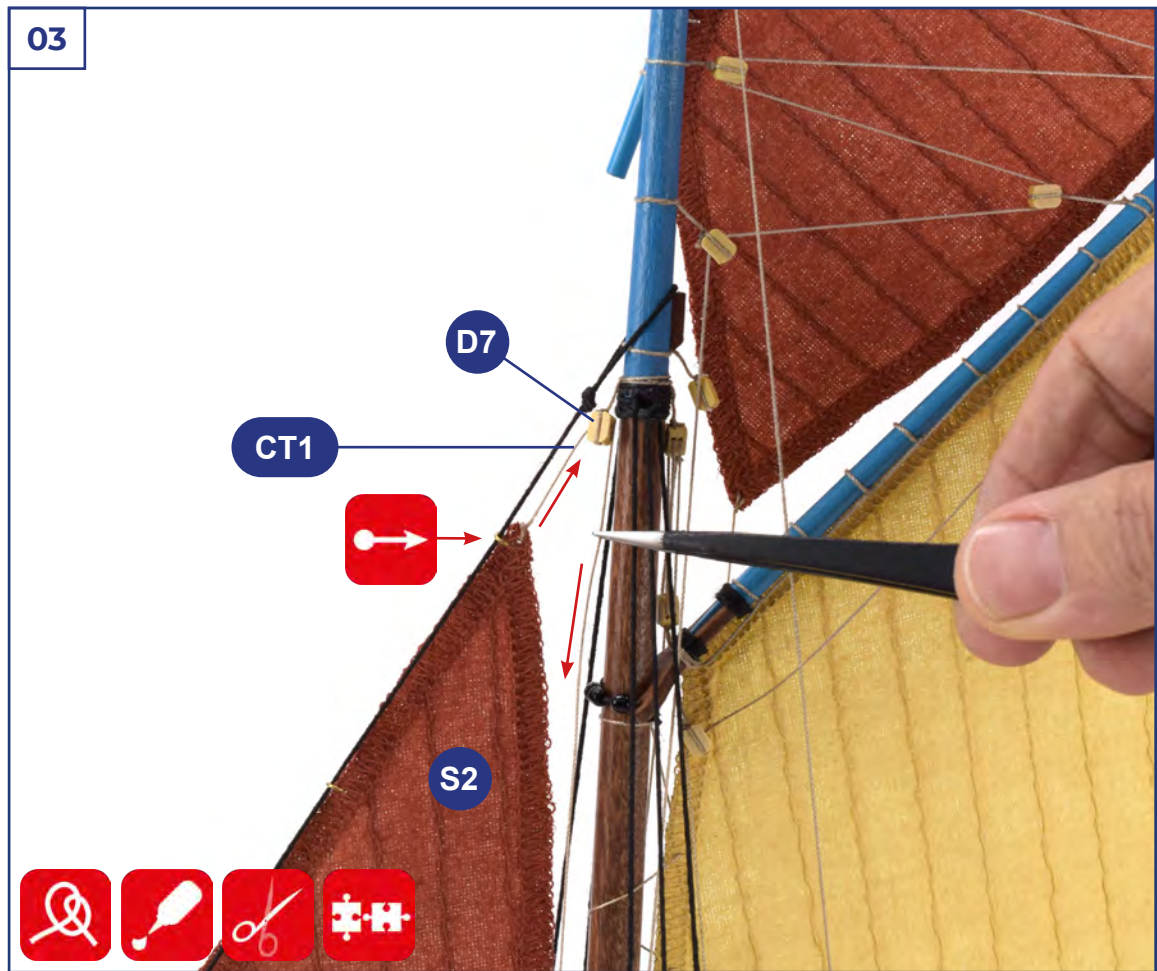

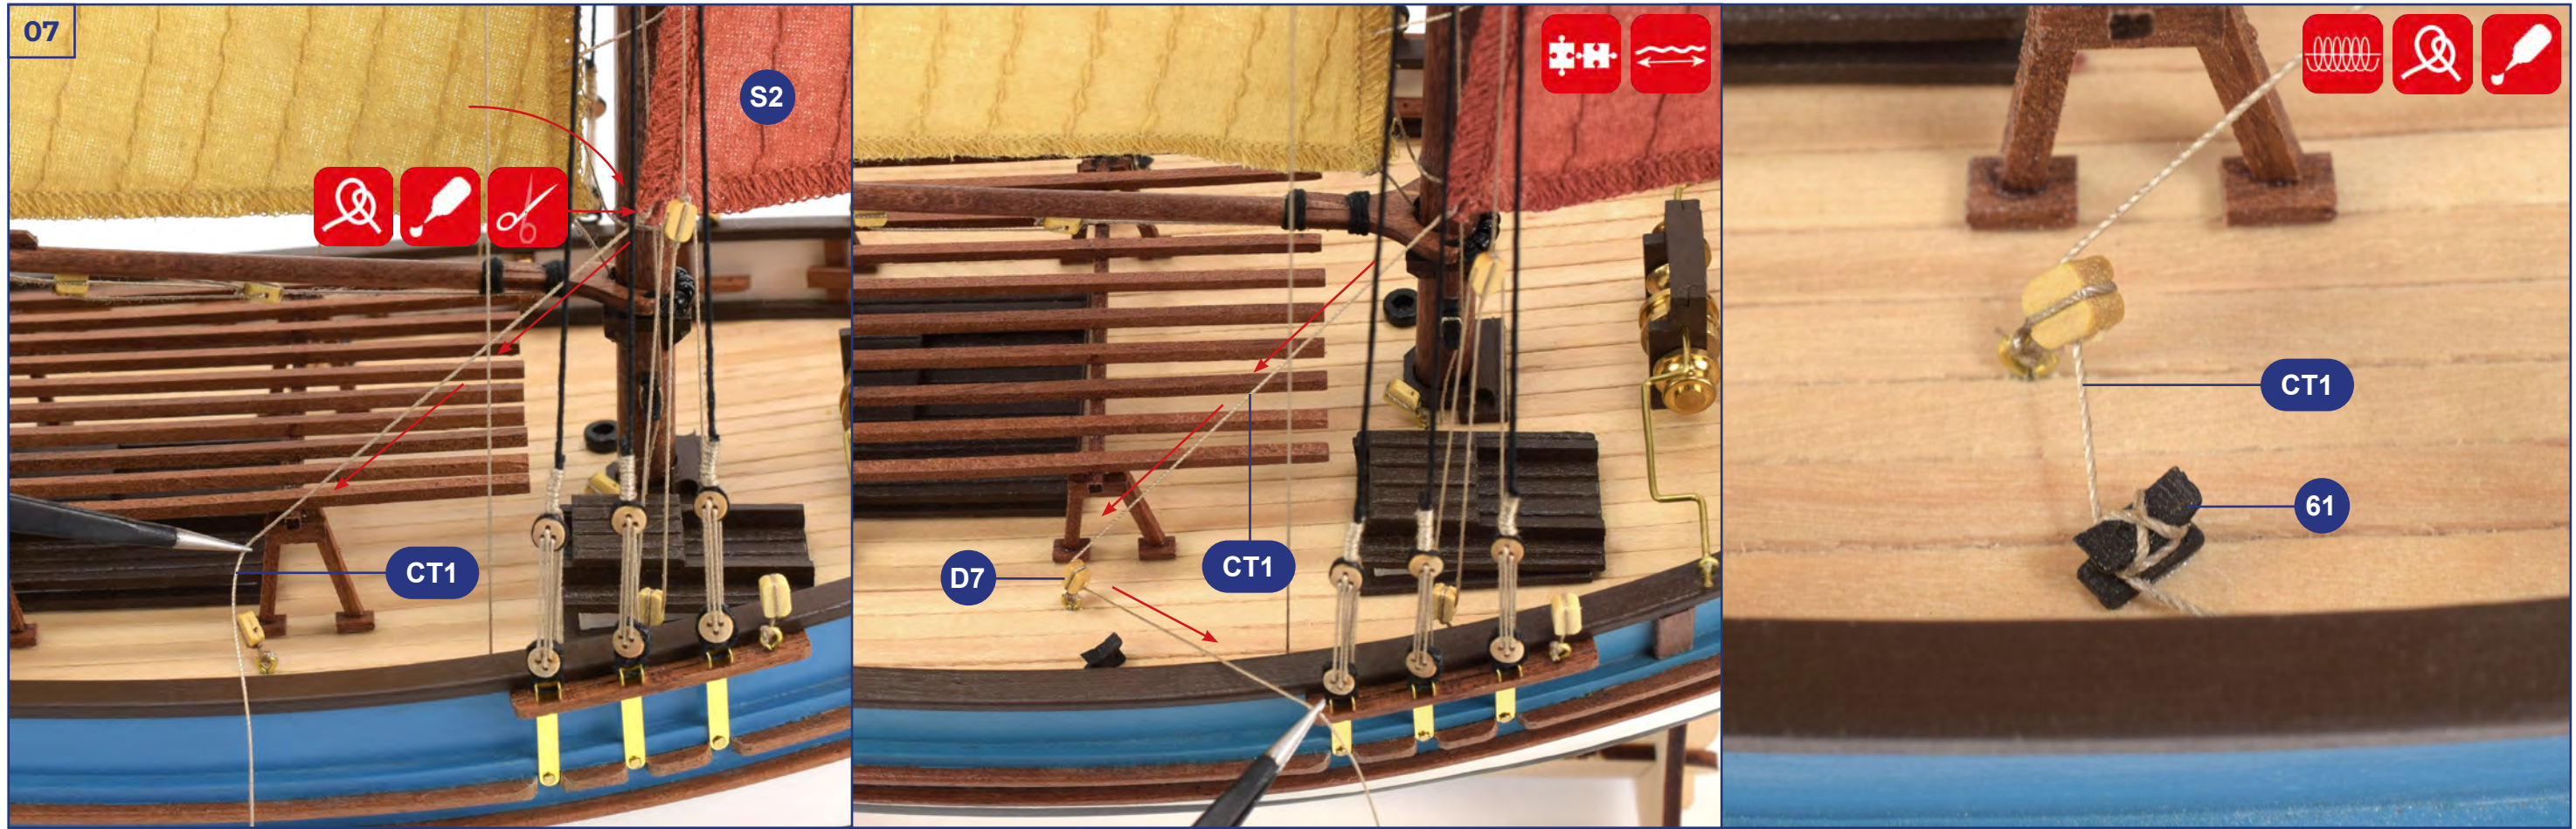


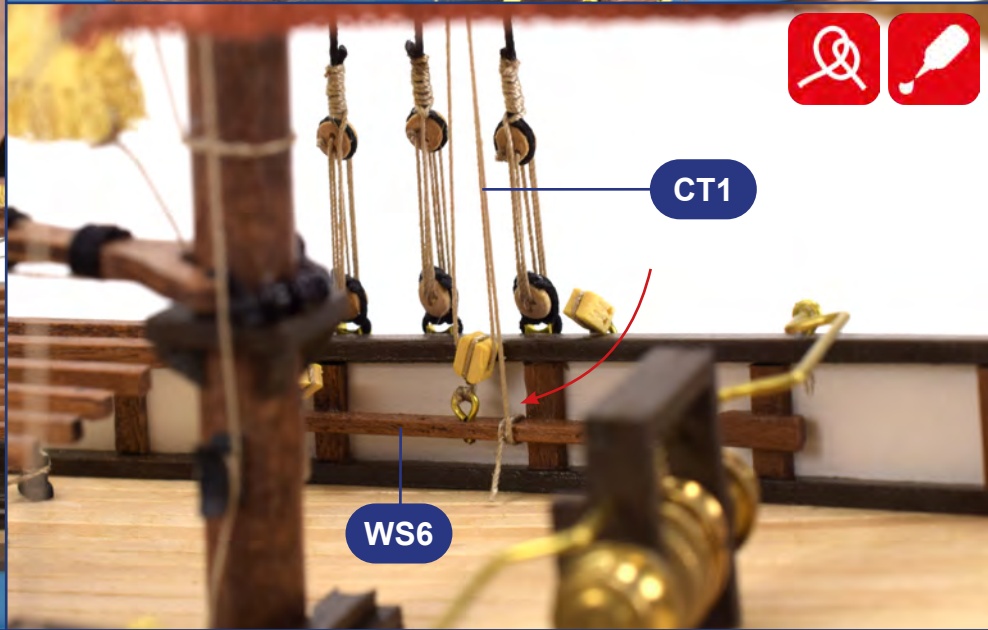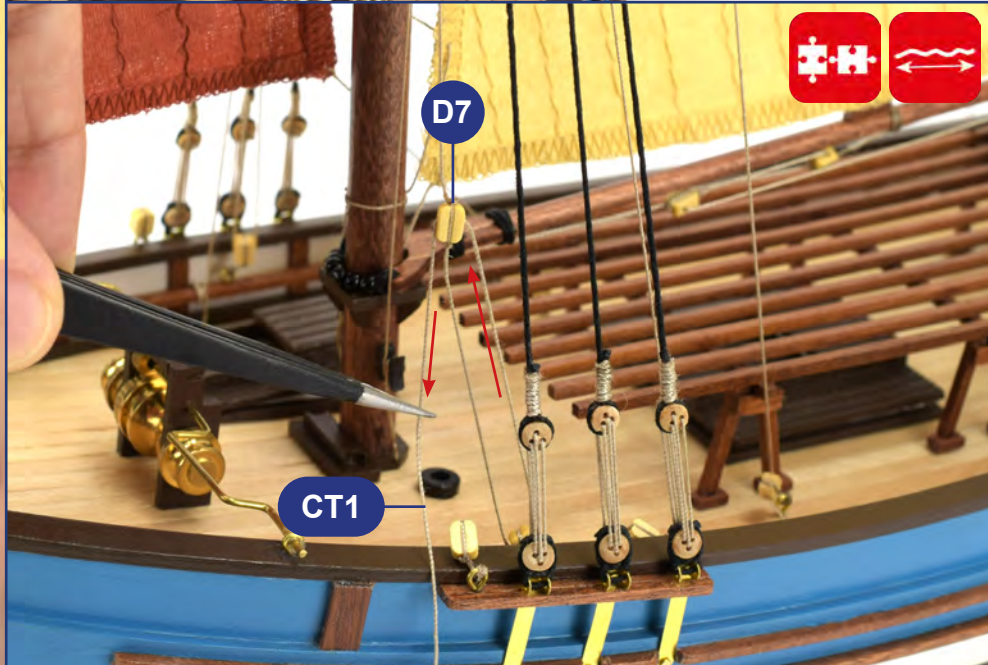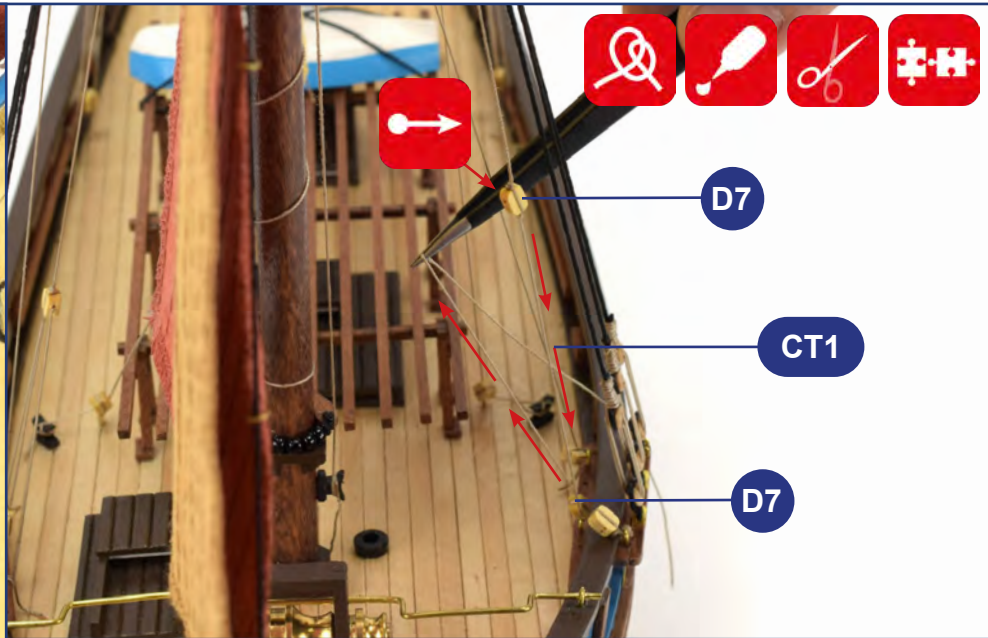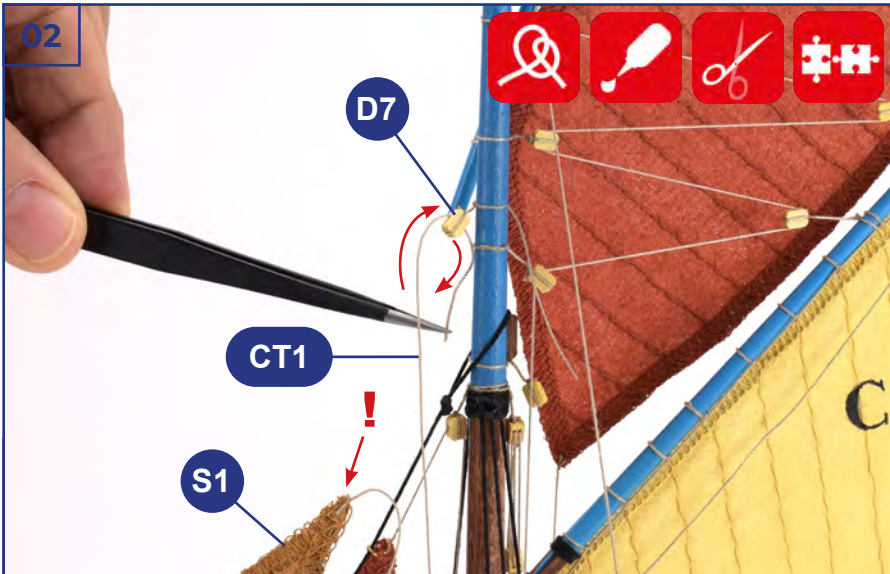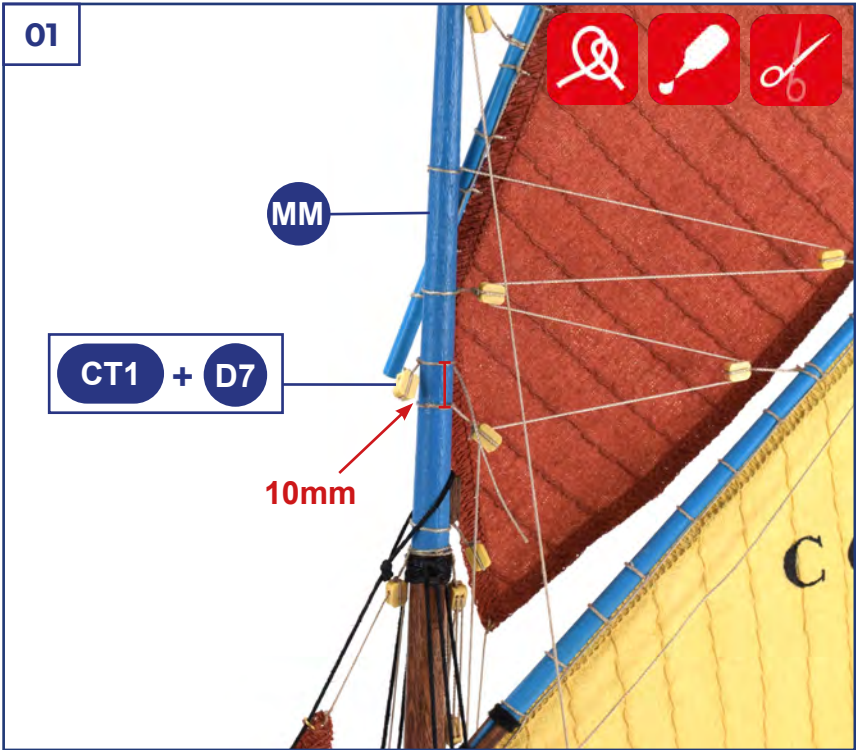


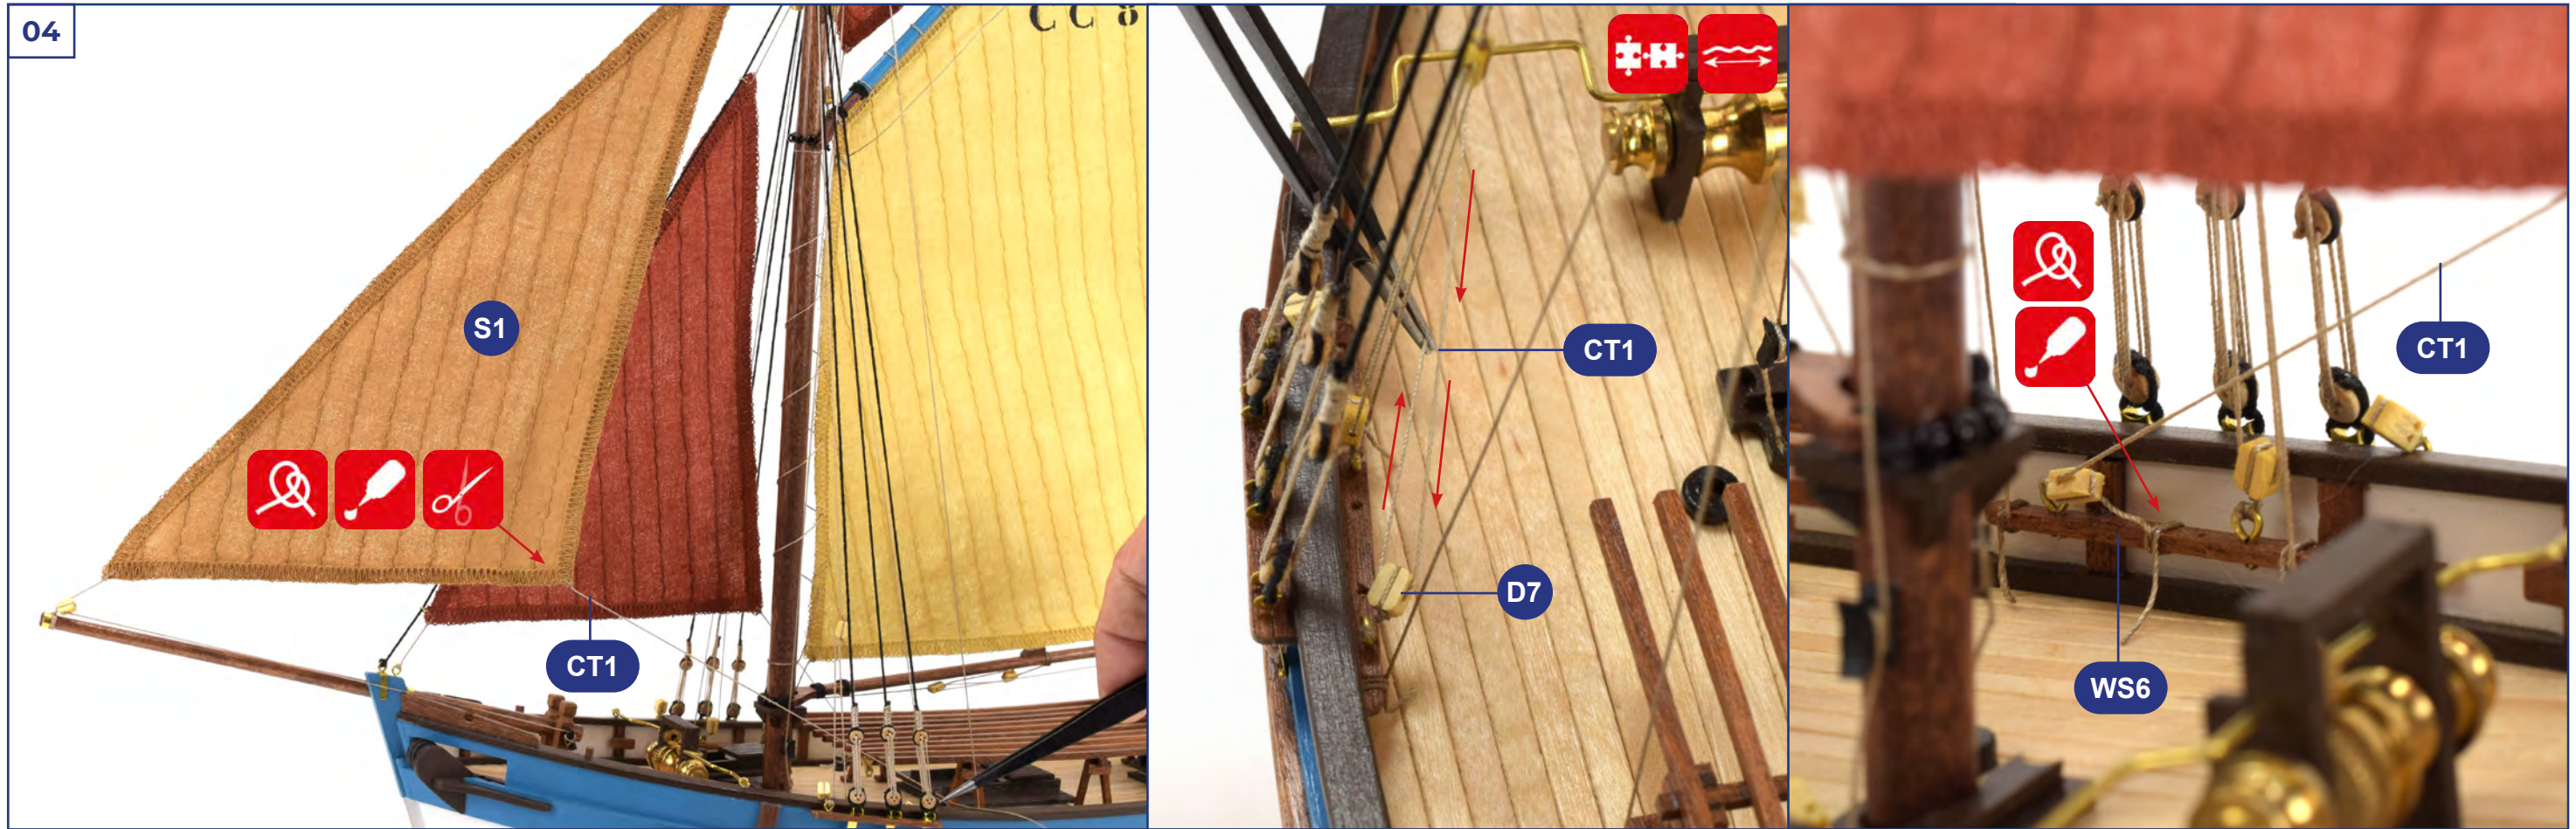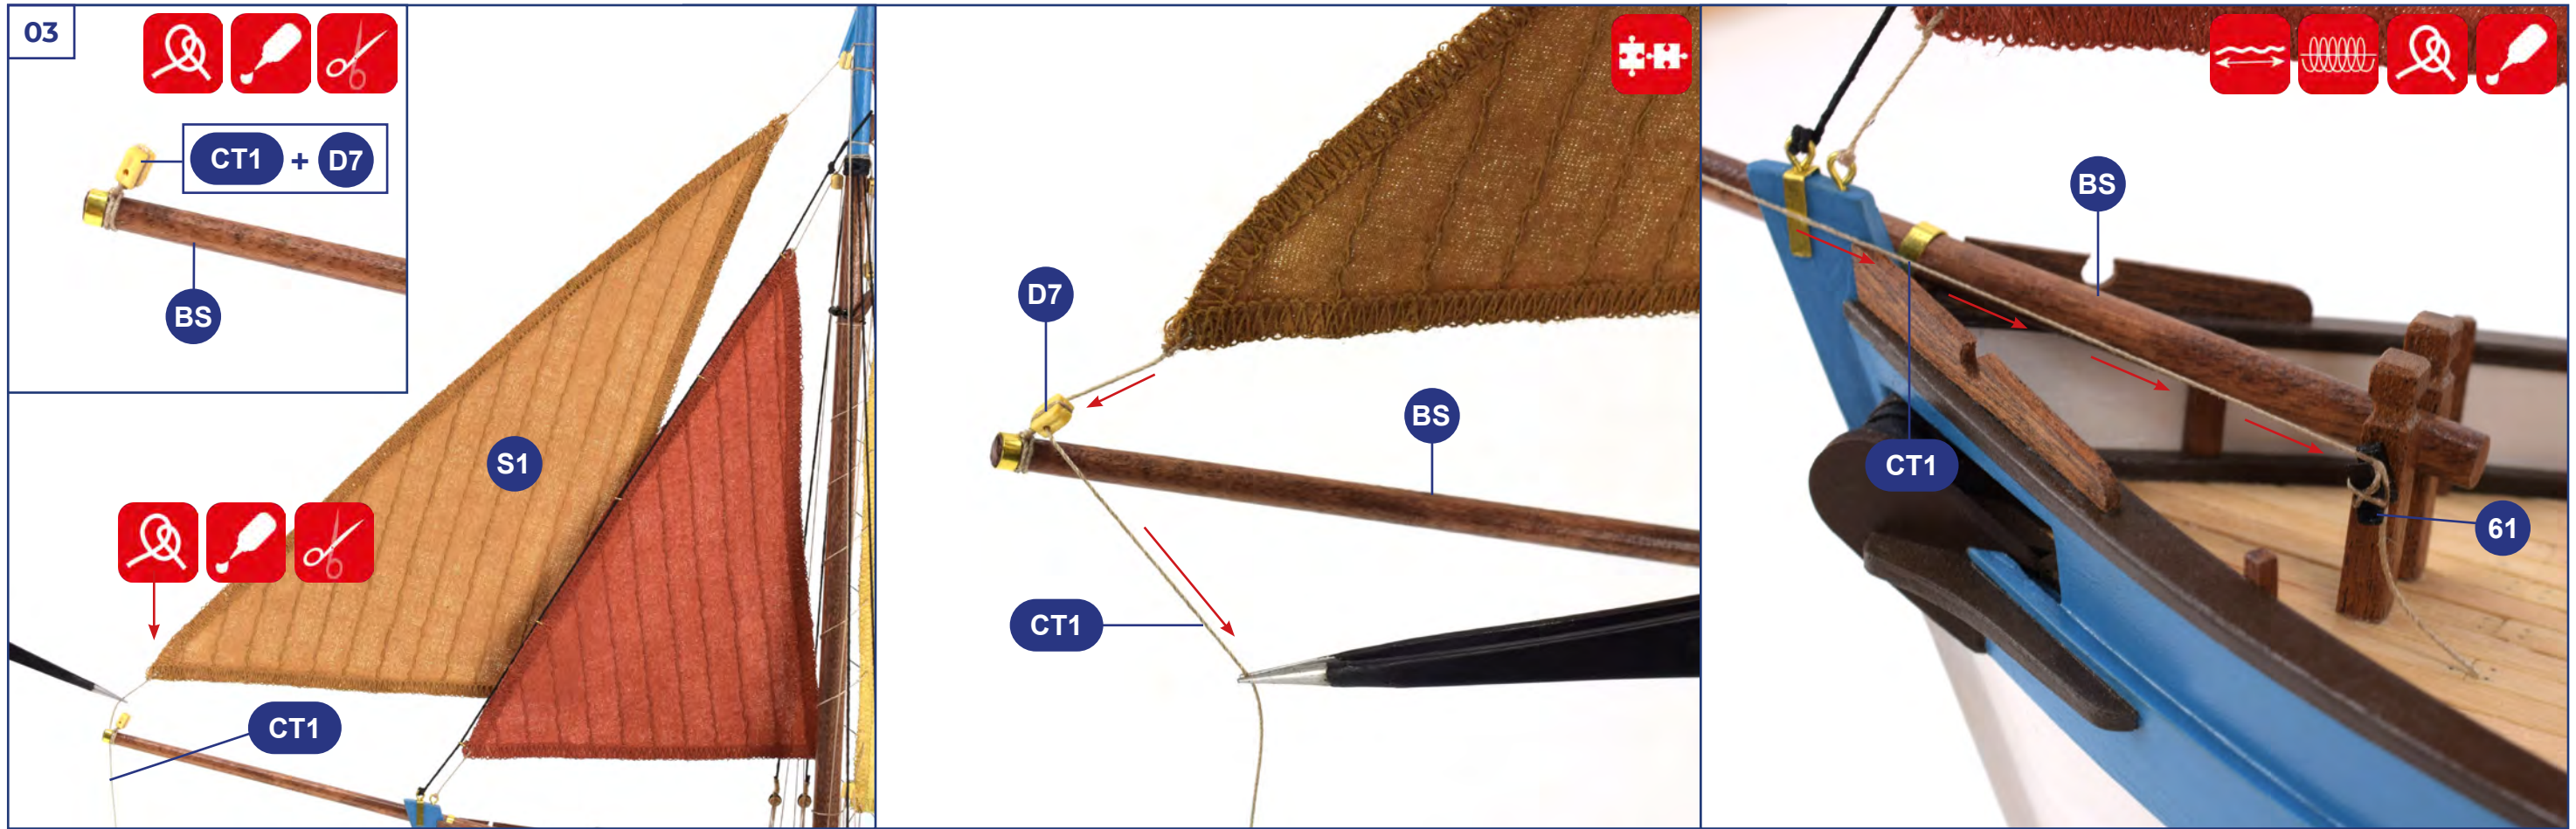

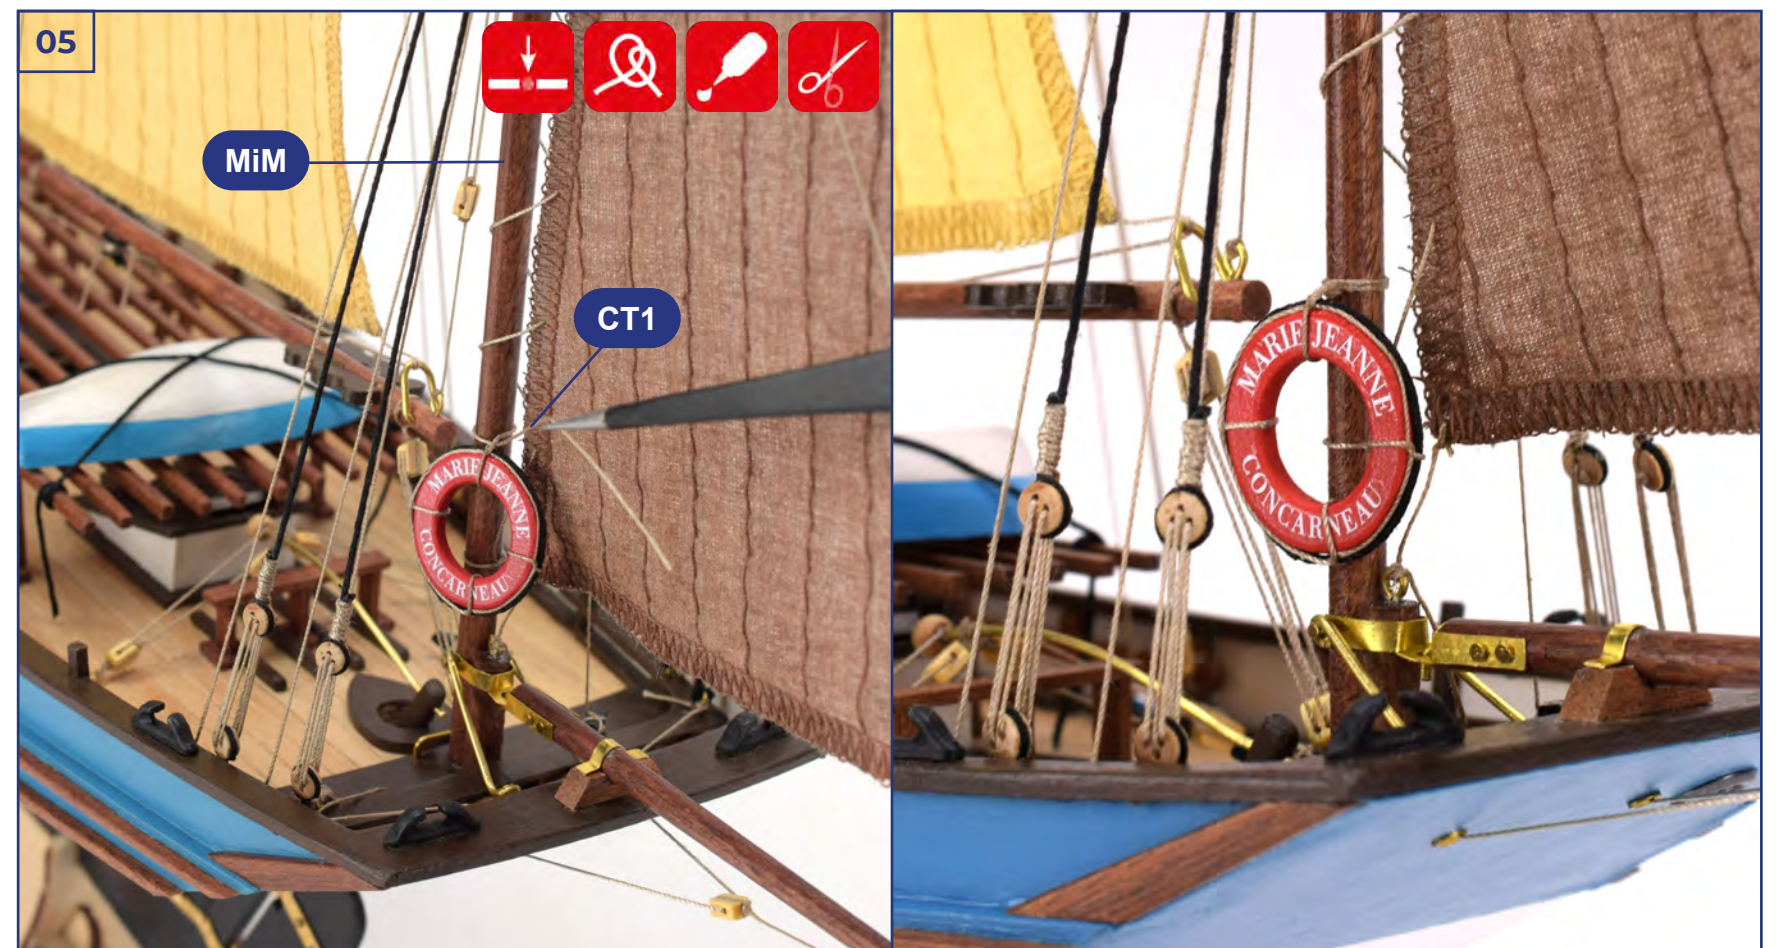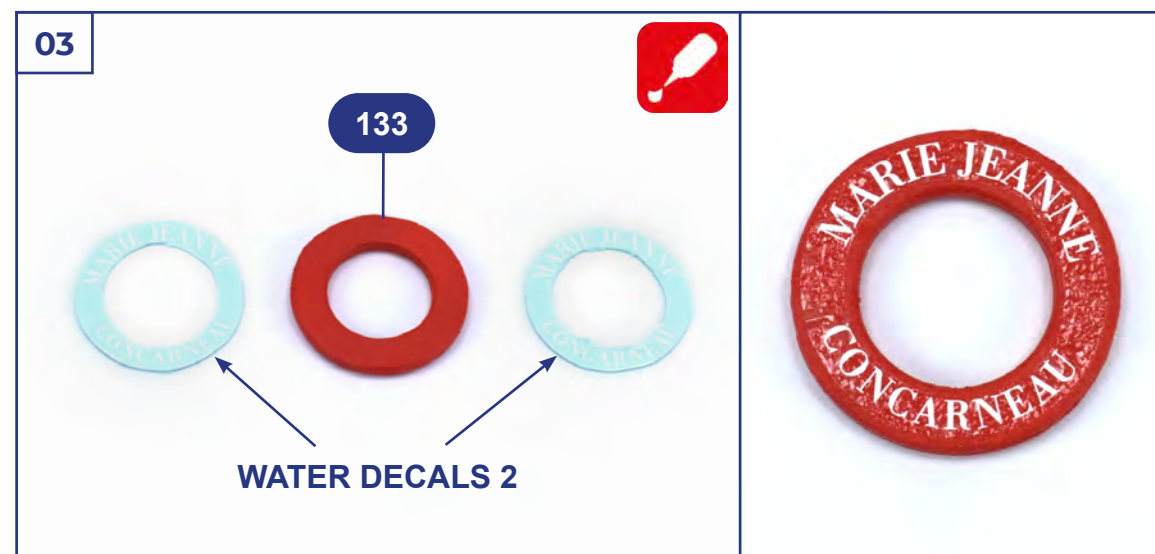


01

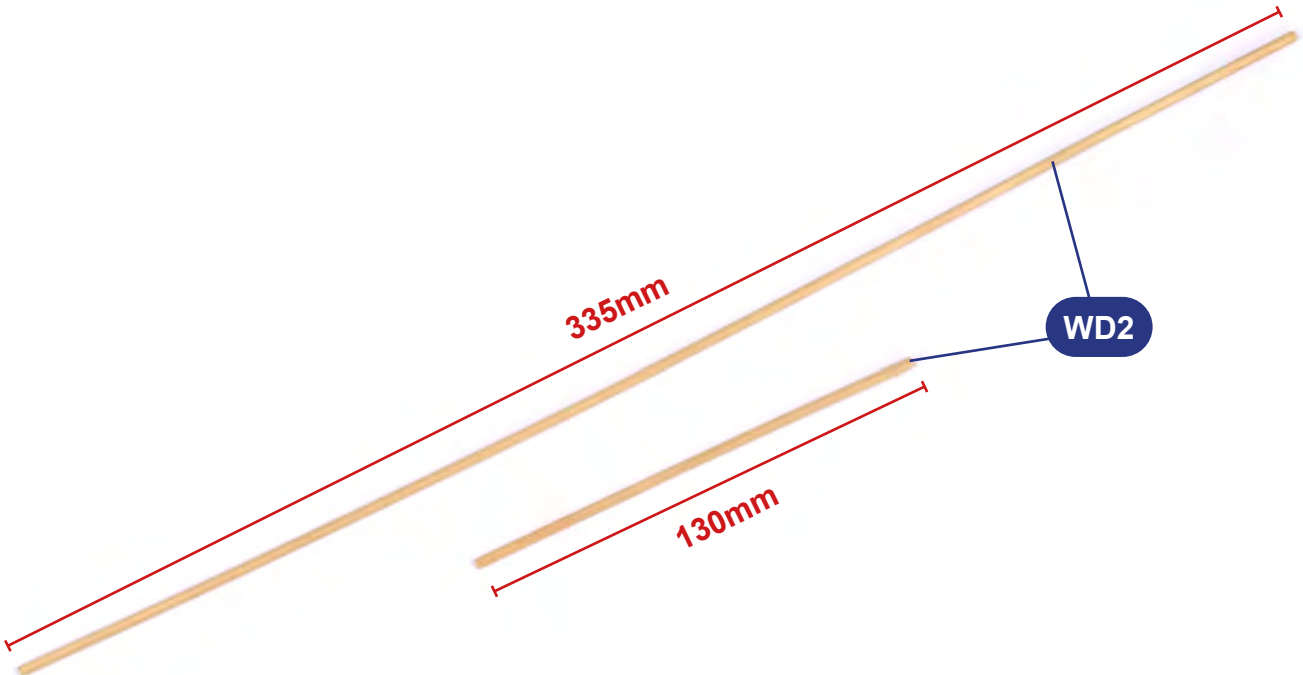


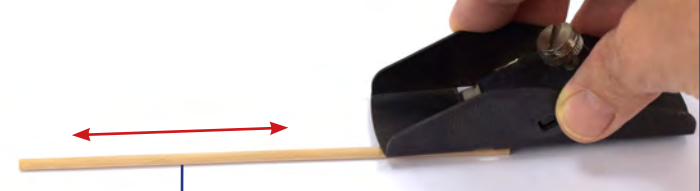



02

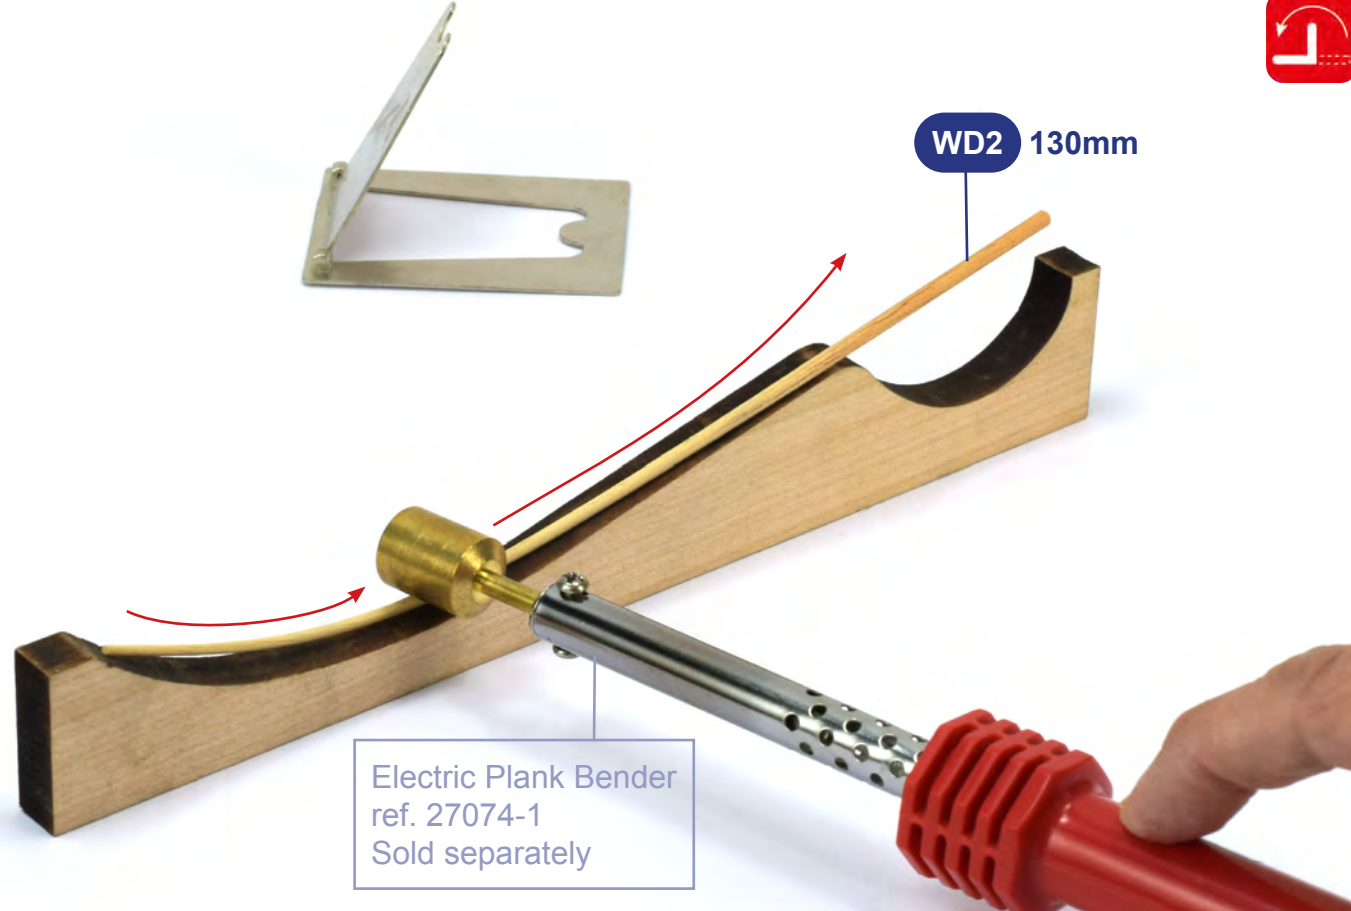

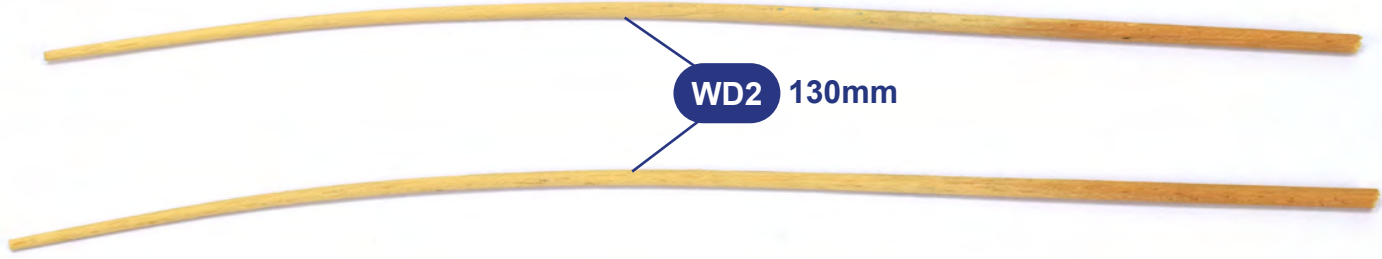


WD2 335mm → Z1

WD2 130mm → Z2

03

5

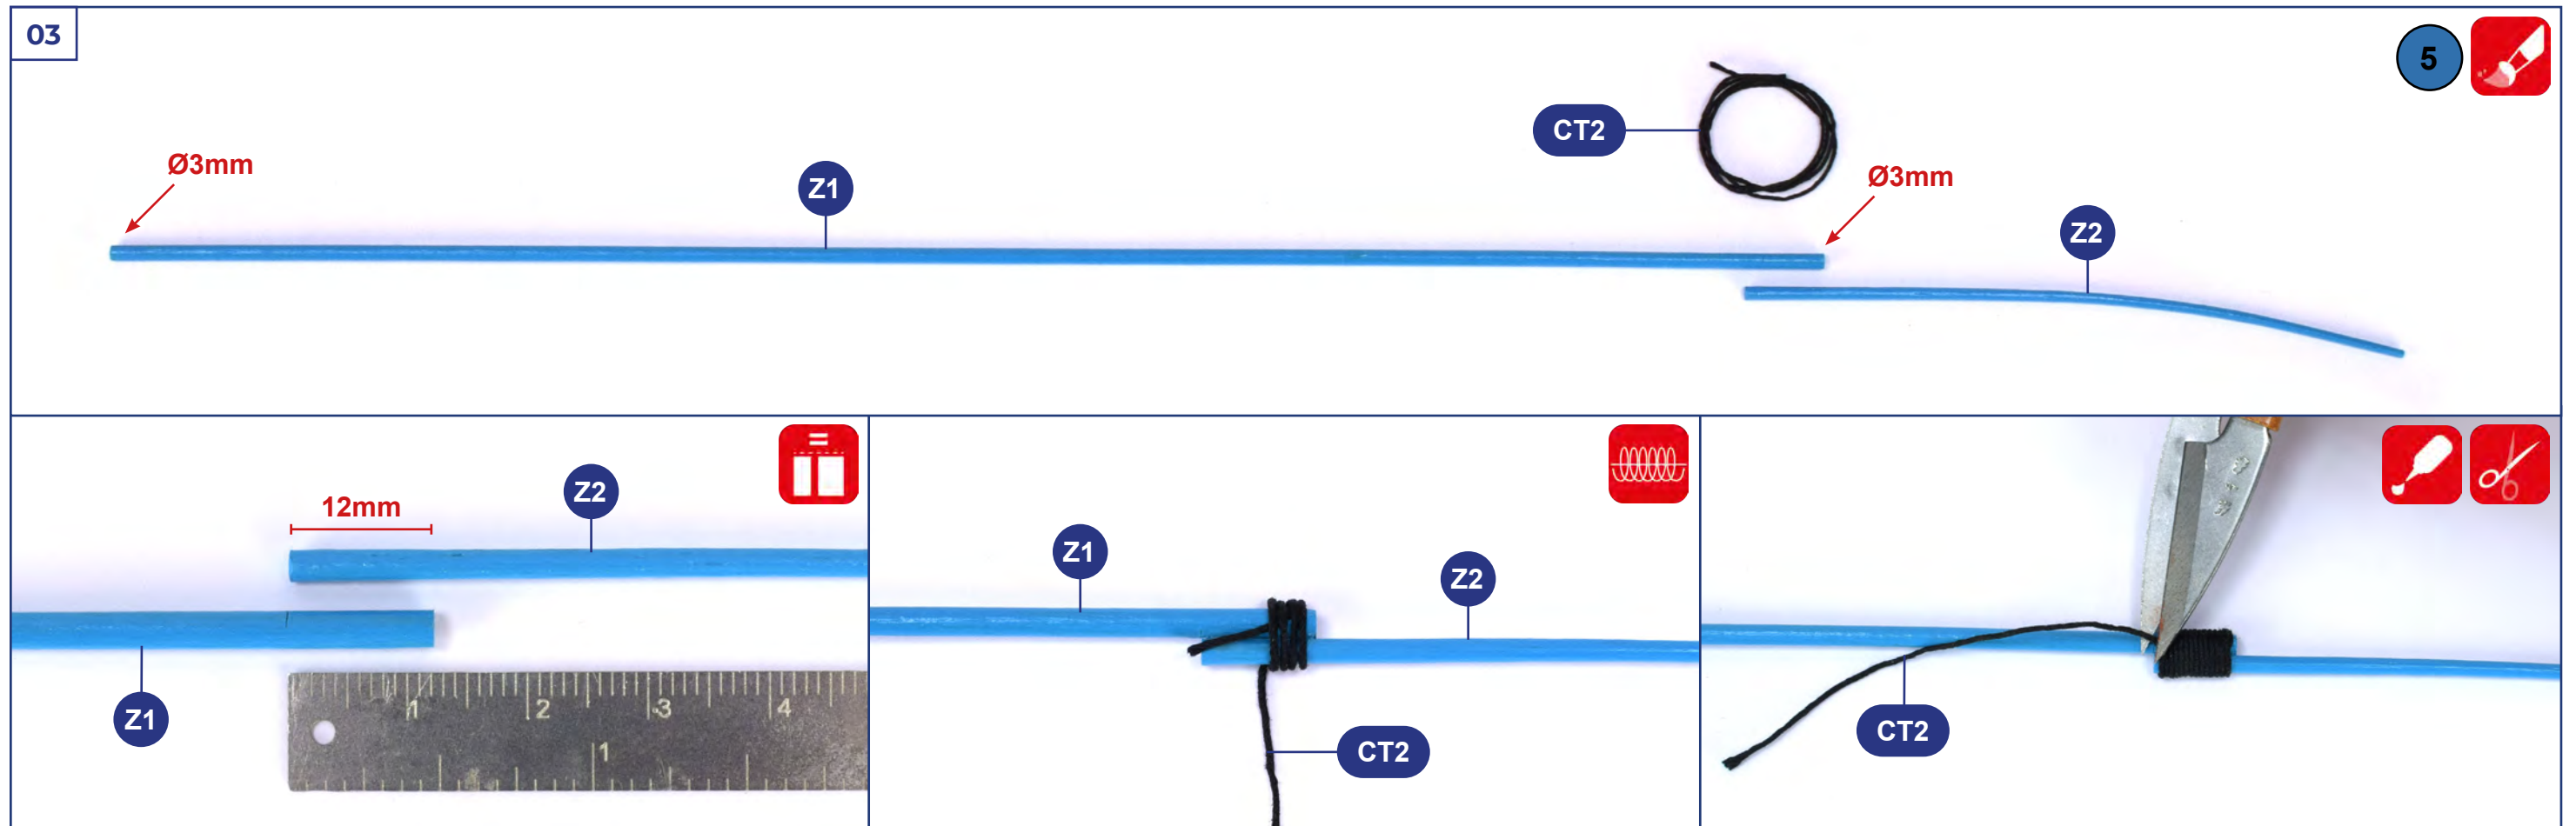

04

CT1

D7

CT1

CT1

105mm

20mm




05


R


CT1

Z1 + Z2


CT1

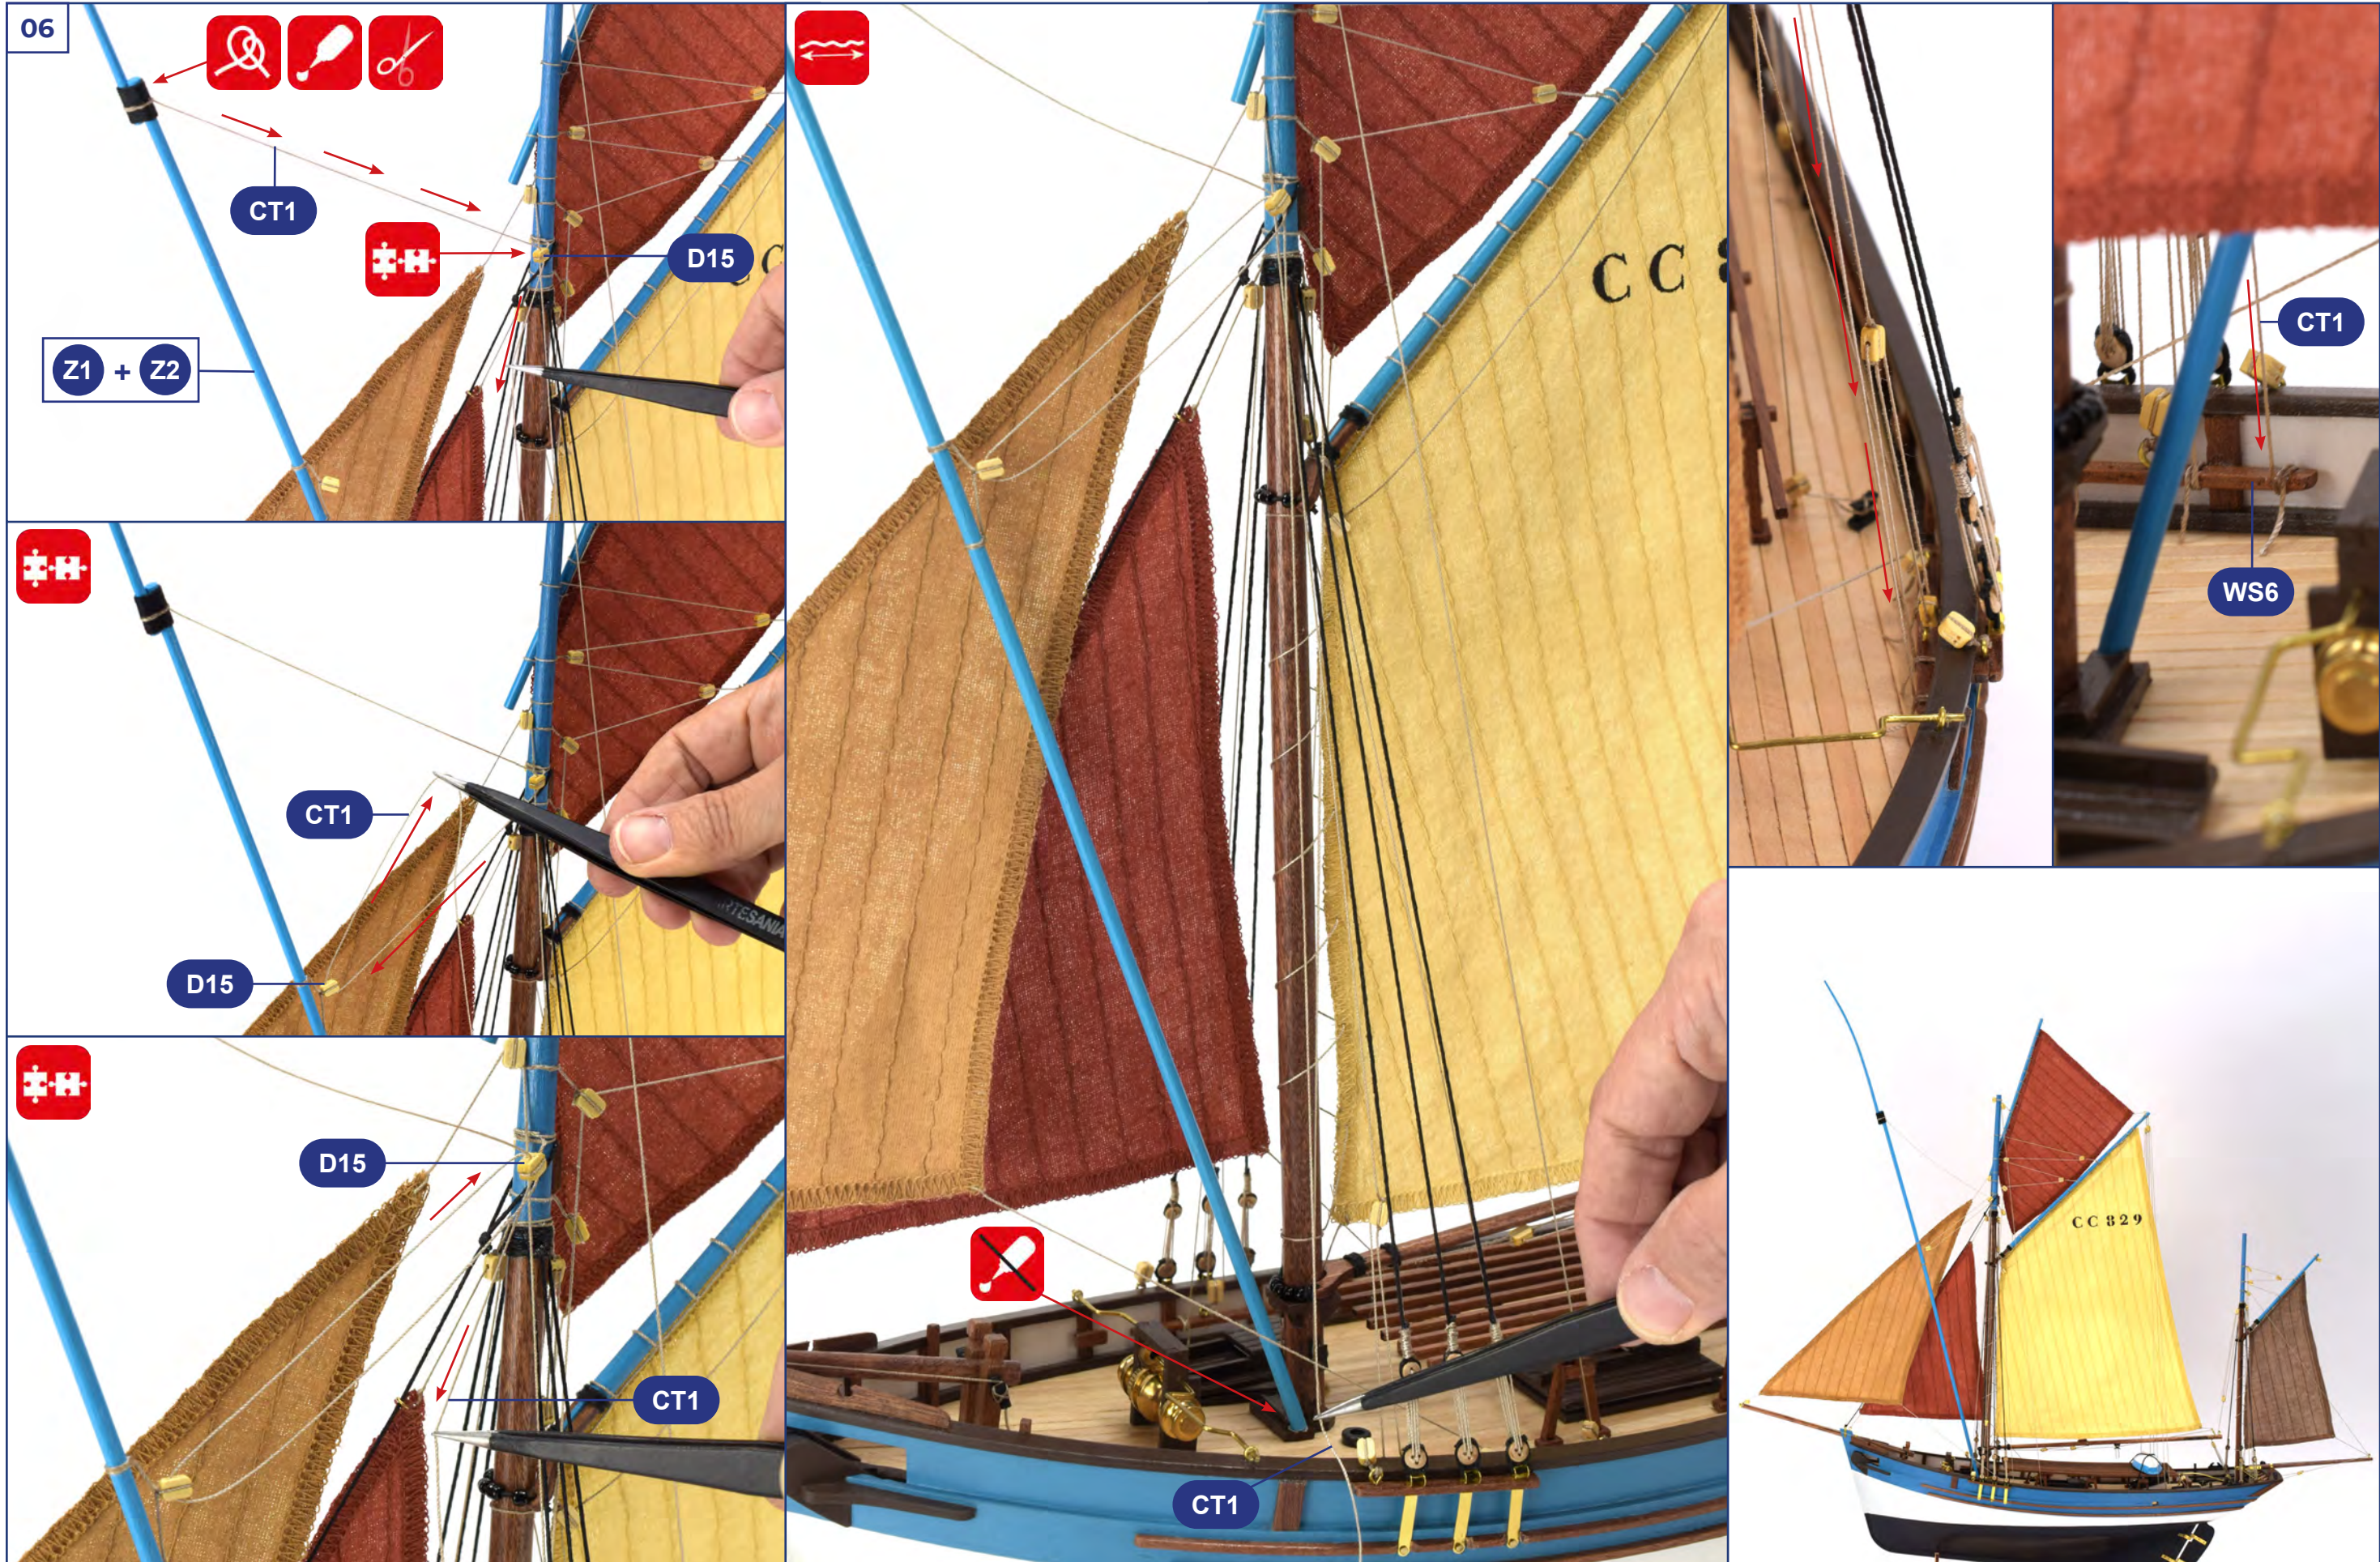

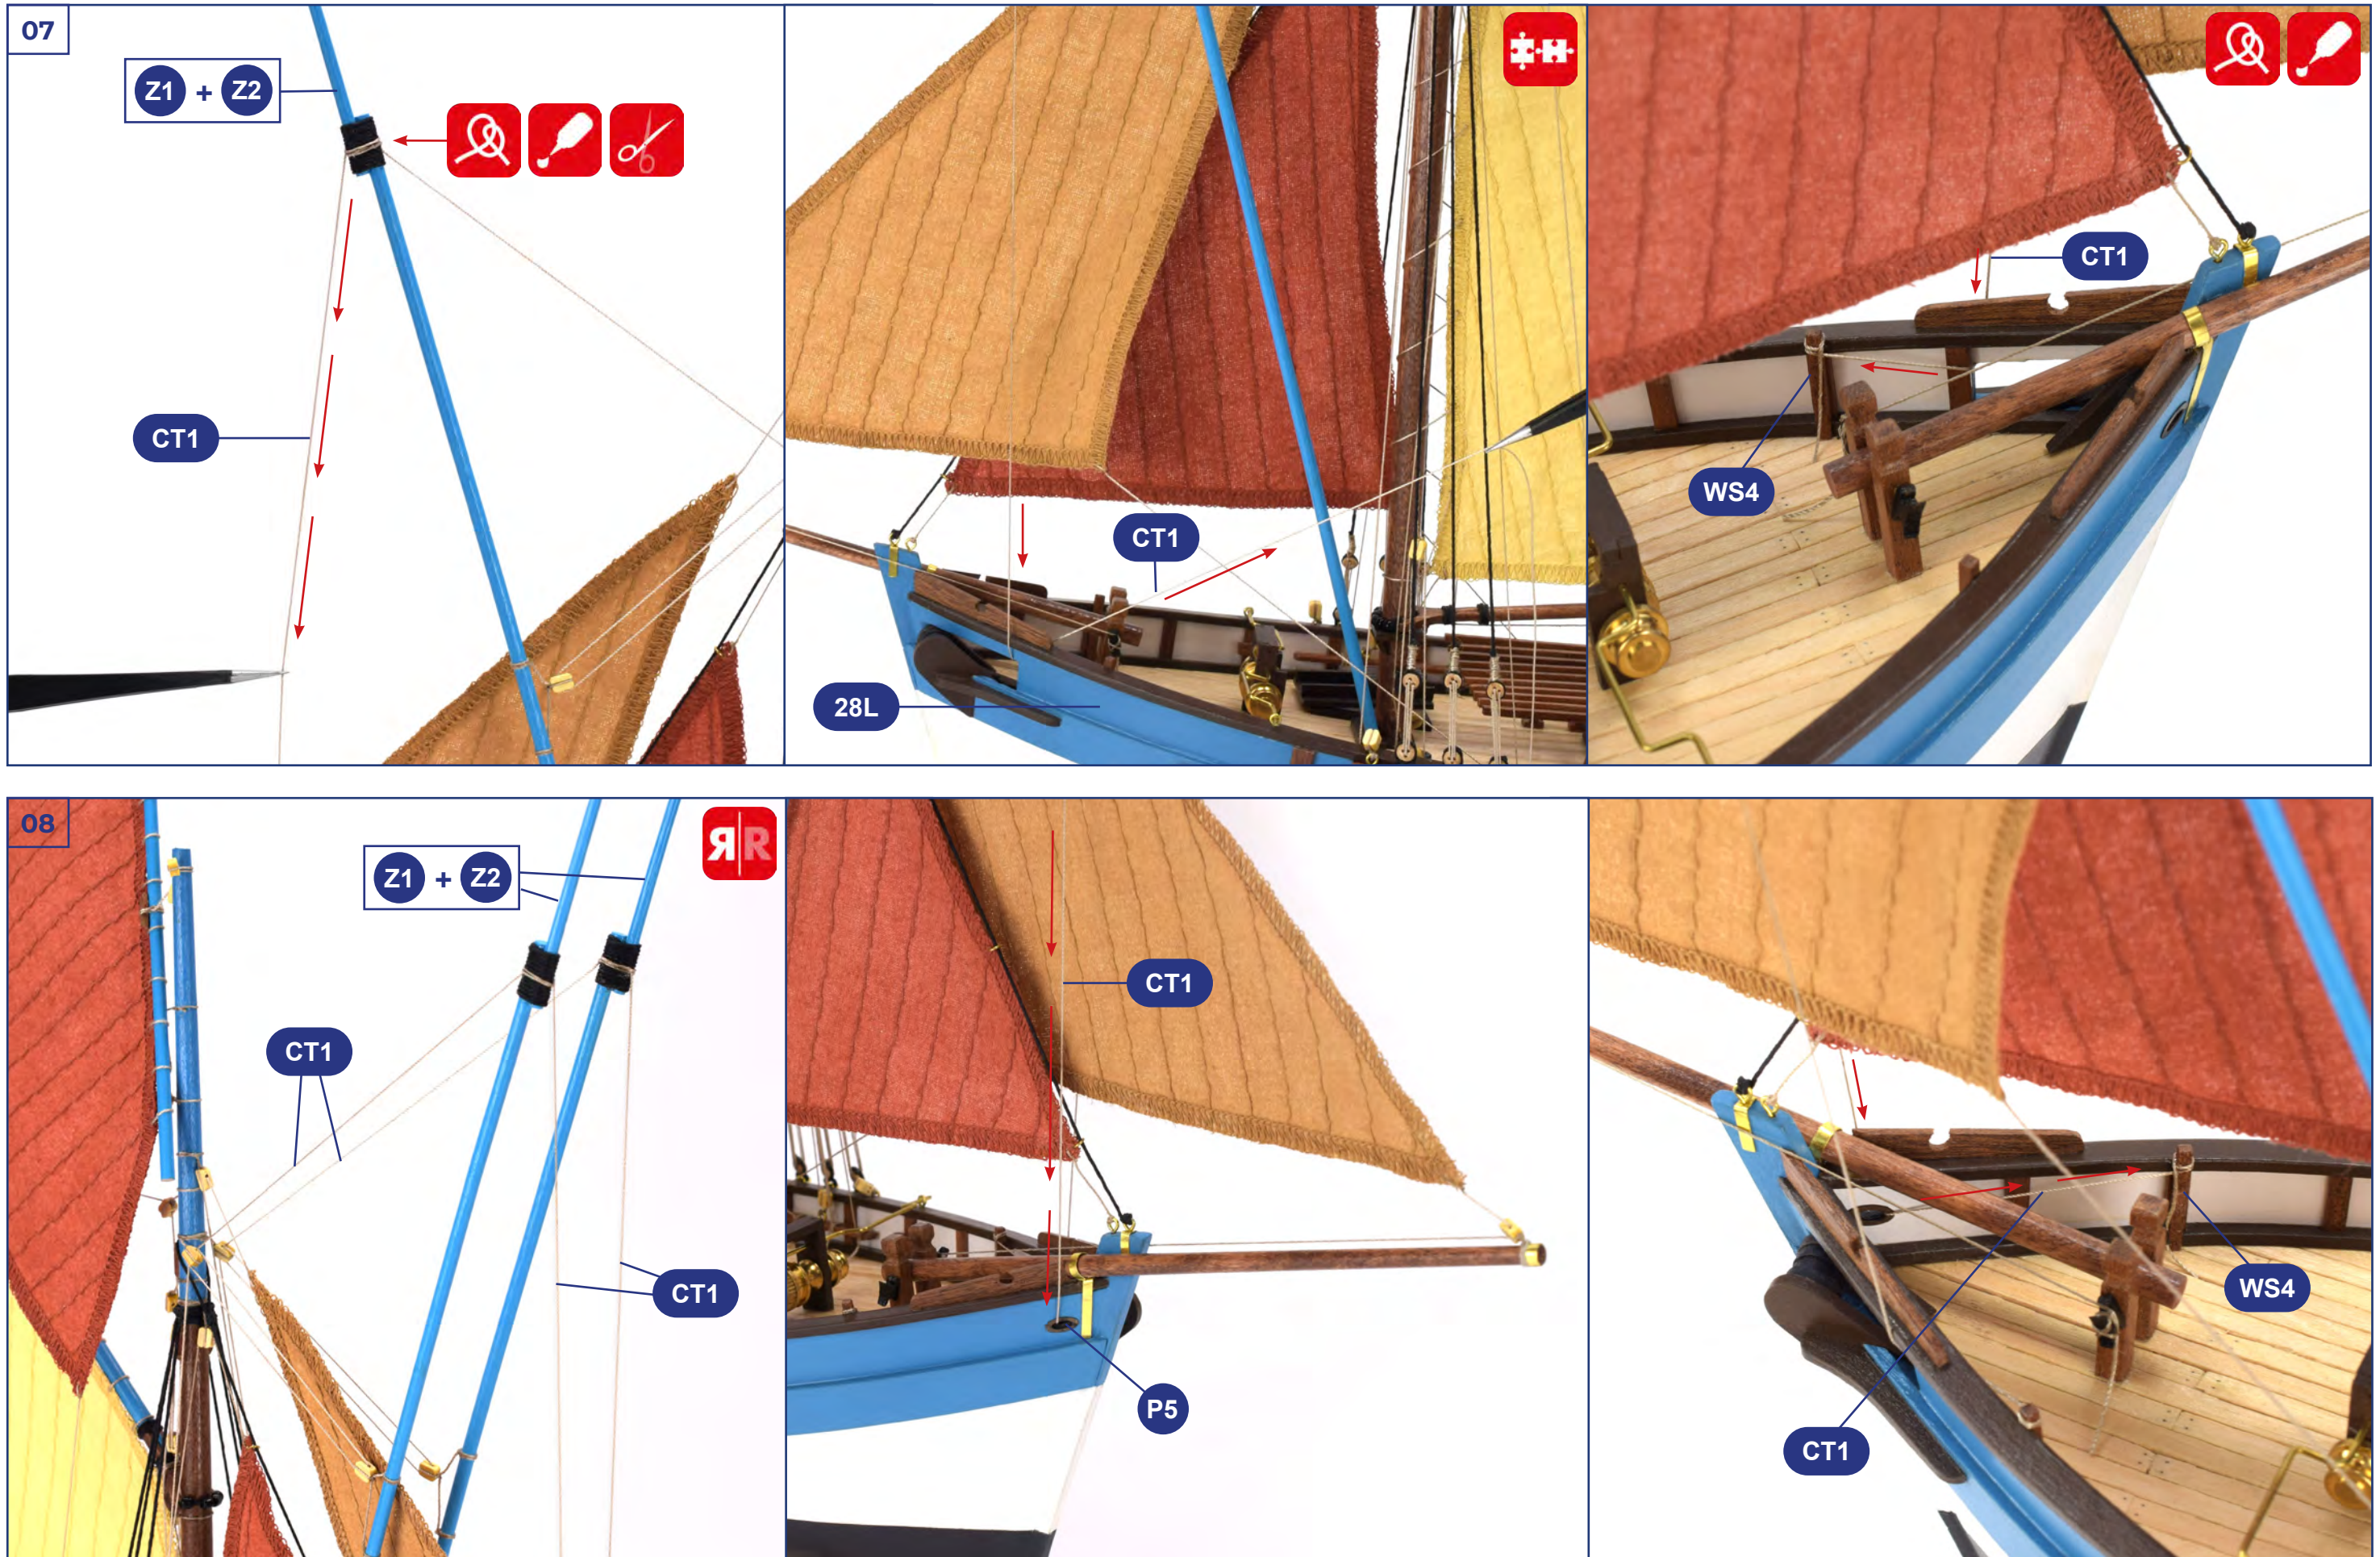


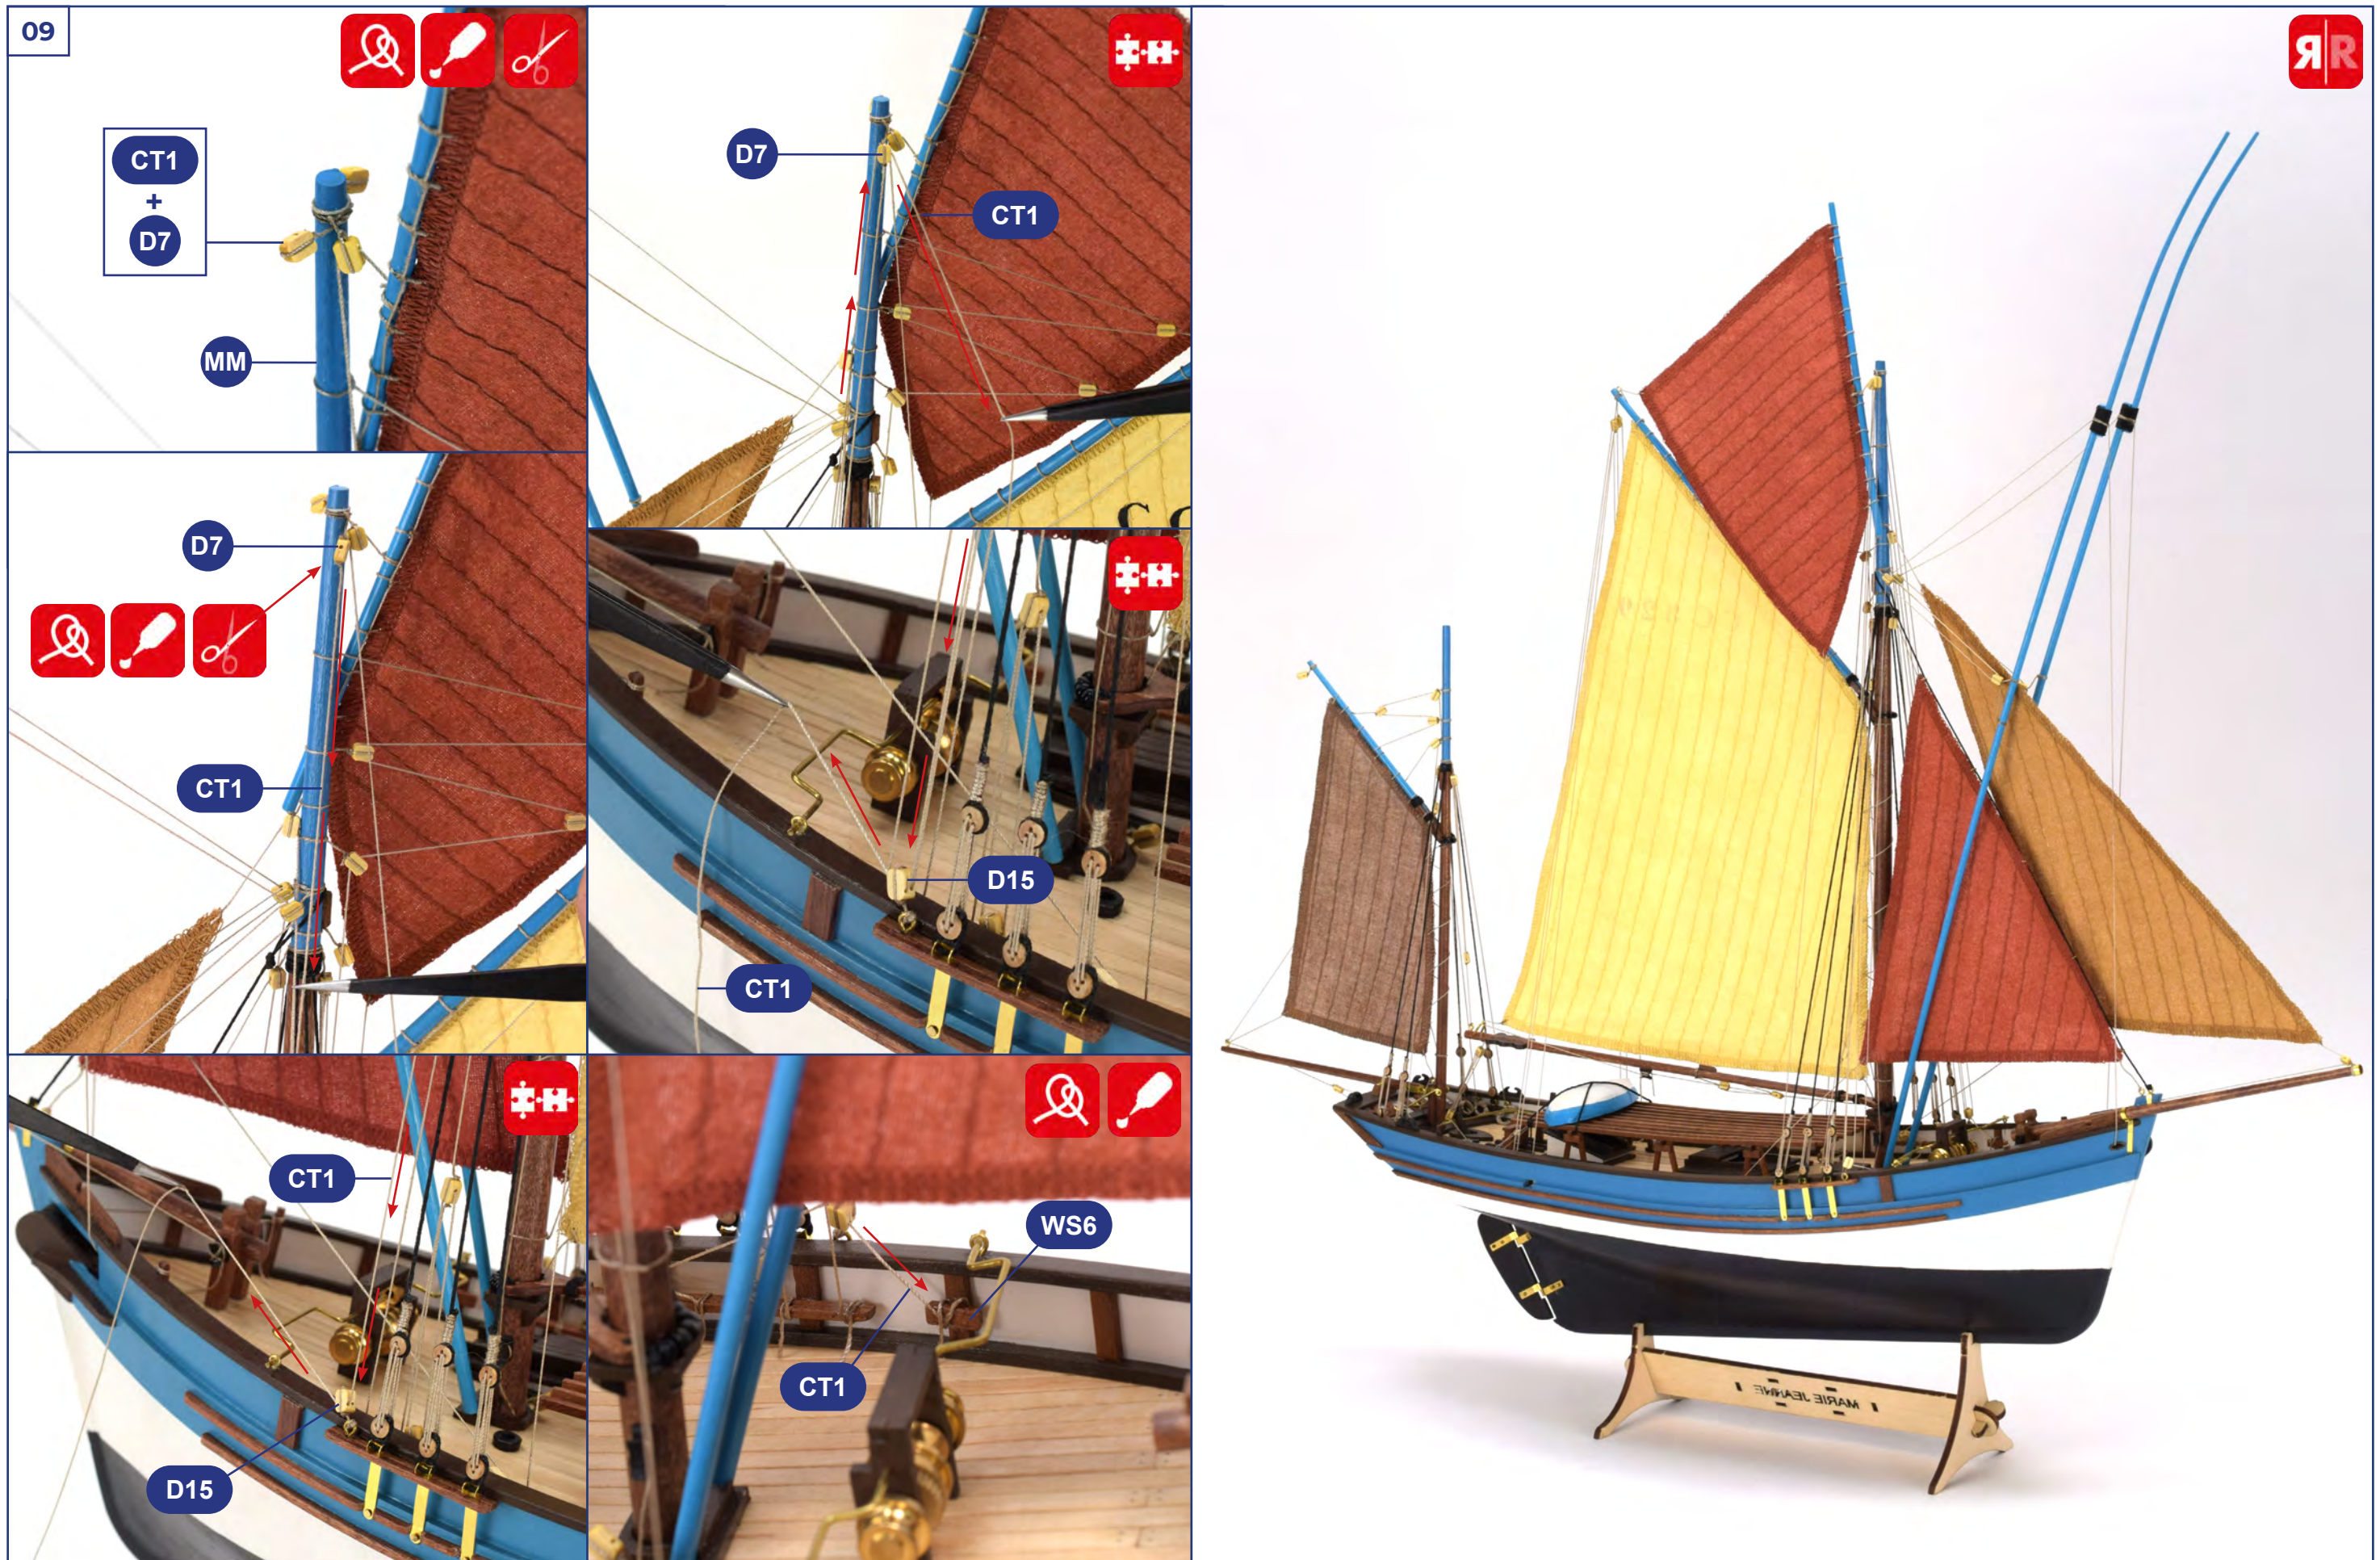


10

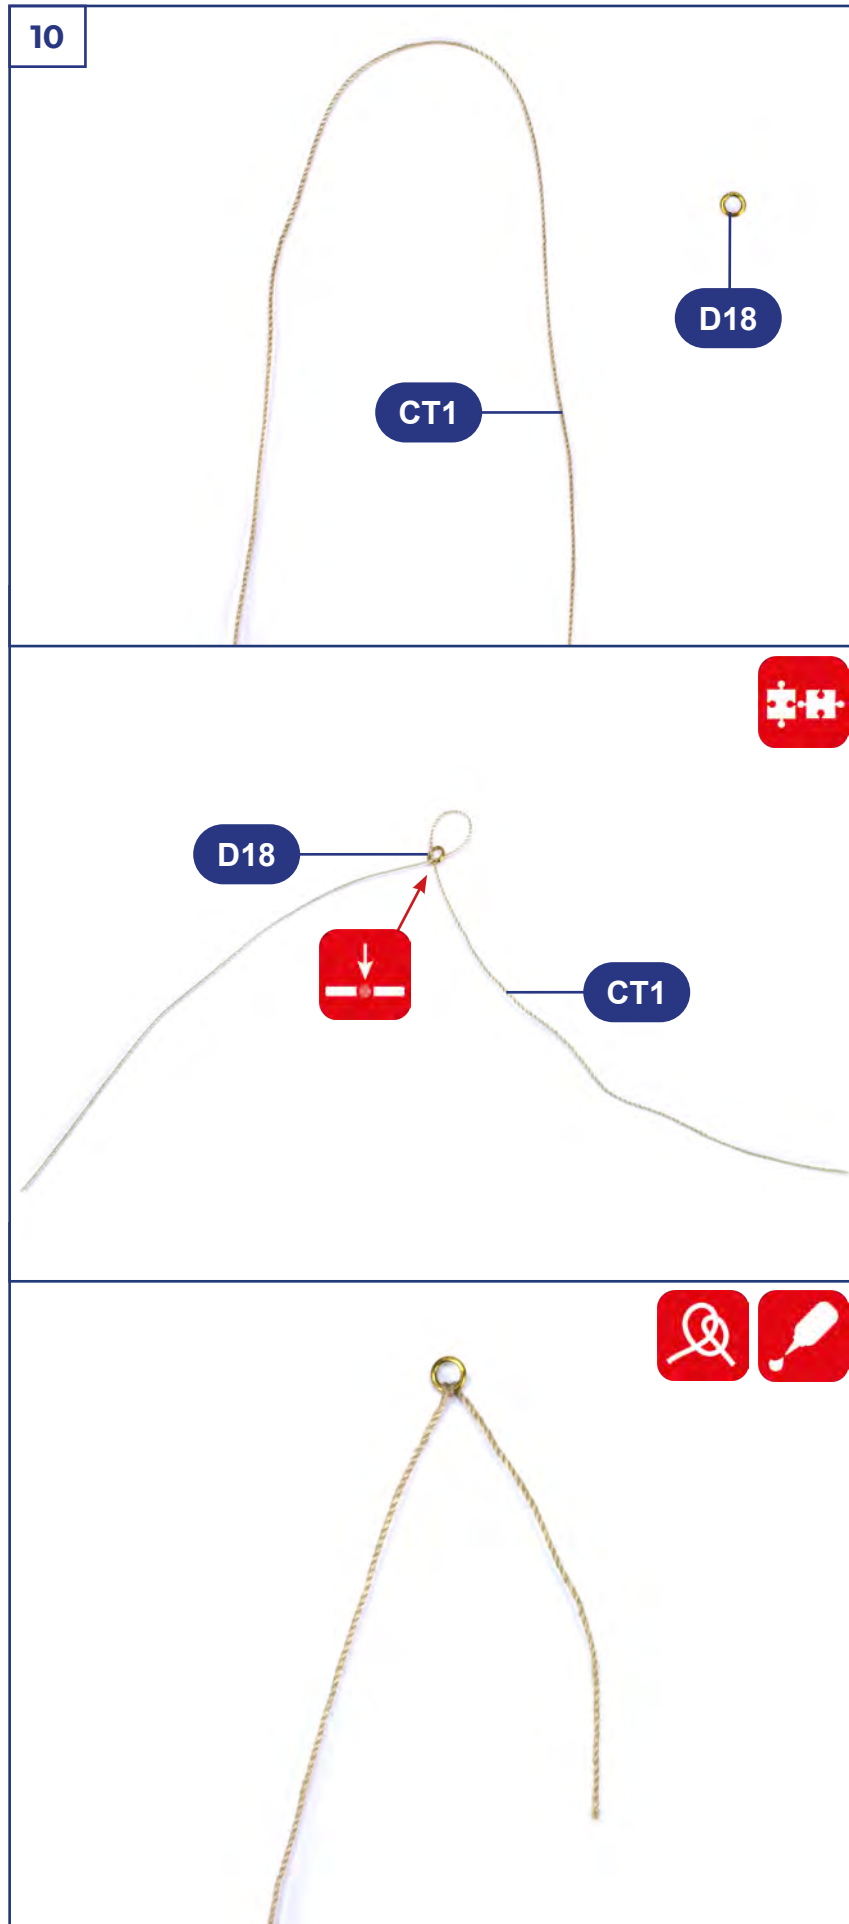





11

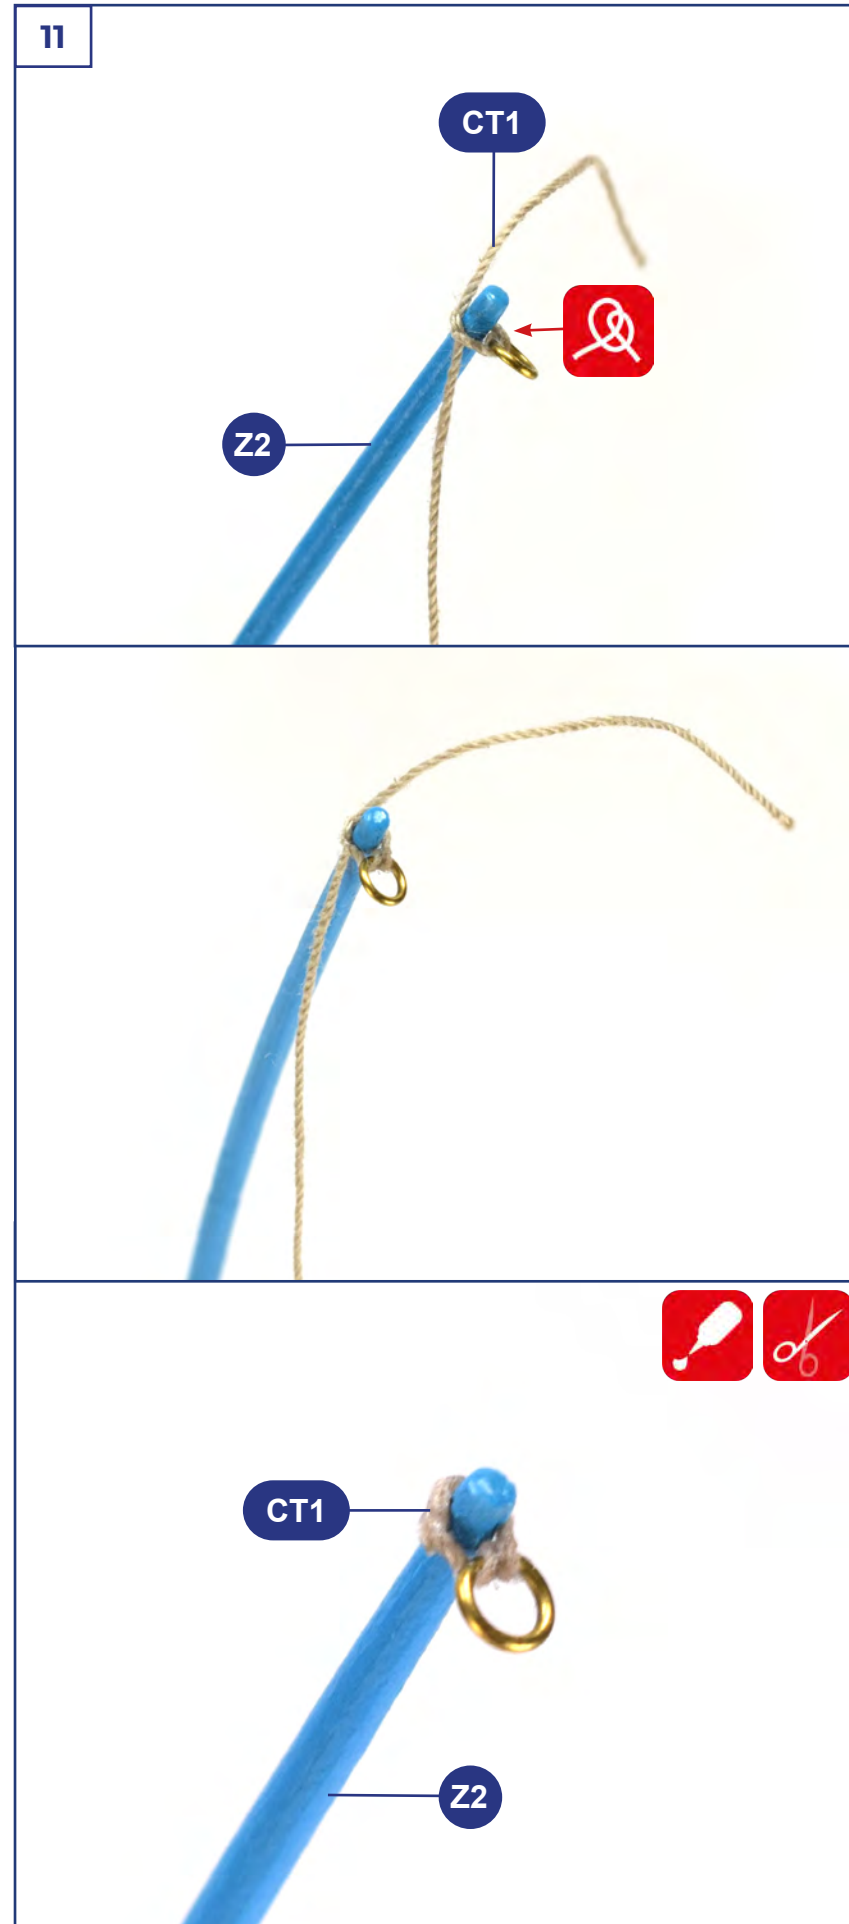


12

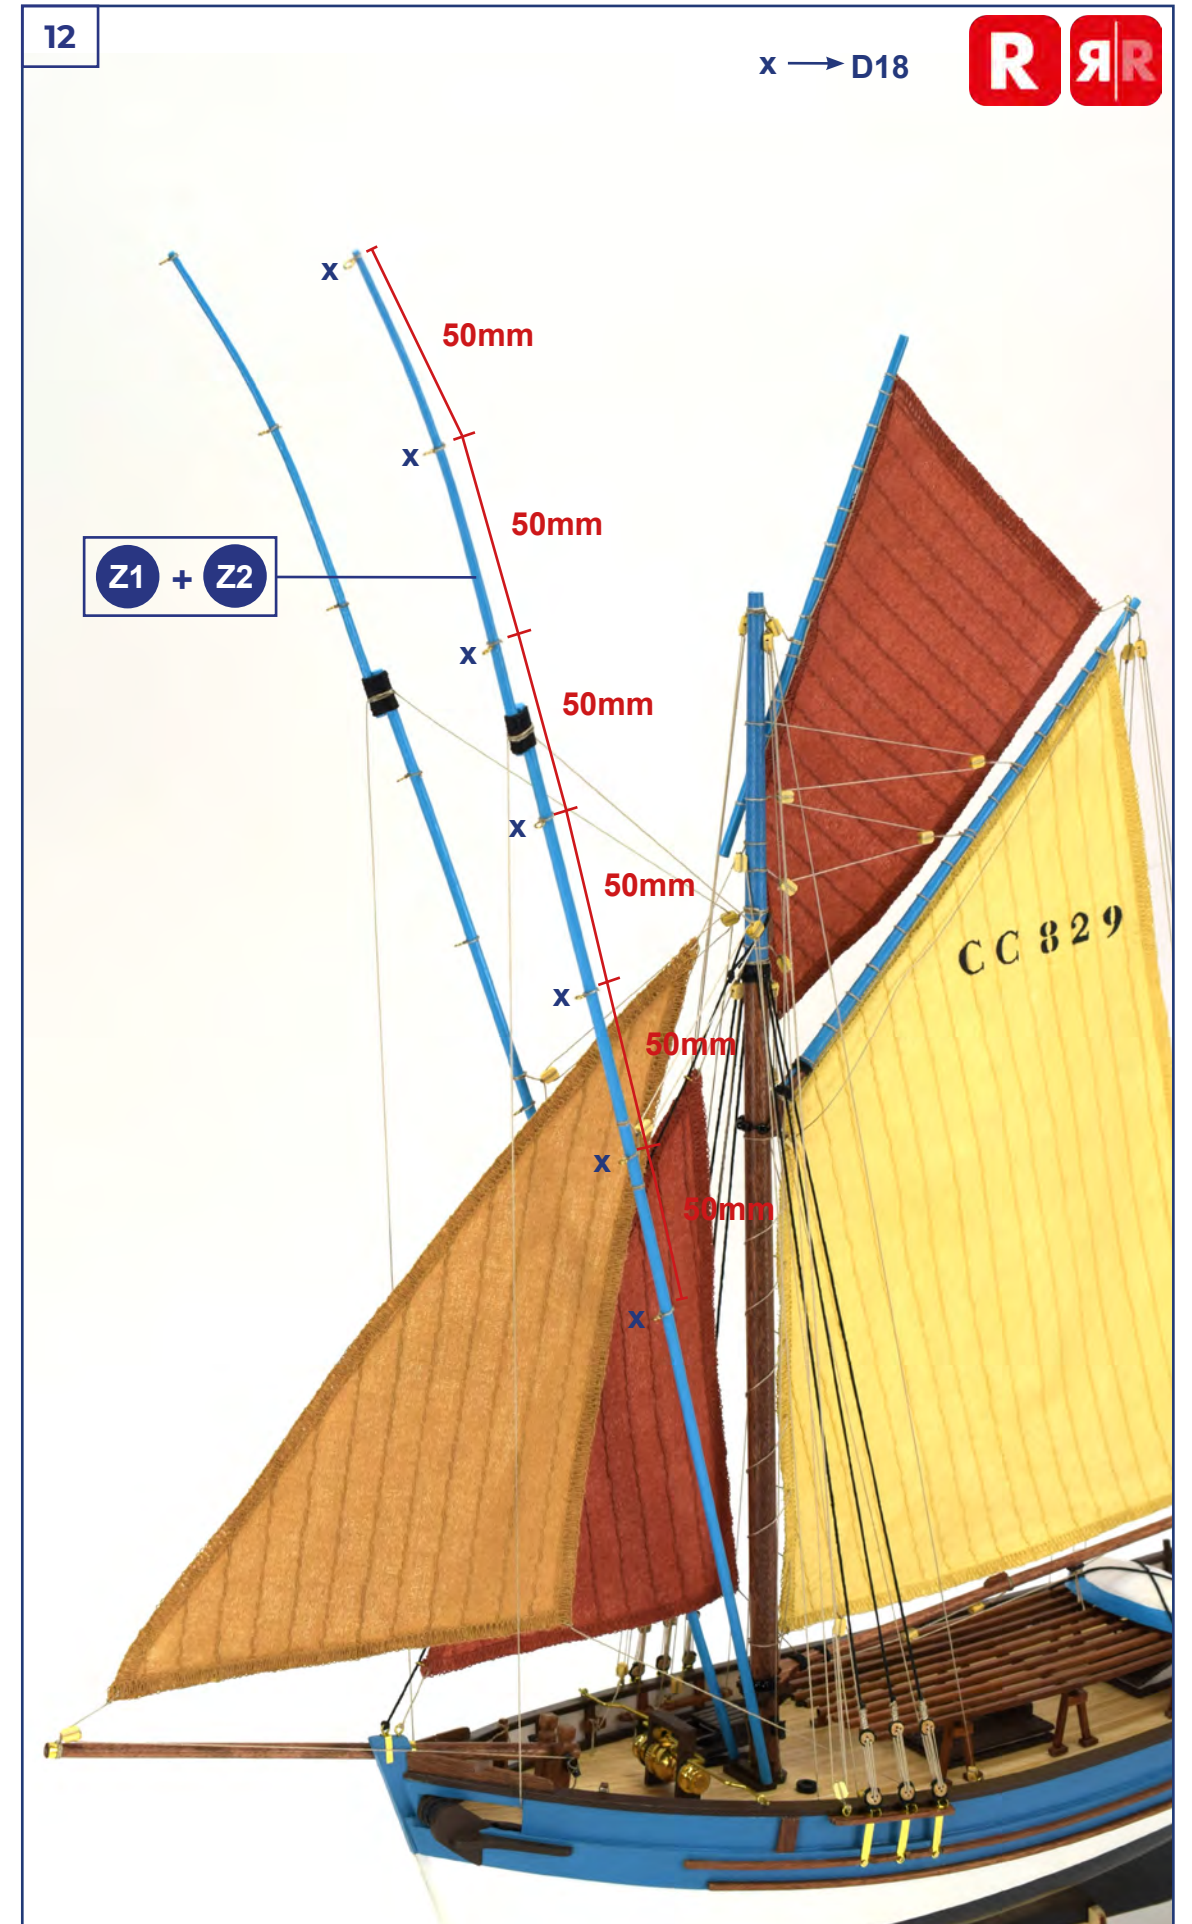


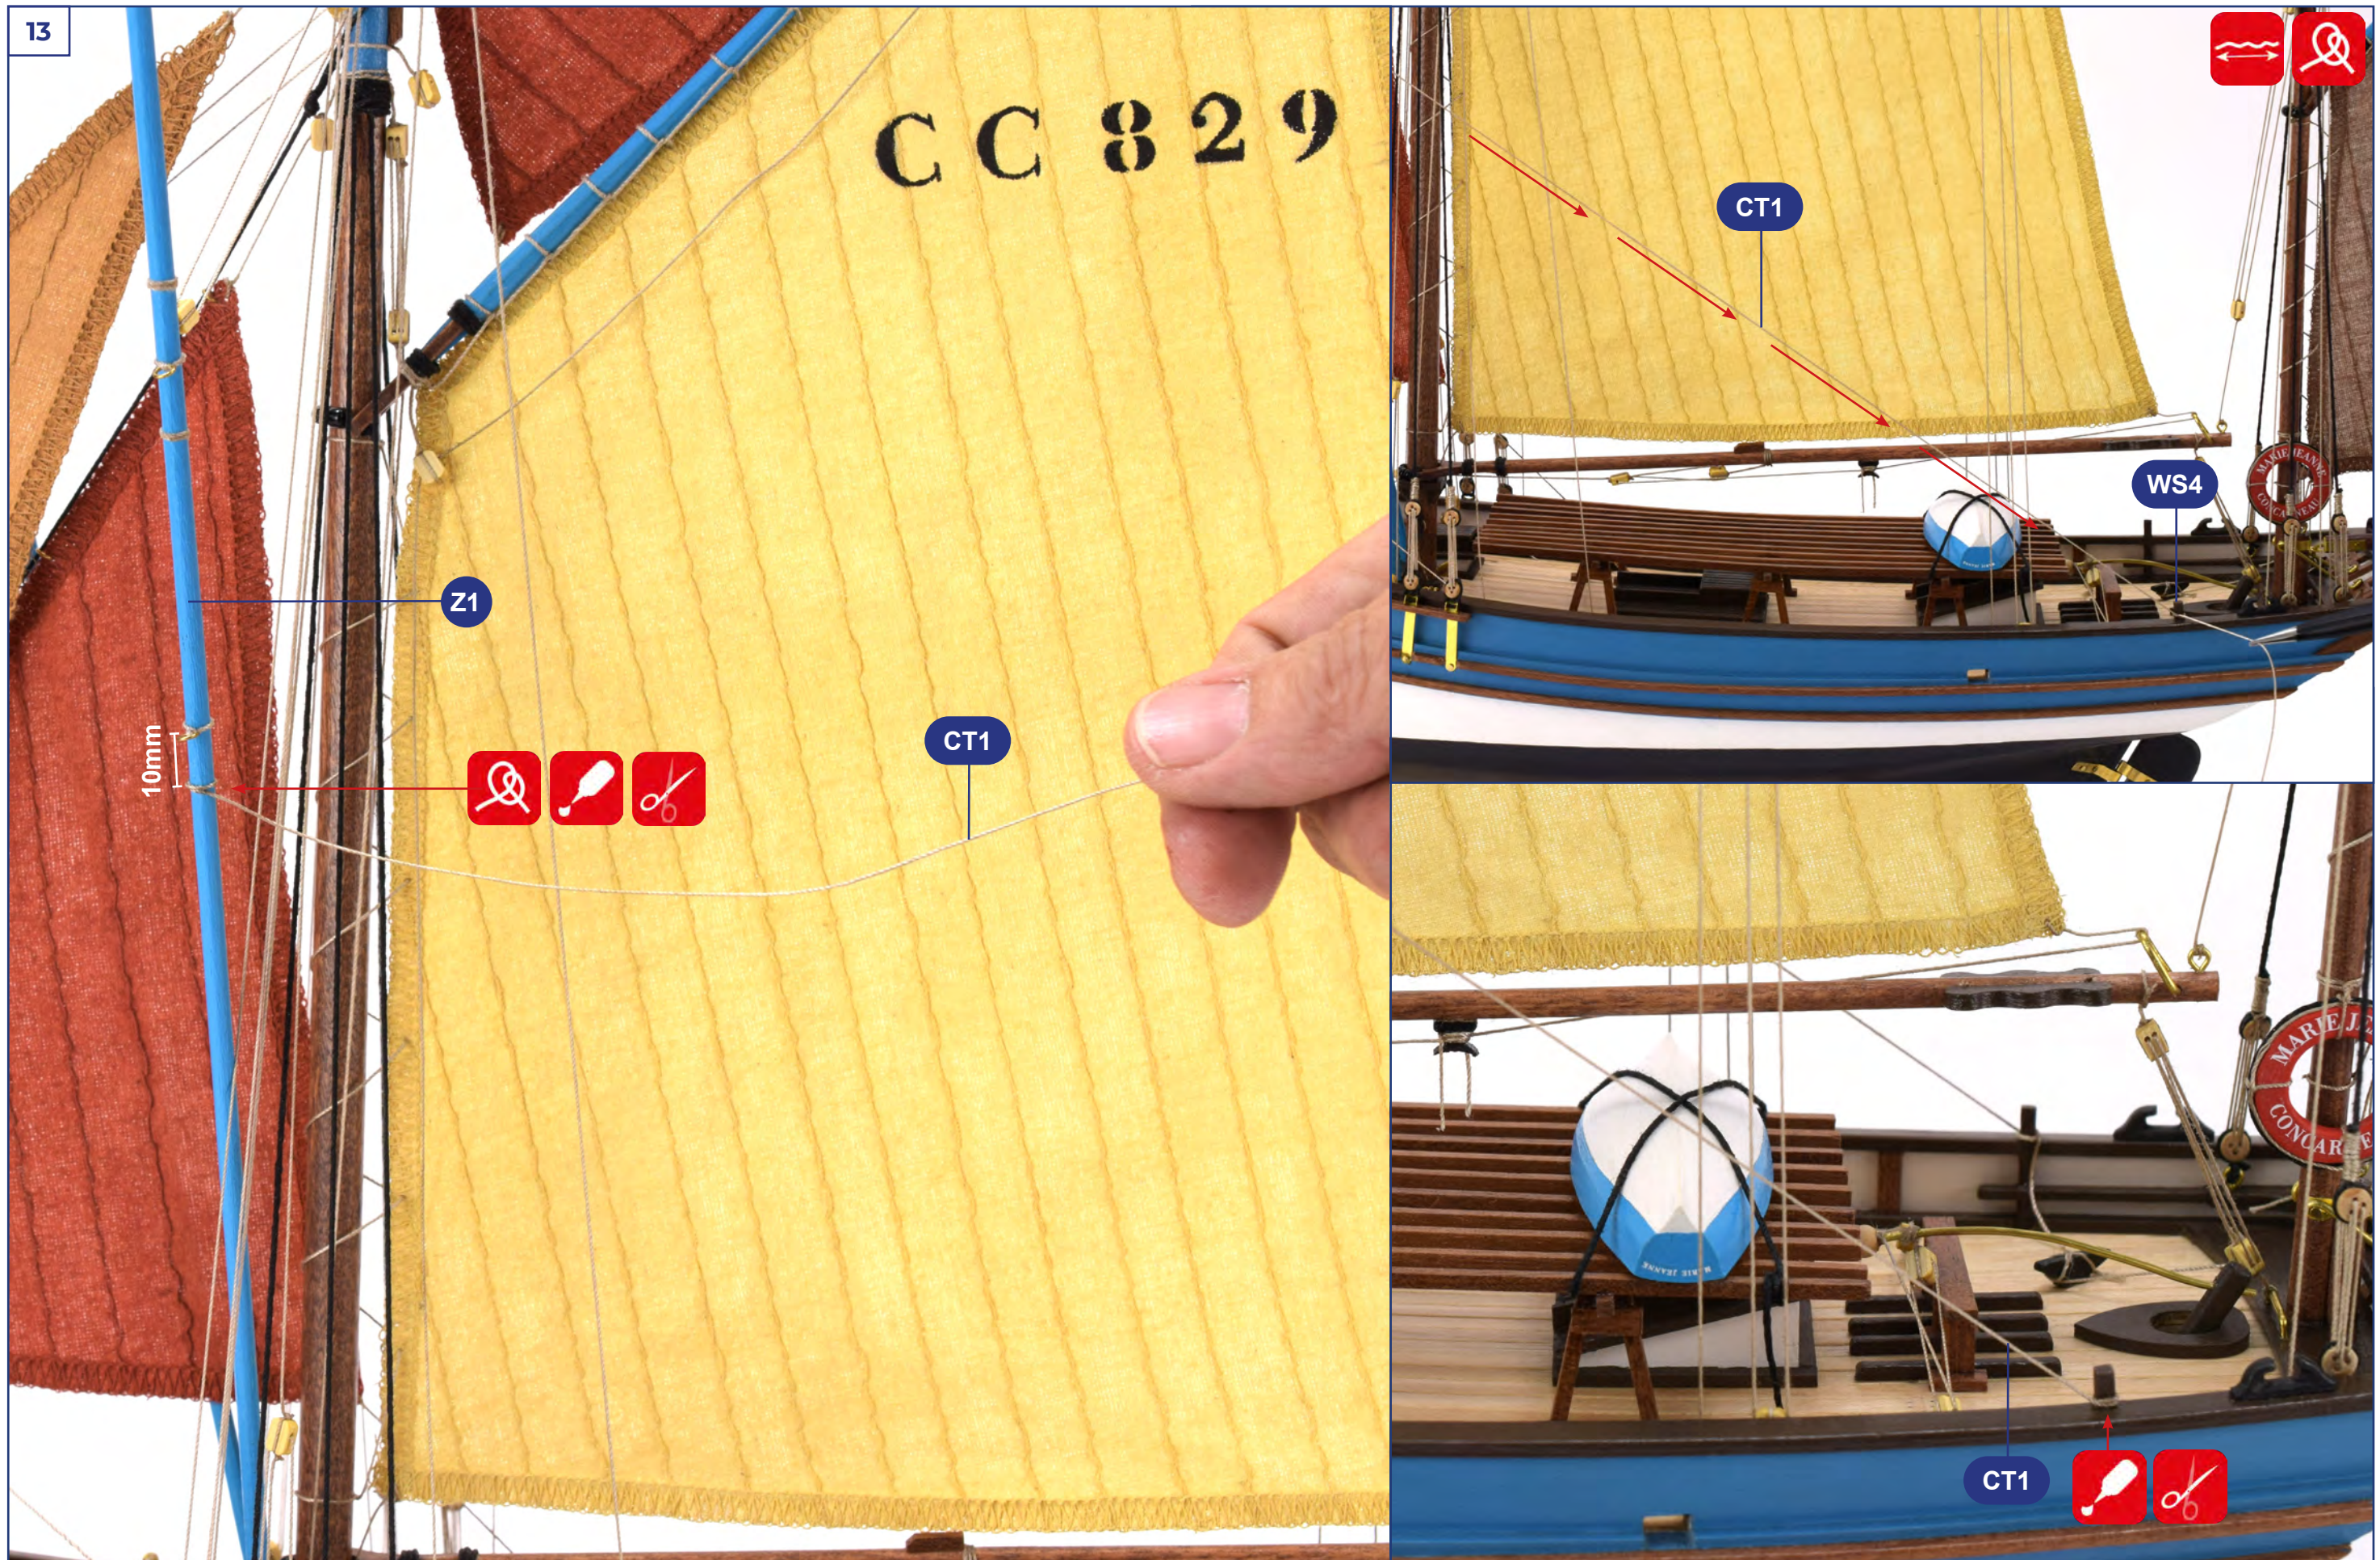

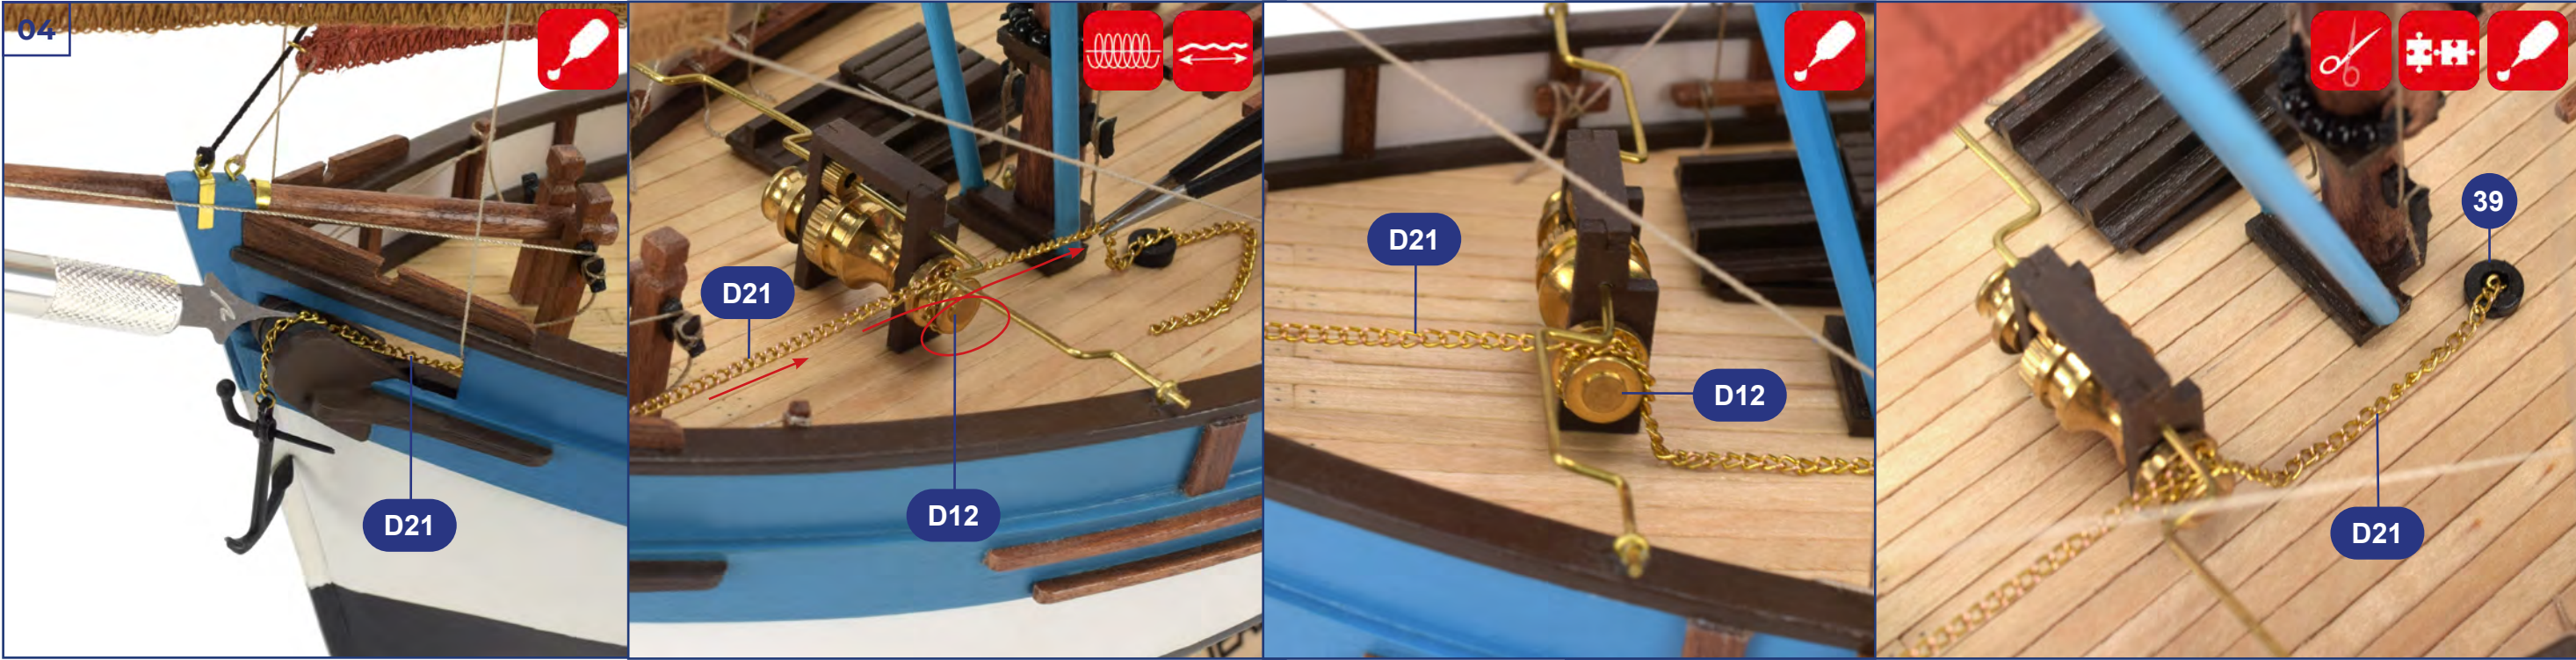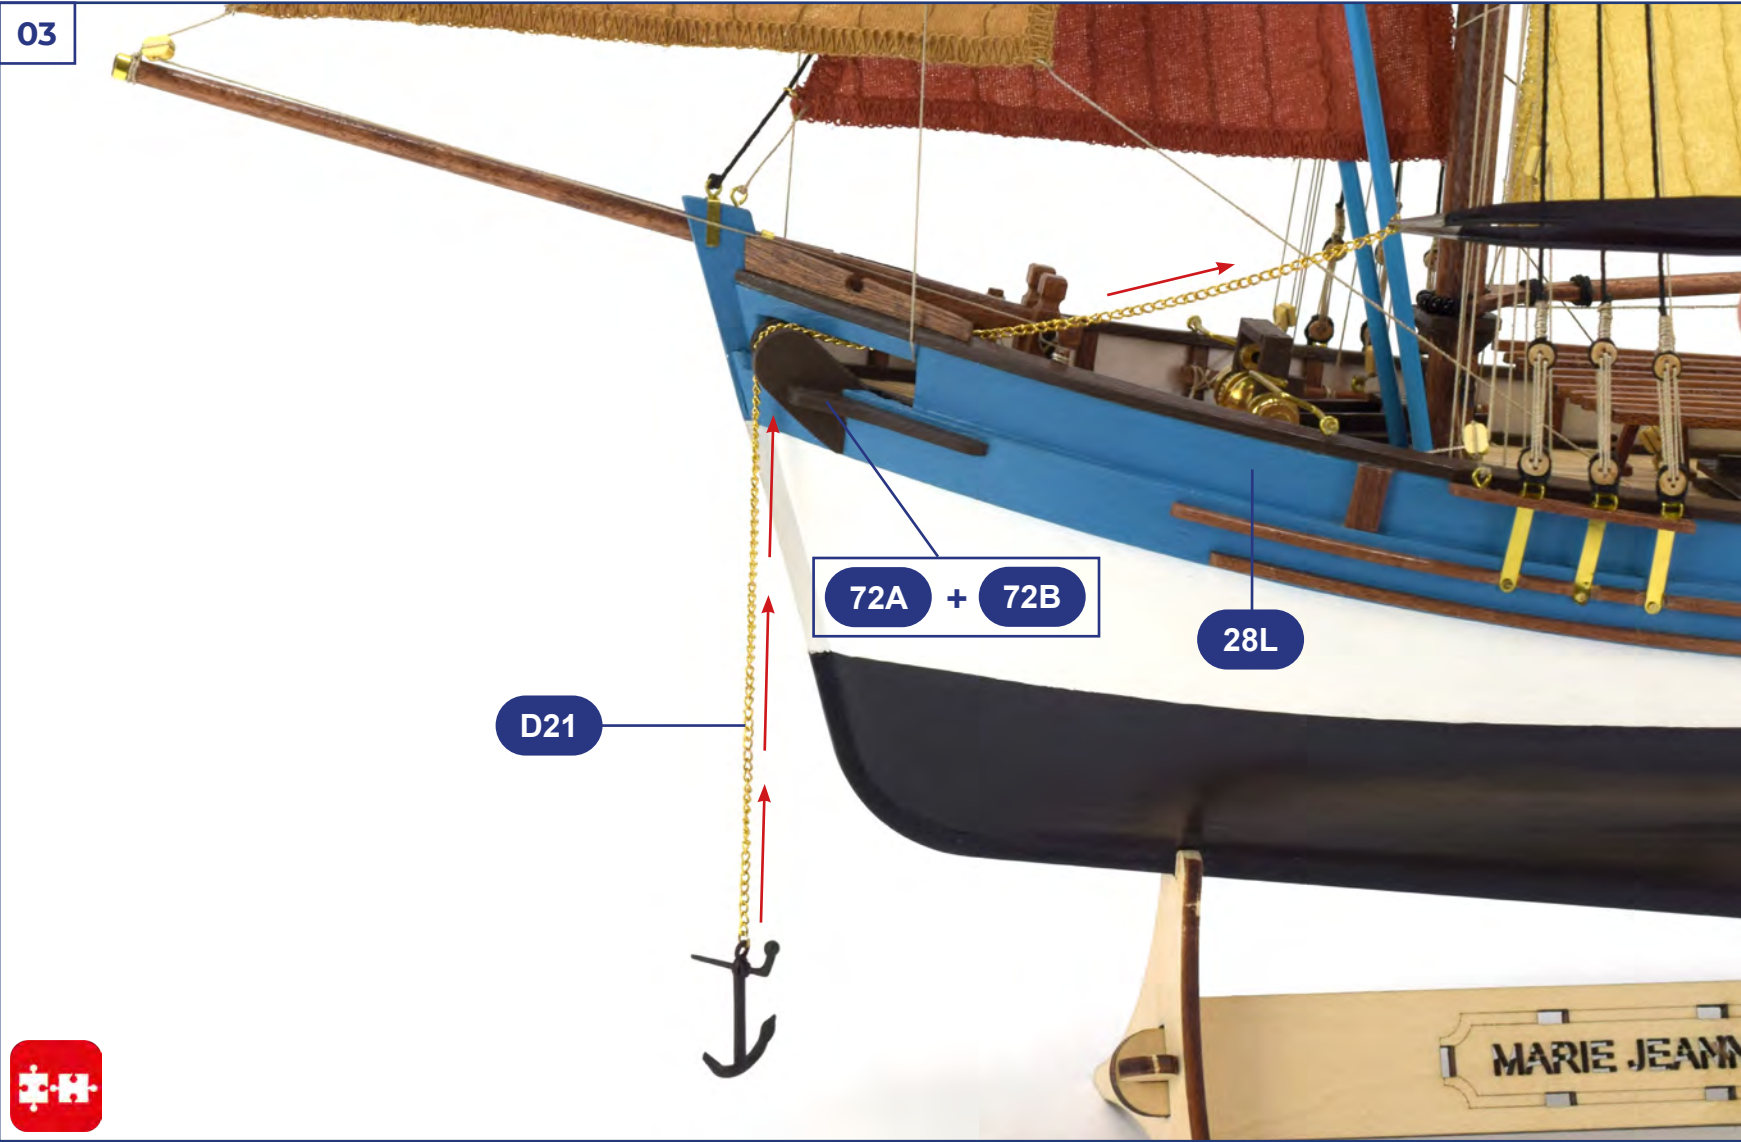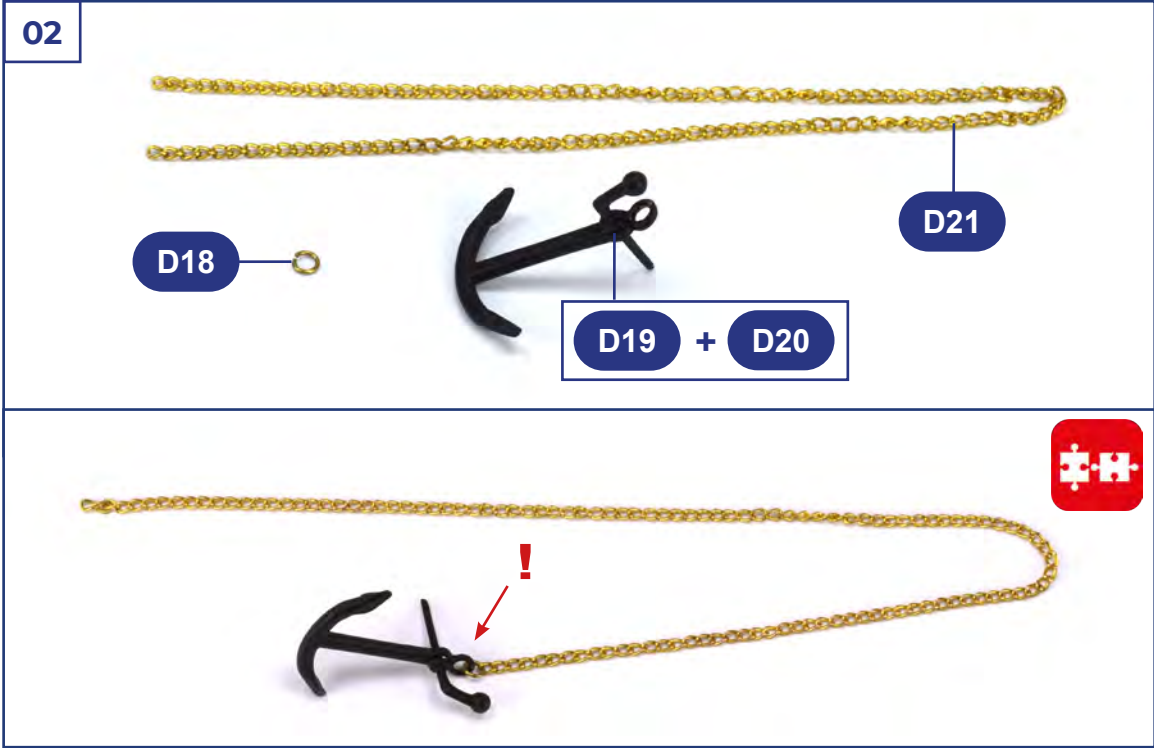


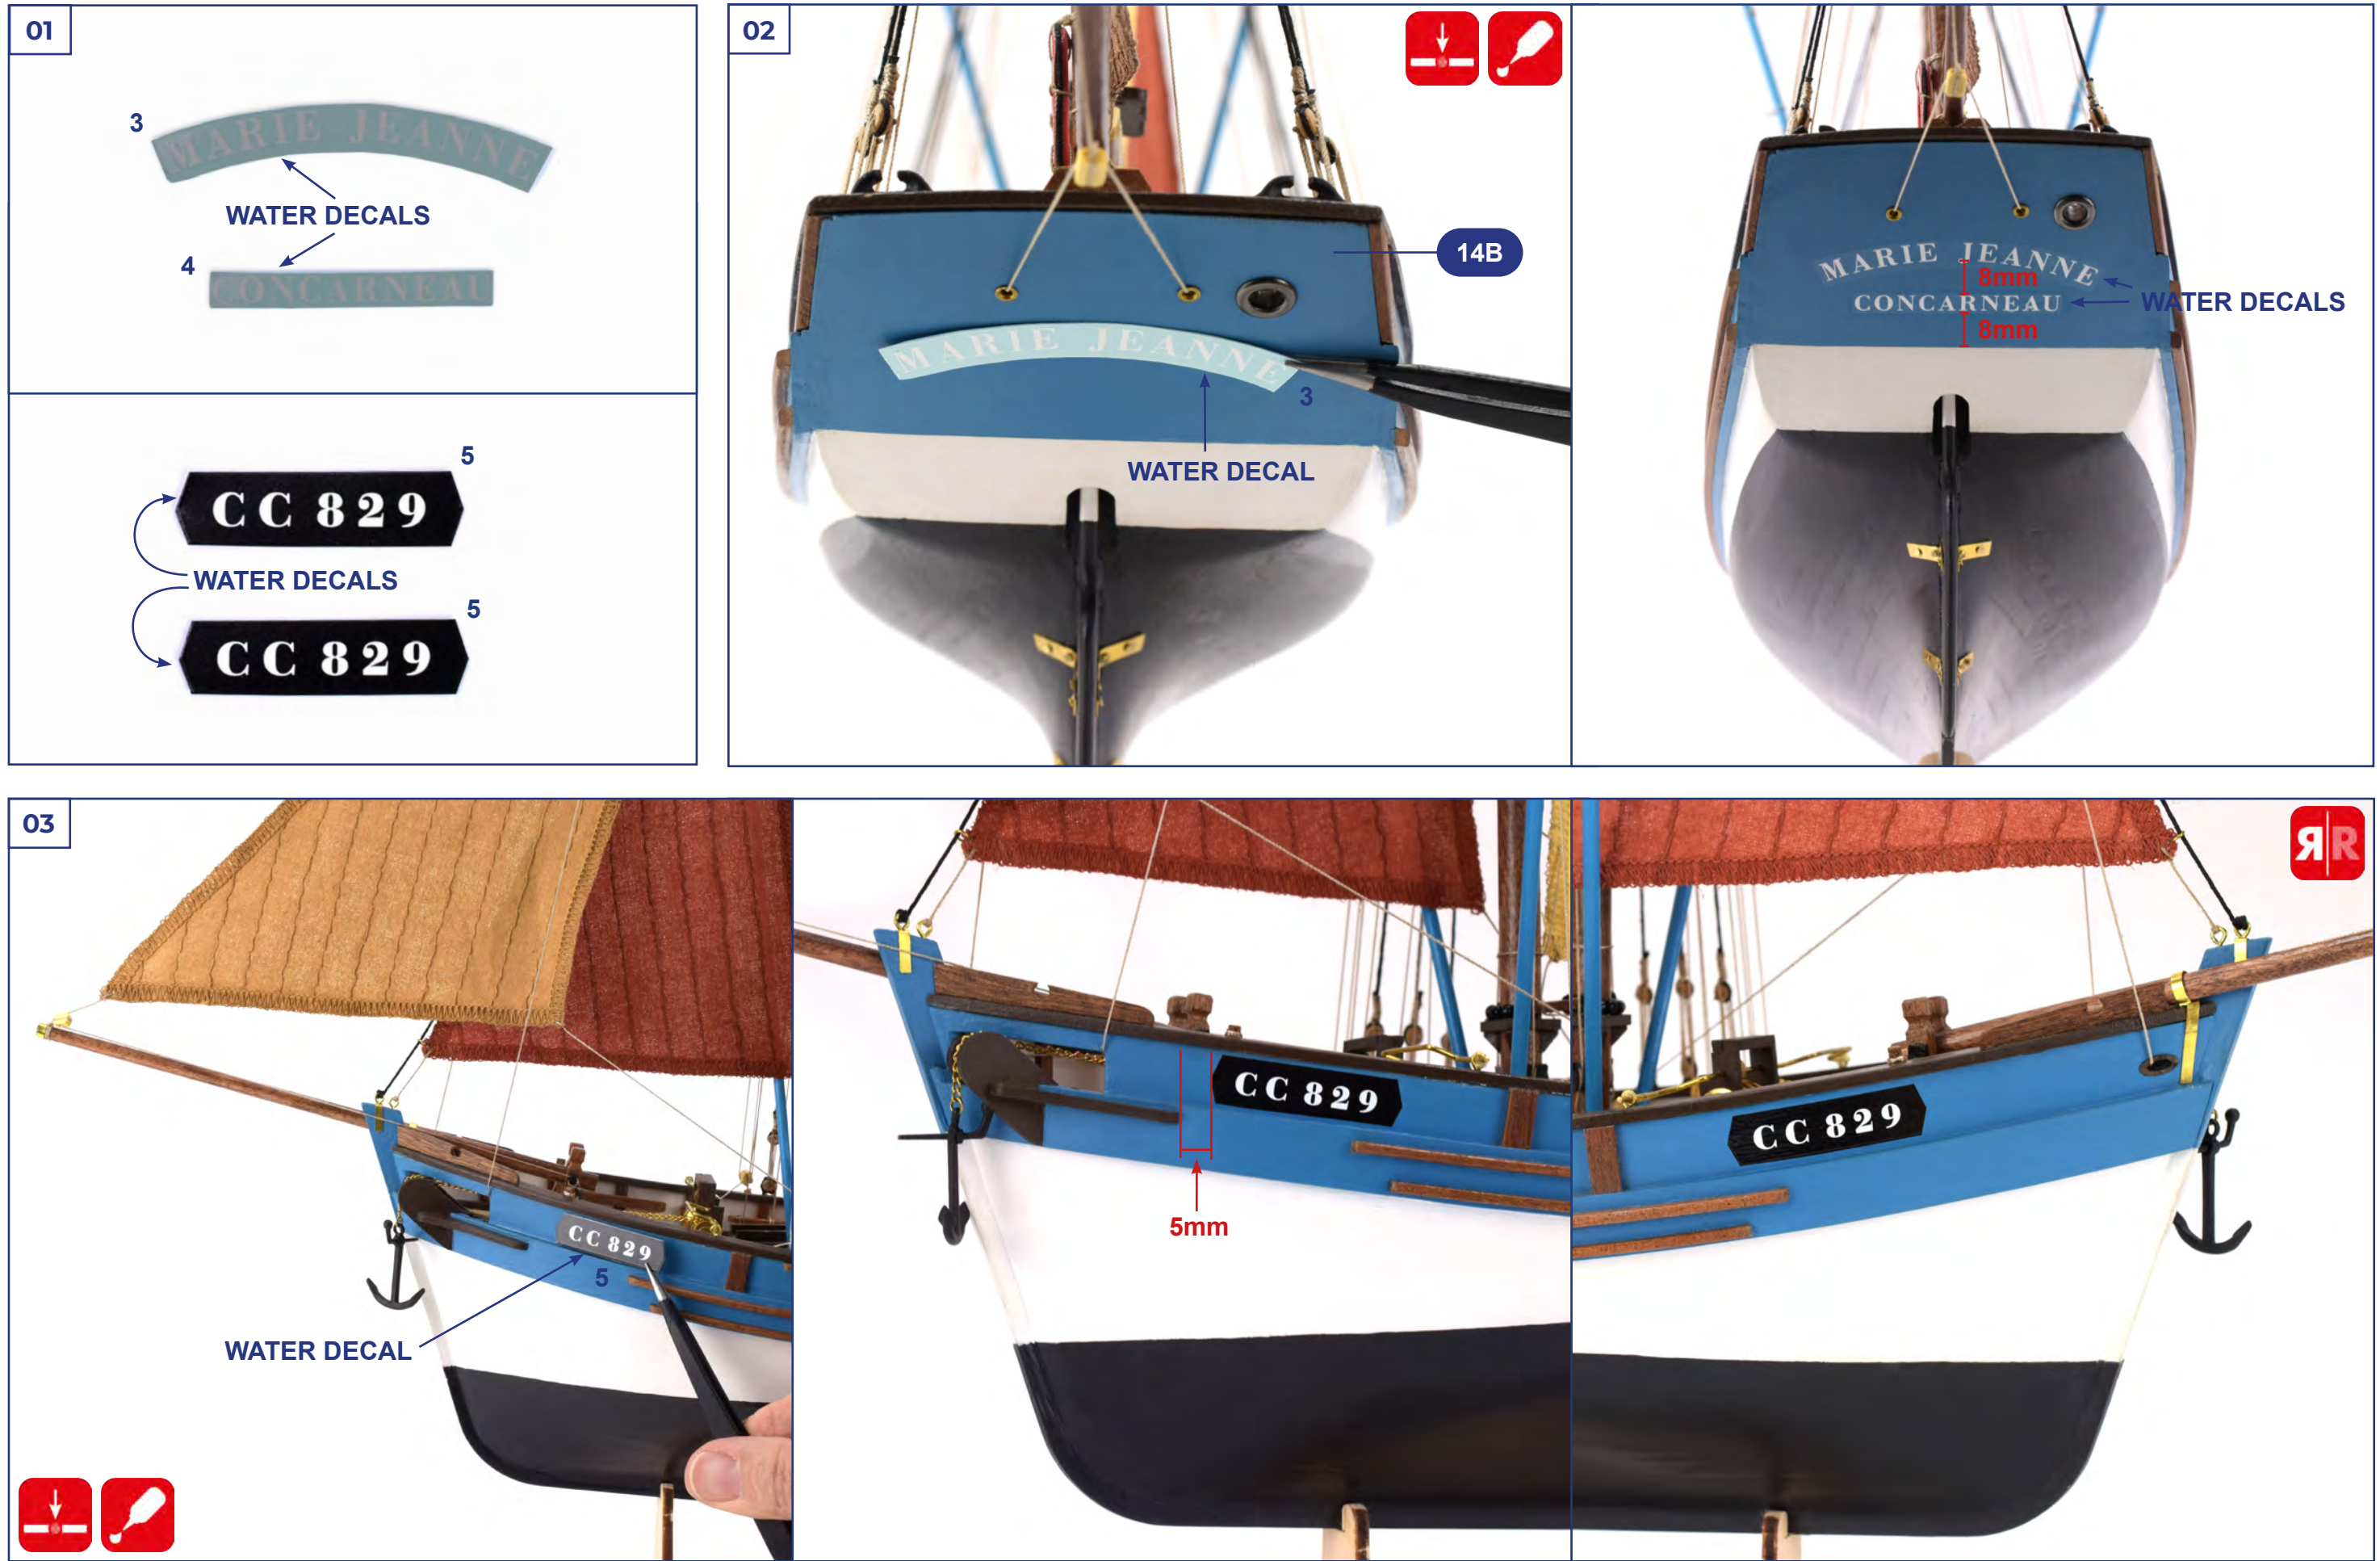

01

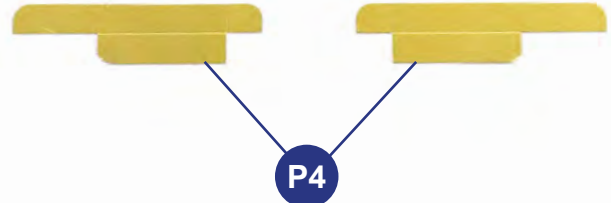

P4

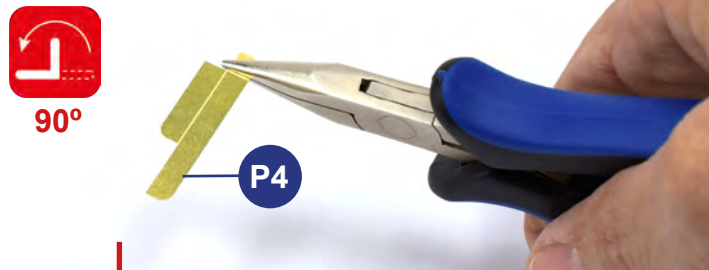


90°

P4




90°

P4

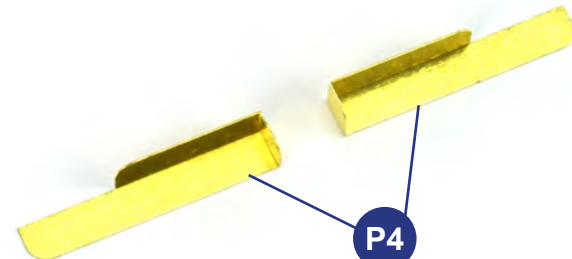

P4

02

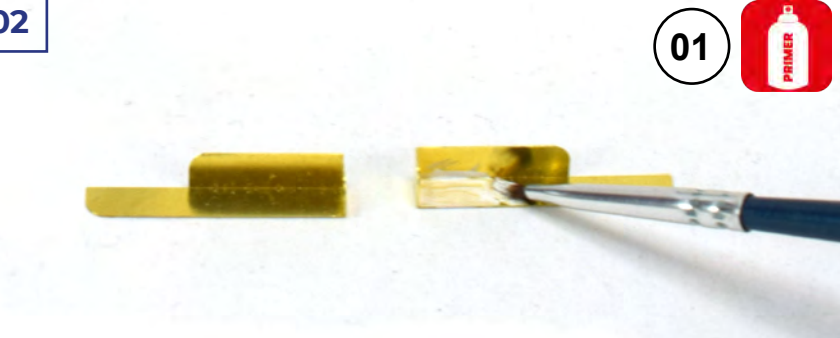


01

PRIMER



4


03

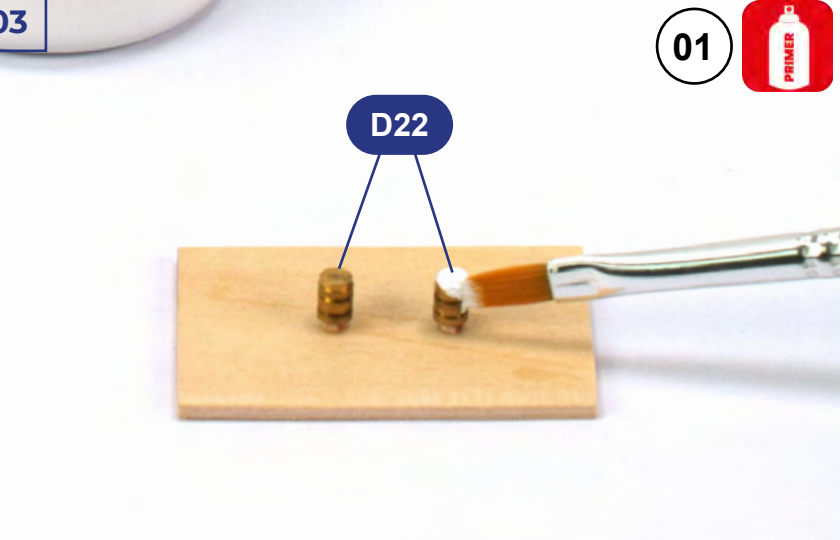

01

PRIMER

D22

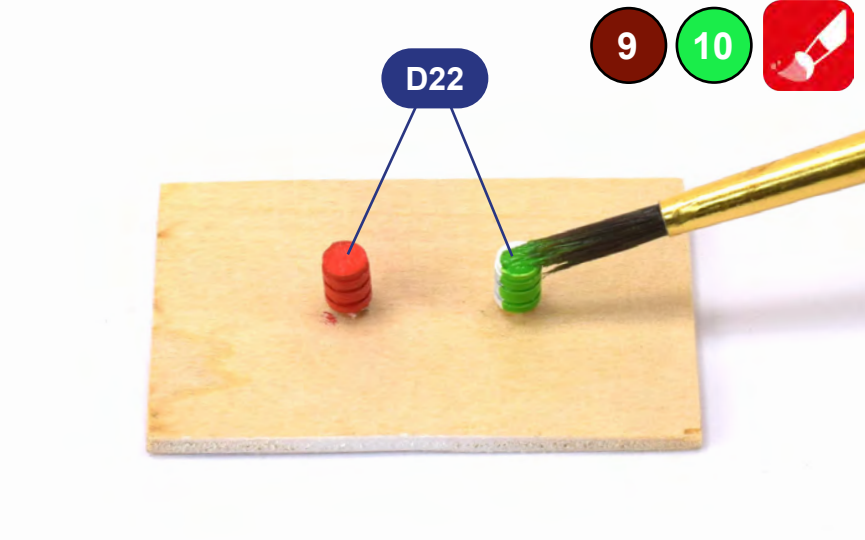


9

10

D22

04

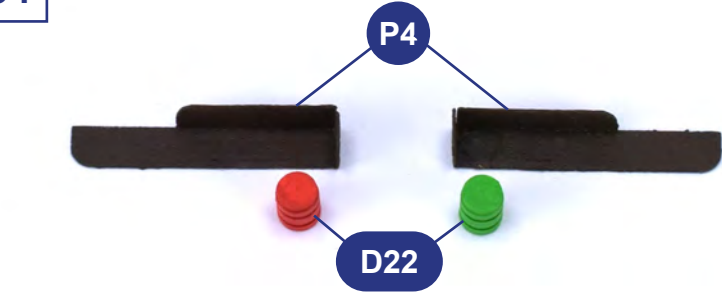

P4

D22
















P4 + D22





05




P4 + D22

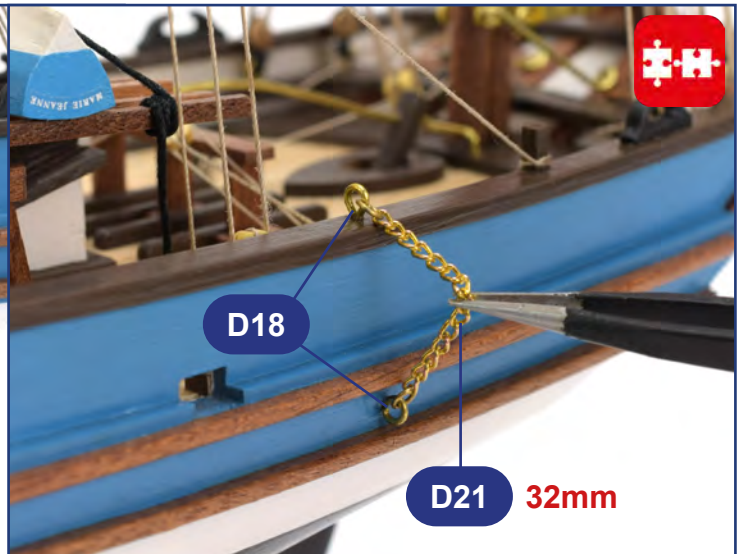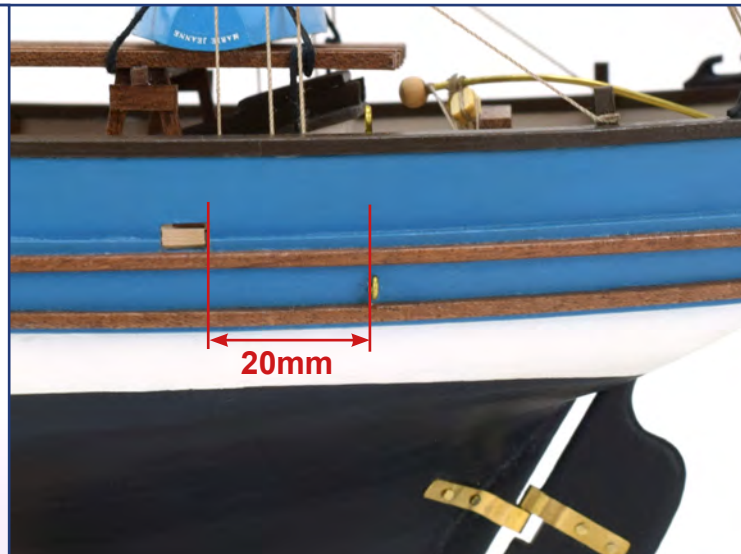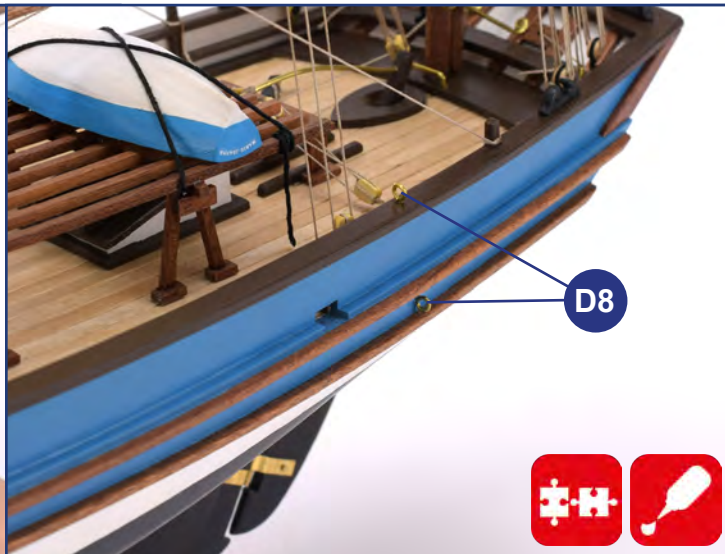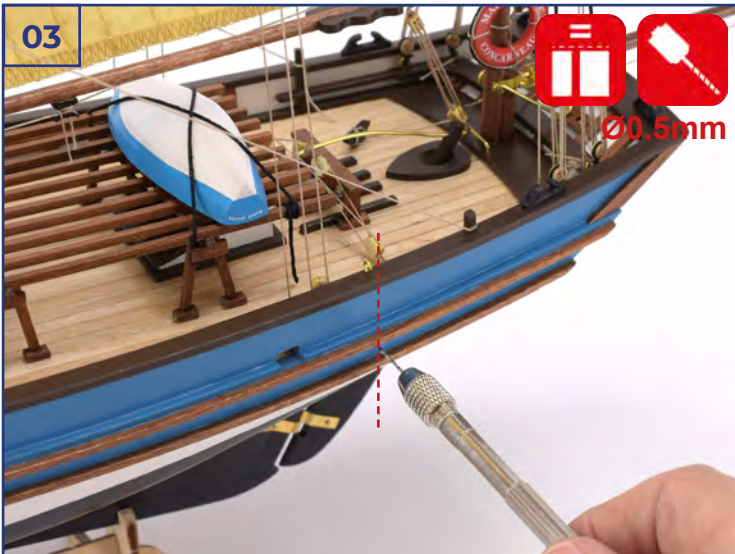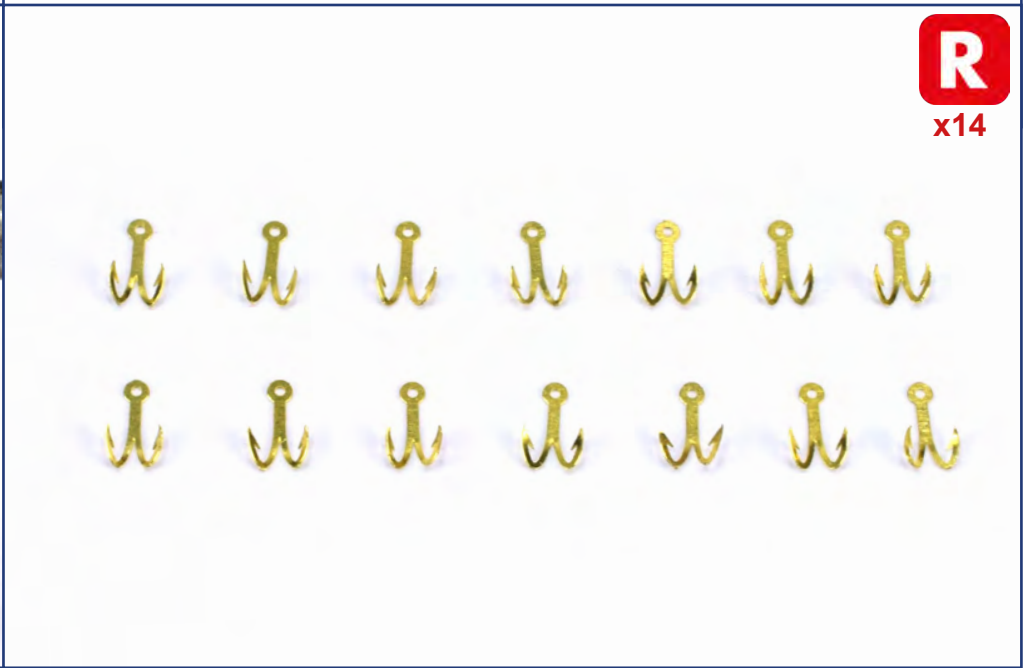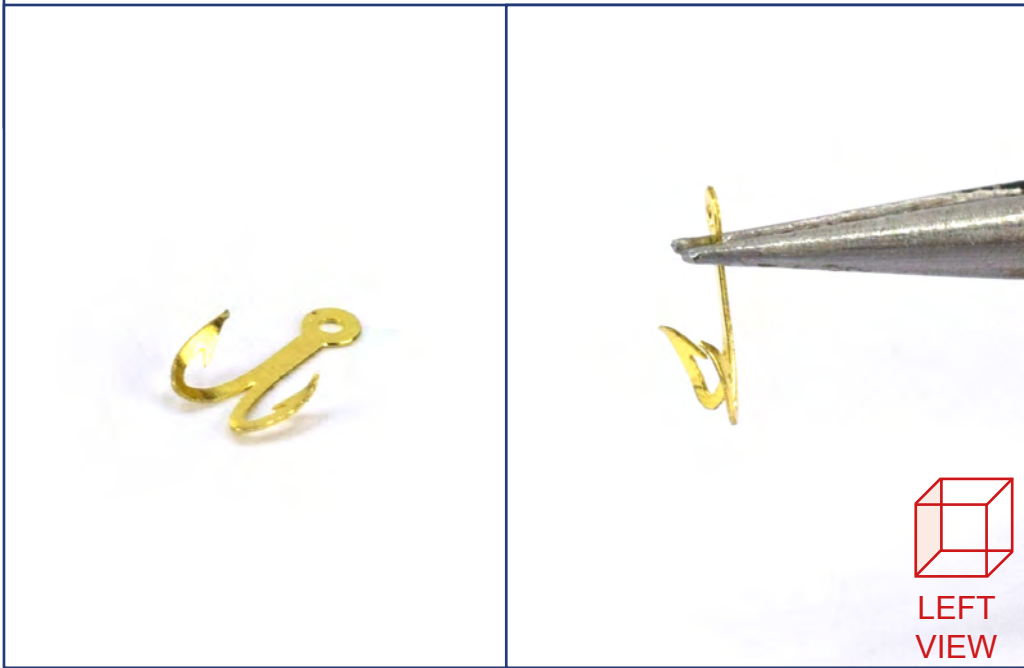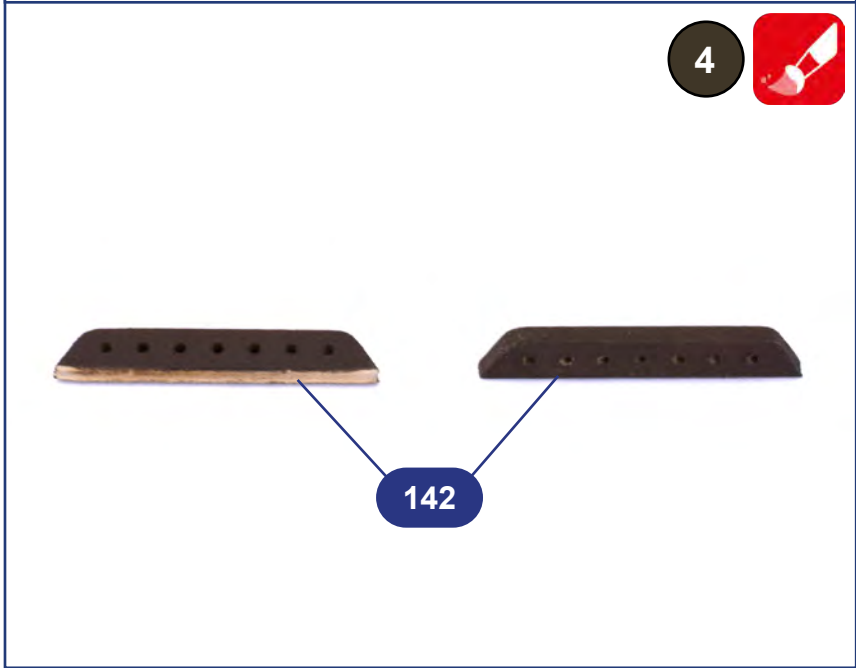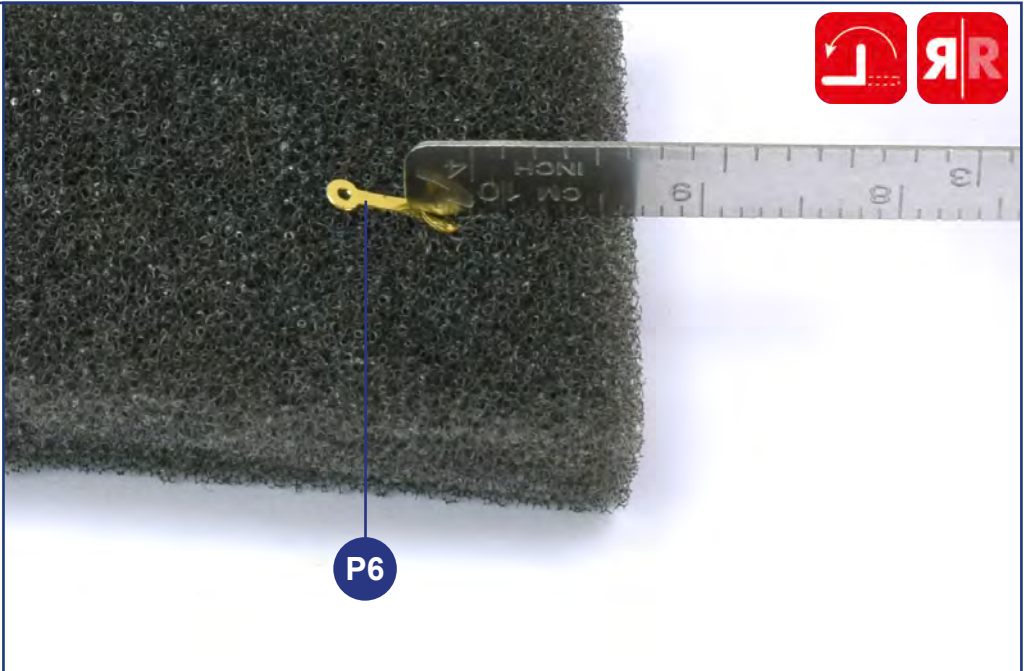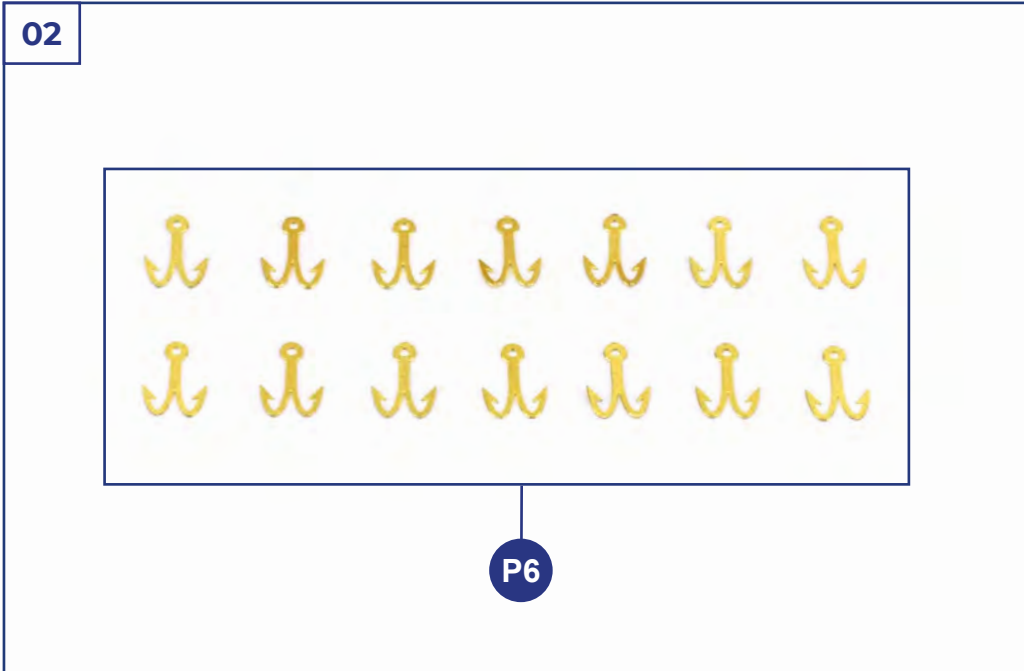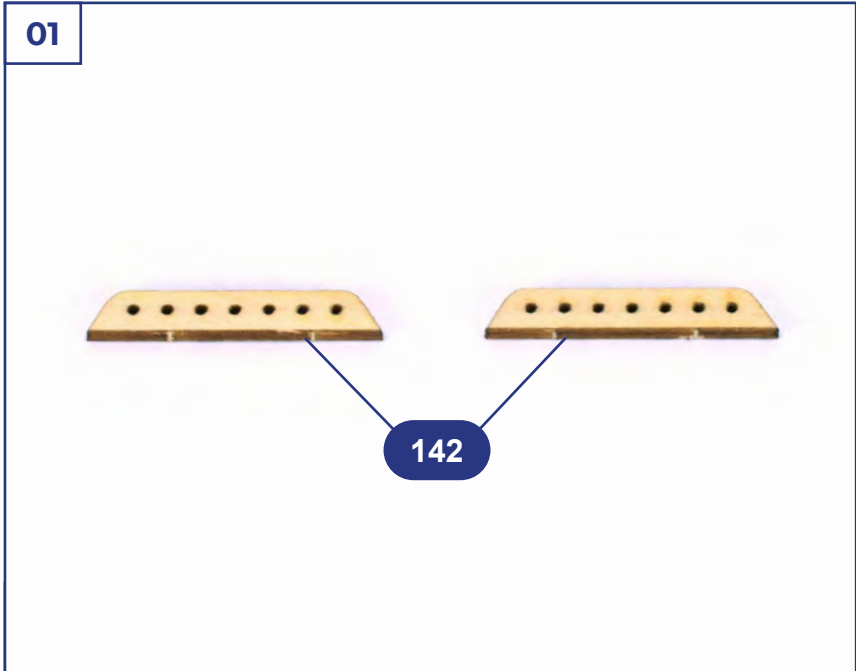

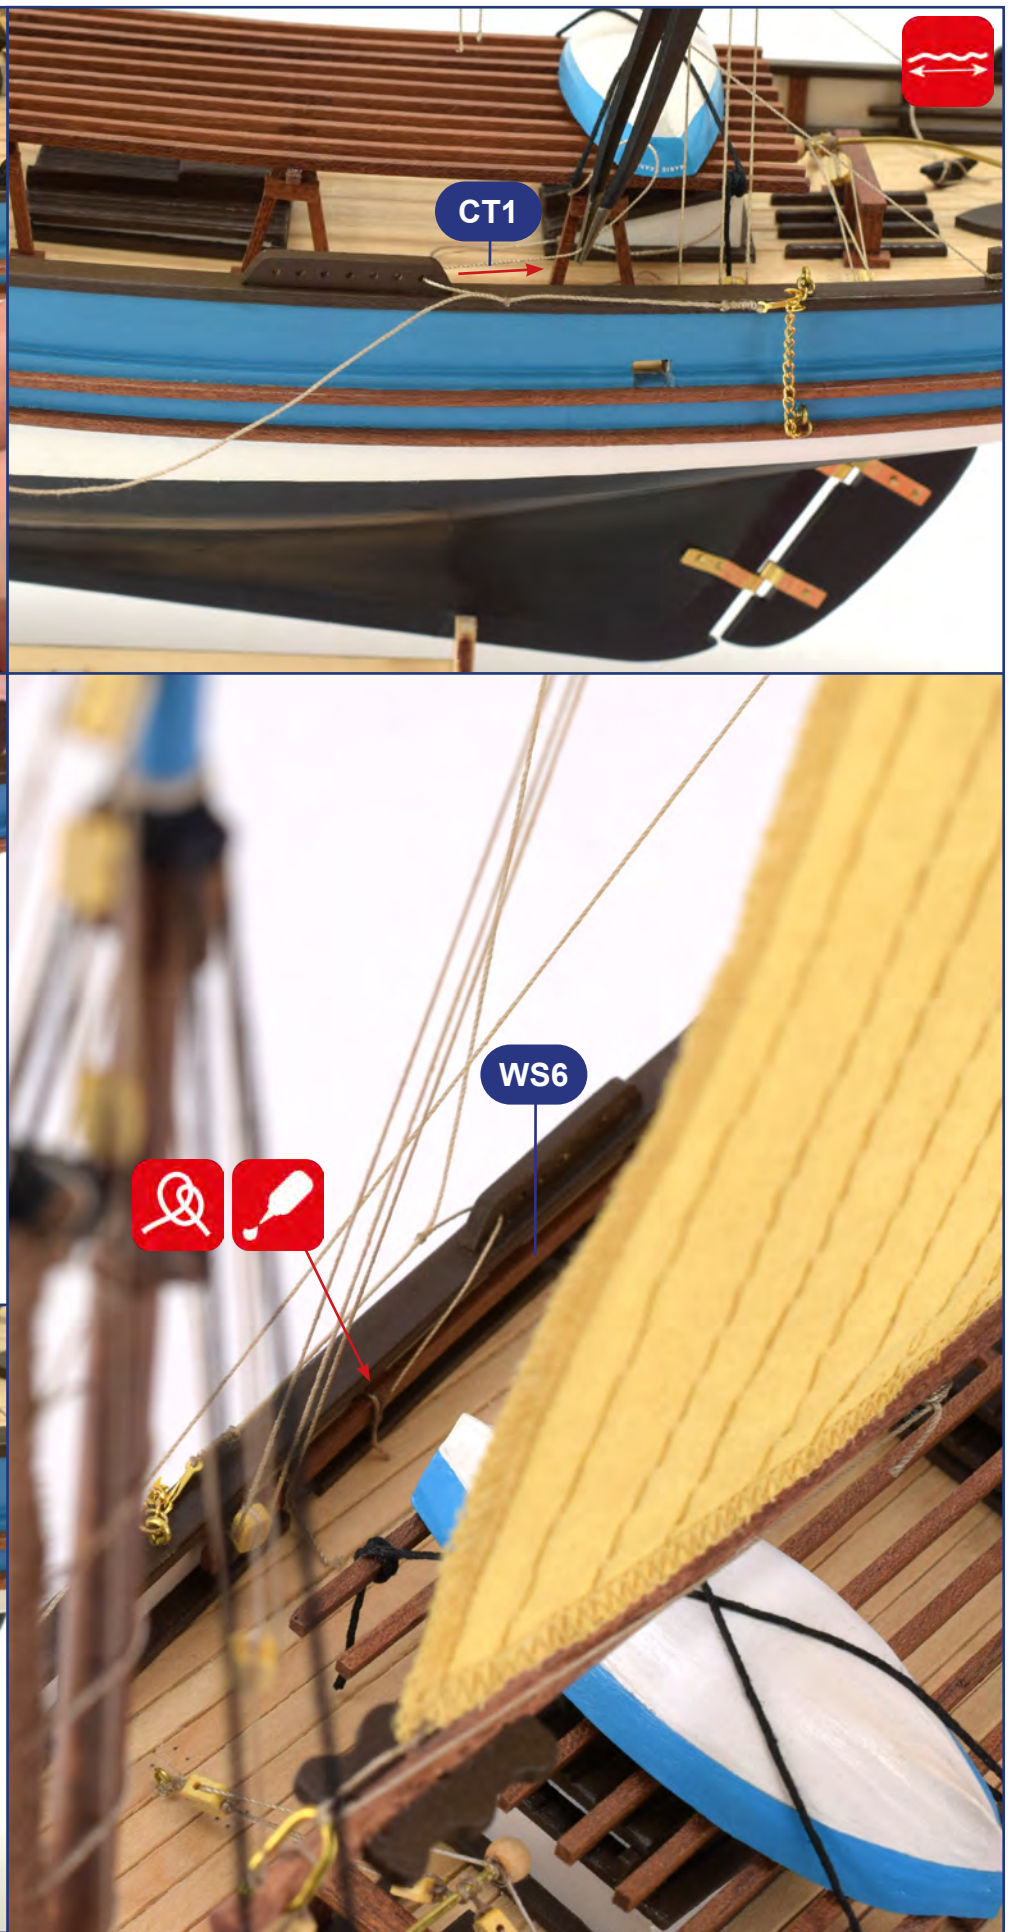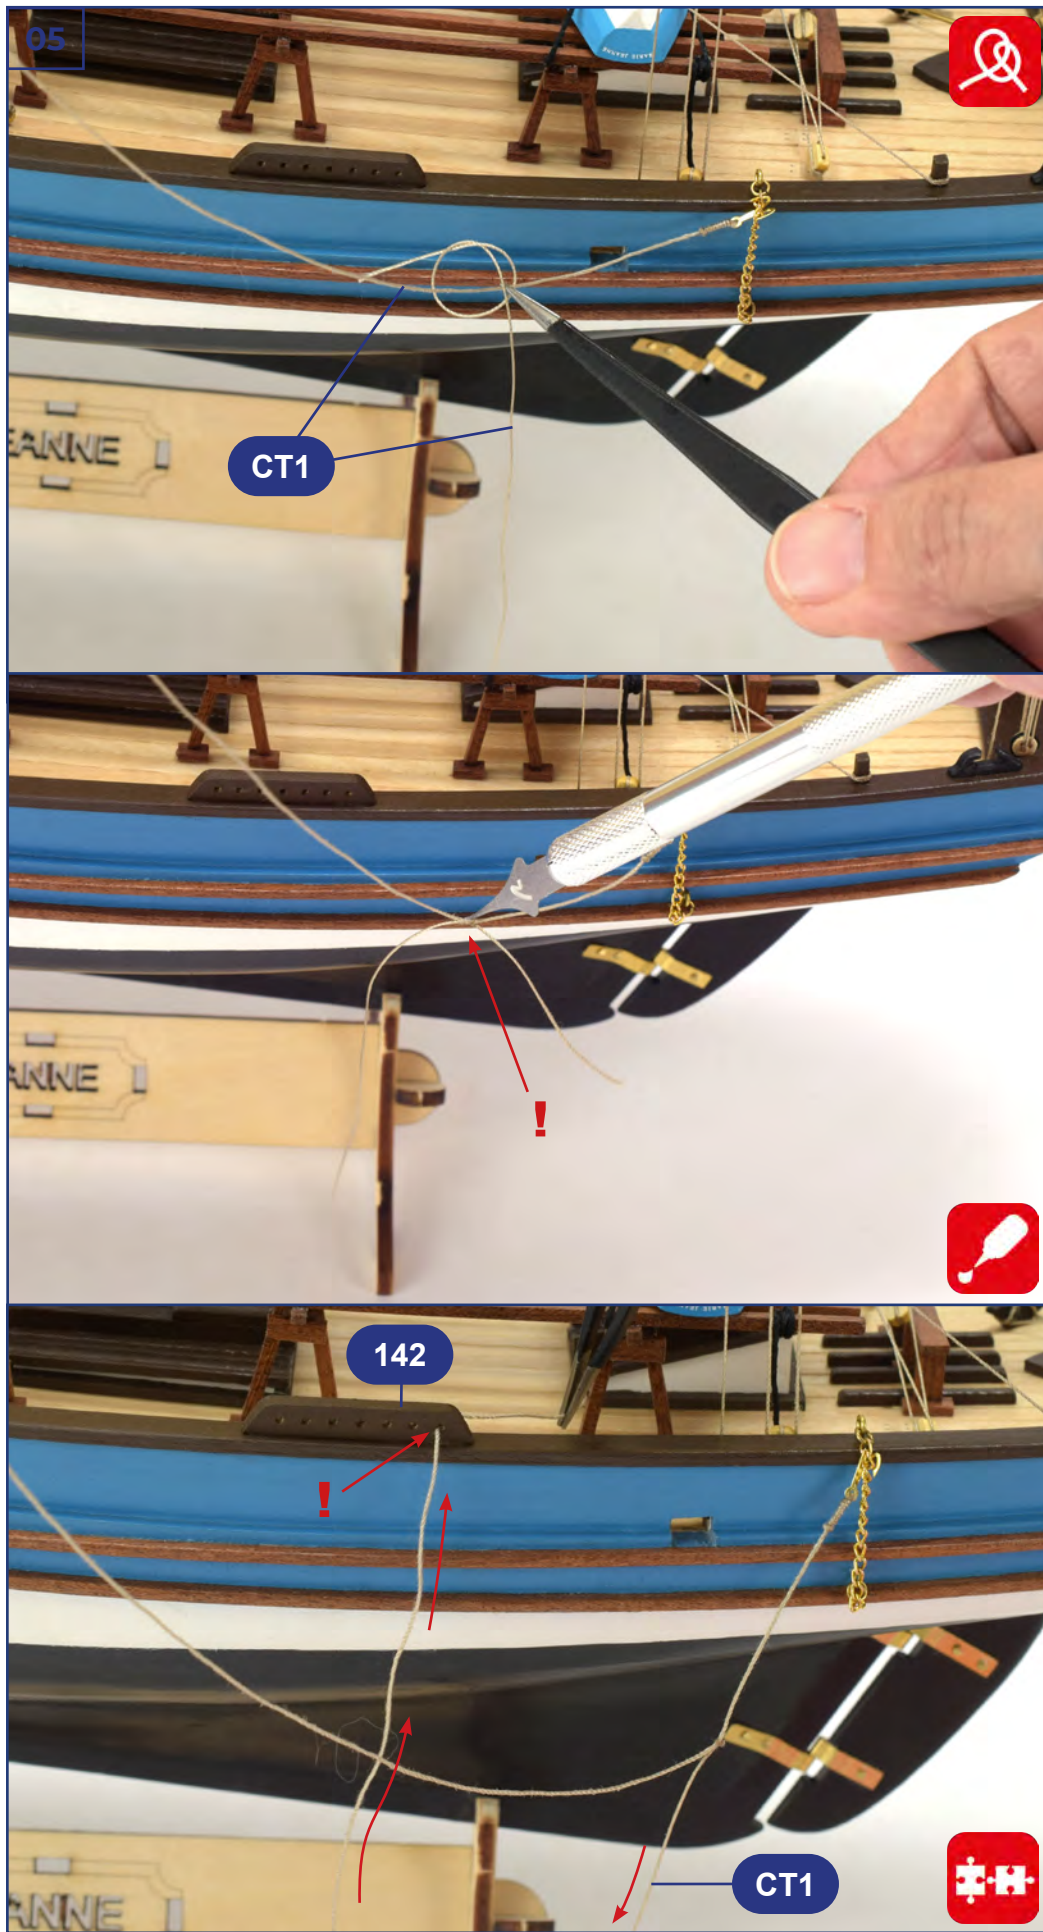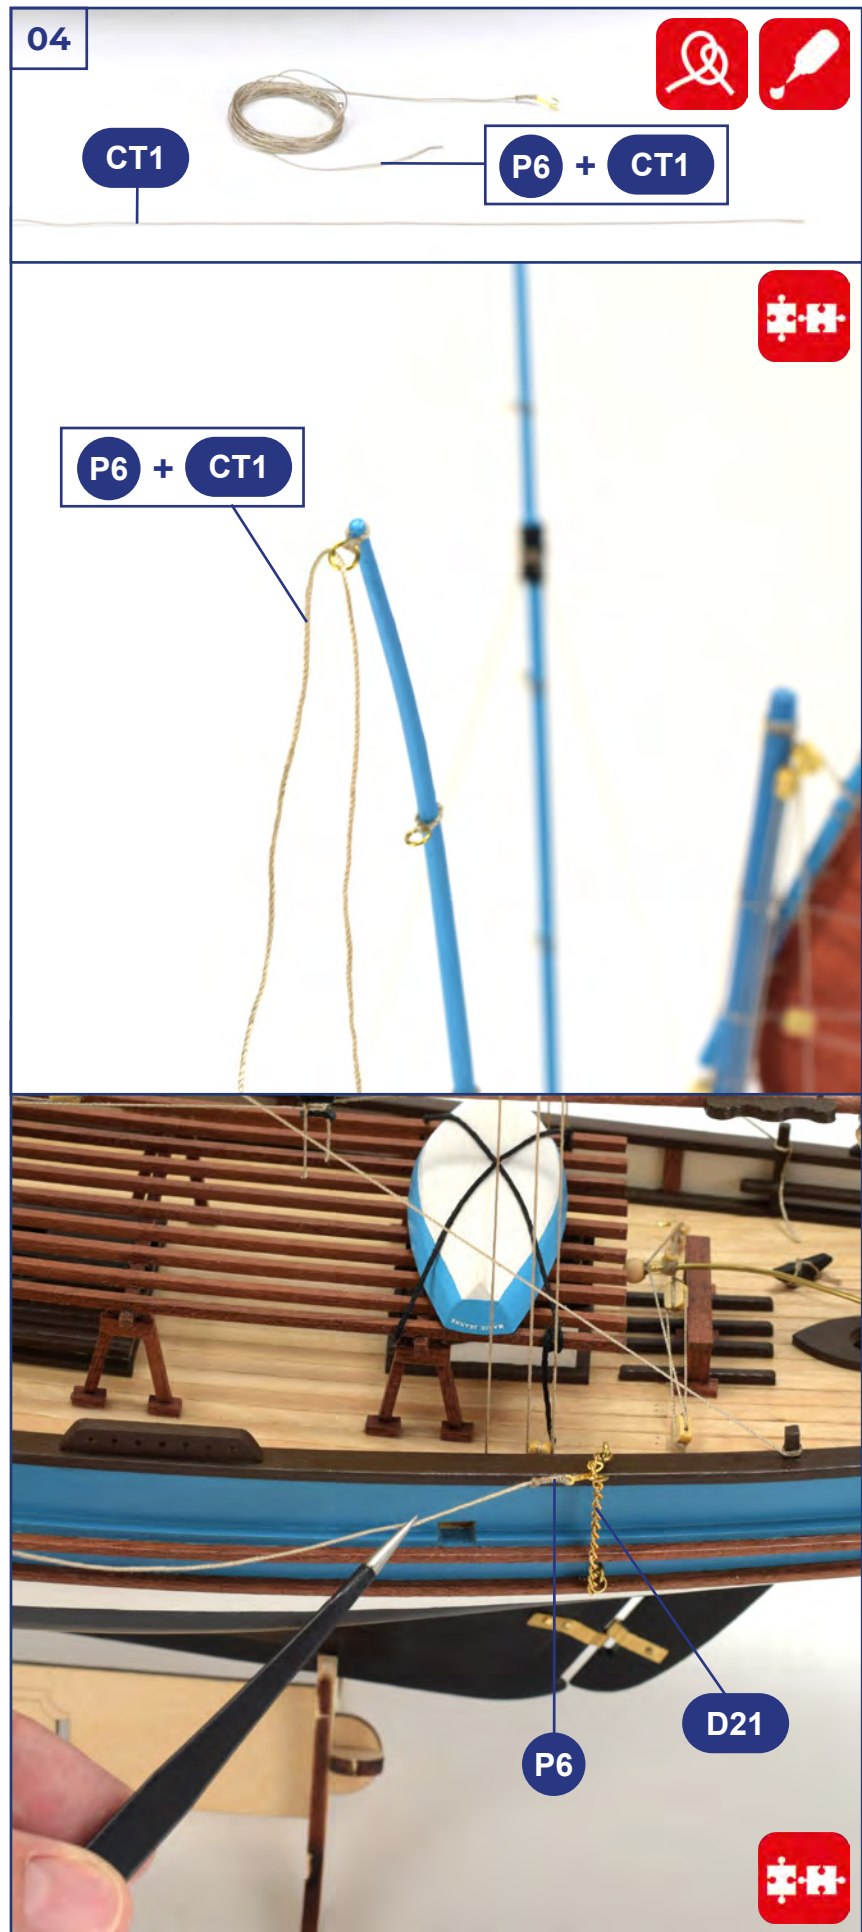

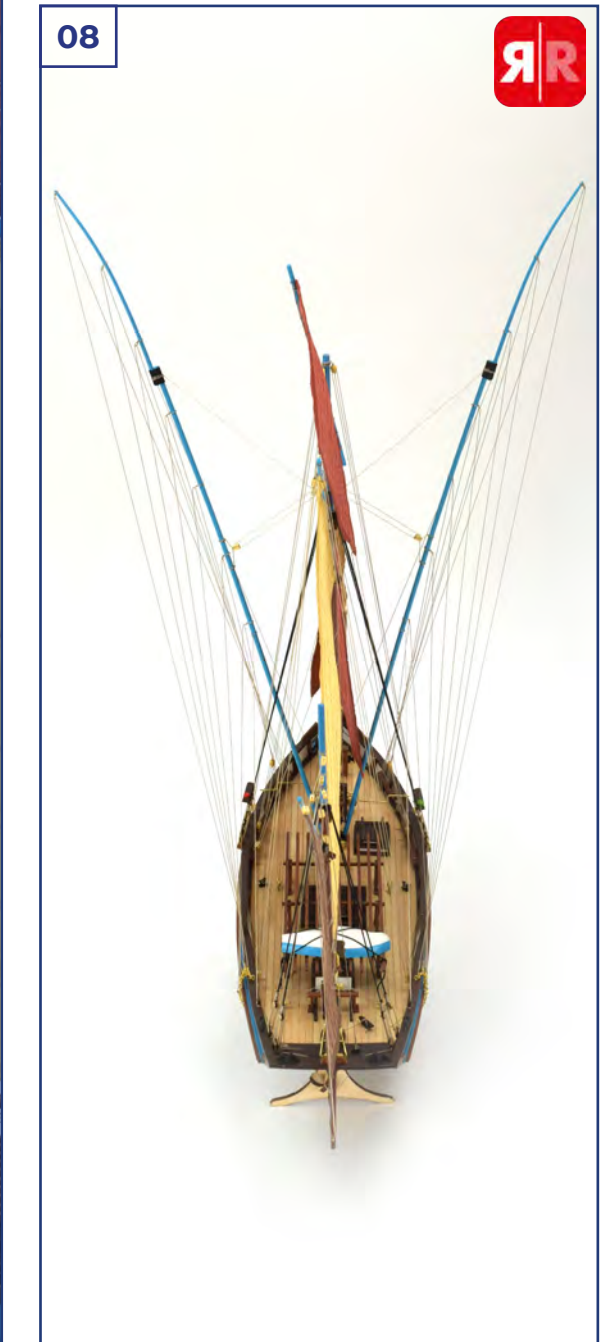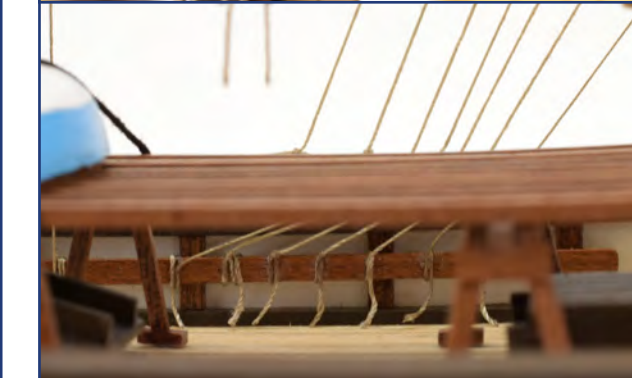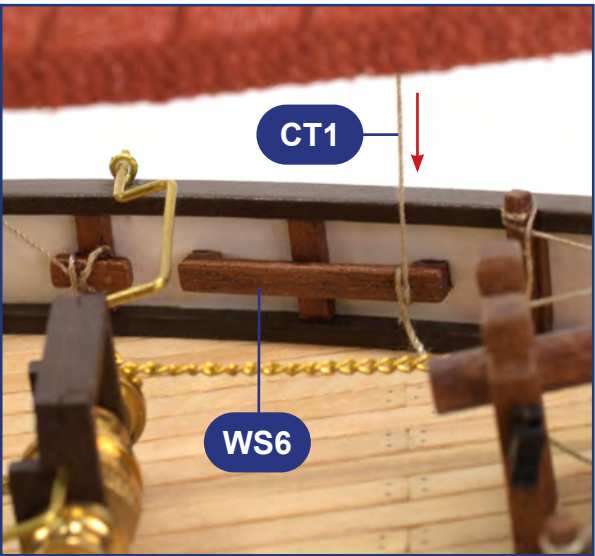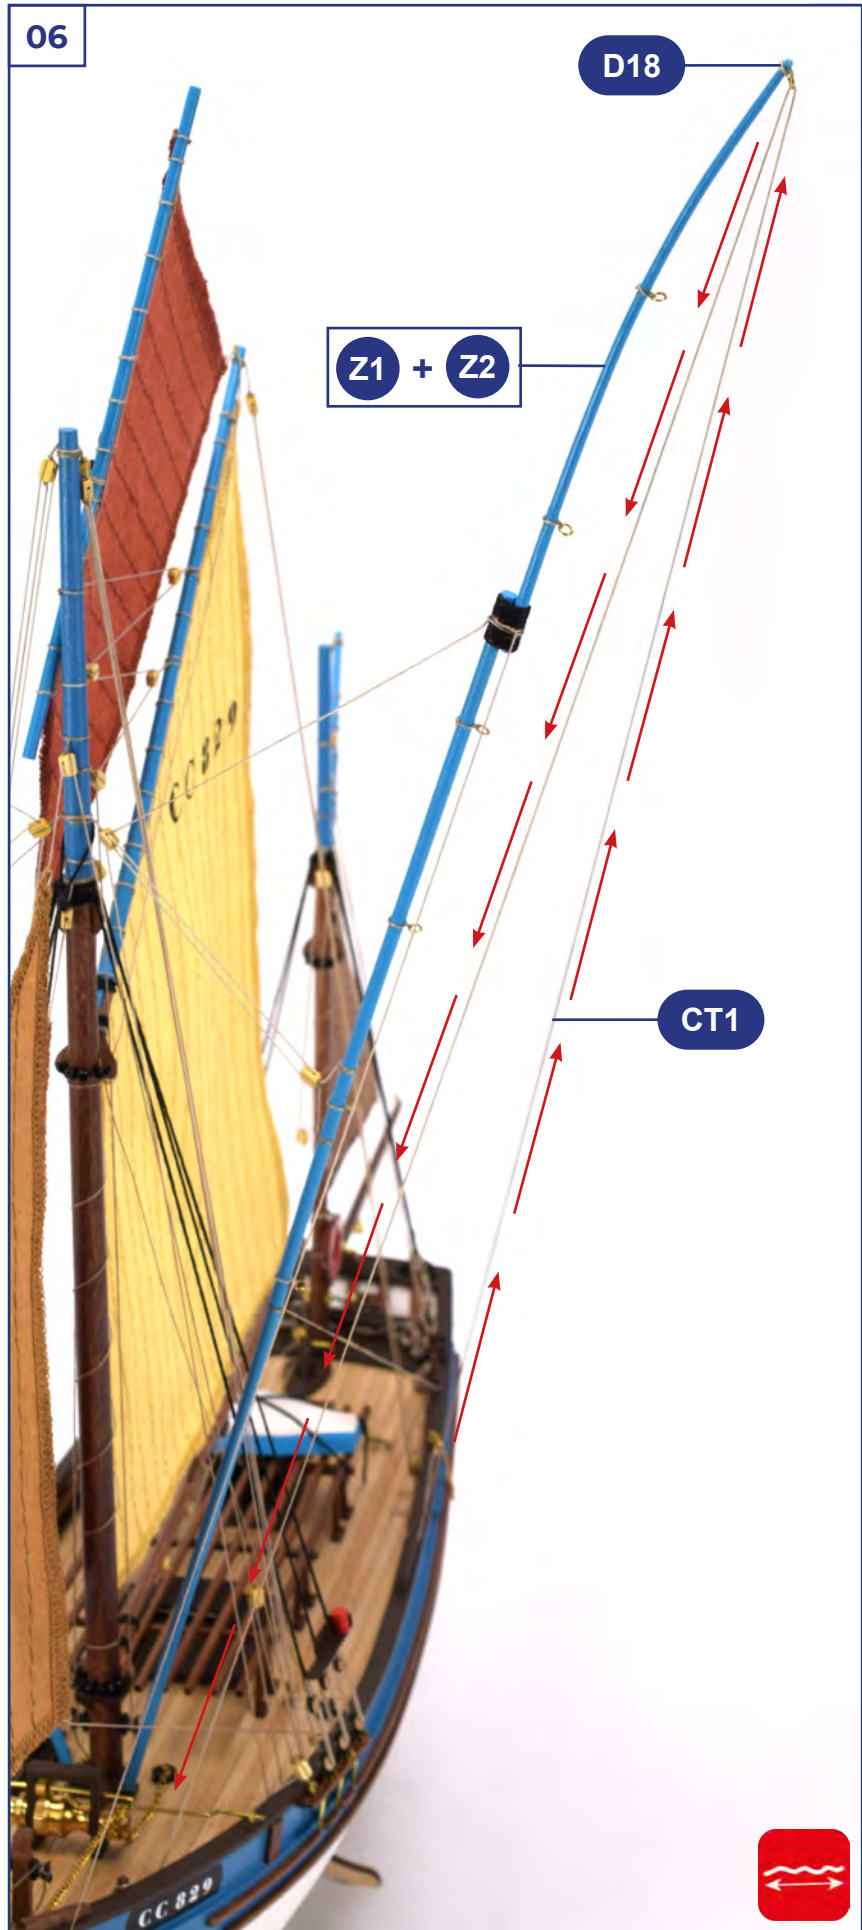

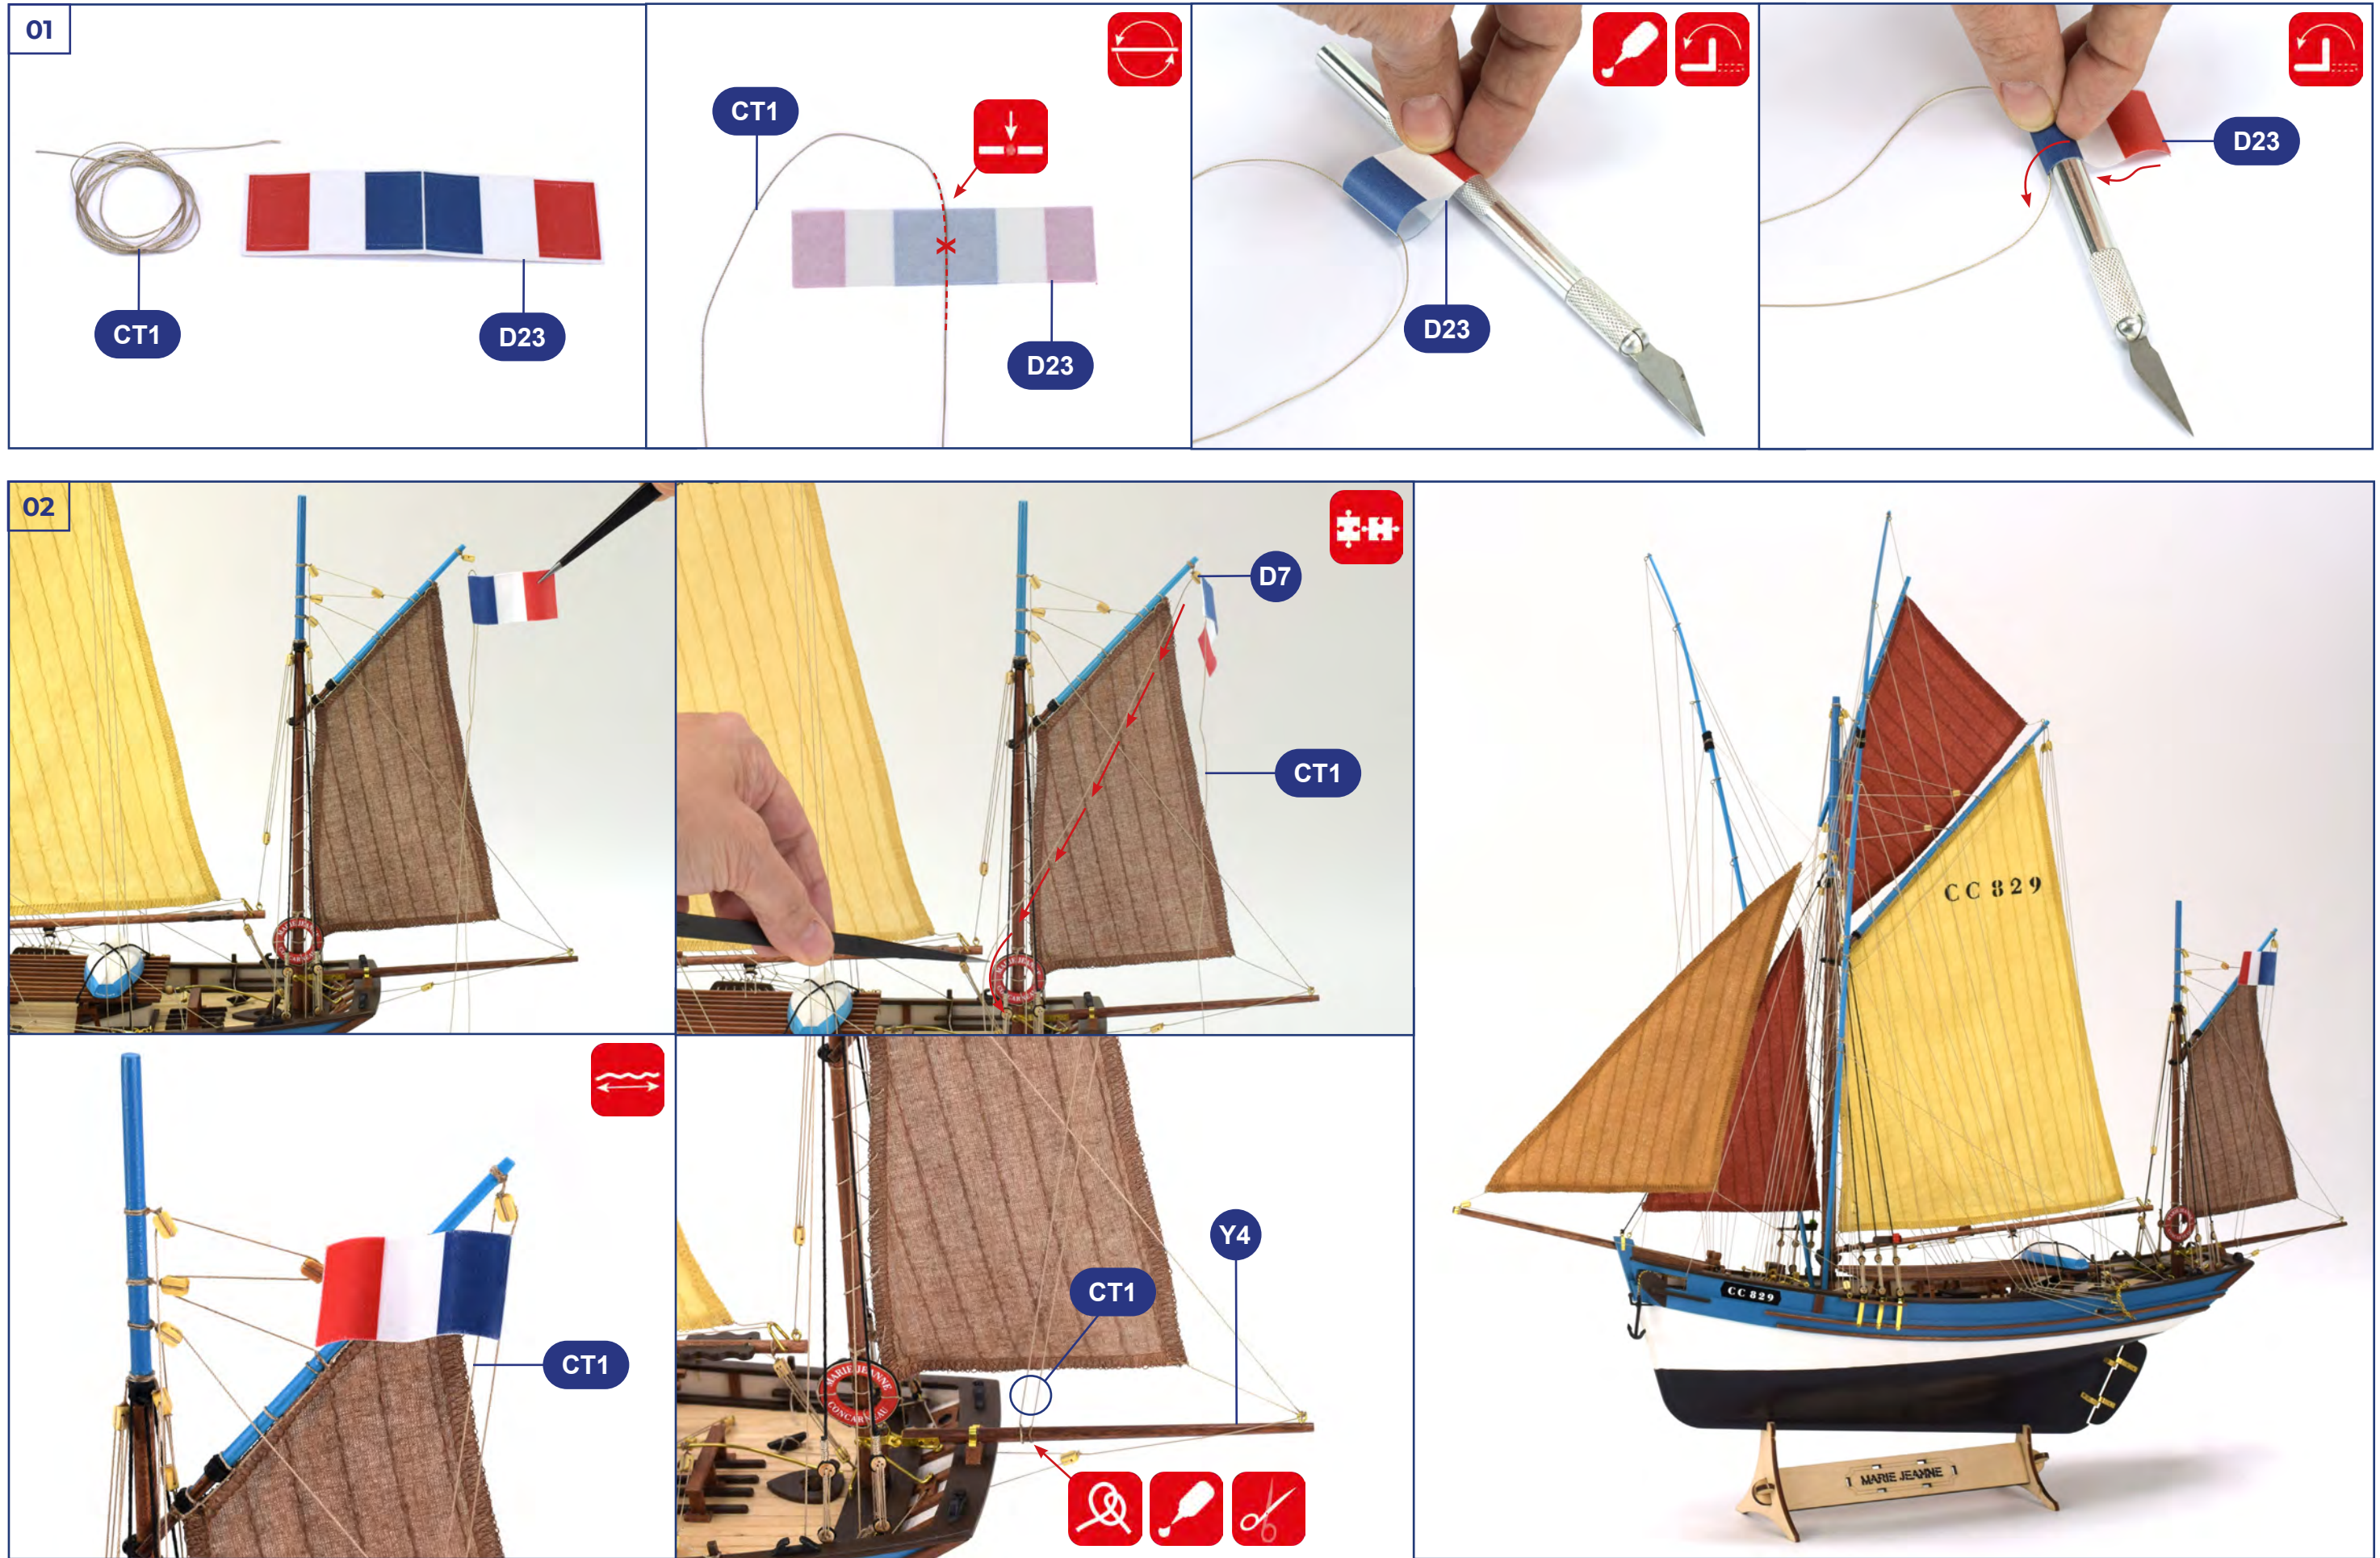

01

EB1

EB4

EB3

EB4

EB2

EB5

EB1

EB4

EB3

EB4

EB2

90

05

11

EB3

EB8

EB7

EB8

EB6

BACK VIEW

EB3

EB5

EB6

02

90

05

11

EB3

EB8

EB7

EB8

EB6

EB3

EB5

EB6

03

EB3

EB5

EB6

EB3

EB5

EB6


04

Lightning Set
ref. 27590
Sold separately



EB3



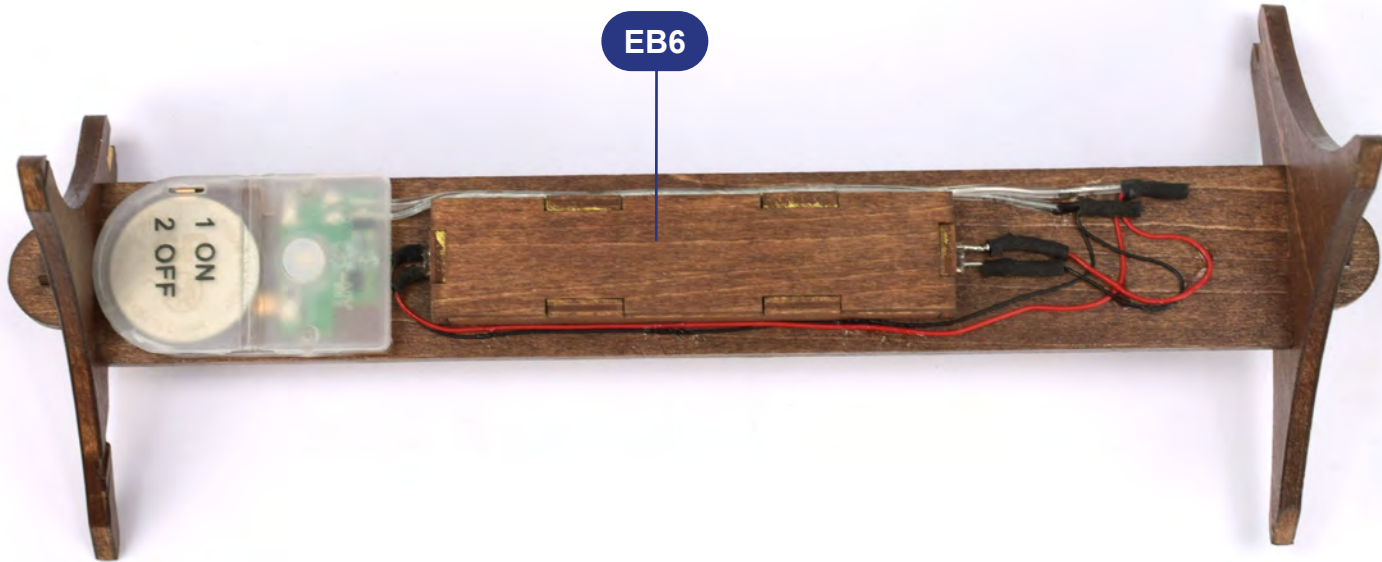

EB6









LE POUVOIR DE L'IMAGINATION
www.artesania latina.net